

FJI 2.4G PT-811001



Getting Started Guide

Product Features

- Turn on Calculator
- Default Central Program
- Default Internet browser
- Internet Page Forward
- Internet Page backward
- Default Page
- Default Model Page
- Stop
- Previous Track
- Next Track
- Play/Pause
- Mute
- Volume Up/Down

Maintaining your hardware and resolving basic problems

If your cursor is controlled by another system in an office or multi-user environment, you may need to adjust the cursor speed and repeat rate. To do this, go to the mouse installation guide, with 2 minutes.

A quick check of your well regarding impact wireless keyboard and mouse operation.

If your devices don't function smoothly, you may try the following steps:

- Replace the battery cover and reinsert the battery.
- Check the connection between the receiver and the mouse.
- Remove the battery cover and reinsert the battery.
- Move mouse and keyboard closer to receiver.

FCC statement

This equipment has been tested and found to comply with the limit for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you do experience interference, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one of the following methods:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to a power outlet that is not on the same circuit as the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

The user is advised to take the following steps to minimize the possibility of interference:

- Do not use the equipment near a power line.
- Do not use the equipment near a power line.
- Do not use the equipment near a power line.

FCC Radiation Exposure Statement

This equipment complies with the FCC Radio Frequency (RF) exposure limits set forth in part 15 of the FCC Rules. Operation of this equipment is subject to the following two conditions:

- This equipment must not be co-located or operated in close proximity to other FCC certified equipment.
- This equipment must not be used in a residential environment.

This equipment must be used in accordance with the instructions provided in the user manual.

15cm

FEDERAL COMMUNICATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference that may be received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limit for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you do experience interference, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to a power outlet that is not on the same circuit as the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Compatible Equipment

Compatible with an IBM-compatible PC and equipped with USB interface.

Compatible with Windows Operating Systems

Windows 2000 / XP

Please Review this Checklist

- 1. Mouse installed
- 2. Receiver plugged into USB port
- 3. Wireless mouse battery cover closed
- 4. AA size batteries inserted
- 5. Instruction manual read

Please read the instruction for installing, operating, and using the wireless device.

Quick Installation Guide

Battery Installation

1. Remove the battery cover located on the bottom of the key board by sliding the cover to the left.
2. Insert the battery cover into the battery compartment (A) and insert the battery cover into the battery compartment (B) and the battery cover into the battery compartment (C).
3. Remove the battery cover from the back of the mouse.
4. Insert the battery cover, making sure that the positive (+) and negative (-) ends of each battery match the polarity inside the battery compartment.
5. Replace the battery cover and position under "Click" lamp into place.

Quick Installation Guide

6. Press "Click" button on the bottom of the mouse.
7. Press "Click" button on the bottom of the mouse.
8. Press the connection button on the receiver.
9. Press and release the connection button on the receiver.
10. Press the connection button on the bottom of the mouse.
11. Press and release the connection button on the receiver.
12. Press the connection button on the upper right corner of the receiver.

You are now ready to use the mouse.

If you have previously installed other keyboard or mouse drivers on your PC, please uninstall them first.

- Please uninstall step 9 to step 12 within 45 seconds.
- Move your mouse or keyboard to make sure the connection is not interrupted.
- Every time after you replace batteries, please reconnect your mouse or keyboard to the receiver.
- In order of multi-user environment, set up each system separately and don't move or disconnect other devices when one system is in sleep mode.