



INSTALLATION AND OPERATION MANUAL

MODEL 2003 TYPE X

RAPID EXCHANGE® PURGE SYSTEM



Table of Contents

Page 2	System Purpose and Description Purpose, System description, Important notes
Page 3	Identifying Your System Defines specific features of the system
Page 3	General Information System & material specifications, Spare parts, Tools & test equipment, System accessories
Page 4	Enclosure and Device Design Design requirements, Adjacent enclosures, Device ventilation, Temperature limitations
Page 5	Installation Overview Installation diagram
Page 6	Getting Started Establishing connection sizes, Determining enclosure inlet & outlet connection locations
Page 7	System Mounting LH, RH, TM, BM & WM configurations, FM & PM configurations
Page 8	Hardware Mounting Enclosure protection vent, Warning nameplates
Page 9	Mounting Plate Dimensions Mounting plate dimension diagrams
Page 10	Pneumatic Tubing Requirements Protective gas supply requirements, Pneumatic connection requirements
Page 12	Tubing Connection Points LH, RH, TM, BM, WM, FM, & PM configurations
Page 13	Tubing Installation LH, RH, TM, BM, WM, FM & PM Tubing configurations
Page 14	Electrical Supply Requirements General wiring requirements, EPCU power & alarm signal, Enclosure wiring methods & connections
Page 15	Electrical Power Control Unit General layout & conduit connection points
Page 16	EPCU Power Rating Power rating nameplate, Assembled electronics
Page 17	Electrical & Pneumatic Diagrams LH, RH, TM, BM, WM, FM, & PM configurations
Page 18	Conduit Installation EPCU electrical conduit, Optional intrinsic safety Barrier conduit and EPCU conduit connection parts
Page 19	Power Modules & Wiring Diagram EPCU 120/220 VAC & 24-48 VDC power modules
Page 20	Logic Module & Barrier Wiring Optional ISB wiring requirements & diagram, EPCU power control modes
Page 21	Barriers & Field Adjustments ISB description & factory programming, LED display indicators, Timer functions & settings
Page 22	Set-Up Procedure Rapid Exchange purging set-up
Page 23	Set-Up Procedure (cont.) Rapid Exchange purging set-up

Page 24	Operating Sequence Class I purging operation
Page 25	Troubleshooting Procedures
Page 26	Warranty and Liability Statements Warranty notes, General terms, Limitations
Page 27	Customer Notes
Page 30	System Maintenance
Page 31	Systems Identification & Application Information

Purpose and Description

Purpose

Pepperl+Fuchs' Bebcu EPS System allows the use of general-purpose or nonrated electrical or electronic devices, with exception to devices that produce excessive heat, utilize combustible gas, or expose arcing contacts to the hazardous atmosphere, in NEMA (National Electrical Manufacturers Association) 4 or 12 enclosures in the place of explosion proof NEMA 7 enclosures. Other purposes include heat, moisture and dust contamination prevention.

Description

Model 2003 Rapid Exchange® purging system operates on a supply of compressed instrument air or inert gas. It regulates and monitors pressure of sealed (protected) enclosure(s), in order to rapidly remove and prevent flammable vapor accumulation within the enclosure(s). The system is designed to accomplish four air exchanges and maintain a "safe" (0.25") pressure on one or more enclosures not exceeding a total volume of fifteen cubic feet. An EPV-3 enclosure protection vent is required for proper operation. In addition, the system includes an electrical power control unit (EPCU) that monitors system operation and controls enclosure power. All start-up requirements must be satisfied before the EPCU will energize power to the enclosure(s). This process reduces the hazardous (classified) area rating within the enclosure(s), in accordance with the NEC - NFPA 70, Article 500, NFPA 496 and ISA 12.4.

Important Notes

One (1) permanent file copy and one (1) operations copy of this manual must be studied and retained by the operator of this system. User's agents are responsible for transferring this manual to the user, prior to start-up.


The contents of this manual have been arranged to allow the use of this product as a stand-alone device on equipment and enclosures supplied by the user or its agents. The manual's parameters encompass a combination of both National Fire Protection Association (NFPA) requirements and Pepperl+Fuchs, Inc. requirements. Pepperl+Fuchs therefore acknowledges the use of NFPA 496 as a guideline, that we have enhanced certain NFPA requirements and that additional information has been compiled to complete this document. The manual is intended as a complete guide and must be considered, unless specifically stated otherwise, that all directives contained herein are requirements for safe, practical and efficient use of this product.

This system is not intended for use to protect enclosures or devices that contain ignitable concentrations of gases or vapors. This exclusion generally applies to process or product analyzing systems equipment.

All specifications are subject to change without notice.

Identifying Your System

This enclosure protection system is offered in various styles. For proper installation and operation, examine the system model number nameplate to identify the system style, area classification, and type, as noted below.

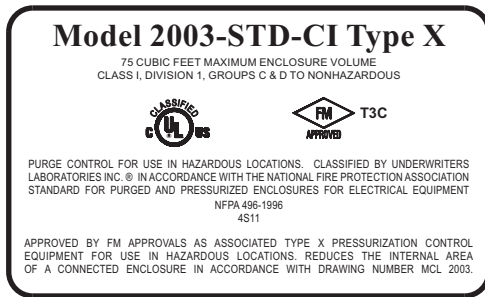

2003 - STD - CI - NR - LH - ##

Series Model Number	2003	-	STD	-	CI	-	NR	-	LH	-	##
System Style											
STD	- Standard										
SA	- Semiautomatic										
FA	- Fully Automatic										
Area Classification											
CI	- Class I, Group C & D Area										
IB	- Class I, Group B Area (STD Only)										
Power Control Mode											
NR	- Normal Running										
CB	- Conditional Bypass										
Mounting Configuration											
LH	- left hand										left side of enclosure
RH	- right hand										right side of enclosure
TM	- top mount										top of enclosure
BM	- bottom mount										bottom of enclosure
WM	- wall mount										wall surface
FM*	- frame mount										external frame or rack
PM*	- panel mount										enclosure surface cutout
* FM & PM configurations feature flush mount EPCU.											
Flush mount EPCU is not suitable for Group B Area.											
## - Additional factory installed accessories											

NOTE: Only FM certified Group B system available in STD style

General Information

System Specifications

System dimensions:	See Pages 9 & 10
Shipping weight (lbs.):	STD - 45 / SA & FA - 47
Operating temp. range:	-20 ° F - 120 ° F
Supply pressure range:	80 - 120 psi max.
When using the optional inline filter, max. supply pressure is 80 psi	
Capacity & filtration:	3.8 oz. @ 40 microns
Supply requirements:	Clean air or inert gas
Safe pressure setpoint:	0.25" @ safe press.
Safe pressure flowrate:	* 0.1 - 3.5 SCFH
Exchange pressure:	3" - 5"
Exchange flowrate:	** 10 SCFM / 600 SCFH
Exchange time:	1 minute / 2.5 cubic ft.
System supply port:	3/8" FPT
Enclosure supply fitting:	3/8" tube fitting
Enclosure reference fitting:	1/4" tube fitting
EPCU Conduit port size:	1/2" FPT
EPCU power requirements:	120 VAC 60 Hz 1Ø
(European 220 voltage only)	240 VAC 50 Hz 1Ø
EPCU power consumption:	500 mA

Part No. 512473 Drawing No. 129-0212a 03/09

Power relay contacts:	20 Amps @ 240 VAC 20 Amps @ 28 VDC
Alarm relay N.O. contact:	20 Amps @ 240 VAC 20 Amps @ 28 VDC
Alarm relay N.C. contact:	15 Amps @ 240 VAC 10 Amps @ 28 VDC

* Enclosure integrity determines actual flow rate
** With regulator set to 60 psi min. during exchange

Material Specifications

Filter regulator body:	Zinc w/ enamel finish
Regulator handle & bowl:	Polycarbonate
Enclosure pressure gauge:	Alum. w/ enamel finish
Rapid exchange gauge:	Poly case & brass tube
Rapid exchange solenoid:	Brass w/ enamel finish
Tube fittings & valves:	316 SS forged body
Tubing:	316 SS 1/4" .035 welded
System nameplates:	Silkscreened Lexan® & SS
Fastener hardware:	SS screws & bolts
Mounting plate:	316 14 ga #3 brush SS
EPCU enclosure body:	Bead blast cast alum.
Conduit & fittings (SA & FA):	Galvanized steel
Enclosure warning nameplate:	Silkscreened SS
Lexan® is a registered trademark of the General Electric Corporation	

Recommended Spare Parts

Qty	Description	Part # (supercedes)
1	Enclosure pressure indicator	510023 (001000)
1	3/8" filter regulator	510064 (002090)
1	Enclosure pressure control valve	510131 (003660)
1	Rapid Exchange® valve body (STD style)	510133 (003680)
1	3/8" solenoid valve body (SA & FA style)	510076 (002230)
1	Safe pressure switch	510356 (005200)
1	Rapid Exchange® pressure switch	510358 (005210)
1	Series 2000 logic module-Ver. 2.0	510279 (005000)
1	Series 2000 VAC power module	510304 (005020)
1	Series 2000 VDC power module	510305 (005021)
1	Installation & operation manual	129-0212
1	Enclosure warning nameplate-CI	513008 (EWN-1)

Reference part number above for current spare parts pricing. Immediate pricing is available to all confirmed customers.

Installation Tools & Testing Equipment

- 1/2" chuck drill
- Complete set of drill bits
- 1/2" & 1" conduit knockout punch or 1.375" hole saw
- Complete set of tubing, conduit bending, instrument fitting and electrical craftsman hand tools
- 0 - 5" differential pressure gauge or manometer (connected to the protected enclosure to measure maximum pressure)

Model 2003 System Accessories

Enclosure Protection Vents (one required with each system)

EPV-3-SA-00	Straight w/ spark arrester
EPV-3-SA-90	Rt angle w/ spark arrester

Additional Items

SMK -2, -3 or -10	System mounting kit
RAH	Div. 1 remote alarm horn
RAB-1	Div. 1 remote alarm beacon
LCK	L fitting conduit kit
TCK	T fitting conduit kit
SRM-4000	Switch resistor module
NJ...	P+F NAMUR sensor
NC-6	3/8" ninety connector
SC-6	3/8" straight connector
EFC-4	1/4" flush connector
EFC-6	3/8" flush connector
EBC-6	3/8" bulkhead connector
EPC-13	1" pipe connector

Factory Installed Items

IS1	Channel A barrier
IS2*	Channel B barrier
IS3*	Channel C barrier
RP1	Redundant safe pressure switch
RP2	Redundant Rapid Exchange pressure switch
L	Key lock assembly

*Requires custom programming information

Enclosure & Device Design

Enclosure Design Requirements

- All windows must be shatterproof and sized as small as possible.
- All NFPA 496 required markings must be placed on or near all enclosure doors and covers.
- The enclosure must withstand an internal pressure of five (5) inches of water without sustaining permanent deformation and resist all corrosive elements in the surrounding atmosphere.
- All lightweight objects in the enclosure, such as paper or insulation, must be firmly secured.
- The enclosure should be constructed from materials such as metal or nonstatic polycarbonate to meet or exceed NEMA 4 or 12 performance requirements, but does not require third party approval.
- The installation of obstructions or other barriers that block or impede the flow of protective gas must be avoided.
- The creation of air pockets or other areas that trap flammable gases within the enclosure or devices must be avoided.
- The enclosure should be located in an area where impact hazards are minimal.
- If the enclosure is nonmetallic and contains equipment that utilizes or switches power loads greater than 2500 VA, it must be constructed from substantially noncombustible materials, such as materials designed to meet or exceed ANSI/UL94 ratings of 94 V-0 or 94 5V.

Adjacent Enclosures

- Adjacent enclosures must be protected by one of the following means:
 - purged or pressurized in series with the protected enclosure
 - purged or pressurized separately or
 - protected by other means; e.g., explosion proof enclosures, hermetically sealed devices or intrinsic safe circuits
- Adjacent purged or pressurized enclosures must be designed to meet all construction requirements above.

Total Volume Calculation

- The total volume of all pressurized enclosures, devices and wireways must be considered.
- All enclosure, device, and wireway volumes must be calculated without consideration of internally consumed space.

Device Ventilation

- Enclosed devices within the protected enclosure that do not exceed 1.22 in³ of free volume do not require ventilation to the protected enclosure.
- If the free volume of an internal device exceeds 1.22 in³ it must be protected by one of the following means:
 - ventilated on the top and bottom sides with 1 in² of opening for each 400 in³ of volume within the internal protected enclosure, at a minimum diameter of 1/4"
 - purged in series with the protected enclosure or be purged separately or
 - protected by other means; e.g., explosion proof enclosures, hermetically sealed devices, or intrinsic safe circuits.

Temperature Limitations


- The enclosure must have no surface area that exceeds 80 percent of the flammable or ignitable substance's auto-ignition temperature.
- Internal devices that exceed this temperature must be protected by one of the following manners:
 - The device is enclosed in a chamber that is cUL_{US} or FM listed as a hermetically sealed device that prohibits the entrance of a flammable or ignitable substance, and maintains a surface temperature below temperature limits.
 - It can be proven by testing that the devices will not ignite the substance involved.
 - The device is purged in a separate enclosure that bears an ETW (enclosure temperature warning nameplate). Devices may be accessed only after power has been removed and the device has been allowed to cool to safe temperature, or the area is positively known to be nonhazardous.

Part No. 512473 Drawing No. 129-0212a 03/09



Installation Overview

Model 2003-STD-CI-LH Shown

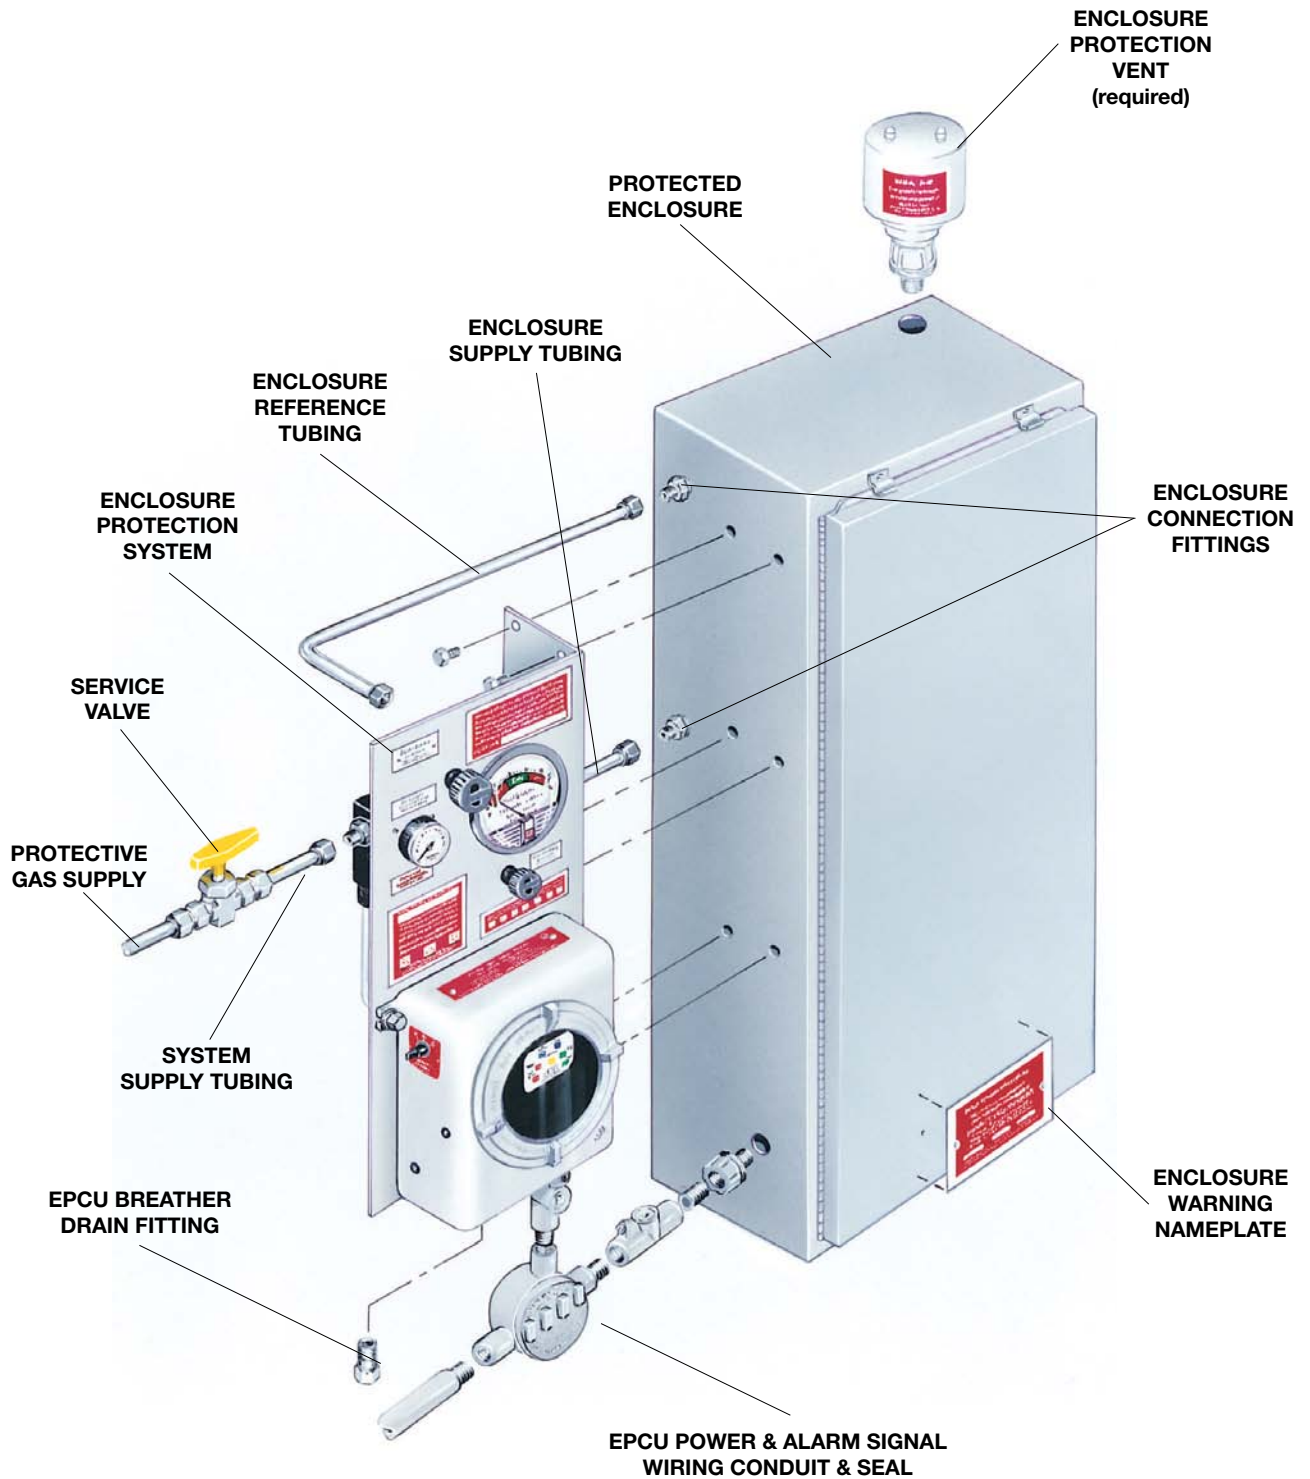

Part No. 512473 Drawing No. 129-0212a 03/09

Subject to modifications without notice

Pepperl+Fuchs Group
www.pepperl-fuchs.com


USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Copyright Pepperl+Fuchs
Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com


Getting Started

Typical Single Protected Enclosure Connections

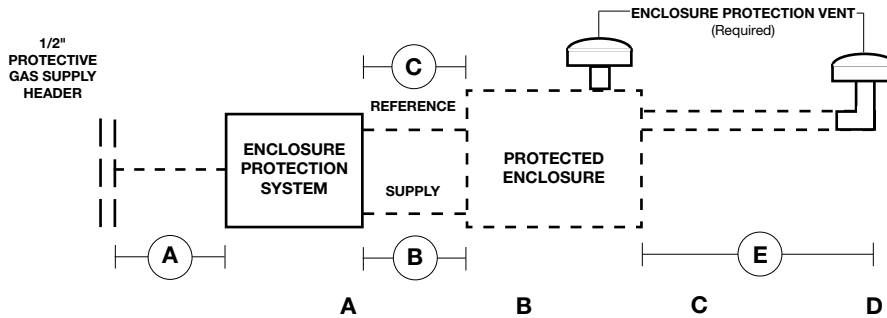

Description	System supply tubing	Enclosure supply	Enclosure reference	Multi - enclosure connections	Optional remote venting
*Tubing or pipe diameter	3/8" O.D. tubing fully reamed	3/8" O.D. tubing fully reamed	1/4" O.D. tubing fully reamed	1" I.D. pipe fully reamed	1" I.D. pipe fully reamed
Maximum tubing / pipe length and maximum number of bends / elbows	20 feet 10 bends	5 feet 5 bends	20 feet 10 bends	10 feet 5 elbows	30 feet 5 elbows

TYPICAL MULTIPLE PROTECTED ENCLOSURE CONNECTIONS

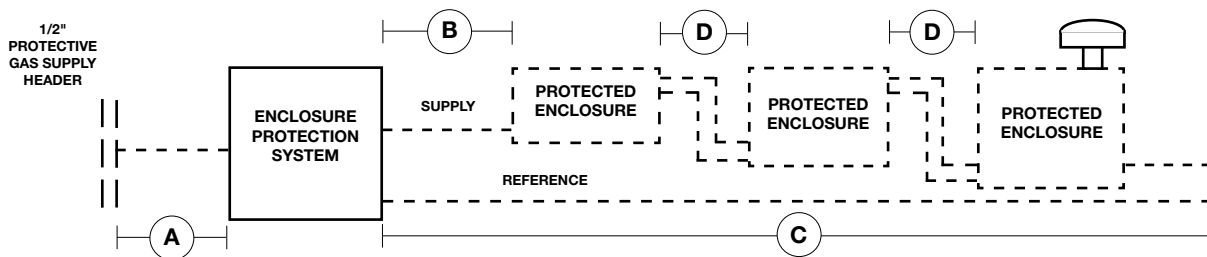


*NOTE: Tube and pipe sizes are trade sizes and are not equal in inside diameter. DO NOT substitute tube for pipe with same trade size.

HELPFUL HINTS

To ensure adequate protective gas flow to protected enclosure(s), all piping and tubing must be fully reamed. Precautions must be taken to prevent crimping and other damage to protective gas piping and tubing. When protecting multiple enclosures with a single enclosure protection system, the enclosures must be connected in series from the smallest to the largest to ensure adequate protective gas flow.

Determining Enclosure Inlet & Outlet Connection Locations

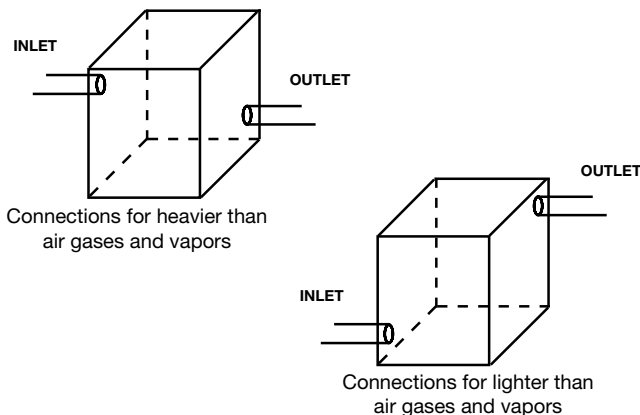

HELPFUL HINTS

If flammable gases are lighter than air, the inlet connection to each enclosure must enter near a bottom corner. The outlet connection, for an optional enclosure protection vent or piping to an adjacent protected enclosure, must exit near an extreme opposite top corner. See diagrams to the left.

If flammable gases are heavier than air, inlet and outlet connections must be reversed.

In all cases, the most prevalent gas must determine the location of inlet and outlet connections.

Part No. 512473 Drawing No. 129-0212a 03/09

System Mounting

IMPORTANT NOTES

The system should be mounted at **EYE LEVEL**.

Care must be taken to ensure the system and all protruding components are clear of all enclosure accesses (doors and covers) and conduit, pipe, tubing or cable entries.

LH, RH, TM, BM and WM configurations are intended for mounting adjacent to the protected enclosure.

LH, RH, TM & BM configurations are also suitable for 2" schedule 40 pipe mounting.

Determine the mounting configuration of your system using the diagrams on pages 9 & 10.

Remove and save the manila envelope (containing the enclosure warning nameplate) which may be taped to the outer surface of the mounting flange.

Although all systems are factory tested and calibrated, we strongly suggest a bench test of basic functions prior to installation.

Mounting LH, RH, TM, BM & WM Configurations

1. Transfer hole pattern of system mounting plate to intended surface.
2. Check for obstructions hindering bolt fastening, drill and ream the mounting holes before mounting the system.
3. Secure the system to the enclosure, or other mounting surface, using one (1) SMK-3 or equivalent - six (6) 3/8" x 3/4" stainless steel bolts, nuts and lock washers.
*WM requires one (1) SMK-2 or equivalent - four (4) 3/8" x 3/4" stainless steel bolts, nuts and lock washers.

Mounting FM & PM Configurations

HELPFUL HINTS

FM and PM configurations are designed to mount through a panel cutout one (1) inch smaller than the overall height and width of the system mounting plate, using clips and fasteners provided with SMK -10. This design feature eliminates the need to drill the system mounting bolt holes in the protected enclosure.

FM configurations are intended for mounting adjacent to the protected enclosure.

PM configurations are intended for mounting through a cutout in the protected enclosure surface.

1. Transfer panel cutout pattern to the intended surface.
2. Check for obstructions that could prohibit bolt fastening or system pneumatic and electrical connections.
3. Cut panel cutout pattern on the intended surface.
4. Deburr all cutout surfaces.
5. Secure system to enclosure using SMK-10, or equivalent - ten (10) 1/4" x 3/4" stainless steel nuts, bolts, mounting clips and lock washers.



Typical Surface Mounted System
(Model 1002-LPS-LH Type Z shown)



Typical Pipe Mounted System
(Model 1002-LPS-LH Type Z shown)



Typical Panel/Frame Mounted System
(Model 1002-LPS-PM Type Z shown)

Part No. 512473 Drawing No. 129-0212a 03/09

Hardware Mounting

Required Enclosure Protection Vent

All configurations must be mounted in a true vertical position. The vent must be located to provide access for routine testing of the vent's flapper assembly. A minimum 8" clearance is required below the vent opening.

1. Determine the vent's mounting configuration, i.e., -00 vertical mount or -90 side mount. See photos below.
2. Determine vent location and layout vent mounting hole on the protected enclosure (as determined on page 6, "Getting Started").
3. Using a 1.375" hole saw or 1" conduit punch, drill and deburr the enclosure protection vent mounting hole.
4. Remove the hub mounting nut from the vent hub and place the hub, with O-ring intact, through the mounting hole. The O-ring must be on the outside of the protected enclosure.
5. Reinstall the hub mounting nut to the mounting hub from inside the protected enclosure and tighten.



EPV - 3 - SA - 00
Vertical Mount



EPV - 3 - SA - 90
Side Mount

Warning Nameplate(s)

An EWN (Enclosure Warning Nameplate) must be located in a prominent position on or near all enclosure accesses (doors and covers).

One (1) EWN is provided with each system, located in the manila envelope taped to the mounting flange of the system. Additional EWNs are available from Pepperl+Fuchs.

All EWNs provide labeled spaces allowing the customer to mark the protected enclosure with: 1) a T Code (temperature identification number), 2) Class, Group and Division of surrounding area, and 3) NFPA pressurization Type X, Y or Z, as may be required by plant and local codes and is required by NFPA 496.

An ETW (Enclosure Temperature Warning nameplate) must be located in a prominent position on or near all enclosure accesses (doors and covers) when the temperature of an internal component exceeds 80 percent of the ignition temperature of the flammable vapor, gas or dust involved.

An ETW warns the operator to deenergize all equipment for a specified length of time, allowing the protected equipment to cool before opening the protected enclosure. The length of time required is determined by the customer and can be factory or field engraved.

All EWNs and ETWs are furnished with an adhesive back, but should also be riveted or screwed to the protected enclosure.



Enclosure warning nameplate - Class I




Enclosure warning nameplate - Class II




Enclosure temperature warning nameplate





Mounting Plate Dimensions

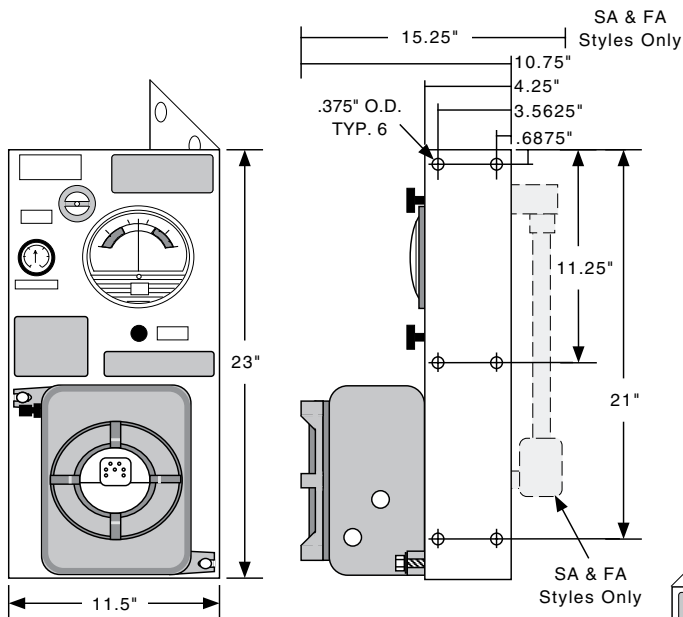

2003-LH
(Left hand configuration)

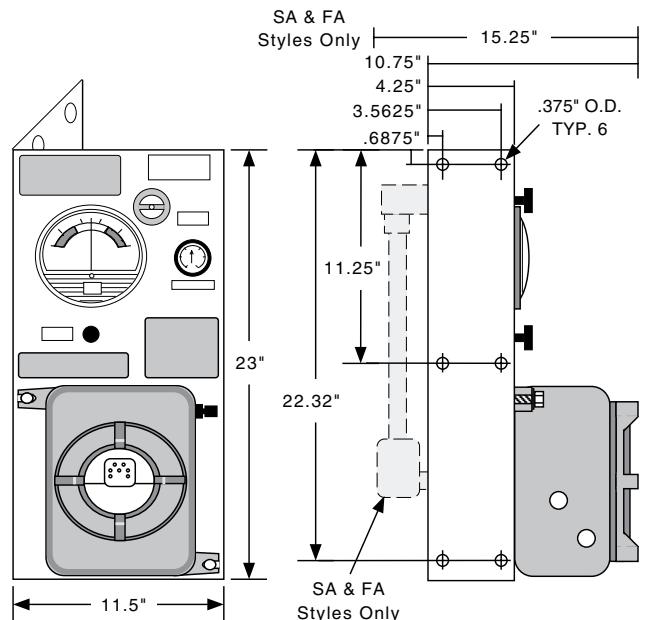

2003-RH
(Right hand configuration)

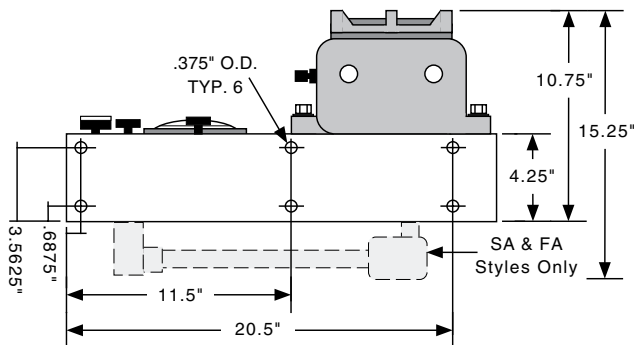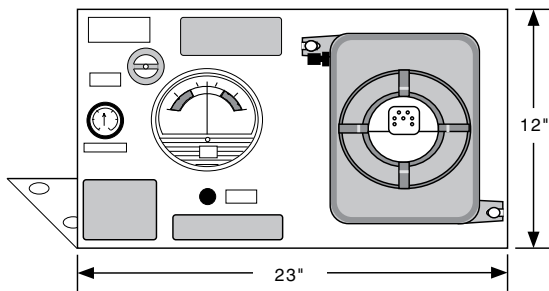

2003-TM
(Top mount configuration)


IMPORTANT NOTE
 Dimensions DO NOT include systems ordered with an area classification of IB (Class I, Division 1, Group B). Consult factory for mounting plate dimensions.

Part No. 512473 Drawing No. 129-0212a 03/09

Mounting Plate Dimensions (continued)

IMPORTANT NOTE

Dimensions DO NOT include systems ordered with an area classification of IB (Class I, Division 1, Group B). Consult factory for mounting plate dimensions.

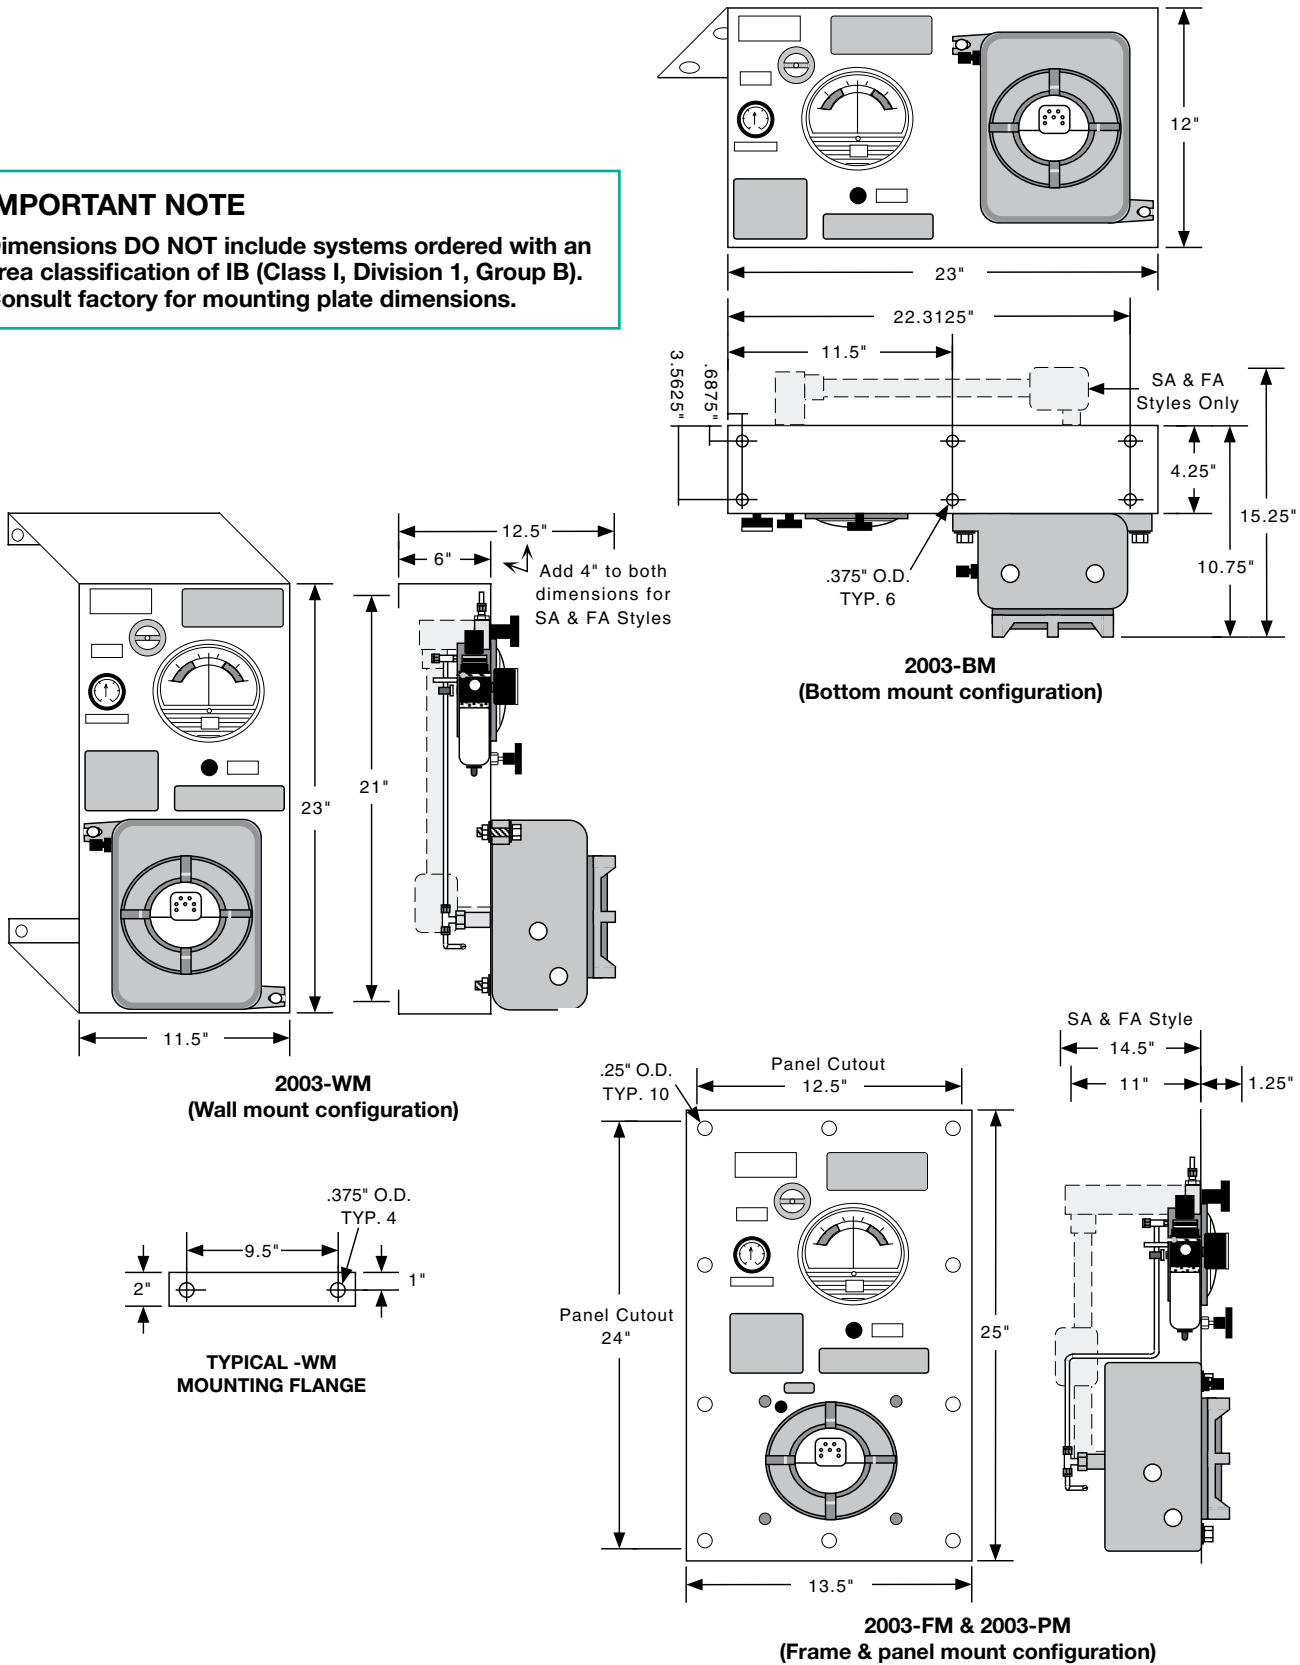

Part No. 512473 Drawing No. 129-0212a 03/09

Pneumatic Tubing Requirements

Protective Gas Supply Requirements

The protective gas supply to the protection system must be a clean, instrument quality compressed air or nitrogen and must contain no more than trace amounts of flammable gas, vapor or dust.

The protective gas supply compressor intake must originate in a nonhazardous location. Suction duct passing through a hazardous location and the protection system tubing and piping must be fabricated from noncombustible materials suitable for prevailing hazards and environmental conditions.

The protective gas supply must originate from a dedicated instrument quality compressed air header (1/2" pipe or larger), no farther than twenty (20) feet from the protection system. Local compressors and gas cylinders should not be used before consulting with Pepperl+Fuchs.

The protective gas supply to the protection system must be regulated from 120 psi maximum to 80 psi minimum.



SC-6



NC-6

SYSTEM SUPPLY FITTINGS



EFC-4 & EFC-6

ENCLOSURE SUPPLY & REFERENCE FITTINGS



EBC-4 & EBC-6



EPC-13

MULTIPLE ENCLOSURE CONNECTION FITTING

Pneumatic Connection Requirements

ALL FITTINGS MAY BE CUSTOMER OR FACTORY FURNISHED

- For system supply, one (1) SC-6 3/8" male straight connector or one (1) NC-6 3/8" male elbow connector or equivalent fitting per system.
One (1) similar fitting which will connect the inert gas supply tubing to the inert gas supply header connection point and one (1) lot of 3/8" O.D., .035" wall thickness, welded or seamless stainless steel tubing.
- For enclosure supply, one (1) EFC-6 3/8" flush connector, or one (1) EBC-6 3/8" feed-through connector or equivalent fitting per system.
- For enclosure reference, one (1) EFC-4 1/4" flush connector, or one (1) EBC-4 1/4" feed-through connector or equivalent fitting per system.
- One (1) lot of 1/4" O.D., .035" wall thickness, welded or seamless stainless steel tubing.
- For multiple enclosure connections, two (2) EPC-13 1" pipe mounting hubs or equivalent and 1" 150# rated pipe couplings & unions per interconnection.
One (1) lot 150# rating 1" galvanized or aluminum pipe and fittings, fully reamed and unrestricted.

PM Pneumatic Connection Requirements

In addition to item numbers 1, 4 and 5 above, the following fittings are required for all PM configurations.

- For system supply on PM configurations, one (1) additional EBC-6 or equivalent 3/8" through bulkhead fitting per system is required.
- For atmospheric reference, one (1) PRB-4 or equivalent 1/4" female bulkhead fitting and stainless steel sintered element is required.




PRB-4

SYSTEM ATMOSPHERIC REFERENCE FITTING


Part No. 512473 Drawing No. 129-0212a 03/09

Tubeing Connection Points

LH, RH, TM, BM, WM & FM Configuration Connection Points

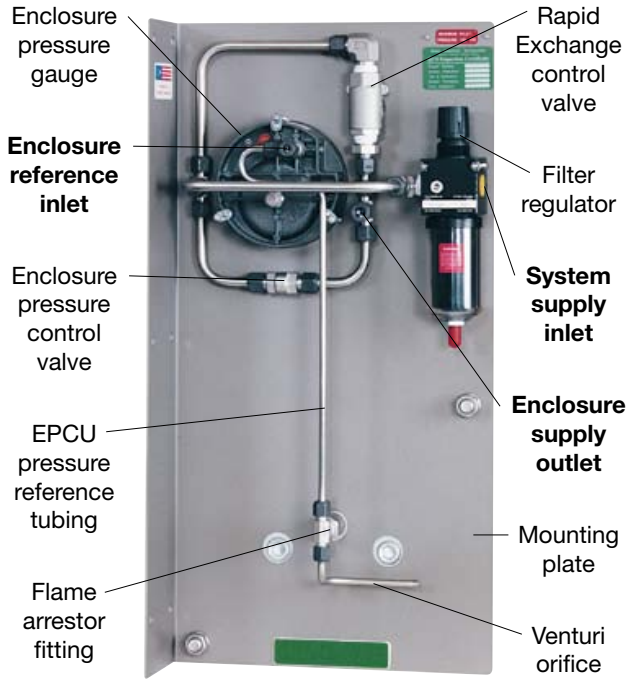


STD Style

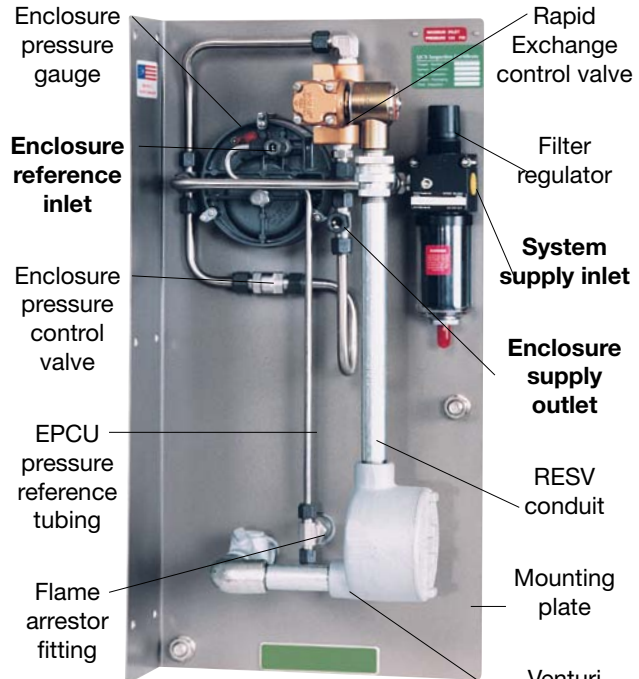

**SA & FA Style
(with Rapid Exchange
Solenoid Valve)**

PM Configuration Connection Points

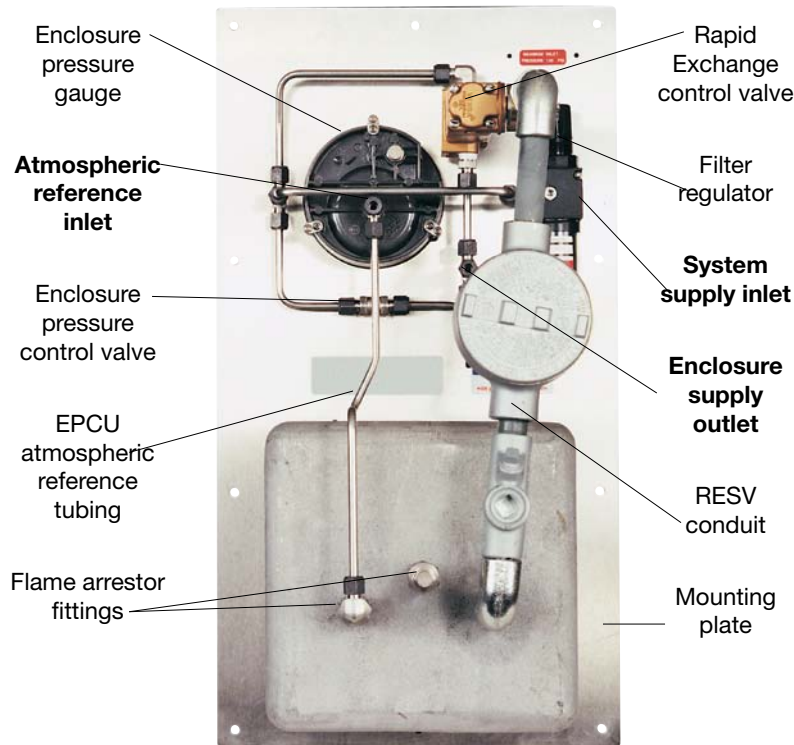

HELPFUL HINT

Pneumatic connections are **bolded**.

Part No. 512473 Drawing No. 129-0212a 03/09

Tubing Installation

HELPFUL HINTS

All work must be performed by technicians qualified in pneumatic tubing and electrical conduit installation.

Pepperl+Fuchs recommends the use of .035" wall thickness, welded or seamless stainless steel tubing.

If flexible tubing is used, it must be installed in a manner that protects it from damage and corrosion.

Tubing LH, RH, TM, BM, WM & FM Configurations

System supplyconnections

1. Select or install a protective gas supply header tap, fitted with the proper tube size fitting and located within twenty (20) feet of the enclosure protection system.
2. If a service valve is placed between the protective gas supply header and the enclosure protection system, it must be installed in close proximity of the protected enclosure and be labeled in accordance with NFPA 496.
3. Select the appropriate fittings required to connect the protective gas supply to the protection system regulator as determined on page 11, "Pneumatic Tubing Requirements".
4. Determine appropriate tubing route from the protective gas supply header to the protection system regulator.
5. Bend tubing using industrial grade benders, check tubing fit to ensure proper seating between the tubing and fittings. Fully ream all tubing ends.
6. Install tubing and tighten all fittings to fitting manufacturer's specifications. Secure tubing to appropriate structural supports as required.

Enclosure supply & reference connections

1. Choose location for the enclosure supply connection(s) based on the requirements on page 6, "Getting Started."
2. Place the enclosure reference connection fitting directly behind the enclosure protection system whenever possible. For systems protecting multiple enclosures in series, the enclosure reference connection fitting must be placed on the last enclosure in the series. See page 6, "Getting Started."
3. Drill and deburr enclosure supply and reference fitting holes on the protected enclosure. Mount the fittings.
4. Determine appropriate route for the enclosure supply and reference tubing.
5. Bend tubing using industrial grade benders, check tubing fit to ensure proper seating between the tubing and fittings. Fully ream all tubing ends.
6. Install tubing and tighten all fittings to fitting manufacturer's specifications. Secure tubing to appropriate structural supports as required.

Tubing PM Configurations

Enclosure bulkhead fittings

1. Select the fittings required to install the system supply, system supply bulkhead fitting and atmospheric reference bulkhead fitting. See page 11, "Pneumatic Tubing Requirements."
2. Choose location for the system supply bulkhead fitting. This fitting allows the protective gas supply to pass through the wall of a protected enclosure to the protection system's regulator supply inlet connection.
3. Choose location for the atmospheric reference bulkhead fitting. This fitting allows the enclosure pressure gauge to reference atmospheric pressure.
4. Drill and deburr system supply and reference bulkhead fitting holes in the protected enclosure. Mount the fittings.

System supply & reference connections

1. Select or install a protective gas supply header tap, fitted with the proper tube size fitting and located within twenty (20) feet of the enclosure protection system.
2. If a service valve is placed between the protective gas supply header and the protection system, it must be in close proximity of the protected enclosure and labeled in accordance with NFPA 496.
3. Determine appropriate tubing route from the protective gas supply header to the system supply bulkhead fitting.
4. Determine appropriate tubing route from the system supply bulkhead fitting to the protection system regulator.
5. Determine appropriate tubing route from the atmospheric reference bulkhead fitting to the enclosure pressure gauge's reference inlet connection.
6. Bend tubing using industrial grade benders, check tubing fit to ensure proper seating between the tubing and fittings. Fully ream all tubing ends.
7. Install tubing and tighten all fittings to fitting manufacturer's specifications. Secure tubing as required.

Part No. 512473 Drawing No. 129-0212a 03/09

Electrical Supply Requirements

General Wiring Requirements

⚠ WARNING! This device contains electrical parts that can cause shock or injury.

All electrical connections, conduit and fittings on the protected enclosure must be suitable for the hazardous location in which they are installed. In addition, all conduit and wire must be installed in accordance with NEC as required and all relevant plant and local codes.

Conduit seals must be utilized on all electrical conduit connections and poured with an approved compound prior to operation of the protection system.

Exception: Do not use seals on conduit used as a protected "wireway" to supply protective gas to adjacent protected enclosures. The same conduit can be utilized for both electrical and pneumatic service to an adjacent protected enclosure(s), provided the conduit is oversized to allow a minimum free clearance equal to or larger than the pipe size required between multiple enclosures as stated on page 6, "Getting Started."

HELPFUL HINT

Pepperl+Fuchs recognizes it may be impractical to pour all electrical conduit seals prior to installation in the field. However, all conduit connections must be sealed for proper testing and operation of the enclosure protection system. Therefore, Pepperl+Fuchs recommends the use of temporary seals such as duct seal or masking tape for bench or shop testing, prior to final field installation.

EPCU Power Requirements

The electrical power control unit's (EPCU) electrical power source must originate from a circuit breaker or fused disconnect suitable for the hazardous location in which it is installed. The power source should be uninterrupted and the switch must be located within fifty (50) feet of the protected enclosure(s) and the enclosure protection system and be properly marked. For EPCU power specifications see page 3, "System's Specifications."

Alarm Signal Requirements

Pepperl+Fuchs strongly recommends use of the optional alarm system contacts of the EPCU, connected to an alarm system located in a constantly attended location to indicate the failure of the enclosure protection system. For EPCU alarm signal specifications see page 3, "System's Specifications."

Typical Enclosure Wiring Methods


Protected enclosures must be wired similar to explosion proof enclosures, in accordance with Article 500 of the National Electric Code - NFPA 70.

Single conductor wiring must be placed in rigid metal conduit, seal-flex conduit, or other mediums approved for use in the hazardous location surrounding the protected enclosure. Additionally, NFPA 496 requires approved conduit seals on all pressurized enclosure conduit wiring entries, in accordance with NFPA 70. Furthermore, the use of an approved conduit seal is simply the most practical way to prevent excessive leakage through conduit connections.

However, while explosion-proof enclosures require conduit seals on all cable entries, in accordance with NFPA 70, other methods of sealed cable entries that are suitable for hazardous locations can be used, such as compression glands.

In conclusion, there are two primary goals. First, the installer should ensure that all associated wiring and cable is protected by pressurization or other means, such as explosion-proof conduit or intrinsic safety barriers. Secondly, the installer must ensure that all associated conduit and wireways are sealed to conserve protective gas, unless they are used to supply protective gas to other enclosures or devices.


Typical Enclosure Wiring Connections

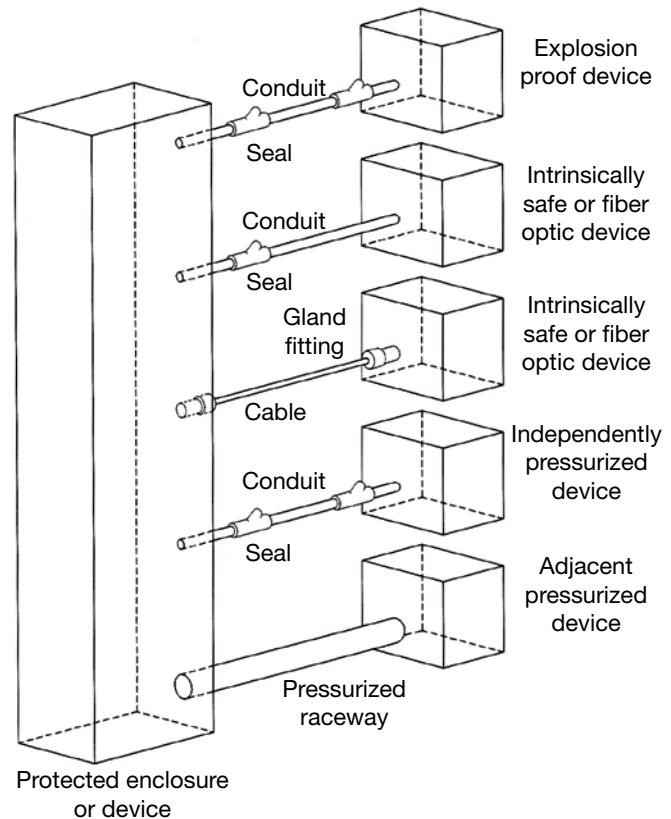

Part No. 512473 Drawing No. 129-0212a 03/09

Electrical Power Control Unit

General Layout & Electrical Conduit Connections

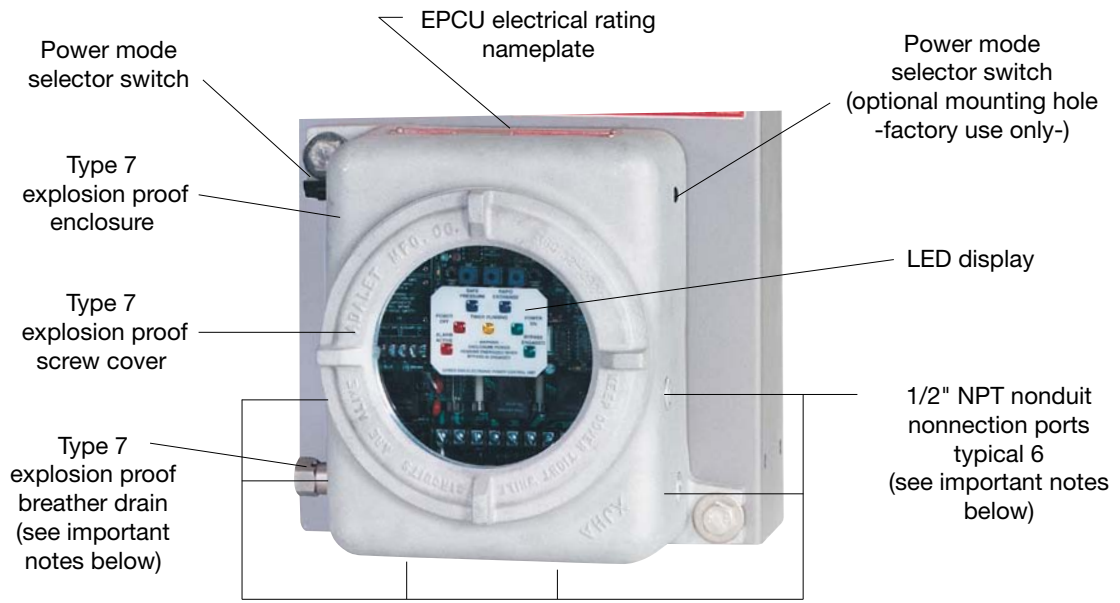


IMPORTANT NOTES

For proper moisture drainage of the Type 7 enclosure, the installer must 1) move the Type 7 breather drain to one of the bottom conduit entrances or 2) use drain seals on all conduit connected to the bottom two conduit entrances.

The Type 7 breather drain is not provided or required with PM configurations.

Top two conduit entrances will be dedicated for Intrinsic Safe wiring ONLY when the EPCU is supplied with Pepperl+Fuchs' optional ISB intrinsic safety barriers.

EPCU LED Displays

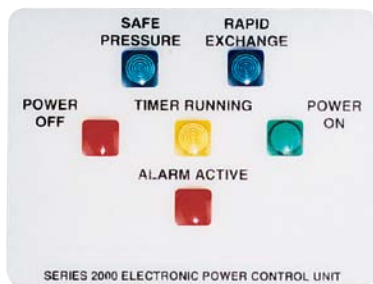

Alarm Only



Alarm & Bypass

Part No. 512473 Drawing No. 129-0212a 03/09

EPCU Power Rating

EPCU Electrical Power Rating Nameplate

The EPCU (Electrical Power Control Unit) of this Type "X" purging / pressurization system is offered in various styles. For proper installation and operation, begin by examining the EPCU electrical rating nameplate to identify the system input voltage and power requirements, enclosure power and alarm contact ratings and third party approval markings. Next, match the LED display of your EPCU with one of the displays shown on page 15. The EPCU LED Display will help identify the options featured on your system e.g., normal running mode or conditional bypass Class I purging (timer) or Class II pressurization (no timer).

MODEL 2000 ELECTRICAL POWER CONTROL UNIT
CAUTION: OPEN CIRCUIT BEFORE REMOVING COVER
ATTENTION: OUVRIER LE CIRCUIT AVANT D'ENLEVER LE COUVERCLE

SERIAL NO.	XXXXXX	INPUT VOLTAGE & POWER REQUIREMENTS
CSA Encl. 3 CLASS I, DIV. 1, Gr C&D CLASS II, DIV. 1, Gr E, F, G HAS UL & FM APPROVALS ONLY		ENCL POWER & ALARM CONTACTS ARE RATED 120/240 VAC, 20 AMPS <input type="checkbox"/> 120 SINGLE PHASE, 60 CYCLE, 1 AMP <input type="checkbox"/> 240 SINGLE PHASE, 50 CYCLE, 1 AMP

EPCU SERIAL NUMBER

REQUIRED WARNING STATEMENTS


AREA CLASSIFICATION

Defines the area classifications for which the EPCU is suitable for operation

EPCU INPUT POWER REQUIREMENTS

Factory set at time of order


Assembled EPCU Electronics Module

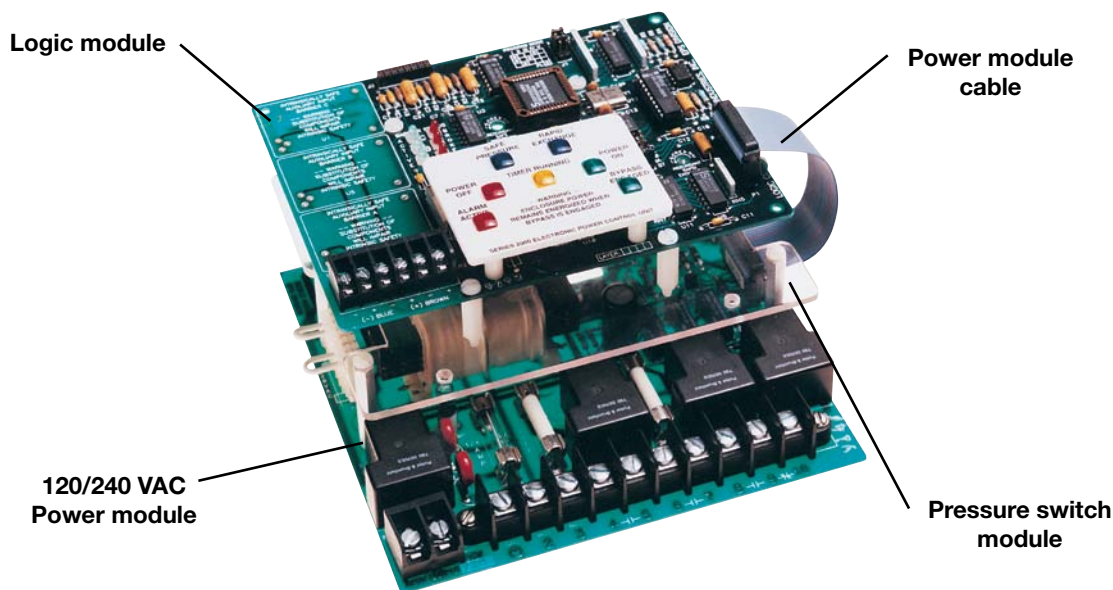


Part No. 512473 Drawing No. 129-0212a 03/09

Electrical & Pneumatic Diagrams

LH, RH, TM, BM, WM & FM Configurations

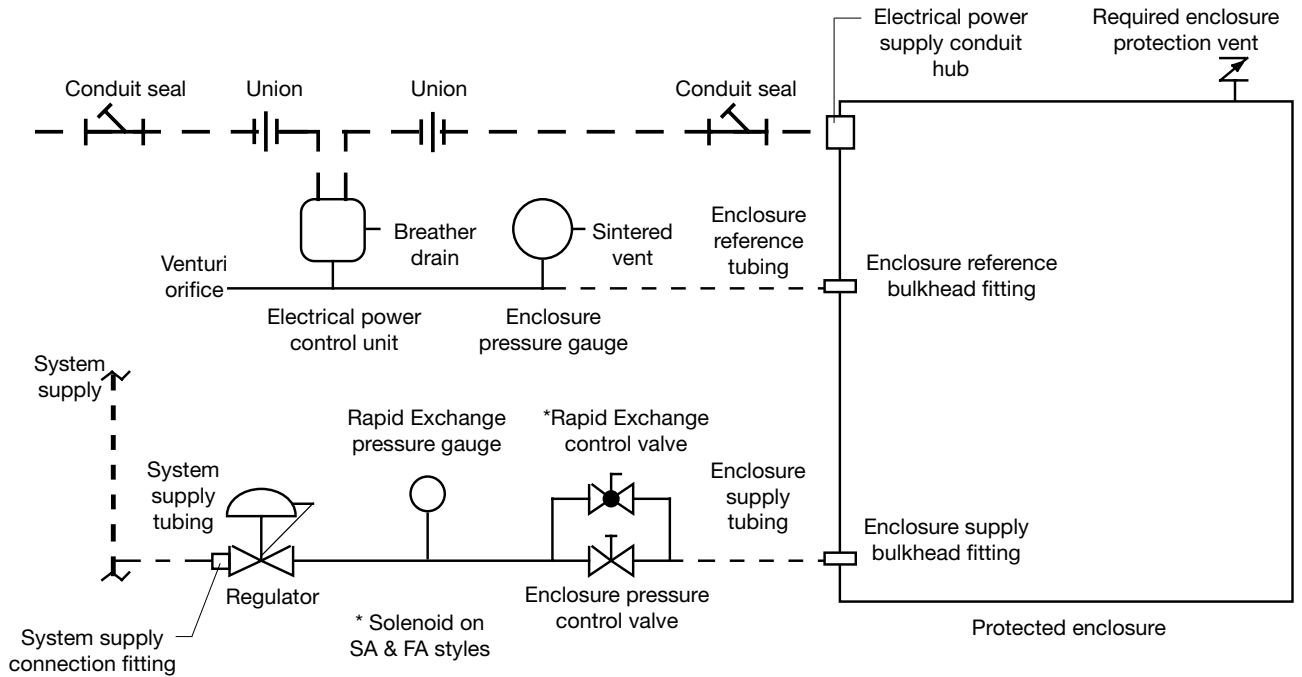

PM Configurations

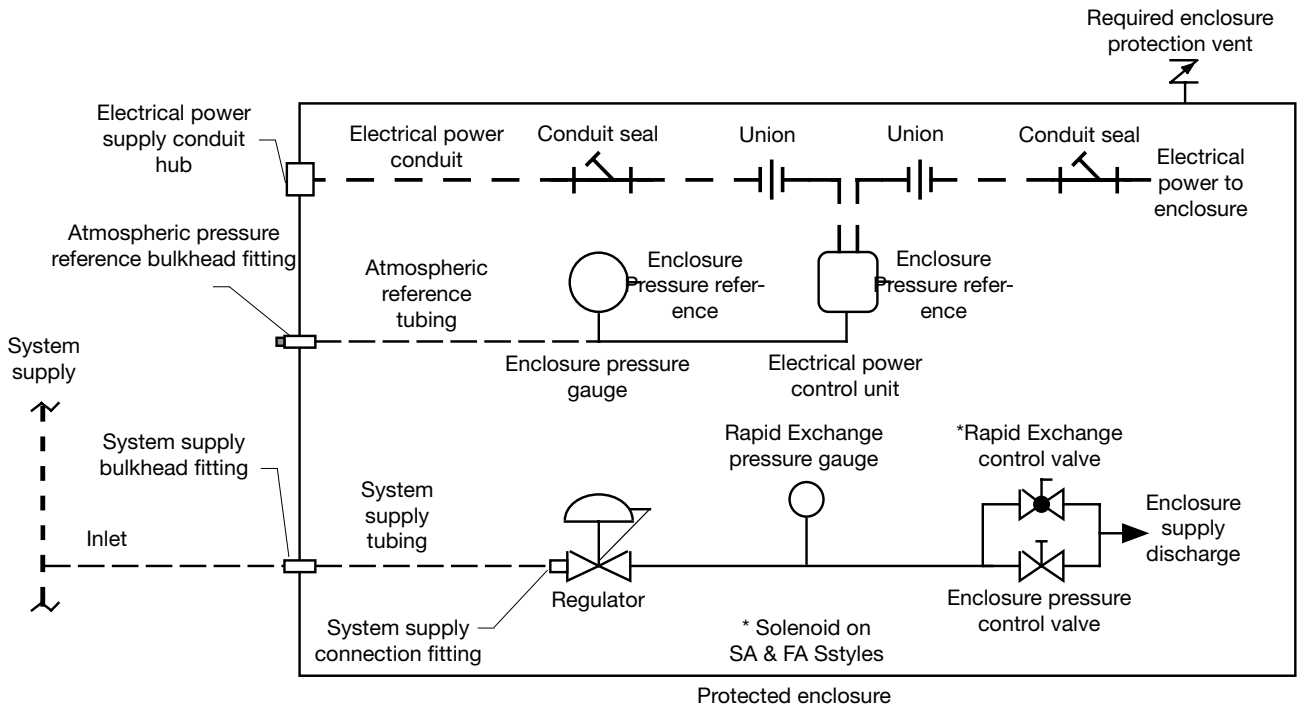

Part No. 512473 Drawing No. 129-0212a 03/09

Conduit Installation

EPCU Electrical Conduit

Unplug the four unlabeled conduit entrances located on the sides and bottom of the EPCU enclosure (See page 15, "EPCU Layout" for conduit entrance layout).

The installer must mount the Type7 drain fitting supplied with the system (except for PM configurations) in one of the bottom conduit entrances of the EPCU, or utilize drain seals on all conduit connected to the bottom two (2) conduit entrances of the EPCU.

Following the instructions listed below, install all conduit, fittings and seals (or drain seals if utilized) between the EPCU, alarm system (if utilized) and the protected enclosure(s). Plug all remaining EPCU conduit entrances.

1. Choose the location for the enclosure's electrical conduit connection(s) based on the requirements on page 14, "Electrical Supply Requirements."
2. Drill and deburr enclosure conduit fitting holes in the protected enclosure. Mount the fittings.
3. Determine appropriate route for the enclosure electrical enclosure and alarm signal conduit.
4. Measure, cut and thread conduit, check conduit fit to insure proper seating. Fully ream all conduit.
5. Install conduit and tighten all fittings to fitting manufacturers specifications. Secure conduit to appropriate structural supports as required.
6. Seal all conduit with an approved compound prior to operation of the protection system.

Optional Intrinsic Safety Barrier Conduit

Systems supplied with optional Intrinsic Safety Barriers (ISB) will be supplied with clearly labeled isolated conduit entries, a solid body wireway with snap cover and plexiglass wiring partitions. These accessories provide a fully isolated wiring path to the barrier wiring terminal located on the lower left corner of the EPCU Logic Module. All IS wiring must be isolated.

1. Choose the location for the enclosure's IS conduit connection(s) based on the requirements on page 14, "Electrical Supply Requirements."
2. Drill and deburr enclosure conduit fitting holes in the protected enclosure. Mount the fittings.
3. Determine appropriate route for the IS conduit.
4. Measure, cut and thread conduit, check conduit fit to ensure proper seating. Fully ream all conduit.
5. Install conduit and tighten all fittings to fitting manufacturers specifications. Secure conduit to appropriate structural supports as required.
6. Seal all conduit with an approved compound prior to operation of the protection system.

EPCU Conduit Connection Parts

Fitting Kits Can Be Factory Furnished

1. To connect enclosure power from the EPCU to the protected enclosure, one (1) LCK (L fitting conduit kit) or equivalent conduit elbow, coupling and seal fittings.
2. For EPCU to enclosure wiring connection with one (1) additional conduit connection path, one (1) TCK (T fitting conduit kit) or equivalent conduit tee, coupling and seal fittings.

IMPORTANT NOTE: Model LCK & TCK are offered primarily to OEMs attempting to achieve a "field ready" installation. In all cases, limited pipe fitting skills will be required. Pre-cut 150# galvanized steel pipe fitting nipples can be acquired from local plumbing shops, but a hole saw or punch and wrenches are required to install kits.




**TCK "T" Fitting
Conduit Kit**




**LCK "L" Fitting
Conduit Kit**

Power Modules & Wiring Diagram

EPCU 120/240 VAC Power Module Layout

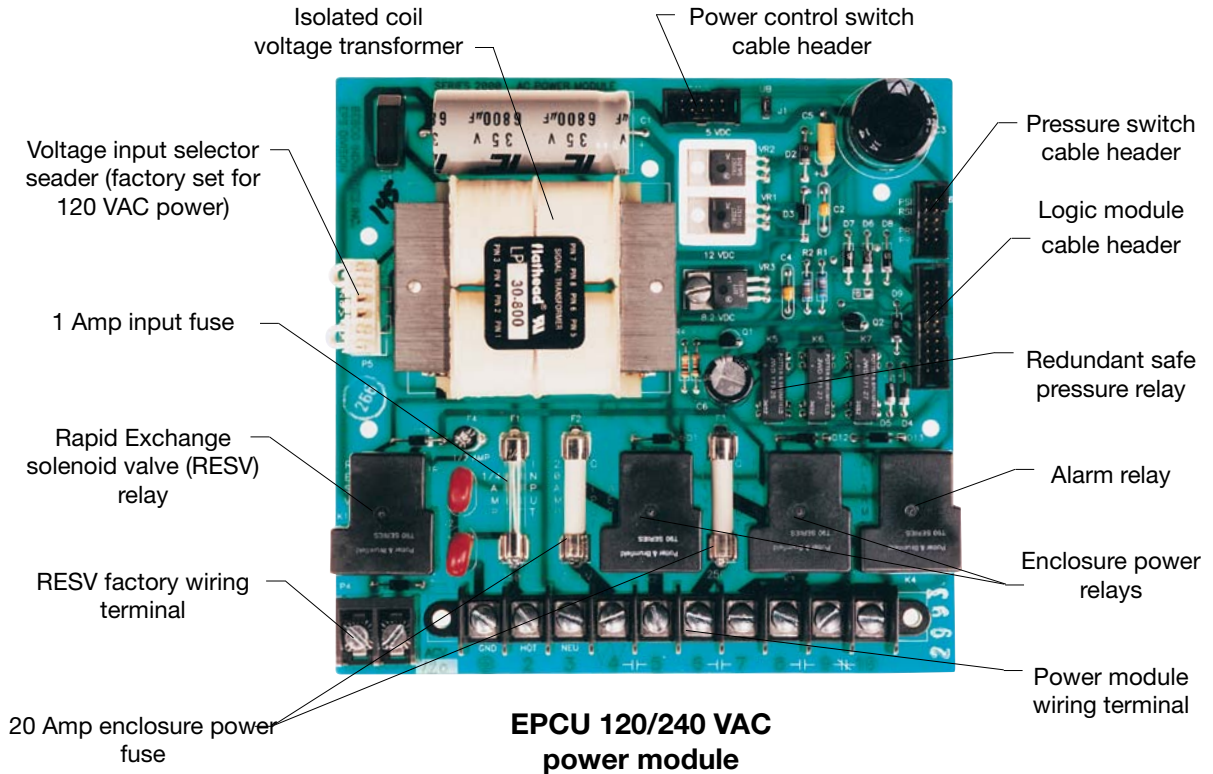

VAC & VDC Power Module Electrical Wiring Diagram

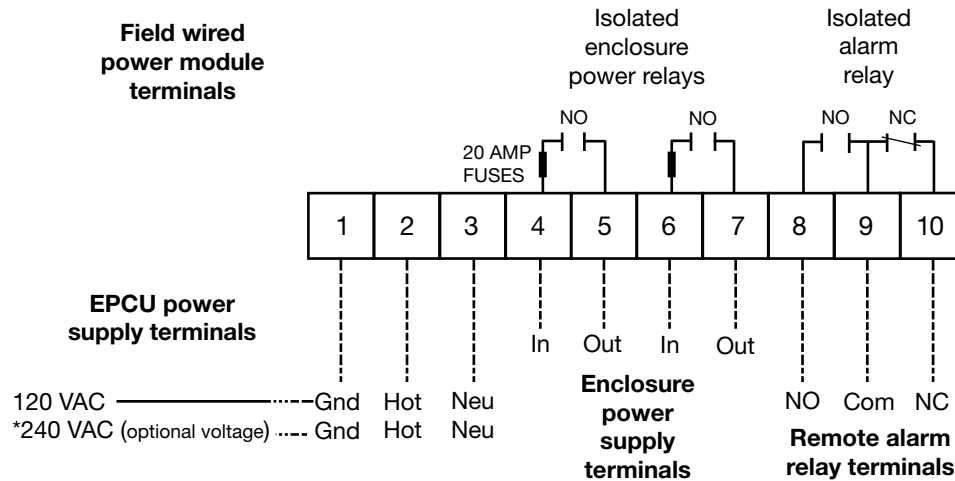


Part No. 512473 Drawing No. 129-0212a 03/09

* European single phase 240 VAC only.
 Power and alarm terminals are feed-thru dry switch contacts.
 Caution should be exercised to ensure that the EPCU wiring is properly connected.
 All terminal connections to the EPCU should be wired with spade or round lugs.


Using 12 gauge maximum to 16 gauge minimum wire only, check EPCU power requirements (see page 14) and wire to the EPCU power source and alarm system (if utilized). Then route power source(s) through the EPCU power in and out terminals to all non-rated devices within the protected enclosure(s).

Logic Module & Barrier Wiring

EPCU Logic Module & Pressure Switch Module

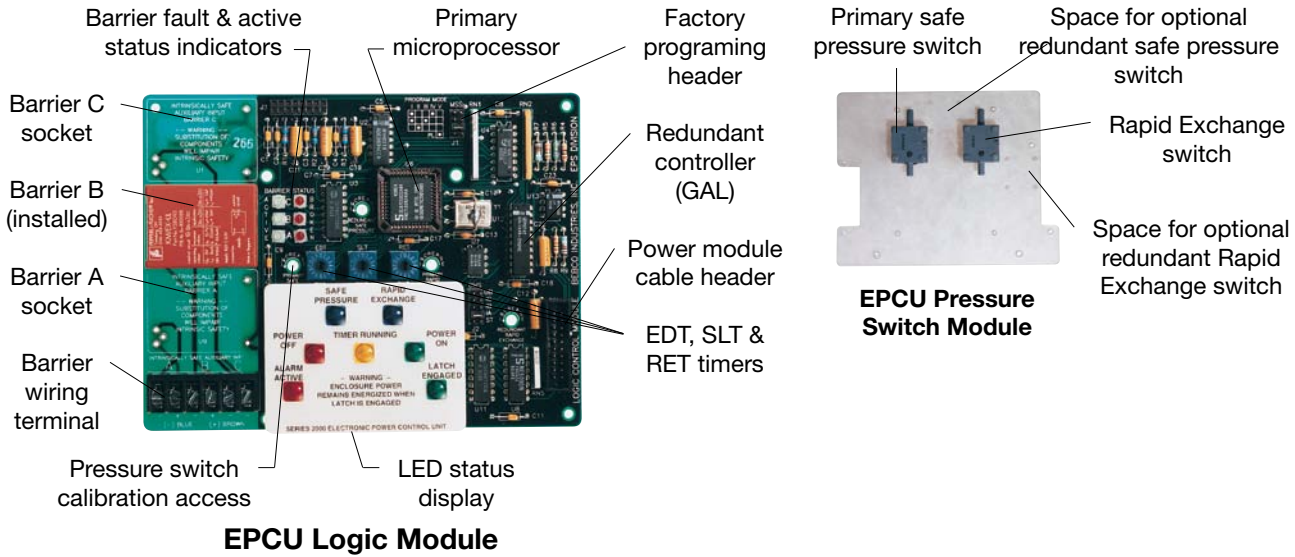

Optional ISB Wiring Requirements

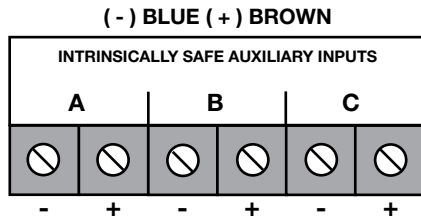

All optional intrinsic safety (IS) wiring must be isolated from all other electrical wiring using the dedicated IS conduit entrances and wireway of the EPCU. See "Optional ISB Conduit Installation" on page 18 for more details. In addition, all wiring must be installed in accordance with the NEC and all relevant local and plant codes.

The intrinsic safety barriers are designed to function in conjunction with a customer furnished switch and SRM-4000 switch resistor module, or an NJ...NAMUR sensor. The customer supplied switch must have dry contacts which contain no inductance or capacitance.

The SRM-4000 switch resistor module and the NJ...NAMUR sensor are supplied with approximately ten (10) feet of wiring. Using 16 to 18 gauge shielded wire, the cable lengths can be extended to a maximum of 100 feet.

In all applications, the module of the switch resistor module cable must be installed as close to the customer supplied switch as possible for proper operation.

Wiring lugs are not recommended for intrinsic safety barrier wiring connections.

See page 21 for barrier operation and factory programming.

EPCU Power Control Modes

Normal Running (NR) Mode

EPCU features an on-off pushbutton power control switch to activate control functions. Switch must be depressed to initiate start-up. After completion of start-up, safe pressure must be lost or switch must be depressed to deenergize enclosure power relays.

Conditional Bypass (CB) Mode

EPCU features an on-off-bypass power control switch to activate control functions. Switch must be set to "on" position to initiate start-up. After enclosure power is energized, safe pressure must be lost or switch must be set to "off" position to deenergize enclosure power. After enclosure power is energized, switch may be set to "bypass" position, to temporarily latch enclosure power relays. A flashing LED then indicates bypass engaged, and the enclosure can then be accessed without deenergizing power (performed under specific conditions). Following access, safe pressure must be reestablished to resume normal operation. At that time, the switch may be reset to the on position, without disruption of enclosure power. Alarm relay normally deenergizes only upon loss of safe pressure, but can be factory programmed to deenergize when bypass is engaged, if specified at time of order.

Barriers & Field Adjustments

Optional Intrinsic Safety Barriers Description

The EPCU Logic Module can accommodate up to three intrinsic safety barriers, to interact with remote devices and affect operation of the EPCU. The barriers are installed and programmed by the factory at time of order, and they are designed to function either in conjunction with a customer furnished switch and a Pepperl+Fuchs furnished resistor network cable, or a Pepperl+Fuchs furnished proximity detector. Each barrier develops a low power signal, to create a two wire closed loop circuit. Operational status of each barrier is indicated by a green LED to show active (closed switch) status, and by a red LED to show faulted (line breakage) cable status. All barriers can be reprogrammed to duplicate other barrier functions as required, upon specific request.

Optional ISB Factory Programing

Barrier A Function - when switch opens

Disables start-up cycle
Deenergizes enclosure power and alarm relay
Functions parallel to safe pressure switch

Barrier B Function - when switch opens

Not programmed for this model - custom applications only

Barrier C Function - when switch closes

Energizes RESV relay - custom applications only

LED Display Indicators

- Power off:** Enclosure power relays deenergized
- Power on:** Enclosure power relays energized
- Safe pressure:** Enclosure pressure > 0.15" or 0.50" w.c.
- Rapid Exchange:** Enclosure pressure > 2.0" w.c.
- Timer running:** Exchange timer active
- Alarm active:** Enclosure pressure < 0.15" w.c.
- Bypass engaged:** Control bypass active - CB mode


Field Adjustable Timer Functions

EDT (Exchange Delay Timer) (FA style only) provides a time delay to prevent Rapid Exchange solenoid valve from energizing until safe pressure can be stabilized.

SLT (Solenoid Latching Timer) (FA style only) provides a time delay to keep the Rapid Exchange solenoid valve energized until Rapid Exchange pressure is detected. If the pressure is not detected, the EPCU will reset.

RET (Rapid Exchange Timer) provides a time delay after Rapid Exchange pressure is detected, to allow four volume exchanges (ten volumes for motors) prior to energizing the enclosure power relays. In Class I areas only, if Rapid Exchange pressure is lost or interrupted during time delay cycle, the EPCU will reset.

EDT, SLT & RET Timer Settings

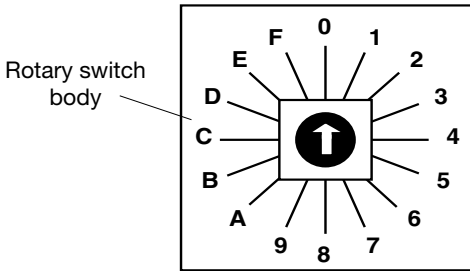

EDT & SLT Timer		RET Timer	
POSITION	TIME IN SECONDS	POSITION	TIME IN MINUTES
0	5	0	5
1	10	1	10
2	15	2	15
3	20	3	20
4	25	4	25
5	30	5	30
6	35	6	35
7	40	7	40
8	45	8	45
9	50	9	50
A	55	A	55
B	60	B	60
C	65	C	65
D	70	D	70
E	75	E	75
F	80	F	80

NOTE: Power must be removed from the EPCU via the local disconnect switch for approximately 10 seconds for timer adjustments to reset.

Part No. 512473 Drawing No. 129-0212a 03/09

Set-up Procedure

IMPORTANT NOTES

Regardless of any condition, the Type X Rapid Exchange system is designed to automatically withhold power to the protected enclosure while inducing Rapid Exchange, for at least five (5) minutes. Normal exchange times should be doubled if large obstructions block inert gas flow.

To test the vent's operation, gently prod the vent flapper open with a soft pointed object, (example: eraser end of a pencil) ensuring that the vent valve works freely. On vertically configured vents, this can be accomplished from within the protected enclosure. Side mounted -90 configured vents can be tested by removing the pipe plug at the bottom of the mounting tee. Multiple operations require only one test per day if enclosure is not opened or left unattended.

The volume exchange rate is based on a four (4) enclosure volume exchange. Multiply the required exchange time by 2.5 for applications requiring a ten (10) volume exchange (motors).

The start-up instruction nameplate exchange time slot will feature the standard factor for this system "ONE MINUTE PER 2.5 CUBIC FEET", but the unit may feature a set of direct factor nameplates with self-adhesive backing such as "TEN MINUTES," for application to the start-up instructions, dependent on how the system was specified and purchased. Field modification of this nameplate, to show a direct factor, is acceptable as noted above if the method used to mark the nameplate does not deface the instructions listed. Materials used for the marking must be indelible and withstand prevailing environmental conditions.

Model 2003 Rapid Exchange Purging Set-up

1. Close the enclosure pressure control regulator (all styles) and Rapid Exchange control valve (STD Style only) fully by turning clockwise (CW).
2. Connect the inert gas supply to the system supply Inlet and set the Rapid Exchange pressure gauge to 60 psi.
3. Temporarily connect a 0-5 inch water column pressure gauge or manometer to the protected enclosure.
4. Check operation of enclosure protection vent as detailed above. See "Important Notes."
5. Seal enclosure(s) and adjust enclosure pressure control valve by opening slowly counterclockwise (CCW) to set a "safe" pressure on the enclosure pressure gauge.

Note: If pressure setting is difficult to stabilize or set, see page 25, "Troubleshooting Procedures."

6. **STD Styles** - Open Rapid Exchange control valve fully by turning 90° CCW and quickly ensure the enclosure protection vent opens.
SA & FA Styles - With the aid of an assistant having two 1/2" combination wrenches on hand, place left hand on system mounting plate and pull Rapid Exchange manual operator firmly with right hand and quickly ensure the enclosure protection vent opens. If enclosure protection vent operates properly, have assistant carefully place the open end of both wrenches behind handle to hold the manual operator in the out position temporarily.
Note: The enclosure pressure gauge should move quickly off scale to the right, this is normal for all Rapid Exchange purging systems.
7. Readjust the regulator to 60 psi minimum, while inducing Rapid Exchange, the test gauge should then read approximately 2 inches of pressure and should not fluctuate. (insufficient enclosure pressure will cause the enclosure protection vent to "shuttle") DO NOT exceed 5 inches of pressure within the protected enclosure.
8. Close enclosure pressure control valve and Rapid Exchange control valve (STD Styles) or remove the two 1/2" combination wrenches from behind the handle.
Note: The Rapid Exchange pressure gauge may now indicate a higher set pressure than was originally set, this is normal for all Rapid Exchange purging systems.
9. Set RET timer (see page 20 for timer location and settings) for required exchange time based on system exchange rate of ONE MINUTE PER 2.5 CUBIC FEET, five (5) minute minimum.
10. Install and tighten cover of EPCU. Ensure the conduit is sealed with approved compounds.
11. Depress the on-off pushbutton (NR mode) or turn selector switch to the on position (CB mode). Each LED should illuminate fully for two seconds (self test), then all LEDs should turn off except Power off (solid red) and alarm activated (flashing red) LEDs.
12. Turn enclosure pressure control valve slowly CW to set the enclosure pressure indicator to a "Safe" 0.25 inch pressure. The safe pressure LED should be on, the alarm active LED should turn off. Check for a 0.10 to 0.15 inch trip point by slowly stroking the indicator from 0.10 to 0.25 inch readings. The safe pressure and alarm active LEDs should turn on and off when the indicator reads between 0.10 and 0.15 inches.
Note: FA Style only - Rapid Exchange solenoid valve will engage automatically upon time out of the EDT timer. Should the operator require additional time to set a stable safe pressure on the enclosure pressure indicator, reset the EDT timer setting as described on page 21.

Set-up Procedure (cont.)


13. STD Style - Open Rapid Exchange control valve fully by turning 90° CCW and quickly ensure the enclosure protection vent opens. The Rapid Exchange and timer active LEDs should be on. Check for trip point by turning Rapid Exchange control valve on and off. The Rapid Exchange and timer running LEDs should turn on and off as exchange is engaged and disengaged, without disturbing the status of the safe pressure LED.

SA Style - Place left hand on system mounting plate and pull Rapid Exchange manual operator firmly with right hand, until solenoid latches (to hold valve open automatically) then quickly ensure the enclosure protection vent opens. The Rapid Exchange and timer active LEDs should be on. Check for trip point by turning EPCU power switch off and on (to reset unit). The Rapid Exchange and timer running LEDs should not turn on until valve is more than half open. Allow system to run through RET timer cycle and watch for solenoid to disengage. The valve should be able to shut off without disturbing the status of the safe pressure LED.

FA Style - Rapid Exchange solenoid valve will engage automatically upon time out of the EDT timer, then quickly ensure the enclosure protection vent opens. The Rapid Exchange and timer active LEDs should be on and SLT timer will be running. Check for trip point by turning EPCU power switch off and on (to reset unit). The Rapid Exchange and timer running LEDs should not turn on until valve is more than half open. Starting again, allow system to run through EDT, SLT and RET timer cycles and watch for solenoid to disengage. The valve should be able to shut off without disturbing the status of the safe pressure LED.

14. Having ensured that the safe pressure and timer running LEDs are functioning properly, Operating procedures located on page 24 may now be followed to step through a complete start up cycle, ensuring that the system functions normally during all phases of operation.

15. Cease testing and remove test equipment.

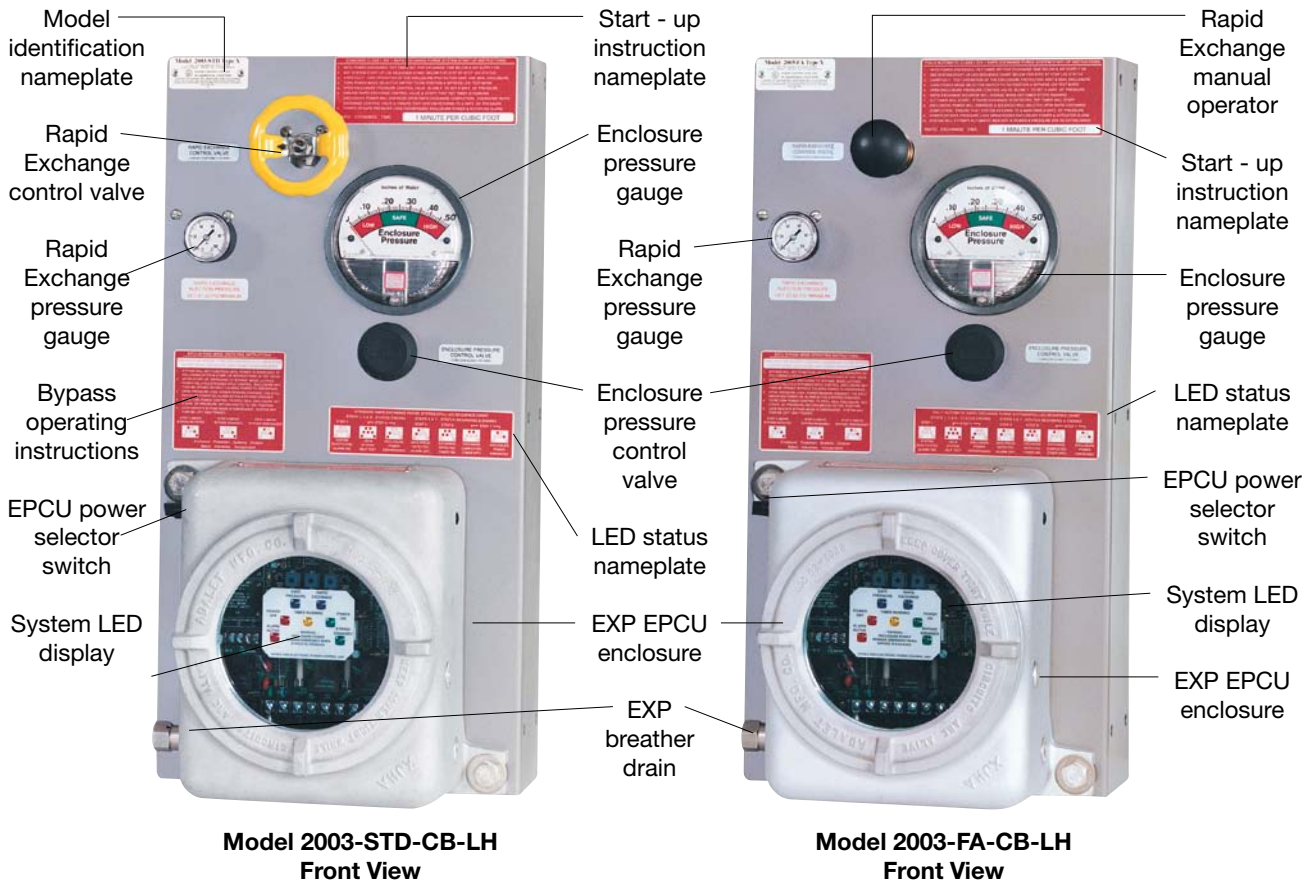

Part No. 512473 Drawing No. 129-0212a 03/09

Operating Sequence

WARNING! Do not exceed a "safe" pressure with the enclosure pressure control regulator.

Operators must follow step-by-step sequence of the start-up instructions nameplate on the protection system.

Do not use the bypass modes without first securing a "hot work" permit.

Never leave the system unattended in bypass modes.

Rapid Exchange Purging Operation

With the inert gas supply on, RET timer set properly (STD and SA Styles), EDT, SLT and RET timers set properly (FA Styles), EPCU power and alarm system energized (if utilized).

1. Carefully read start-up instruction nameplate on system.
2. Check operation of the enclosure protection vent (model EPV-3, if utilized), opening it manually several times. See page 22, "Helpful Hint."
3. Seal protected enclosure(s).
4. Depress the on-off pushbutton (NR mode) or turn selector switch to the on position (CB mode). Each LED should illuminate fully for two seconds, then all LEDs should turn off except power off (solid red) and alarm activated (flashing red) LEDs.
5. Turn enclosure pressure control regulator slowly CCW to set the enclosure pressure indicator to a "safe" 0.25 inch pressure. The safe pressure LED should be on, the alarm active LED should turn off.
6. **STD Style** - Open Rapid Exchange control valve fully by turning 90° CCW and quickly ensure the enclosure protection vent opens. The Rapid Exchange and timer active LEDs should turn on.

SA Style - Place left hand on system mounting plate and pull Rapid Exchange manual operator firmly with right hand, until solenoid latches (to hold valve open automatically) then quickly ensure the enclosure protection vent opens. The Rapid Exchange and timer active LEDs should turn on.

FA Style - Rapid Exchange solenoid valve will engage automatically upon time out of the EDT timer, then quickly ensure the enclosure protection vent opens. The Rapid Exchange and timer active LEDs should be on and SLT Timer will be running.

Note: On all styles, if the safe pressure or timer running LEDs blink on and off or "flicker" during this cycle, EPCU will reset RET timer.

7. Standby until the EPCU RET timer completes the timing cycle and energizes enclosure power. Safe pressure LED should stay on, timer running LED should turn off and power on LED should turn on.
8. **STD Style** - Close Rapid Exchange control valve fully by turning 90° CW. The Rapid Exchange and timer active LEDs should be off.
SA & FA Styles - After completion of the RET timing cycle, timer Running LED should turn off and power on LED should turn on. At the same time, the Rapid Exchange solenoid valve should deenergize and the Rapid Exchange LED should turn off.
9. Ensure the protection system enclosure pressure Indicator maintains a "safe" 0.25 inch pressure for one (1) minute. Readjust enclosure pressure control valve if required.
10. If "safe" 0.25 inch pressure is lost, the EPCU will deenergize enclosure power and activate alarm system (if utilized).

Troubleshooting Procedures

Problem or Fault	Possible Causes	Corrective Action
Enclosure pressure control valve will not hold a safe .25 inch pressure.	Leakage around gasketing, covers, seams, piping and tubing connections, conduit connections and electrical conduit seals of the enclosure.	Tighten enclosure latches: Where tightening is not feasible, and gasketing materials are not practical, holes or gaps can be closed with silicone sealant applied from inside the protected enclosure.
Enclosure pressure indicator reading is difficult to stabilize.	Insufficient enclosure leakage or opening of the venturi orifice is crimped too small.	Remove the orifice, cut off the crimped end and ream the tube, then re-crimp and reinstall the tube to note effect. As tube is shortened, reamed, and re-crimped, sensitivity decreases, allowing easier adjustment of setpoint on the enclosure.
Enclosure protection vent "shuttles" or flutters"	Excessive leakage from protected enclosure. Insufficient protective gas supply header pressure.	Check all points above and verify a minimum 60 psi injection pressure reading on the Rapid Exchange pressure indicator during Rapid Exchange. With a 0.0" - 5" water column test gauge installed properly (see "set-up procedures" page 22), slowly increase the Rapid Exchange injection pressure with the Rapid Exchange valve engaged until this effect is eliminated. Do not exceed 3 inches of pressure within the protected enclosure.
Enclosure pressure indicator reads a "safe" pressure but the safe pressure LED is not illuminated.	Conduit seal between EPCU and protected enclosure is not poured or is leaking pressure back into the EPCU. EPCU breather drain is clogged (all systems except PM configurations). Safe pressure switch is out of calibration.	With area positively known to be nonhazardous, remove screw cover of the EPCU and attempt a complete start-up procedure. If the system works properly, check enclosure power conduit seal for leakage and the EPCU breather drain for blockage. If the system does not operate properly, calibrate the safe pressure switch. Calibrate by slowly adjusting CCW to decrease the setpoint, and CW to raise the setpoint. (Do not attempt to calibrate the switch until all efforts to make the switch respond properly have failed)
Rapid Exchange LED does not illuminate when Rapid Exchange is engaged. FA Style only - The Rapid Exchange solenoid continues to cycle without starting the RET timer.	Conduit seal between EPCU and protected enclosure is not poured or is leaking pressure back into the EPCU. EPCU breather drain is clogged (all systems except PM configurations). Rapid Exchange pressure switch is out of calibration.	With area positively known to be nonhazardous, remove screw cover of the EPCU and attempt a complete start-up procedure. If the system works properly, check enclosure power conduit seal for leakage and the EPCU breather drain for blockage. If the system does not operate properly, calibrate the Rapid Exchange pressure switch. With Rapid Exchange engaged, calibrate by slowly adjusting clockwise to decrease the setpoint, and counterclockwise to raise the setpoint. (Do not attempt to calibrate the switch until all efforts to make the switch respond properly have failed)
Problems persists, or if the system does not appear to be operating properly.	Persisting problems.	Contact Pepperl+Fuchs Applications/Customer Service Department at (330) 486-0002 for more information.

This section covers the most common problems documented with this system. Any problems not covered in this section should be addressed directly to our factory. Please address all service needs to:

Pepperl+Fuchs, Inc.
Customer Service Department

Part No. 512473 Drawing No. 129-0212a 03/09

Warranty Terms and Conditions

PEPPERL+FUCHS STANDARD 24-MONTH WARRANTY

1. **Limited Warranty.** Pepperl + Fuchs, Inc. ("P+F") warrants Purge Units and components for Purge Units manufactured by P+F ("Product" or "Products") to be free from defects in material and workmanship under Normal Use for a period of twenty-four (24) months from the date of shipment of such Products from P+F's warehouse or place of manufacture (or from P+F's authorized representative or distributor). Only the original purchaser of such Products (the "Customer") shall be entitled to the benefit of the foregoing Limited Warranty. No representative, agent or salesman of P+F is authorized to give or provide any warranty or make any representation contrary to or in addition to the foregoing Limited Warranty.
2. **Inspection and Claims.** Customer must inspect and test all Products upon receipt. All claims under the Limited Warranty provided herein must be made within thirty (30) days of the discovery of the defect. Customer must obtain shipping instructions from P+F prior to returning any Product, which Product must be returned at Customer's expense in accordance with P+F's instructions.
3. **Limitations and Exclusions.** "Normal Use" shall mean use and operation within rated capacities, at the correct voltage, and with any required maintenance as provided in the applicable P+F Operating Manuals. The Limited Warranty provided herein does not apply to (i) any Products which have been altered or modified in any way or disassembled by the Customer or anyone else, (ii) any Products which have been subject to misuse, negligence or accident, or improperly installed, changed, substituted or replaced, (iii) any part or component not manufactured by P+F, or (iv) any part or component that is subject to wear or consumption. For parts or components not manufactured by P+F, the Customer or any other user or owner shall have only the warranty provided by the manufacturer of such part or component. The Limited Warranty set forth herein is also subject to the following:
 - (1) The Limited Warranty is limited to electronic and mechanical performance only, as expressly detailed in the product specifications, and does not apply to cosmetic appearance;
 - (2) The Limited Warranty shall not apply to any cables attached to, or integrated with, any Products.
 - (3) The Limited Warranty shall not apply to any Products which are stored, or utilized, in harsh environmental or electrical conditions outside P+F's written specifications.

THE LIMITED WARRANTY SET FORTH HEREIN IS THE ONLY WARRANTY MADE BY P+F WITH RESPECT TO THE PRODUCTS. IT IS EXPRESSLY AGREED AND UNDERSTOOD THAT P+F MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. EXCEPT FOR THE LIMITED WARRANTY SET FORTH HEREIN, THERE IS NO OTHER WARRANTY, EXPRESS, IMPLIED OR STATUTORY; AND THERE IS NO AFFIRMATION OF FACT OR PROMISE BY P+F WITH REFERENCE TO THE PRODUCTS. IN NO EVENT SHALL P+F BE LIABLE FOR ACTUAL OR ANTICIPATED LOST PROFITS OR FOR INCIDENTAL OR CONSEQUENTIAL OR PUNITIVE DAMAGES OR FOR DAMAGES RESULTING FROM BUSINESS INTERRUPTION, OR INJURY OR DEATH OF PERSONS, OR INJURY TO PROPERTY. P+F'S LIABILITY ON ANY CLAIM OF ANY KIND ARISING OUT OF, CONNECTED WITH OR RESULTING FROM THE DESIGN, MANUFACTURE, SALE, REPAIR OR OPERATION OF A PRODUCT, SHALL NOT EXCEED THE PRICE ALLOCABLE TO THAT PRODUCT OR THE PART THEREOF WHICH GIVES RISE TO THE CLAIM. THE REMEDY SET FORTH IN THIS LIMITED WARRANTY CONSTITUTES THE SOLE AND EXCLUSIVE REMEDY OF THE CUSTOMER. P+F SHALL NOT BE LIABLE FOR PENALTIES OF ANY DESCRIPTION.

4. **Limitation of Remedies.** In the event of P+F's liability, whether on this Limited Warranty or based on contract, tort (including, but not limited to, negligence and strict liability) or otherwise, Customer's sole and exclusive remedy will be limited to, at P+F's option, the repair or replacement (f/o/b P+F's place of manufacture) by P+F of any non-conforming items for which claim is made by Customer in accordance with paragraph 2, or the repayment of the portion of the purchase price paid by Customer attributable to the non-conforming item.
5. **Responsibility of Customer: Safety and Protection Precautions.** P+F takes great care to design and build reliable and dependable Products; however, some Products can fail eventually. Customer must take precautions to design its equipment to prevent property damage and personal injury in the unlikely event of a failure. AS A MATTER OF POLICY, P+F DOES NOT RECOMMEND THE INSTALLATION OF PRODUCTS AS THE SOLE DEVICE FOR THE PROTECTION OF PERSONNEL OR PROPERTY AND, THEREFORE, THE CUSTOMER SHOULD BUILD IN REDUNDANCY OR DUAL CONTROL USING APPROVED SAFETY DEVICES FOR THESE APPLICATIONS.
6. **Conflicts.** In the event there is any conflict between the provisions of this Limited Warranty and any provisions contained in any orders, offers, acceptances or other writings or statements provided or made by Customer to P+F, the provisions of this Limited Warranty shall prevail, and the contract between P+F and the Customer shall be deemed formed only upon the provisions set forth in this Limited Warranty, and any additional or conflicting provision inserted by Customer shall be of no force or effect.



Notes

Part No. 512473 Drawing No. 129-0212a 03/09

Subject to modifications without notice

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Copyright Pepperl+Fuchs
Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com



Notes



Notes

Part No. 512473 Drawing No. 129-0212a 03/09

Subject to modifications without notice

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Copyright Pepperl+Fuchs
Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com



Systems Identification & Application Information

Date of installation _____

Unit serial # _____

Item _____

Customer P.O.# _____

Customer project# _____

Service _____

Type _____

Features _____

Application _____

Notes: _____

Part No. 512473 Drawing No. 129-0212a 03/09

PROCESS AUTOMATION – PROTECTING YOUR PROCESS



For over a half century, Pepperl+Fuchs has provided new concepts for the world of process automation. Our company sets standards in quality and innovative technology. We develop, produce, and distribute electronic interface modules, Human-Machine Interfaces and hazardous location protection equipment on a global scale, meeting the most demanding needs of industry. Resulting from our world-wide presence and our high flexibility in production and customer service, we are able to offer complete individual solutions – wherever and whenever you need us. We are the recognized experts in our technologies – Pepperl+Fuchs has earned a strong reputation by supplying the world's largest process industry companies with the broadest line of proven components for a diverse range of applications.

1 Worldwide/German Headquarters
Pepperl+Fuchs GmbH
Mannheim · Germany
Tel. +49 621 776 2222
E-Mail: pa-info@de.pepperl-fuchs.com

2 Asia Pacific Headquarters
Pepperl+Fuchs PTE Ltd.
Singapore
Company Registration No. 199003130E
Tel. +65 6779 9091
E-Mail: pa-info@sg.pepperl-fuchs.com

3 Central/Western Europe & Africa Headquarters
Pepperl+Fuchs N.V.
Schoten/Antwerp · Belgium
Tel. +32 3 6442500
E-Mail: pa-info@be.pepperl-fuchs.com

4 Middle East Headquarters
Pepperl+Fuchs M.E (FZE)
Dubai · UAE
Tel. +971 4 883 8378
E-Mail: pa-info@ae.pepperl-fuchs.com

5 North/Central America Headquarters
Pepperl+Fuchs Inc.
Twinsburg · Ohio · USA
Tel. +1 330 486 0002
E-Mail: pa-info@us.pepperl-fuchs.com

6 Northern Europe Headquarters
Pepperl+Fuchs GB Ltd.
Oldham · England
Tel. +44 161 6336431
E-Mail: pa-info@gb.pepperl-fuchs.com

7 Southern/Eastern Europe Headquarters
Pepperl+Fuchs Elcon srl
Sulbiate · Italy
Tel. +39 039 62921
E-Mail: pa-info@it.pepperl-fuchs.com

8 South America Headquarters
Pepperl+Fuchs Ltda.
São Bernado do Campo · SP · Brazil
Tel. +55 11 4339 9935
E-Mail: pa-info@br.pepperl-fuchs.com

www.pepperl-fuchs.com

 **PEPPERL+FUCHS**
PROTECTING YOUR PROCESS