

Ideal 61-155 SureTest Circuit Analyzer



▶ Instruction Manual

Features:

- Arc Fault Testing
- True RMS
- Voltage drop (12, 15, 20-amp load)
- Line Voltage
- Peak Voltage
- Frequency
- Ground Impedance
- Hot and neutral conductor impedance
- Ground-neutral voltage
- Identifies proper wiring in 3 wire receptacles
- Identifies false ground
- Verifies isolated grounds (with 61-176 adapter)
- GFCI testing

Description

The SureTest family of circuit analyzers were designed to troubleshoot branch circuits quickly, easily and accurately. They have a patented technology that allows them to test branch circuits under a full load condition to identify hidden problems behind the wall that will not be found with traditional testing methods.

Models, Options, & Accessories

| Model | Description | | |
|--------|--|--|--|
| 61-155 | ARCFAULT - Discontinued - replaced by Ideal 61-165 | | |
| Model | Accessories | | |
| 61-175 | GROUND CONTINUITY ADAPTER | | |
| 61-176 | ISOLATED GROUND ADAPTER | | |
| 61-183 | LIGHTG CIRC APT,SURETEST | | |

Specifications

| General Specifications | | |
|------------------------------|--|--|
| Case construction | ABS UL 94 V/0/5VA rated | |
| Operating Range | 108 to 132 Volts | |
| Display | 97x32 Pixel Graphics Display with backlight | |
| Dimensions | 6.5" x 3" x 1" | |
| Weight | 9.4oz | |
| Environmental Specifications | | |
| Operating Temp. | 0° C to 50° C | |
| Storage Temp. | 0° C to 50° C | |
| Humidity | %lt;80% RH | |
| Altitude | 2000m (6667 ft.) | |
| Safety | Designed to IEC 1010-1 UL3111 | |
| Input Rating | 150VAC Category III | |
| Overvoltage Category | Cat III | |
| Cat II | Local level mains, appliances, portable equipment | |
| Cat I | Signal level, special equipment or parts of equipment, telecommunications, electronics | |
| Pollution Degree 2 | Do not operate in environments where conductive pollutants may be present | |

IdealIdealIdealMain PageCircuit AnalyzersPrice List

| Welcome | Test and Measurement by Company | Test and Measurement by Type |
|--------------|---------------------------------|------------------------------|
| How To Order | Leasing | About Us |