


# Safety Light Curtain (Type 4)

F3SJ Ver. 2

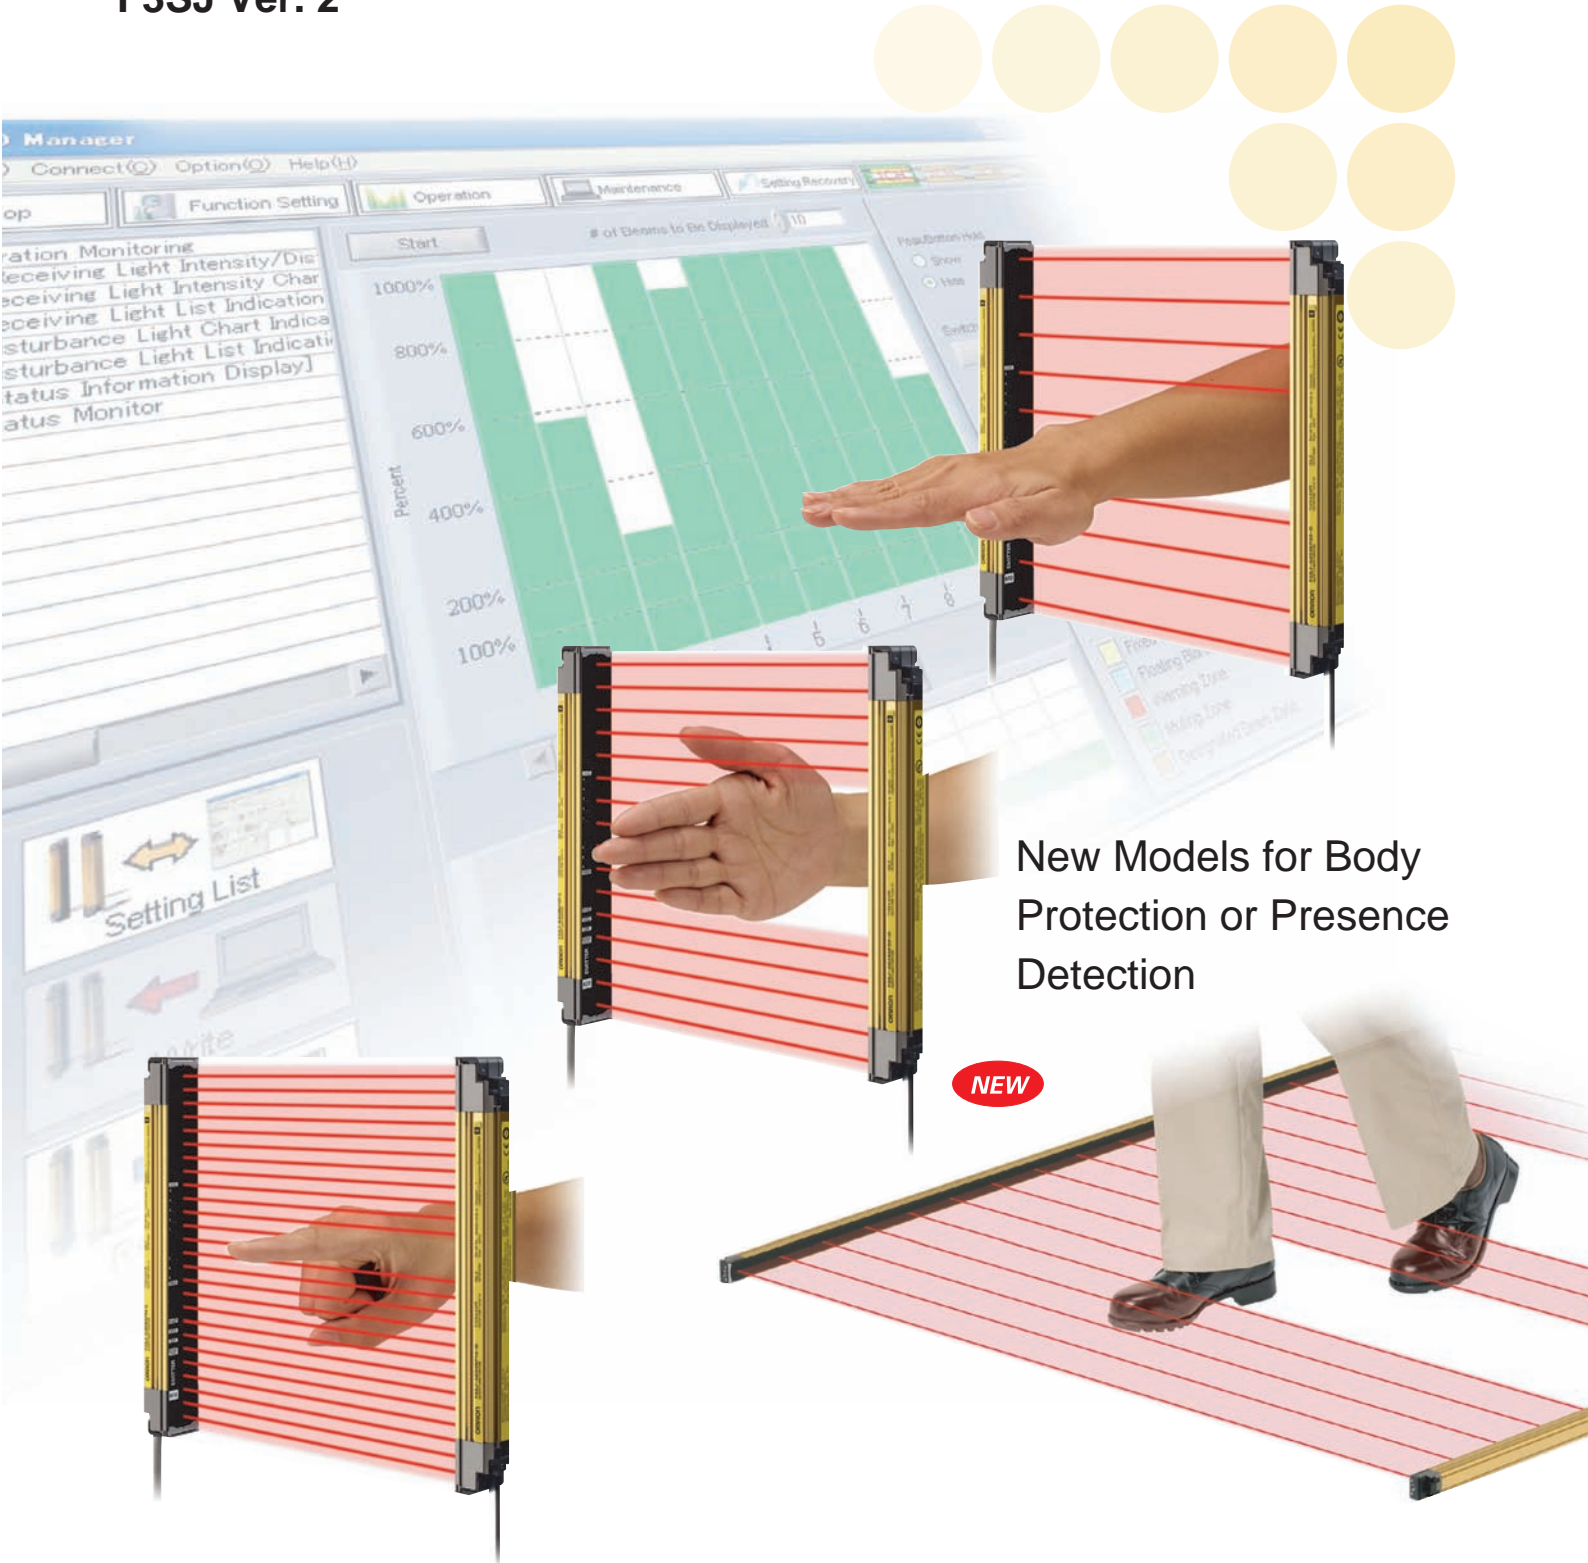

New Models for Body Protection or Presence Detection

**NEW**

# Continuing advances in the F3SJ help to create even safer production systems.

The new F3SJ will satisfy your safety needs. Two new tools make this Safety Light Curtain easier to set up and use. The first is a newly developed setting support software that allows all parameters to be set and the system status to be checked with a personal computer. The second is a Setting Console that lets you easily set parameters and check the system status without having to bring a personal computer to the worksite. A number of new functions have also been provided to ensure that you can use the Safety Light Curtain without lowering productivity. As a result, you can boost the safety of applications that previously did not lend themselves to the use of a Safety Light Curtain.



● Ver. 2 Label Color



Ver. 2 models have a yellow label. Models with a white label are a previous version.

# Version UP

Choose from two new tools for setting parameters and checking the system status.

## "SD Manager" PC Setting Support Software

F39-JC□A Single-end Connector Cable or F39-JC□B Double-end Connector Cable

F3SJ

Branch Connector

Connection Cable

To a USB terminal


SD Manager Setting Software for F3SJ

F39-GWUM "SD Manager" PC Setting Support Software

All parameters can be set and the system status can be checked with a personal computer. In addition to making it easy to monitor the beam alignment, the ambient incident light intensity can be displayed in bar graph form for an easy check of the system status.


The "SD Manager" PC Setting Support Software helps reduce the time required for installing and troubleshooting the Safety Light Curtain.

● Beam alignment is easier.

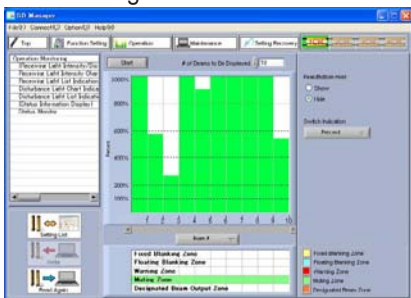

The incident light level can be displayed in a bar graph for each beam.

● The ambient incident light intensity can be checked.

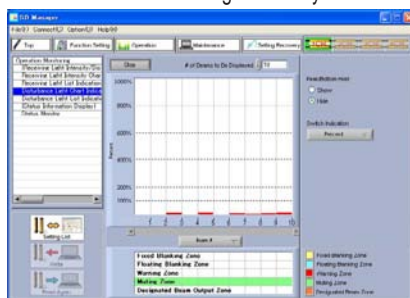

The incident light level when the light emission of the Safety Light Curtain is stopped is displayed in a bar graph.

● The error log can be displayed.



The cause of the errors and countermeasures are both displayed.

## Setting Console

F39-JC□A Single-end Connector Cable or F39-JC□B Double-end Connector Cable

F3SJ

Branch Connector

F39-MC21 Setting Console for the F3SJ

When you don't want to carry a personal computer onto the worksite, the Setting Console is a handy way to set parameters and check the system status.

F39-MC21 Setting Console for the F3SJ

Note: The range of parameter setting and system status checking capabilities is different for the PC Setting Support Software and the Setting Console.

# New functions respond to a variety of safety needs.

A number of new functions have been provided to ensure that you can use the Safety Light Curtain without lowering productivity. This lets you boost the safety of applications that previously did not lend themselves to the use of a Safety Light Curtain.


Note: The new functions on this page require the use of a setting tool. For details, see page 63 Using Setting Tools.

## Two new functions have been added to the muting function.

The muting function temporarily disables the Safety Light Curtain when an object must pass through the detection zone, such as when supplying a workpiece to your equipment. "Partial muting," which further heightens the level of safety, and "position detection muting," which allows muting when the safety status can be determined by the position of a machine (such as a robot), have been newly added to the muting function.


### ● Partial muting

Partial muting raises safety by muting only the beams of the Safety Light Curtain in the area where the workpiece passes through, while preventing muting in all other areas.

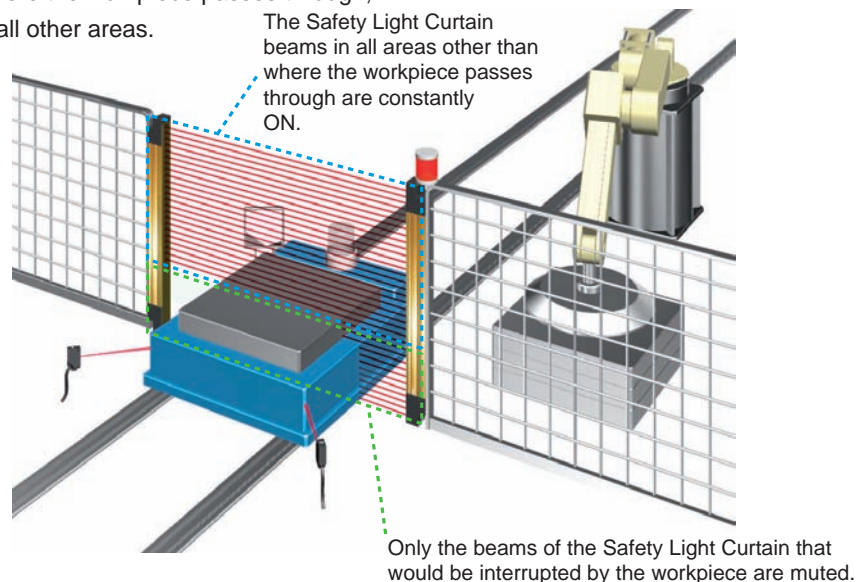

### ● Position detection muting

This is used in applications where the workpiece is set in position each time by an operator, and then a turntable or positioning robot moves the workpiece to the area where the work is done. A limit switch or other means is used to detect when the robot is in a safe position, and muting is then applied.

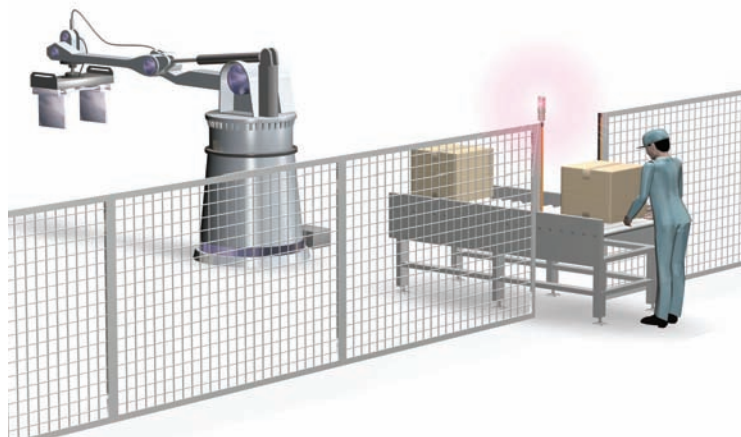


# Version UP

## The blanking function disables specific beams of the Safety Light Curtain.


When a part of a machine is located inside the detection zone of the Safety Light Curtain, the safety output will normally remain OFF and the machine cannot operate. The blanking function makes it possible to disable specific beams for applications such as this.

### ● Fixed blanking

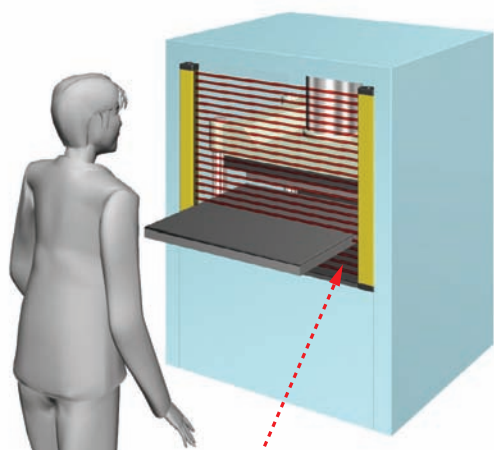

The beam that would otherwise be constantly interrupted by the workbench is disabled.

### ● Floating blanking

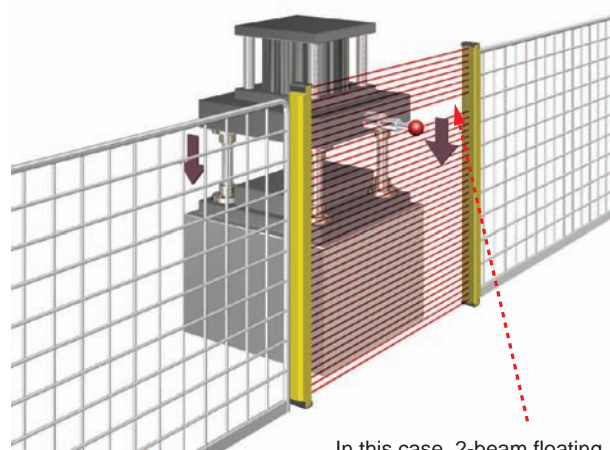


In this case, 2-beam floating blanking is set. If three or more beams are interrupted, the output goes OFF.


## A warning zone can be set to alert people before they enter a danger zone.

For example, you can set the F3SJ to generate only an alarm when someone approaches the danger zone, and to turn OFF the control output when someone actually enters the danger zone. You can also divide the detection zone for a single F3SJ into two zones, or set a warning zone for multiple, series-connected F3SJ Units. Plus, the auxiliary output can be used to activate a flashing lamp as a warning to alert the person before turning OFF the machinery.

### ● Dividing the zone between series-connected sensors

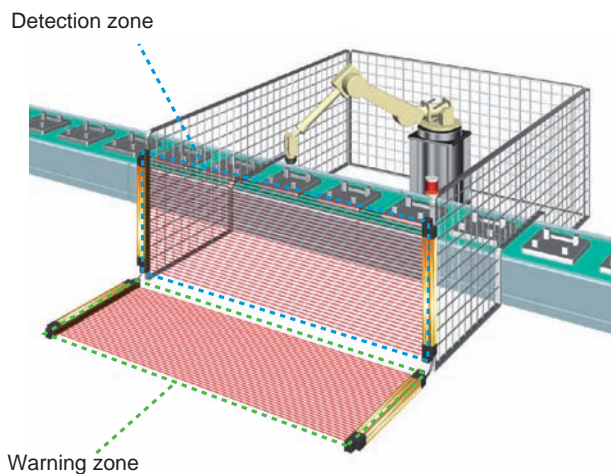

### ● A single sensor can also be divided

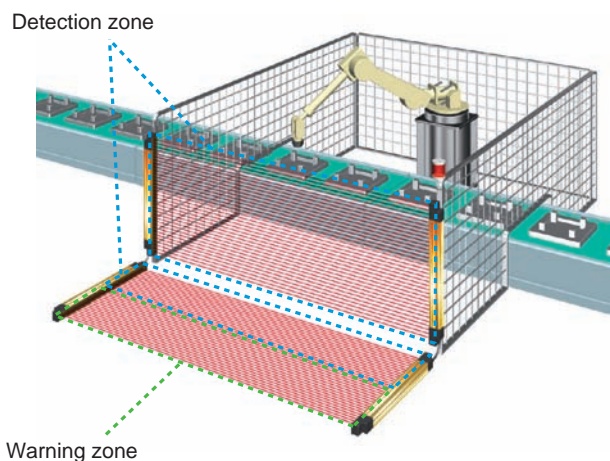

# Selecting a device is as easy as 1-2-3.

## Step 1

### Select the required sensor length.

The F3SJ incorporates the "perfect fit" concept that is a feature of OMRON's other Safety Light Curtains. With a line-up of products in 1-beam increments, you can find the sensor that fits your setup perfectly. Refer to the list of sensor models on pages 13 and 15 to select the minimum sensor length required to cover the area you want to protect.

Note: We can also manufacture sensors with lengths not included in the list of models. For details, please consult your OMRON sales representative.



## Step 2

### Select the output transistor.

Choose the PNP type when installing in safety system configurations that comply with the Machinery Directive or when using with a dedicated controller (F3SP-B1P or F3SX). NPN types are also available as standard products when replacing existing area sensors.

## Step 3


### Select the application.

**NEW**

In addition to finger protection, hand protection, and hand/arm protection models, new models have been added that detects a leg or the presence of a person.

For areas where there is only a short distance to the source of danger, select a finger protection model. For areas where there is some distance to the hazardous point and where the machinery stops with sufficient time to spare, choose an economical hand/arm/body protection model.


Note: After selecting the type of device, calculate the safety distance described on page 60 and change your selection if necessary.

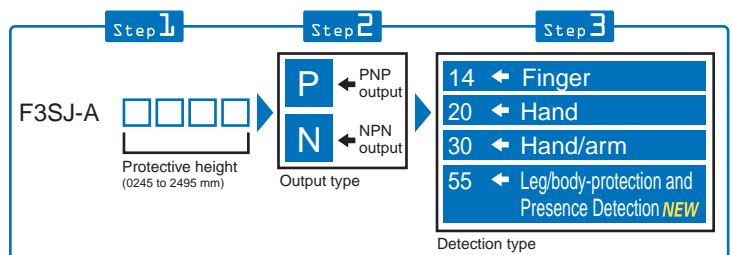

Finger-protection Detection  
Capability: 14 mm diameter  
(Beam gap: 9 mm)



Hand-protection Detection  
Capability: 20 mm diameter  
(Beam gap: 15 mm)

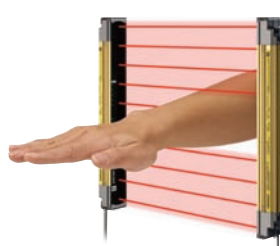

Hand/arm-protection Detection  
Capability: 30 mm diameter  
(Beam gap: 25 mm)




**NEW**  
Leg/body-protection and Presence Detection  
Capability: 55 mm diameter  
(Beam gap: 50 mm)

# Easier to install, easier to use.

## The thin sensor saves valuable space.

The sensor is 6 mm thinner than our previous models. When you include the newly designed mounting brackets, which also enable beams to be aligned after the sensor is mounted, the total thickness is 26 mm - a reduction of 19 mm compared to previous models. The low profile means the sensor will not get in the way when adding safety applications to existing equipment.

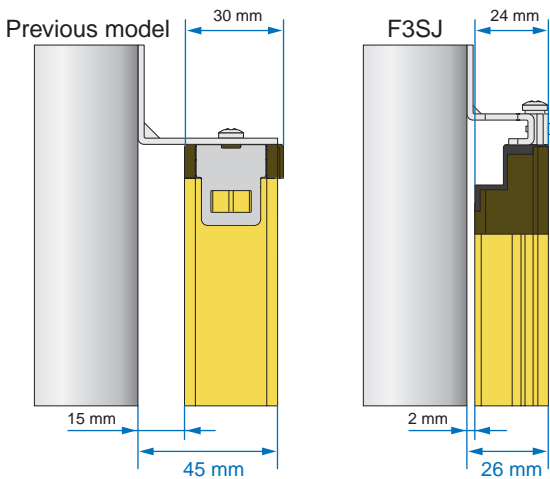

## The included standard mounting brackets are easier than ever to use.

The included mounting brackets, which are suitable for general use, have been redesigned with ease of use in mind. The new design allows easy screwdriver access, even when mounting in tight spaces. Also, after aligning the beams, screws can be tightened while oriented perpendicular to the lens surface, just like the panel mounting screws. On previous models, the carefully adjusted beam angles would sometimes come out of alignment when tightening the final screws. This problem has been solved with the F3SJ, because the screw-tightening direction is different from the angle adjustment direction. The result is reduced installation time.




The direction of all screws can be oriented perpendicular to the lens surface. Easy screwdriver access.


The sensor can be rotated along its axis. Beam alignment can be fine-tuned, even when mounted side by side on a surface.

## Flexible cable with a 5 mm bending radius makes wiring a snap.

The F3SJ cables (0.3 m) have M12 connectors and can be routed in any direction. Problems with connector compatibility have been eliminated.

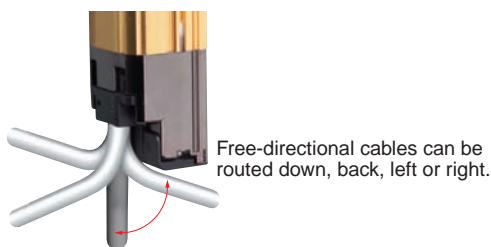


Free-directional cables can be routed down, back, left or right.

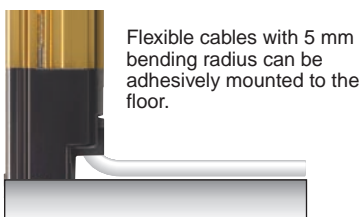

Flexible cables with 5 mm bending radius can be adhesively mounted to the floor.


## Side-mounting in tight spaces is simple.

When using standard mounting brackets to mount a sensor on its side, the bracket protrudes outward in front of the lens surface. When this protrusion is of concern, use the F39-LJ2 side-mounting brackets (sold separately).

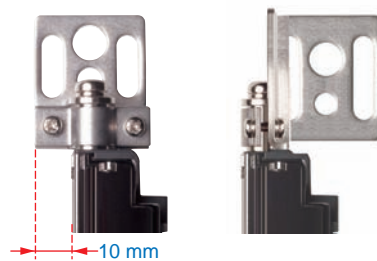

## Easy to change from previous models.

When replacing your previous standard multiple-beam area sensor, use the F39-LJ4 top / bottom mounting bracket B (sold separately), which features enlarged mounting holes.

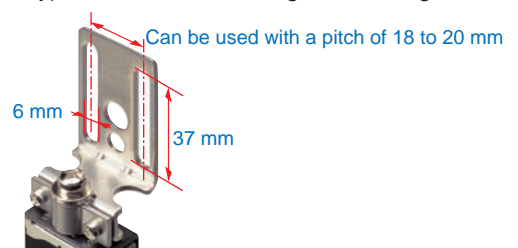


# Select the configuration that best meets your safety needs.

The F3SJ-A Safety Light Curtain is a Type 4 safety sensor that can be used to configure a Category 4 safety circuit. Several suggested configurations that are ideal for a variety of safety needs are outlined below.


## Space-efficient and low-cost system

This configuration, which only OMRON can provide, features a sensor unit with an output feedback function required for Safety Category 4. Simply by using a pair G7SA or G7S-E Safety Relays, you can easily and economically configure a Category 4 safety circuit.

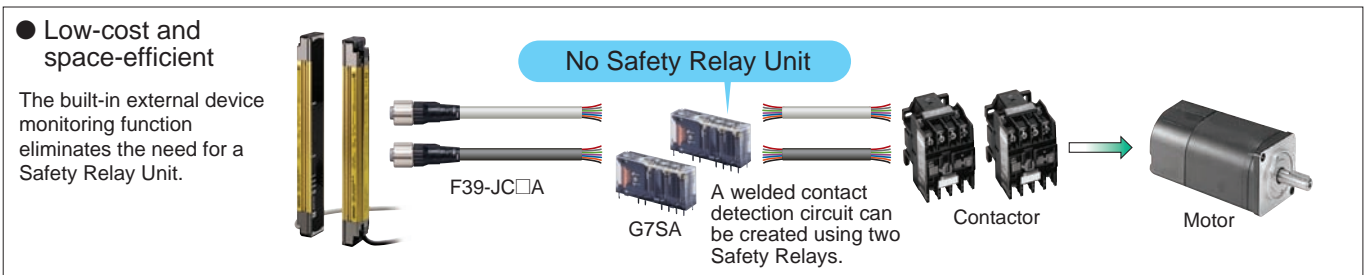


## Wire-saving configuration

Using single Safety Relays requires a lot of labor for wiring. To simplify the connection process, use F39-JC□B Double-end Connector Cable and an F3SP-B1P Dedicated Controller. (Use a PNP type for this configuration. NPN types cannot be connected when using an F3SP-B1P Relay.)

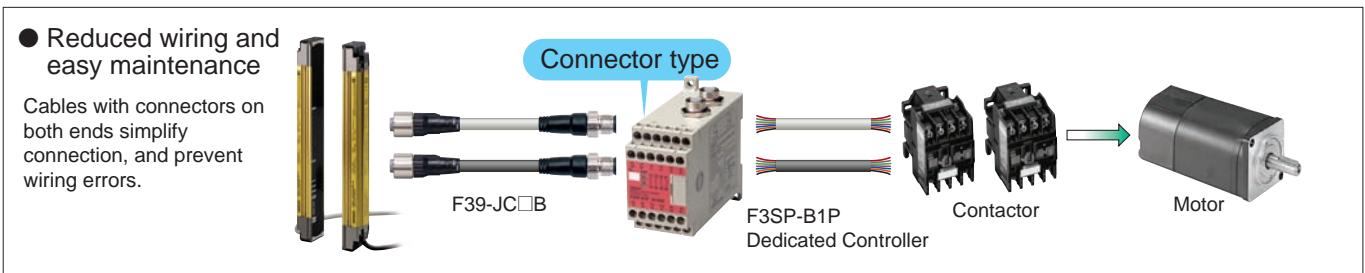

## Multi-input safety circuit configuration

When an emergency stop switch or door switch is used with the F3SJ-A Safety Light Curtain, the safety circuit may become complex, making circuit design difficult. For this, we recommend using the F3SX Safety Controller. Select the model that best matches the required input combination. Use an F39-CN5 Branch Connector (sold separately) to significantly reduce the amount of labor required for wiring to the terminal block.

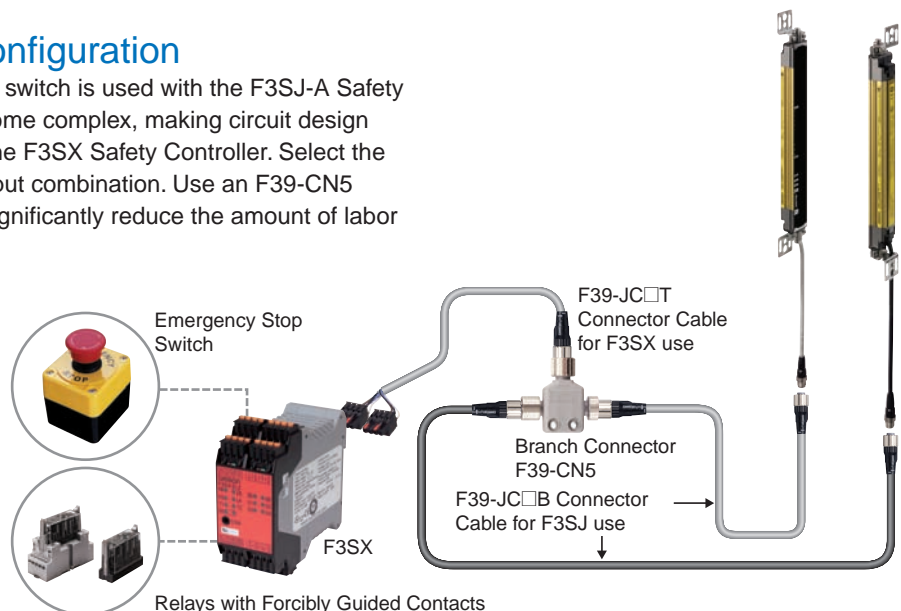


# A variety of features are provided for easier use.

## Resistant to mutual interference. No wiring between sensors and no interference for up to three sets.

OMRON has developed a unique interference light prevention algorithm that automatically prevents malfunction, even when light is received from three sets.

This feature is ideal for applications where it is not possible to perform wiring with an interference sensor, such as between an AGV and installed equipment. Also, the Setting Tool can be used to adjust the emitted light intensity to minimize the effect of light on other devices.


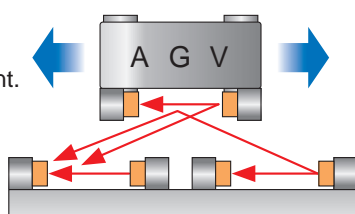


(Updated function)



## Maximum protective height of 2,500 mm. Series connection is more convenient than ever.


Sensors with protective heights of up to nearly 2.5 meters are available for applications that involve large-sized workpieces. And if you happen to make changes in the future, you can always extend the protective height with series connections. Up to four sets, or 400 beams, can be series-connected, and with series connection cables up to 15 meters in length, applications can cover a wide area.

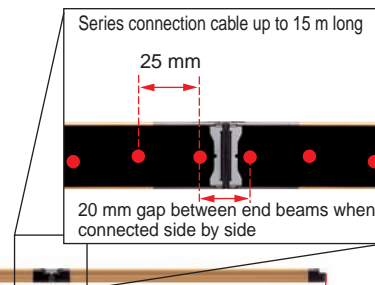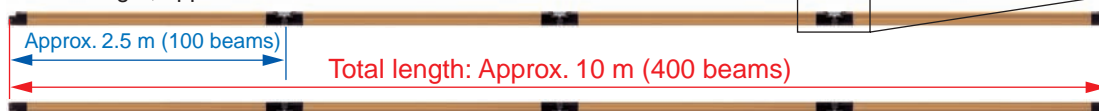

## No bottlenecks in workflow. Free-location brackets make vertical installation easy.


To create "perfect fit" installations with no dead zones or extra space when making series connections in L- or U-shaped configurations, use the F39-LJ3 free-location mounting brackets (sold separately) and F39-JJR06L or F39-JJR15L Side-by-side Series Connection Cable.

- Application example U-shaped configuration

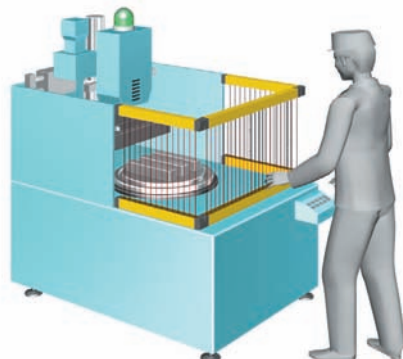

F39-LJ3 free-location mounting brackets can be mounted in any location, without getting in the way of the adjacent sensor.

Side-by-side Series Connection Cable (F39-JJR06L)

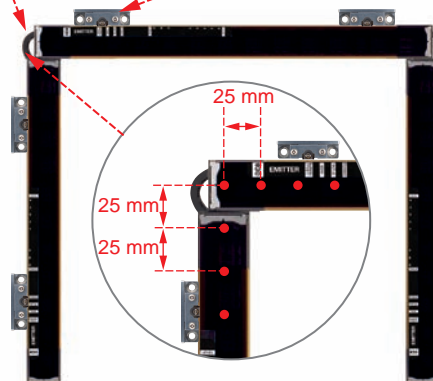

- Keep a 25-mm beam gap in L-shaped installations. The cable (F39-JJR06L) does not get in the way when used in series connections.

# New functions for extra reliability.

## Combine safety and productivity with a controller-less muting function.

The muting function temporarily disables the light curtain when an object must pass through the detection zone, such as when supplying a workpiece to your equipment. In the past, this function required a dedicated muting controller, but now it is built into the F3SJ. To use the muting function, purchase the F39-CN6 Key Cap for Muting (sold separately). The muting function is enabled simply by replacing the Unit's cap with this Key Cap. In addition, a muting sensor that determines the muting timing, as well as a muting lamp that communicates the muting status to other operators, should be connected to the F3SJ.


### Built-in muting function

■ No controller required. Simply attach the Key Cap (sold separately) to the sensor.

F39-CN6  
Key Cap for Muting



The Safety Light Curtain can be disabled when an AGV carrying a workpiece passes through.

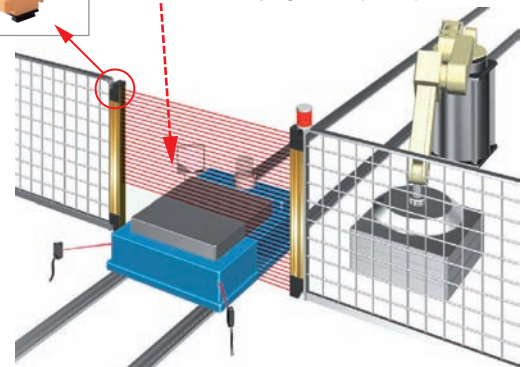

## A new and improved LED indicator.

The incident light level indicator uses orange LED lights for levels 1 to 3, and green LED lights for levels 4 to 5. The green LED lights indicate that a stable amount of light is being received. The error indicator uses a variety of illumination and blinking patterns, enabling more detailed diagnosis results to be communicated via the display.

### Indication Patterns and Light Levels of the Incident Light Level Indicator


○ OFF    ✕ ON

1	2	3	4	5	Incident light level
✕	✕	✕	✕	✕	170% or higher of control output ON level
✕	✕	✕	○	○	From 130 to 170% of control output ON level
✕	✕	○	○	○	From 100 to 130% of control output ON level
✕	○	○	○	○	From 75 to 100% of control output ON level
○	○	○	○	○	From 50 to 75% of control output ON level
○	○	○	○	○	Less than 50% of control output ON level

### Error Mode Indication Patterns and Causes of Errors

○ OFF    ✕ Blinking    ✕ ON

A	B	C	Cause of error
✕	○	✕	Mutual interference or ambient incident light.
✕	✕	✕	Power supply voltage of F3SJ is out of the rated range. Insufficient current capacity of power supply.
✕	✕	○	Incident light to blanking beams.
✕	✕	○	Failure in communication line.
✕	✕	✕	Emitter and receiver have different F3SJ type names or number of series connections.
✕	✕	○	Outside the effective range of parameters set by setting tool.
✕	✕	✕	Cap is not attached.
○	✕	○	External device monitor failure.
✕	○	○	Failure in interlock selection input line or reset input line.
✕	✕	○	Muting wiring failure.
○	○	✕	Failure in control output wiring.
○	✕	✕	Failure in series connection cable wiring.
○	✕	✕	Failure in wiring of external display lamp output.
✕	○	○	Broken series connection cable.
✕	○	○	Wiring error or broken communications wire.
✕	✕	✕	Influence of electrical noise, or failure in a series-connected F3SJ.

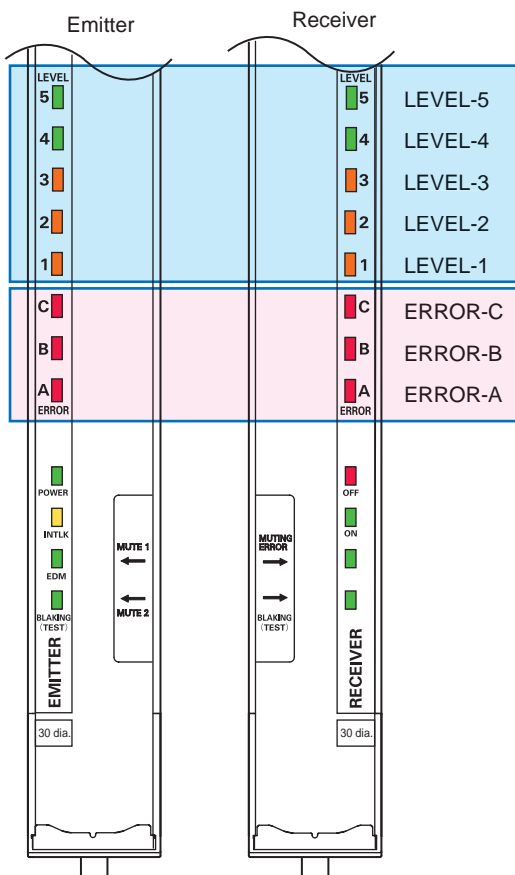

## A measure to prevent you from forgetting to connect a series connection cable.

The connectors for series connection feature an intelligent design. To connect a series connection cable to the F3SJ, remove the Key Cap that is required when the sensor is used by itself. If you should happen to forget to connect the series connection cable, the sensor will not operate by itself without the Key Cap. This solves the problem of sensors operating independently when a series connection cable is accidentally left unconnected, such as when equipment is moved.

Operates as a single sensor when the Key Cap is attached.



Does not operate without the Key Cap.



## Complies with the latest international safety standards and regulations.

Like previous Type 4 Safety Light Curtains, the F3SJ conforms to the latest required safety standards and regulations. Since the F3SJ also complies with IEC61508, the international standard for functional safety, safety is ensured regardless of where it is used.


International standards	IEC61496-1, IEC61496-2, IEC61508 1998 (SIL3)
EU legislation EN standards	Machinery Directive, EMC Directive, EN61496-1, prEN61496-2, EN61508 2001 (SIL3)
JIS standards	JIS B9704-1, B9704-2
North American standards	UL61496-1, UL61496-2, UL508, UL1998, CAN/CSA22.2 NO.14, CAN/CSA22.2 NO.0.8

Can also be used with equipment subject to US OSHA standards (29 CFR 1910.212).  
Satisfies the requirements of the ANSI/RIA R15.06-1999 standards for industrial robots.



## New core technology that supports reliability and customizability.

The quality of Safety Light Curtain performance is determined by the quality of the emitter/receiver elements. With previous models, one faulty beam resulted in the malfunction of the entire sensor. However, the F3SJ features a newly developed "1-bit module" that integrates the lens and other optical parts with the emitter IC and receiver IC, which are key devices. With characteristic inspection performed on each beam, as well as a thorough quality traceability system using 2D codes, performance is assured.

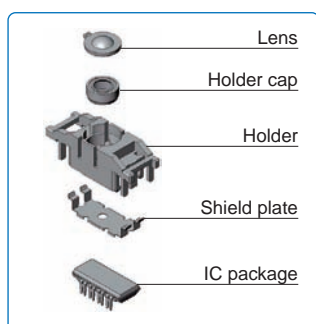


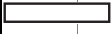
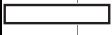
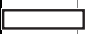

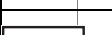
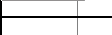
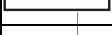
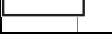
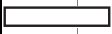
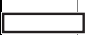
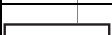
The newly developed board-free "1-bit module" is freely mounted on flat cable.  
In addition to our standard products, we are now able to manufacture devices with a different number of beams, or with a variety of beam gaps. For details about these special products, consult your OMRON sales representative.

# Ordering Information

## ■ Main Units

### Safety Light Curtain F3SJ-A (Type 4)

 Infrared light

Application	Detection capability	Beam gap	Appearance	Operating range	Number of beams	Protective height	Model			
							PNP Output	NPN Output		
Finger protection	14-mm-dia.	9 mm		 0.2 to 9 m	26 to 180	245 to 1,631 mm	F3SJ-A□□□□P14 (See note 1.)	F3SJ-A□□□□N14		
Hand protection	20-mm-dia.	15 mm		 0.2 to 9 m	16 to 100	245 to 1,505 mm	F3SJ-A□□□□P20 (See note 1.)	F3SJ-A□□□□N20		
				 0.2 to 7 m	110 to 166	1,655 to 2,495 mm				
				 0.2 to 9 m	16 to 100	245 to 1,505 mm	F3SJ-A□□□□P20 -TS (See note 2.)	---		
				 0.2 to 7 m	110 to 166	1,655 to 2,495 mm				
				 0.2 to 9 m	25 mm-dia.	20 mm	13 to 82	260 to 1640 mm	F3SJ-A□□□□P25 -TS (See note 2.)	---
				 0.2 to 7 m			83 to 125	1660 to 2500 mm		
Hand/arm protection	30-mm-dia.	25 mm		 0.2 to 9 m	10 to 65	245 to 1,620 mm	F3SJ-A□□□□P30 (See note 1.)	F3SJ-A□□□□N30		
				 0.2 to 7 m	70 to 100	1,745 to 2,495 mm				
Leg/body protection, Presence Detection	55 mm-dia.	50 mm		 0.2 to 9 m	6 to 33	270 to 1620 mm	F3SJ-A□□□□P55 (See note 1.)	--- (See note 3.)		
				 0.2 to 7 m	34 to 50	1670 to 2470 mm				

- Note:**
1. Models with S-mark certification have an "-S" at the end of the model number. Example: F3SJ-A0245P14-S
  2. Models with fixed auto reset (-TS). Parameters cannot be set using the F39-MC21 Setting Console or F39-GWUM "SD Manager" Setting Support Software for F3SJ. See the *Ratings and Performance* data for other differences between this and standard models.
  3. Models with NPN output can also be manufactured. Consult your OMRON representative for details.
  4. Connection cables are not included with the products and are to be purchased separately, as needed. You must purchase optional connector cable.

# Safety Light Curtains

## ■ Safety Light Curtain Model List

Products other than those listed below are also available. Please contact your OMRON sales representative for details.

### F3SJ-A14 Series (9 mm gap)

Model		No. of Beams	Protective Height (mm) (See note.)
PNP Output	NPN Output		
F3SJ-A0245P14	F3SJ-A0245N14	26	245
F3SJ-A0263P14	F3SJ-A0263N14	28	263
F3SJ-A0281P14	F3SJ-A0281N14	30	281
F3SJ-A0299P14	F3SJ-A0299N14	32	299
F3SJ-A0317P14	F3SJ-A0317N14	34	317
F3SJ-A0335P14	F3SJ-A0335N14	36	335
F3SJ-A0353P14	F3SJ-A0353N14	38	353
F3SJ-A0371P14	F3SJ-A0371N14	40	371
F3SJ-A0389P14	F3SJ-A0389N14	42	389
F3SJ-A0407P14	F3SJ-A0407N14	44	407
F3SJ-A0425P14	F3SJ-A0425N14	46	425
F3SJ-A0443P14	F3SJ-A0443N14	48	443
F3SJ-A0461P14	F3SJ-A0461N14	50	461
F3SJ-A0479P14	F3SJ-A0479N14	52	479
F3SJ-A0497P14	F3SJ-A0497N14	54	497
F3SJ-A0515P14	F3SJ-A0515N14	56	515
F3SJ-A0533P14	F3SJ-A0533N14	58	533
F3SJ-A0551P14	F3SJ-A0551N14	60	551
F3SJ-A0569P14	F3SJ-A0569N14	62	569
F3SJ-A0587P14	F3SJ-A0587N14	64	587
F3SJ-A0605P14	F3SJ-A0605N14	66	605
F3SJ-A0623P14	F3SJ-A0623N14	68	623
F3SJ-A0659P14	F3SJ-A0659N14	72	659
F3SJ-A0695P14	F3SJ-A0695N14	76	695
F3SJ-A0731P14	F3SJ-A0731N14	80	731
F3SJ-A0767P14	F3SJ-A0767N14	84	767
F3SJ-A0803P14	F3SJ-A0803N14	88	803
F3SJ-A0839P14	F3SJ-A0839N14	92	839
F3SJ-A0875P14	F3SJ-A0875N14	96	875
F3SJ-A0911P14	F3SJ-A0911N14	100	911
F3SJ-A0983P14	F3SJ-A0983N14	108	983
F3SJ-A1055P14	F3SJ-A1055N14	116	1055
F3SJ-A1127P14	F3SJ-A1127N14	124	1127
F3SJ-A1199P14	F3SJ-A1199N14	132	1199
F3SJ-A1271P14	F3SJ-A1271N14	140	1271
F3SJ-A1343P14	F3SJ-A1343N14	148	1343
F3SJ-A1415P14	F3SJ-A1415N14	156	1415
F3SJ-A1487P14	F3SJ-A1487N14	164	1487
F3SJ-A1559P14	F3SJ-A1559N14	172	1559
F3SJ-A1631P14	F3SJ-A1631N14	180	1631

**Note:** Protective Height (mm) = Total sensor length

### F3SJ-A20 Series (15-mm gap), F3SJ-A20-TS Series (15-mm gap) (See note 1.)

Model		No. of Beams	Protective Height (mm) (See note 2.)
PNP Output (See note 1.)	NPN Output		
F3SJ-A0245P20	F3SJ-A0245N20	16	245
F3SJ-A0275P20	F3SJ-A0275N20	18	275
F3SJ-A0305P20	F3SJ-A0305N20	20	305
F3SJ-A0335P20	F3SJ-A0335N20	22	335
F3SJ-A0365P20	F3SJ-A0365N20	24	365
F3SJ-A0395P20	F3SJ-A0395N20	26	395
F3SJ-A0425P20	F3SJ-A0425N20	28	425
F3SJ-A0455P20	F3SJ-A0455N20	30	455
F3SJ-A0485P20	F3SJ-A0485N20	32	485
F3SJ-A0515P20	F3SJ-A0515N20	34	515
F3SJ-A0545P20	F3SJ-A0545N20	36	545
F3SJ-A0575P20	F3SJ-A0575N20	38	575
F3SJ-A0605P20	F3SJ-A0605N20	40	605
F3SJ-A0635P20	F3SJ-A0635N20	42	635
F3SJ-A0665P20	F3SJ-A0665N20	44	665
F3SJ-A0695P20	F3SJ-A0695N20	46	695
F3SJ-A0725P20	F3SJ-A0725N20	48	725
F3SJ-A0755P20	F3SJ-A0755N20	50	755
F3SJ-A0785P20	F3SJ-A0785N20	52	785
F3SJ-A0815P20	F3SJ-A0815N20	54	815
F3SJ-A0845P20	F3SJ-A0845N20	56	845
F3SJ-A0875P20	F3SJ-A0875N20	58	875
F3SJ-A0905P20	F3SJ-A0905N20	60	905
F3SJ-A0935P20	F3SJ-A0935N20	62	935
F3SJ-A0965P20	F3SJ-A0965N20	64	965
F3SJ-A0995P20	F3SJ-A0995N20	66	995
F3SJ-A1025P20	F3SJ-A1025N20	68	1025
F3SJ-A1055P20	F3SJ-A1055N20	70	1055
F3SJ-A1085P20	F3SJ-A1085N20	72	1085
F3SJ-A1115P20	F3SJ-A1115N20	74	1115
F3SJ-A1145P20	F3SJ-A1145N20	76	1145
F3SJ-A1175P20	F3SJ-A1175N20	78	1175
F3SJ-A1205P20	F3SJ-A1205N20	80	1205
F3SJ-A1235P20	F3SJ-A1235N20	82	1235
F3SJ-A1265P20	F3SJ-A1265N20	84	1265
F3SJ-A1325P20	F3SJ-A1325N20	88	1325
F3SJ-A1385P20	F3SJ-A1385N20	92	1385
F3SJ-A1445P20	F3SJ-A1445N20	96	1445
F3SJ-A1505P20	F3SJ-A1505N20	100	1505
F3SJ-A1655P20	F3SJ-A1655N20	110	1655
F3SJ-A1805P20	F3SJ-A1805N20	120	1805
F3SJ-A1955P20	F3SJ-A1955N20	130	1955
F3SJ-A2105P20	F3SJ-A2105N20	140	2105
F3SJ-A2255P20	F3SJ-A2255N20	150	2255
F3SJ-A2405P20	F3SJ-A2405N20	160	2405
F3SJ-A2495P20	F3SJ-A2495N20	166	2495

**Note:** 1. The suffix "-TS" is attached to the model number of models with fixed auto reset.

2. Protective Height (mm) = Total sensor length

**F3SJ-A25-TS Series (20-mm gap) (See note 1.)**

Model	No. of Beams	Protective Height (mm) (See note 2.)
PNP output		
F3SJ-A0260P25-TS	13	260
F3SJ-A0300P25-TS	15	300
F3SJ-A0340P25-TS	17	340
F3SJ-A0380P25-TS	19	380
F3SJ-A0420P25-TS	21	420
F3SJ-A0460P25-TS	23	460
F3SJ-A0500P25-TS	25	500
F3SJ-A0540P25-TS	27	540
F3SJ-A0580P25-TS	29	580
F3SJ-A0620P25-TS	31	620
F3SJ-A0660P25-TS	33	660
F3SJ-A0700P25-TS	35	700
F3SJ-A0740P25-TS	37	740
F3SJ-A0780P25-TS	39	780
F3SJ-A0820P25-TS	41	820
F3SJ-A0860P25-TS	43	860
F3SJ-A0900P25-TS	45	900
F3SJ-A0940P25-TS	47	940
F3SJ-A0980P25-TS	49	980
F3SJ-A1020P25-TS	51	1020
F3SJ-A1060P25-TS	53	1060
F3SJ-A1100P25-TS	55	1100
F3SJ-A1140P25-TS	57	1140
F3SJ-A1180P25-TS	59	1180
F3SJ-A1220P25-TS	61	1220
F3SJ-A1260P25-TS	63	1260
F3SJ-A1300P25-TS	65	1300
F3SJ-A1340P25-TS	67	1340
F3SJ-A1380P25-TS	69	1380
F3SJ-A1420P25-TS	71	1420
F3SJ-A1460P25-TS	73	1460
F3SJ-A1500P25-TS	75	1500
F3SJ-A1540P25-TS	77	1540
F3SJ-A1580P25-TS	79	1580
F3SJ-A1620P25-TS	81	1620
F3SJ-A1660P25-TS	83	1660
F3SJ-A1700P25-TS	85	1700
F3SJ-A1740P25-TS	87	1740
F3SJ-A1780P25-TS	89	1780
F3SJ-A1820P25-TS	91	1820
F3SJ-A1860P25-TS	93	1860
F3SJ-A1900P25-TS	95	1900
F3SJ-A1940P25-TS	97	1940
F3SJ-A1980P25-TS	99	1980
F3SJ-A2020P25-TS	101	2020
F3SJ-A2060P25-TS	103	2060
F3SJ-A2100P25-TS	105	2100
F3SJ-A2140P25-TS	107	2140
F3SJ-A2180P25-TS	109	2180
F3SJ-A2220P25-TS	111	2220
F3SJ-A2260P25-TS	113	2260
F3SJ-A2300P25-TS	115	2300
F3SJ-A2340P25-TS	117	2340
F3SJ-A2380P25-TS	119	2380
F3SJ-A2420P25-TS	121	2420
F3SJ-A2460P25-TS	123	2460
F3SJ-A2500P25-TS	125	2500

**Note:** 1. The models in the F3SJ-A25-TS Series have only an auto reset.  
2. Protective Height (mm)= Total sensor length

**F3SJ-A30 Series (25-mm gap)**

Model		No. of Beams	Protective Height (mm) (See note.)
PNP Output	NPN Output		
F3SJ-A0245P30	F3SJ-A0245N30	10	245
F3SJ-A0270P30	F3SJ-A0270N30	11	270
F3SJ-A0295P30	F3SJ-A0295N30	12	295
F3SJ-A0320P30	F3SJ-A0320N30	13	320
F3SJ-A0345P30	F3SJ-A0345N30	14	345
F3SJ-A0370P30	F3SJ-A0370N30	15	370
F3SJ-A0395P30	F3SJ-A0395N30	16	395
F3SJ-A0420P30	F3SJ-A0420N30	17	420
F3SJ-A0445P30	F3SJ-A0445N30	18	445
F3SJ-A0470P30	F3SJ-A0470N30	19	470
F3SJ-A0495P30	F3SJ-A0495N30	20	495
F3SJ-A0520P30	F3SJ-A0520N30	21	520
F3SJ-A0545P30	F3SJ-A0545N30	22	545
F3SJ-A0570P30	F3SJ-A0570N30	23	570
F3SJ-A0595P30	F3SJ-A0595N30	24	595
F3SJ-A0620P30	F3SJ-A0620N30	25	620
F3SJ-A0645P30	F3SJ-A0645N30	26	645
F3SJ-A0670P30	F3SJ-A0670N30	27	670
F3SJ-A0695P30	F3SJ-A0695N30	28	695
F3SJ-A0720P30	F3SJ-A0720N30	29	720
F3SJ-A0745P30	F3SJ-A0745N30	30	745
F3SJ-A0770P30	F3SJ-A0770N30	31	770
F3SJ-A0795P30	F3SJ-A0795N30	32	795
F3SJ-A0820P30	F3SJ-A0820N30	33	820
F3SJ-A0845P30	F3SJ-A0845N30	34	845
F3SJ-A0870P30	F3SJ-A0870N30	35	870
F3SJ-A0895P30	F3SJ-A0895N30	36	895
F3SJ-A0920P30	F3SJ-A0920N30	37	920
F3SJ-A0945P30	F3SJ-A0945N30	38	945
F3SJ-A0970P30	F3SJ-A0970N30	39	970
F3SJ-A0995P30	F3SJ-A0995N30	40	995
F3SJ-A1020P30	F3SJ-A1020N30	41	1020
F3SJ-A1045P30	F3SJ-A1045N30	42	1045
F3SJ-A1070P30	F3SJ-A1070N30	43	1070
F3SJ-A1095P30	F3SJ-A1095N30	44	1095
F3SJ-A1120P30	F3SJ-A1120N30	45	1120
F3SJ-A1145P30	F3SJ-A1145N30	46	1145
F3SJ-A1170P30	F3SJ-A1170N30	47	1170
F3SJ-A1195P30	F3SJ-A1195N30	48	1195
F3SJ-A1220P30	F3SJ-A1220N30	49	1220
F3SJ-A1245P30	F3SJ-A1245N30	50	1245
F3SJ-A1270P30	F3SJ-A1270N30	51	1270
F3SJ-A1295P30	F3SJ-A1295N30	52	1295
F3SJ-A1395P30	F3SJ-A1395N30	56	1395
F3SJ-A1495P30	F3SJ-A1495N30	60	1495
F3SJ-A1620P30	F3SJ-A1620N30	65	1620
F3SJ-A1745P30	F3SJ-A1745N30	70	1745
F3SJ-A1870P30	F3SJ-A1870N30	75	1870
F3SJ-A1995P30	F3SJ-A1995N30	80	1995
F3SJ-A2120P30	F3SJ-A2120N30	85	2120
F3SJ-A2245P30	F3SJ-A2245N30	90	2245
F3SJ-A2370P30	F3SJ-A2370N30	95	2370
F3SJ-A2495P30	F3SJ-A2495N30	100	2495

**Note:** Protective Height (mm)= Total sensor length

**F3SJ-A55 Series (50-mm gap)**


Model		No. of Beams	Protective Height (mm) (See note 2.)
PNP Output	NPN Output (See note 1.)		
F3SJ-A0270P55	---	6	270
F3SJ-A0320P55		7	320
F3SJ-A0370P55		8	370
F3SJ-A0420P55		9	420
F3SJ-A0470P55		10	470
F3SJ-A0520P55		11	520
F3SJ-A0570P55		12	570
F3SJ-A0620P55		13	620
F3SJ-A0670P55		14	670
F3SJ-A0720P55		15	720
F3SJ-A0770P55		16	770
F3SJ-A0820P55		17	820
F3SJ-A0870P55		18	870
F3SJ-A0920P55		19	920
F3SJ-A0970P55		20	970
F3SJ-A1020P55		21	1020
F3SJ-A1070P55		22	1070
F3SJ-A1120P55		23	1120
F3SJ-A1170P55		24	1170
F3SJ-A1220P55		25	1220
F3SJ-A1270P55		26	1270
F3SJ-A1320P55		27	1320
F3SJ-A1370P55		28	1370
F3SJ-A1420P55		29	1420
F3SJ-A1470P55		30	1470
F3SJ-A1520P55		31	1520
F3SJ-A1570P55		32	1570
F3SJ-A1620P55		33	1620
F3SJ-A1670P55		34	1670
F3SJ-A1720P55		35	1720
F3SJ-A1770P55		36	1770
F3SJ-A1820P55		37	1820
F3SJ-A1870P55		38	1870
F3SJ-A1920P55		39	1920
F3SJ-A1970P55		40	1970
F3SJ-A2020P55		41	2020
F3SJ-A2070P55		42	2070
F3SJ-A2120P55		43	2120
F3SJ-A2170P55		44	2170
F3SJ-A2220P55		45	2220
F3SJ-A2270P55		46	2270
F3SJ-A2320P55		47	2320
F3SJ-A2370P55		48	2370
F3SJ-A2420P55		49	2420
F3SJ-A2470P55		50	2470

- Note:** 1. Models with NPN output can also be manufactured.  
 2. Protective Height (mm)= Total sensor length

## ■ Accessories (Optional)


### Single-end Connector Cable (2 cables per set, for emitter and receiver)

For wiring with safety circuit such as single safety relay, safety relay unit, and safety controller

Appearance	Cable length	Specifications	Model
	3 m	M12 connector (8-pin)	F39-JC3A
	7 m		F39-JC7A
	10 m		F39-JC10A
	15 m		F39-JC15A
	20 m		F39-JC20A


### Double-end Connector Cable (2 cables per set, for emitter and receiver)

For connection with F3SP-B1P control unit, and for extension when series-connected (See note.)




Appearance	Cable length	Specifications	Model
	0.5 m	M12 connector (8-pin)	F39-JCR5B
	1 m		F39-JC1B
	3 m		F39-JC3B
	5 m		F39-JC5B
	7 m		F39-JC7B
	10 m		F39-JC10B
	15 m		F39-JC15B
	20 m		F39-JC20B

**Note:** To extend the cable length under series connection, use F39-JJR3W and F39-JC□B in combination.

### Power Cable (Included with the main unit) (2 cables per set, for emitter and receiver)

Appearance	Cable length	Model
	0.3 m	F39-JJR3K


### Series Connection Cable (2 cables per set, for emitter and receiver)

Type	Appearance	Cable length	Model	Application
Series connection cable		0.3 m	F39-JJR3W	For series connection (See note 1.) When using the Water-resistant Case. (See note 2.)
Extension cable		0.5 to 15 m	F39-JC□B	To change series connection length in combination with F39-JJR3W
Side-by-side Series connection cable		0.06 m	F39-JJR06L	Dedicated series connection cable with minimum length, used in place of the sensor's cable with connector
		0.15 m	F39-JJR15L	

**Note: 1.** Total cable length of series connection is 0.6 m to connect to connector cable of the main sensor unit.  
For series connection with minimum length, use the F39-JJR06L or F39-JJR15L.


**2.** When using the F39-EJ□□□□-L/D Water-resistant Case in series connection configurations, use the special series connection cables for the Water-resistant Case. Refer to page 21 for details.

**Safety Controller (Dedicated PNP output type) (See note.)**


Type	Appearance	Specifications	Model	Remarks
F3SX Safety Controller (See note.)		• Can connect 2 sets of F3SJs and emergency stop switch • DC semiconductor safety output	<b>F3SX-EL2</b>	For other models and functions, refer to the <i>Safety Components Series</i> (Cat. No. Y106).
		• Can connect 4 sets of F3SJs and emergency stop switch • DC semiconductor safety output	<b>F3SX-E-L2L2</b>	
		• Can connect 2 sets of F3SJs and emergency stop switch • Relay output (2NO+1NC)	<b>F3SX-N-L2R</b>	
		• Can connect 4 sets of F3SJs and emergency stop switch • Relay output (2NO+1NC)	<b>F3SX-N-L2L2R</b>	

**Note:** F3SJ for NPN output type cannot be connected.


**Connection Cable for F3SX  
(F3SX↔F39-CN5)**

Appearance	Cable length	Model
	1 m	<b>F39-JC1T</b>
	3 m	<b>F39-JC3T</b>
	5 m	<b>F39-JC5T</b>
	7 m	<b>F39-JC7T</b>
	10 m	<b>F39-JC10T</b>
	15 m	<b>F39-JC15T</b>



**Branch Connector for F3SX  
(F39-JC□T↔F39-JC□B)**

Appearance	Model
	<b>F39-CN5</b>

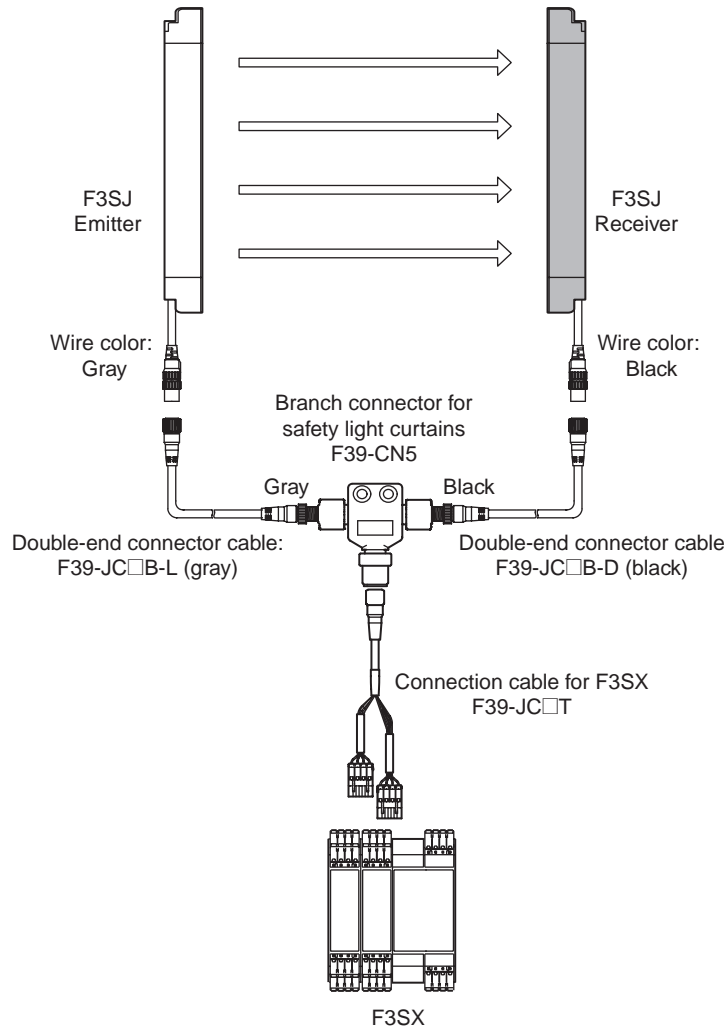**Accessory connection example**




## Relays with Forcibly Guided Contacts

Type	Appearance	Specifications	Model	Remarks
G7SA Relays with Forcibly Guided Contacts		<ul style="list-style-type: none"> <li>No. of contacts: 4</li> <li>Contact type: 2NO+2NC</li> <li>Rated switch load: 250 VAC 6 A, 30 VDC 6 A</li> </ul>	<b>G7SA-2A2B</b>	For other models and functions, refer to For other models and Socket models, refer to the <i>Safety Components Series</i> (Cat. No. Y106).
		<ul style="list-style-type: none"> <li>No. of contacts: 4</li> <li>Contact type: 3NO+1NC</li> <li>Rated switch load: 250 VAC 6 A, 30 VDC 6 A</li> </ul>	<b>G7SA-3A1B</b>	
G7S□-E Relays with Forcibly Guided Contacts		<ul style="list-style-type: none"> <li>No. of contacts: 6</li> <li>Contact type: 4NO+2NC</li> <li>Rated switch load: 250 VAC 10 A, 30 VDC 10 A</li> </ul>	<b>G7S-4A2B-E</b>	
		<ul style="list-style-type: none"> <li>No. of contacts: 6</li> <li>Contact type: 3NO+3NC</li> <li>Rated switch load: 250 VAC 10 A, 30 VDC 10 A</li> </ul>	<b>G7S-3A3B-E</b>	


## Control unit (Can not be used as a muting system)

(Dedicated PNP output type) (See note.)

Appearance	Output	Model	Remarks
	Relay, 3NO+1NC	<b>F3SP-B1P</b> (See note.)	For connection with F3SJ-A, use an F39-JC□B double-end connector cable


Note: F3SJ for NPN output type cannot be connected.

## Dedicated External Indicator Set (Can be connected to either an emitter or a receiver)

Appearance	Color	Model	Remarks
	Red	<b>F39-A01PR-PAC</b>	Indicator (red), mounting bracket (1 set), and dedicated connection cable (0.1 m)
	Green	<b>F39-A01PG-PAC</b>	Indicator (green), mounting bracket (1 set), and dedicated connection cable (0.1 m)
	Yellow	<b>F39-A01PY-PAC</b>	Indicator (yellow), mounting bracket (1 set), and dedicated connection cable (0.1 m)


Note: For indication timing (operation mode) see "Ratings and Performance" on page 22.

## General External Indicator Cable

Appearance	Cable length	Specifications	Model
	3 m	Cable to connect top of the main unit and an off-the shelf external indicator (2-wire)	<b>F39-JJ3N</b>

## Spatter Protection Cover (Includes two pieces for emitter and receiver)

(Each unit reduces the operating range by 10%)

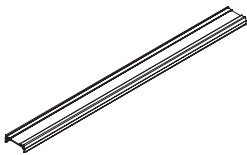Appearance	Applicable sensor	Model
	F3SJ-A series	<b>F39-HJ□□□□</b> (See note.)

Note: The same 4-digit numbers as the protective heights (□□□□ in the light curtain type names) are substituted by □□□□ in the model names.



**Sensor Mounting Bracket (Sold separately)**

Appearance	Specifications	Model	Application	Remarks
	Standard mounting bracket (for top/bottom)	F39-LJ1	(included in the main unit)	2 for emitter, 2 for receiver (total of 4 per set)
	Flat side mounting bracket	F39-LJ2	Use these small-sized brackets when performing side mounting with standard mounting brackets, so that they do not protrude from the detection surface.	2 for emitter, 2 for receiver (total of 4 per set)
	Free-location mounting bracket (also used as standard intermediate bracket)	F39-LJ3	Use these brackets for mounting on any place without using standard bracket.	1 set with 2 pieces
	Top/bottom mounting bracket B (mounting hole pitch 19 mm)	F39-LJ4	Mounting bracket used when replacing existing area sensors (other than F3SN or F3WN) with the F3SJ. For front mounting. Suitable for mounting hole pitch of 18 to 20 mm.	2 for emitter, 2 for receiver (total of 4 per set)
	Bracket for replacing short-length F3SN	F39-LJ5	Mounting bracket used when an F3SN with protective height of 300 mm or less is replaced by an F3SJ.	2 for emitter, 2 for receiver (total of 4 per set)
	Space-saving mounting bracket	F39-LJ8	Use these brackets to mount facing inward. Length is 12 mm shorter than the standard F39-LJ1 bracket.	2 for emitter, 2 for receiver (total of 4 per set)
	Mounting bracket used when replacing an F3W-C.	F39-LJ9	Mounting bracket used when replacing existing F3W-C series area sensors with the F3SJ. For front mounting or side mounting. Mounting hole pitch 16 mm.	2 for emitter, 2 for receiver (total of 4 per set)
	Top/bottom mounting bracket C (mounting hole pitch 13 mm)	F39-LJ11	Mounting bracket used when replacing existing area sensors having a mounting pitch of 13 mm with the F3SJ.	2 for emitter, 2 for receiver (total of 4 per set)

**Key cap for muting**



Appearance	Model	Remarks
	F39-CN6	Cap attaches to the main unit to enable muting function. Attach it to either an emitter or a receiver. (Case: orange)

## Setting Tools (See note 1.)

Type	Appearance	Model	Remarks
"SD Manager" Setting Support Software for the F3SJ		F39-GWUM	Accessories: SD Manager CD-ROM (1), F39-CN1 Branch Connector (1), Connector Cap (1), 2-m Dedicated Cable (1), 0.3-m Dedicated Cable with Plug (1), Instruction Manual
Setting Console		F39-MC21 (See note 2.)	Accessories: F39-CN1 Branch Connector (1), Connector Cap (1), 2-m Dedicated Cable (1), 0.3-m Dedicated Cable with Plug (1), Instruction Manual




- Note:** 1. The setting tools described above can be connected only to F3SJ-A models with built-in software of Ver. 2 or later. Note that the setting tools cannot be used with products shipped prior to December 2005. The setting tools cannot be used for setting parameters on the F3SJ-A□-TS series, but the monitoring function can be used.
2. This product is for use only with the F3SJ-A. It cannot be connected to conventional models of the F3SN-A series. Similarly, the F39-MC11 and F39-MT11 Dedicated Consoles for the F3SN-A cannot be connected to the F3SJ-A series.

## Protector (Main unit mounting bracket (1) and a rear mounting bracket set) (See note 1.)

Type	Appearance	Model	Remarks
Protector Set		F39-PJ□□□□-S (See note 2.)	Rear Mounting Brackets (2), including intermediate brackets to match protective height (0 to 2).
Intermediate brackets for side mounting		F39-PJ-MS	For side mounting, order to suit the desired protective height. Protective height of up to 1,000 mm: 0 intermediate brackets Protective height of 1,001 to 2,000 mm: 1 intermediate bracket Protective height of 2,001 mm or more: 2 intermediate brackets

- Note:** 1. When using for both emitter and receiver, order two sets.
2. The same four digits indicating protective height that are used in the Sensor model number (□□□□) are used in the □□□□ part of the Protector model number.

**Water-resistant Case (Set of 1 tube, packing, and dedicated connector cable)**  
**(See note 1.)**

Appearance	Specifications	Model	Remarks
	For emitter	F39-EJ□□□□-L (See note 2.)	Includes gray cable for emitter.
	For receiver	F39-EJ□□□□-D (See note 2.)	Includes black cable for receiver.
	Rear Mounting Brackets	F39-EJ-R (See note 3.)	Top/bottom 1 each, total of 2
	Side Mounting Brackets	F39-EJ-S (See note 3.)	Top/bottom 1 each, total of 2
---	Series connection cable (for emitter)	F39-JJR3WE-L	Purchase additionally for series connection when using the Water-resistant Case.
	Series connection cable (for receiver)	F39-JJR3WE-D	

**Note: 1.** When using for both emitter and receiver, order two sets.

2. The same four digits indicating protective height that are used in the Sensor model number (□□□□) are used in the □□□□ part of the Case model number.
3. Be sure to purchase brackets with the Case to match the mounting direction (rear or side).

# Ratings and Performance (For details, refer to the instruction manual.)

## ■ Main Units

### F3SJ-A□□□□P14/P20/P30/P55/N14/N20/N30

Model	PNP outputs	F3SJ-A□□□□P14	F3SJ-A□□□□P20	F3SJ-A□□□□P30	F3SJ-A□□□□P55
	NPN outputs	F3SJ-A□□□□N14	F3SJ-A□□□□N20	F3SJ-A□□□□N30	---
Sensor type		Type 4 safety light curtain			
Software version		Ver. 2			
Setting tool connection		Connectable			
Applicable safety category		Category 4, 3, 2, 1, or B			
Detection capability		Opaque objects 14 mm in diameter	Opaque objects 20 mm in diameter	Opaque objects 30 mm in diameter	Opaque objects 55 mm in diameter
Beam gap (P)		9 mm	15 mm	25 mm	50 mm
Number of beams (n)		26 to 180	16 to 166	10 to 100	6 to 50
Protective height (PH)		245 to 1,631 mm	245 to 2,495 mm		270 to 2,470 mm
Lens diameter		Diameter 5 mm			
Operating range		0.2 to 9 m (protective height 1,640 mm max.), 0.2 to 7 m (protective height 1,655 mm max.) (Depending on the setting tool, the detection distance can be shortened to 0.5 m.)			
Response time (For details, see "Response Time" on page 27.)	ON to OFF	1 set, 0245 to 983: 11 ms to 17.5 ms max. 1,055 or higher: 20 ms to 25 ms max.	1 set, 0245 to 1,205: 10 ms to 15 ms max. 1,235 or higher: 17.5 ms to 22.5 ms max.	1 set: 10 ms to 17.5 ms max.	1 set: 10 ms to 13 ms max.
	OFF to ON	1 set, 0245 to 983: 44 ms to 70 ms max. 1,055 or higher: 80 ms to 100 ms max.	1 set, 0245 to 1,205: 40 ms to 60 ms max. 1,235 or higher: 70 ms to 90 ms max.	1 set: 40 ms to 70 ms max.	1 set: 40 ms to 52 ms max.
Startup waiting time		2 s max. (2.2 s max. for series connection)			
Power supply voltage (Vs)		24 VDC ±20% (ripple p-p10% max.)			
Current consumption (no load)	Emitter	Up to 50 beams: 76 mA max., 51 to 100 beams: 106 mA max., 101 to 150 beams: 130 mA max., 151 to 180 beams: 153 mA max., 201 to 234 beams: 165 mA max.			
	Receiver	Up to 50 beams: 68 mA max., 51 to 100 beams: 90 mA max., 101 to 150 beams: 111 mA max., 151 to 180 beams: 128 mA max.			
Light source (emitted wavelength)		Infrared LED (870 nm)			
Effective aperture angle (EAA)		Based on IEC61496-2. Within ±2.5° for both emitter and receiver when the detection distance is 3 m or over			
Control outputs (OSSD)	PNP outputs	Two PNP transistor outputs, load current 300 mA max., residual voltage 2 V max. (except for voltage drop due to cable extension), allowable capacity load 2.2 μF, leak current 1 mA max. (This can be different from traditional logic (ON/OFF) because safety circuit is used.)			
	NPN outputs	Two NPN transistor outputs, load current 300 mA max., residual voltage 2 V max. (except for voltage drop due to cable extension), allowable capacity load 2.2 μF, leak current 2 mA max. (This can be different from traditional logic (ON/OFF) because safety circuit is used.)			---
Auxiliary output 1 (non-safety output)	PNP output	One PNP transistor output, load current 300 mA max., residual voltage 2 V max. (except for voltage drop due to cable extension), leak current 1 mA max.			
	NPN output	One NPN transistor output, load current 300 mA max., residual voltage 2 V max. (except for voltage drop due to cable extension), leak current 1 mA max.			---
Auxiliary output 2 (non-safety output, basic system functions)	PNP output	One PNP transistor output, load current 50 mA max., residual voltage 2 V max. (except for voltage drop due to cable extension), leak current 1 mA max.			
	NPN output	One NPN transistor output, load current 50 mA max., residual voltage 2 V max. (except for voltage drop due to cable extension), leak current 1 mA max.			---
External indicator output (non-safety output)		Available indicators • Incandescent lamp: 24 VDC, 3 to 7 W • LED lamp: Load current 10 mA to 300 mA max., leak current 1 mA max. (To use an external indicator, an F39-JJ3N universal indicator cable or an F39-A01P□-PAC dedicated external indicator kit is required.)			
Output operation mode	Receiver	Control outputs 1, 2: ON when receiving light Auxiliary output 1: Inverse of control output signals (Operating mode can be changed with the setting tool.) External indicator output 1: Inverse of control output signals for a basic system (Operating mode can be changed with the setting tool.) ON when muting/override for a muting system (Operating mode can be changed with the setting tool.)			
	Emitter	Auxiliary output 2: Turns ON when the point of 30,000 operating hours is reached (Operating mode can be changed with the setting tool.) External indicator output 2: ON when lock-out for a basic system (Operating mode can be changed with the setting tool.) ON when muting/override for a muting system (Operating mode can be changed with the setting tool.)			

Model	PNP outputs	F3SJ-A□□□□P14	F3SJ-A□□□□P20	F3SJ-A□□□□P30	F3SJ-A□□□□P55
	NPN outputs	F3SJ-A□□□□N14	F3SJ-A□□□□N20	F3SJ-A□□□□N30	---
Input voltage	PNP output	Test input, interlock selection input, reset input, and muting input are all ON voltage: 9 to 24 V (Vs) (sink current: 3 mA max.) OFF voltage: 0 to 1.5 V, or open External device monitoring input ON voltage: 9 to 24 V (Vs) (sink current: 5 mA max.) OFF voltage: 0 to 1.5 V, or open			
	NPN output	Test input, interlock selection input, reset input, and muting input are all ON voltage: 0 to 1.5 V (short-circuit current 3 mA max.) OFF voltage: 9 to 24 V, or open External device monitoring input ON voltage: 0 to 1.5 V (short-circuit current 5 mA max.) OFF voltage: 9 to 24 V, or open			---
Internal indicators	Emitter	Light intensity level indicators (green LED × 2, orange LED × 3): ON based on the light intensity Error mode indicators (red LED × 3): Blink to indicate error details Power indicator (green LED × 1): ON while power is on Interlock indicator (yellow LED × 1): ON while under interlock, ON while under interlock, blinks at lockout. External device monitoring indicator (muting input 1 indicator), Blanking/test indicator (muting input 2 indicator) (green LED × 2): ON/flash according to function			
	Receiver	Light intensity level indicators (green LED × 2, orange LED × 3): ON based on the light intensity Error mode indicators (red LED × 3): Blink to indicate error details OFF output indicator (red LED × 1): ON when safety output is OFF, blinks at lockout. ON output indicator (green LED × 1): ON while safety output is ON muting error indicator, Blanking /test indicator (green LED × 2): ON/flash according to function			
Mutual interference prevention function	Interference light prevention algorithm, detection distance change function				
Series connection	Time division emission by series connection <ul style="list-style-type: none"> <li>• Number of connections: up to 4 sets</li> <li>• Total number of beams: up to 400 beams</li> <li>• Maximum cable length for 2 sets: no longer than 15 m</li> <li>• Response time under connection: See page 27</li> </ul>				
Test functions	<ul style="list-style-type: none"> <li>• Self test (when power is turned ON and while power is supplied)</li> <li>• External test (emission stop function by test input)</li> </ul>				
Safety functions	<ul style="list-style-type: none"> <li>• Start interlock, restart interlock (Must be set with a setting tool when the muting function is used.)</li> <li>• External device monitor</li> <li>• Muting (Lamp burnout detection, override function included. F39-CN6 key cap for muting is required.)</li> <li>• Fixed blanking (must be set by a setting tool)</li> <li>• Floating blanking (must be set by a setting tool)</li> </ul>				
Connection type	Connectors (M12, 8-pin)				
Protective circuits	Output short-circuit protection, and power supply reverse polarity protection				
Ambient temperature	Operating: -10 to 55°C (no icing), Storage: -30 to 70°C				
Ambient humidity	Operating: 35% to 85% (no condensation), Storage: 35% to 95%				
Ambient operating light intensity	Incandescent lamp: 3,000 lx max. (light intensity on the receiver surface), Sunlight: 10,000 lx max. (light intensity on the receiver surface)				
Insulation resistance	20 MΩ min. (at 500 VDC)				

Model	PNP outputs	F3SJ-A□□□□P14	F3SJ-A□□□□P20	F3SJ-A□□□□P30	F3SJ-A□□□□P55
	NPN outputs	F3SJ-A□□□□N14	F3SJ-A□□□□N20	F3SJ-A□□□□N30	---
<b>Dielectric strength</b>	1,000 VAC 50/60 Hz, 1 min				
<b>Degree of protection</b>	IP65 (IEC60529)				
<b>Vibration resistance</b>	Malfunction: 10 to 55 Hz, 0.7-mm double amplitude, 20 sweeps in X, Y, and Z directions				
<b>Shock resistance</b>	Malfunction: 100 m/s <sup>2</sup> , 1,000 times each in X, Y, and Z directions				
<b>Connection cable, Series connection cable (F39-JJR□L, F39-JJR3W)</b>	6-mm-dia., 8-wire cable (0.15 mm <sup>2</sup> × 8) with braided shield, allowable bending radius R5 mm				
<b>Extension cable (F39-JC□A, F39-JC□B)</b>	6.6-mm-dia., 8-wire cable (0.3 mm <sup>2</sup> × 4P, resistance 0.058 Ω/m), with braided shield, allowable bending radius R36 mm (To extend a cable length, use an equivalent or higher-performance cable. Do not place it in the same duct as high-voltage cables or power cables.) For available length for extension (cable extension length), see page 28.				
<b>Materials</b>	Casing (including metal parts on both ends): Aluminum, zinc die-cast Cap: ABS resin Optical cover: PMMA resin (acrylic) Cable: Oil resistant PVC				
<b>Weight (packed state)</b>	Calculate using the following equations: (1) For F3SJ-A□□□□P14, weight (g)=(protective height) × 1.7 + α (2) For F3SJ-A□□□□P20/F3SJ-A□□□□P30, weight (g)=(protective height) × 1.5 + α (3) For F3SJ-A□□□□P55, weight (g)=(protective height) × 1.4 + α The values for α are as follows: Protected height 245 to 596 mm: α = 1,100 protected height 1667 to 2180 mm: α = 2,400 Protected height 605 to 1,130 mm: α = 1,500 protected height 2195 to 2495 mm: α = 2,600 Protected height 1,136 to 1,658 mm: α = 2,000				
<b>Accessories</b>	Test rod (See note 1.), instruction manual, mounting brackets (top and bottom), mounting brackets (intermediate) (See note 2.), error mode label, User's Manual (CD-ROM) <b>Note:</b> 1. The F3SJ-A□□□□P55 is not included. 2. Number of intermediate mounting brackets depends on protective height of F3SJ. • For protective height from 605 to 1,130 mm: 1 set for each of the emitter and receiver is included • For protective height from 1,136 to 1,658 mm: 2 sets for each of the emitter and receiver are included • For protective height from 1,667 to 2,180 mm: 3 sets for each of the emitter and receiver are included • For protective height from 2,195 to 2,495 mm: 4 sets for each of the emitter and receiver are included				
<b>Applicable standards</b>	IEC61496-1, EN61496-1 UL61496-1, Type 4 ESPE (Electro-Sensitive Protective Equipment) IEC61496-2, prEN61496-2, UL61496-2, Type 4 AOPD (Active Opto-electronic Protective Devices) IEC61508, EN61508 SIL3				

F3SJ-A□□□□P20-TS/P25-TS

Model		F3SJ-A□□□□P20-TS	F3SJ-A□□□□P25-TS
Sensor type		Type 4 safety light curtain	
Software version		Ver. 2	
Setting tool connection		Parameter setting: Not possible Monitoring: Possible	
Applicable safety category		Category 4, 3, 2, 1, or B	
Detection capability		Opaque objects 20 mm in diameter	Opaque objects 25 mm in diameter
Beam gap (P)		15 mm	20 mm
Number of beams (n)		16 to 166	13 to 125
Protective height (PH)		245 to 2,495 mm	260 to 2,500 mm
Lens diameter		Diameter 5 mm	
Operating range		0.2 to 9 m (protective height 1,640 mm max.), 0.2 to 7 m (protective height 1,655 mm max.)	
Response time (For details, see "Response Time" on page 27.)	ON to OFF	1 set, 0245 to 1,205: 10 ms to 15 ms max. 1,220 or higher: 17.5 ms to 22.5 ms max. 3 sets (240 beams): 45.5 ms	1 set, 0260 to 1,600: 10 ms to 15 ms max. 1,620 or higher: 17.5 ms to 20.0 ms max. 3 sets (240 beams): 45.5 ms
	OFF to ON	1 set, 0245 to 1,205: 40 ms to 60 ms max. 1,220 or higher: 70 ms to 90 ms max. 3 sets (240 beams): 200 ms	1 set, 0260 to 1,600: 40 ms to 60 ms max. 1,620 or higher: 70 ms to 80 ms max. 3 sets (240 beams): 200 ms
Startup waiting time		2 s max. (2.2 s max. for series connection)	
Power supply voltage (Vs)		24 VDC ±20% (ripple p-p10% max.)	
Current consumption (no load)	Emitter	Up to 50 beams: 76 mA max., 51 to 100 beams: 106 mA max., 101 to 150 beams: 130 mA max., 151 to 166 beams: 153 mA max	
	Receiver	Up to 50 beams: 68 mA max., 51 to 100 beams: 90 mA max., 101 to 150 beams: 111 mA max., 151 to 166 beams: 128 mA max.	
Light source (emitted wavelength)		Infrared LED (870 nm)	
Effective aperture angle (EAA)		Based on IEC61496-2. Within ±2.5° for both emitter and receiver when the detection distance is 3 m or over	
Control outputs (OSSD)		Two PNP transistor outputs, load current 300 mA max., residual voltage 2 V max. (except for voltage drop due to cable extension), allowable capacity load 2.2 µF, leak current 1 mA max. (This can be different from traditional logic (ON/OFF) because safety circuit is used.)	
Auxiliary output 1 (non-safety output)		One PNP transistor output, load current 300 mA max., residual voltage 2 V max. (except for voltage drop due to cable extension), leak current 1 mA max.	
External indicator output (non-safety output)		Available indicators • Incandescent lamp: 24 VDC, 3 to 7 W • LED lamp: Load current 10 mA to 300 mA max., leak current 1 mA max. (To use an external indicator, an F39-JJ3N universal indicator cable or an F39-A01P□-PAC dedicated external indicator kit is required.)	
Output operation mode	Receiver	Control outputs 1, 2: ON when receiving light Auxiliary output 1: Inverse of control output signals (Operating mode can be changed with the setting tool.) External indicator output 1: Inverse of control output signals for a basic system (Operating mode can be changed with the setting tool.) ON when muting/override for a muting system (Operating mode can be changed with the setting tool.)	
	Emitter	External indicator output 2: ON when lock-out for a basic system (Operating mode can be changed with the setting tool.) ON when muting/override for a muting system (Operating mode can be changed with the setting tool.)	
Input voltage		Test input, reset input, and muting input are all ON voltage: 9 to 24 V (Vs) (sink current: 3 mA max.) OFF voltage: 0 to 1.5 V, or open External device monitoring input ON voltage: 9 to 24 V (Vs) (sink current: 5 mA max.) OFF voltage: 0 to 1.5 V, or open	
Internal indicators	Emitter	Light intensity level indicators (green LED × 2, orange LED × 3): ON based on the light intensity Error mode indicators (red LED × 3): Blink to indicate error details Power indicator (green LED × 1): ON while power is on Lockout indicator (yellow LED × 1): Blinks to indicate lockout. External device monitoring indicator (muting input 1 indicator), Test indicator (muting input 2 indicator) (green LED × 2): ON/flash according to function	
	Receiver	Light intensity level indicators (green LED × 2, orange LED × 3): ON based on the light intensity Error mode indicators (red LED × 3): Blink to indicate error details OFF output indicator (red LED × 1): ON when safety output is OFF, blinks at lockout. ON output indicator (green LED × 1): ON while safety output is ON muting error indicator, Test indicator (green LED × 2): ON/flash according to function	
Mutual interference prevention function		Interference light prevention algorithm	
Series connection		Time division emission by series connection • Number of connections: up to 3 sets • Total number of beams: up to 240 beams • Maximum cable length for 2 sets: no longer than 15 m • Response time under connection: See page 27	
Test functions		• Self test (when power is turned ON and while power is supplied) • External test (emission stop function by test input)	

Model	F3SJ-A□□□□P20-TS	F3SJ-A□□□□P25-TS
<b>Safety functions</b>	<ul style="list-style-type: none"> <li>External device monitor</li> <li>Muting (Override function included. F39-CN6 Key Cap for muting is required.) Lockout occurs under either of the following conditions: <ul style="list-style-type: none"> <li>When more than 3 Units are connected in series.</li> <li>When the total number of beams connected in series exceeds 240.</li> <li>When any model other than a "-TS" model is included in a series connection.</li> </ul> </li> </ul>	
<b>Connection type</b>	Connectors (M12, 8-pin)	
<b>Protective circuits</b>	Output short-circuit protection, and power supply reverse polarity protection	
<b>Ambient temperature</b>	Operating: -10 to 55°C (no icing), Storage: -30 to 70°C	
<b>Ambient humidity</b>	Operating: 35% to 85% (no condensation), Storage: 35% to 95%	
<b>Ambient operating light intensity</b>	Incandescent lamp: 3,000 lx max. (light intensity on the receiver surface), Sunlight: 10,000 lx max. (light intensity on the receiver surface)	
<b>Insulation resistance</b>	20 MΩ min. (at 500 VDC)	
<b>Dielectric strength</b>	1,000 VAC 50/60 Hz, 1 min	
<b>Degree of protection</b>	IP65 (IEC60529)	
<b>Vibration resistance</b>	Malfunction: 10 to 55 Hz, 0.7-mm double amplitude, 20 sweeps in X, Y, and Z directions	
<b>Shock resistance</b>	Malfunction: 100 m/s <sup>2</sup> , 1,000 times each in X, Y, and Z directions	
<b>Connection cable, Series connection cable (F39-JJR□L, F39-JJR3W)</b>	6-mm-dia., 8-wire cable (0.15 mm <sup>2</sup> × 8) with braided shield, allowable bending radius R5 mm	
<b>Extension cable (F39-JC□A, F39-JC□B)</b>	6.6-mm-dia., 8-wire cable (0.3 mm <sup>2</sup> × 4P, resistance 0.058 Ω/m), allowable bending radius R36 mm (To extend a cable length, use an equivalent or higher-performance cable. Do not place it in the same duct as high-voltage cables or power cables.) For available length for extension (cable extension length), see page 28.	
<b>Materials</b>	Casing (including metal parts on both ends): Aluminum, zinc die-cast Cap: ABS resin Optical cover: PMMA resin (acrylic) Cable: Oil resistant PVC	
<b>Weight (packed state)</b>	Calculate using the following equations: For F3SJ-A□□□□P□□-TS, weight (g)=(protective height) × 1.5 + α The values for α are as follows: Protected height 245 to 580 mm: α = 1,100 protected height 1,700 to 2,180 mm: α = 2,400 Protected height 605 to 1,115 mm: α = 1,500 protected height 2,200 to 2,500 mm: α = 2,600 Protected height 1,140 to 1,660 mm: α = 2,000	
<b>Accessories</b>	Test rod, instruction manual, mounting brackets (top and bottom), mounting brackets (intermediate) (See note.), error mode label, User's Manual (CD-ROM) <b>Note:</b> Number of intermediate mounting brackets depends on protective height of F3SJ. <ul style="list-style-type: none"> <li>For protective height from 605 to 1,115 mm: 1 set for each of the emitter and receiver is included</li> <li>For protective height from 1,140 to 1,660 mm: 2 sets for each of the emitter and receiver are included</li> <li>For protective height from 1,700 to 2,180 mm: 3 sets for each of the emitter and receiver are included</li> <li>For protective height from 2,220 to 2,500 mm: 4 sets for each of the emitter and receiver are included</li> </ul>	
<b>Applicable standards</b>	IEC61496-1, EN61496-1 UL61496-1, Type 4 ESPE (Electro-Sensitive Protective Equipment) IEC61496-2, prEN61496-2, UL61496-2, Type 4 AOPD (Active Opto-electronic Protective Devices) IEC61508, EN61508 SIL3	

## ■ Response Time

Model	Protective Height (mm)	Number of Beams	Response time ms (ON to OFF)	Response time ms (OFF to ON)	
F3SJ-A□14 series	245 to 263	26 to 28	11	44	
	281 to 389	30 to 42	12	48	
	407 to 497	44 to 54	13	52	
	515 to 605	56 to 66	14	56	
	623 to 731	68 to 80	15	60	
	767 to 983	84 to 108	17.5	70	
	1,055 to 1,271	116 to 140	20	80	
	1,343 to 1,559	148 to 172	22.5	90	
	1,631	180	25	100	
F3SJ-A□20 series	245	16	10	40	
	275 to 425	18 to 28	11	44	
	F3SJ-A□P20-TS series	455 to 635	30 to 42	12	48
		665 to 815	44 to 54	13	52
		845 to 995	56 to 66	14	56
		1,025 to 1,205	68 to 80	15	60
		1,235 to 1,655	82 to 110	17.5	70
		1,805 to 2,105	120 to 140	20	80
2,255 to 2,495		150 to 166	22.5	90	
F3SJ-A□P25-TS series	260 to 320	13 to 16	10	40	
	340 to 580	17 to 29	11	44	
	600 to 840	30 to 42	12	48	
	860 to 1100	43 to 55	13	52	
	1120 to 1340	56 to 67	14	56	
	1360 to 1600	68 to 80	15	60	
	1620 to 2240	81 to 112	17.5	70	
	2260 to 2500	113 to 125	20.0	80	
F3SJ-A□30 series	245 to 395	10 to 16	10	40	
	420 to 720	17 to 29	11	44	
	745 to 1,045	30 to 42	12	48	
	1,070 to 1,295	43 to 52	13	52	
	1,395 to 1,620	56 to 65	14	56	
	1,745 to 1,995	70 to 80	15	60	
	2,120 to 2,495	85 to 100	17.5	70	
F3SJ-A□55 series	270 to 770	6 to 16	10	40	
	820 to 1420	17 to 29	11	44	
	1470 to 2070	30 to 42	12	48	
	2120 to 2470	43 to 50	13	52	

**Note:** Use the following expressions for series connection.

For 2-set series connection:

Response time (ON to OFF): Response time of the 1st unit + Response time of the 2nd unit - 1 (ms)

Response time (OFF to ON): Response time calculated by the above x 4 (ms)

For 3-set series connection:

Response time (ON to OFF): Response time of the 1st unit + Response time of the 2nd unit + Response time of 3rd unit - 5 (ms)

Response time (OFF to ON): Response time calculated by the above x 5 (ms)

(For models with the "-TS" suffix, multiply the response time obtained by the above x 5 (ms), or use 200 ms, whichever is less.)

For 4-set series connection:

Response time (ON to OFF): Response time of the 1st unit + Response time of the 2nd unit + Response time of the 3rd unit + Response time of the 4th unit - 8 (ms)

Response time (OFF to ON): Response time calculated by the above x 5 (ms)

## ■ Cable Extension Length

Total cable extension length must be no greater than the lengths described below.

When the F3SJ and an external power supply are directly connected, or when the F3SJ is connected to a G9SA-300-SC.

Condition	1 set	2 sets	3 sets	4 sets
Using incandescent lamp for auxiliary output and external indicator output	45 m	40 m	30 m	20 m
Not using incandescent lamp	100 m	60 m	45 m	30 m

When connected to the F3SP-B1P.

Condition	1 set	2 sets	3 sets	4 sets
Using incandescent lamp for external indicator output 2	40 m	30 m	25 m	20 m
Using incandescent lamp for external indicator output 1	60 m	45 m	30 m	20 m
Using incandescent lamp for auxiliary output 1				
Not using incandescent lamp	100 m	60 m	45 m	30 m

**Note:** Keep the cable length within the rated length. Failure to do so is dangerous as it may prevent safety functions from operating normally.

## ■ Accessories

### Control Unit

Item	Model	F3SP-B1P
Applicable sensor	F3SJ-A (Only for PNP output type) (See note.)	
Power supply voltage	24 VDC±10%	
Power consumption	DC1.7 W max. (not including sensor's current consumption)	
Operation time	100 ms max. (not including sensor's response time)	
Response time	10 ms max. (not including sensor's response time)	
Relay output	Number of contacts	3NO+1NC
	Rated load	25 VAC 5 A (cosφ= 1), 30 VDC 5 A L/R = 0 ms
	Rated current	5 A
Connection type	Between sensors	M12 connector (8-pin)
	Others	Terminal block
Weight (packed state)	Approx. 280 g	
Accessories	Instruction manual	

**Note:** NPN output type cannot be connected. Also, the system cannot be used as a muting system.

### Dedicated External Indicator Set

Item	Model	F39-A01PR-PAC	F39-A01PG-PAC	F39-A01PY-PAC
Applicable sensor	F3SJ-A (Common for PNP/NPN output type. Can be attached to emitters and/or receivers)			
Light source	Red LED		Green LED	Yellow LED
Power supply voltage	24 VDC±10% (supplied by sensor)			
Consumption current	50 mA max. (supplied by sensor)			
Connection type	Dedicated accessory connector cable (Sensor side: Dedicated 10-pin connector, Indicator side: M12 8-pin connector)			
Set contents	Indicator (red), Dedicated connector cable (0.1 m), Dedicated mounting brackets (1 for each)		Indicator (green), Dedicated connector cable (0.1 m), Dedicated mounting brackets (1 for each)	Indicator (yellow), Dedicated connector cable (0.1 m), Dedicated mounting brackets (1 for each)


# I/O Circuit

## PNP Output Type

The numbers in white circles indicate the connector's pin numbers.

The black circles indicate connectors for series connection.

The words in brackets ( [ ] ) indicate the signal name for muting system.

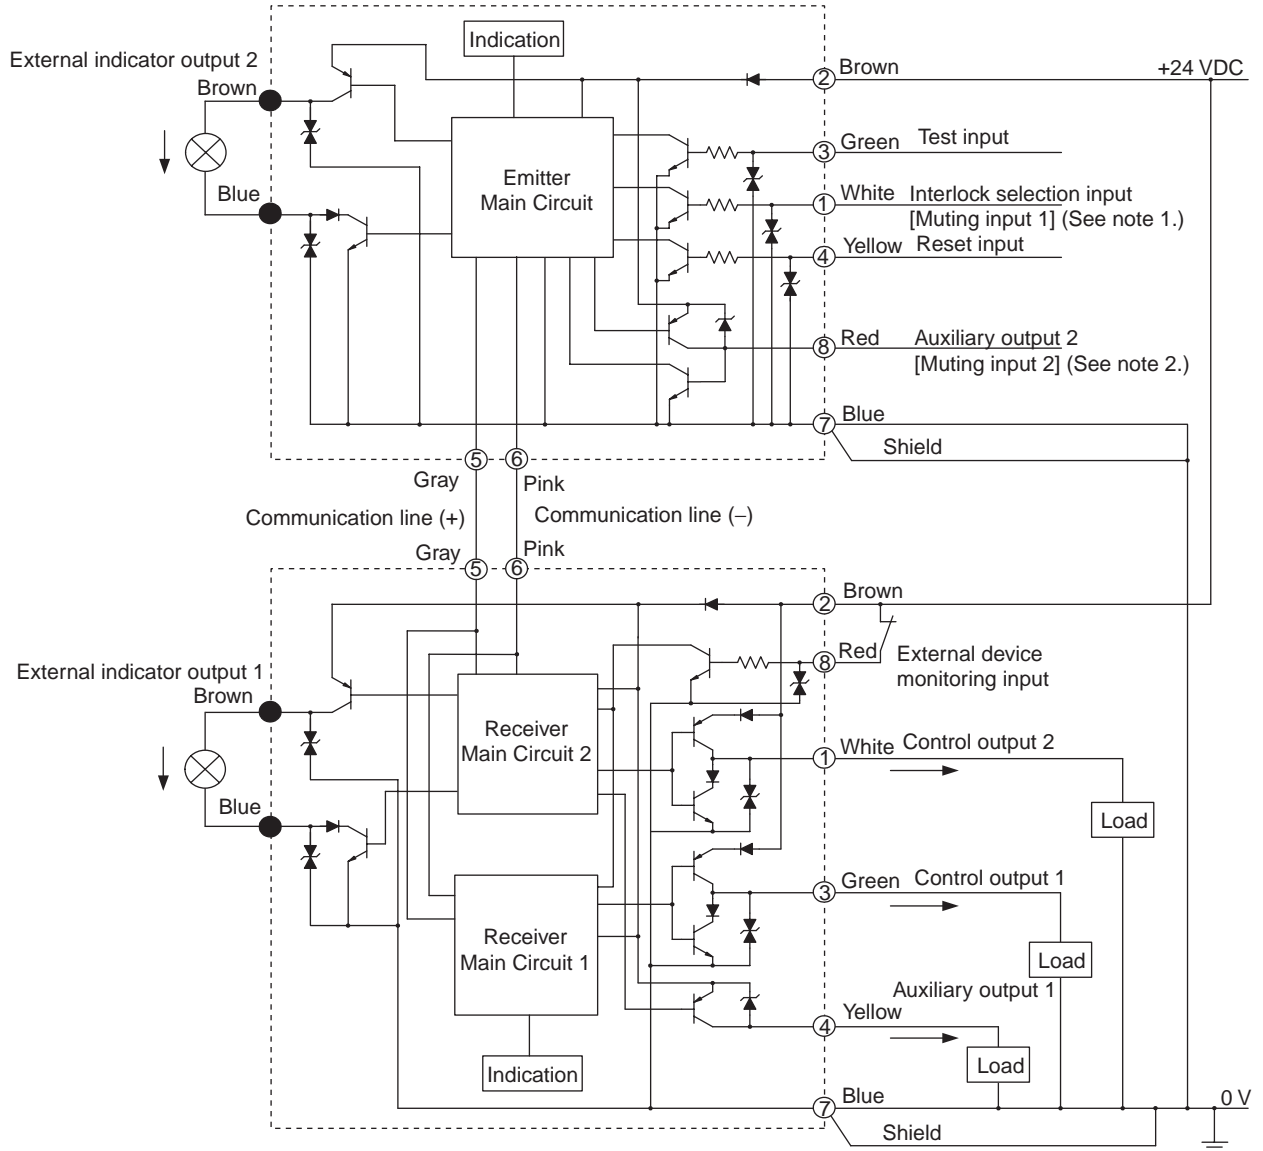


- Note:**
1. Open or muting input 1 for models with the "-TS" suffix.
  2. Open or muting input 2 for models with the "-TS" suffix.

## ■ NPN Output Type

The numbers in white circles indicate the connector's pin numbers.

The black circles indicate connectors for series connection.

The words in brackets ([ ]) indicate the signal name for muting system.

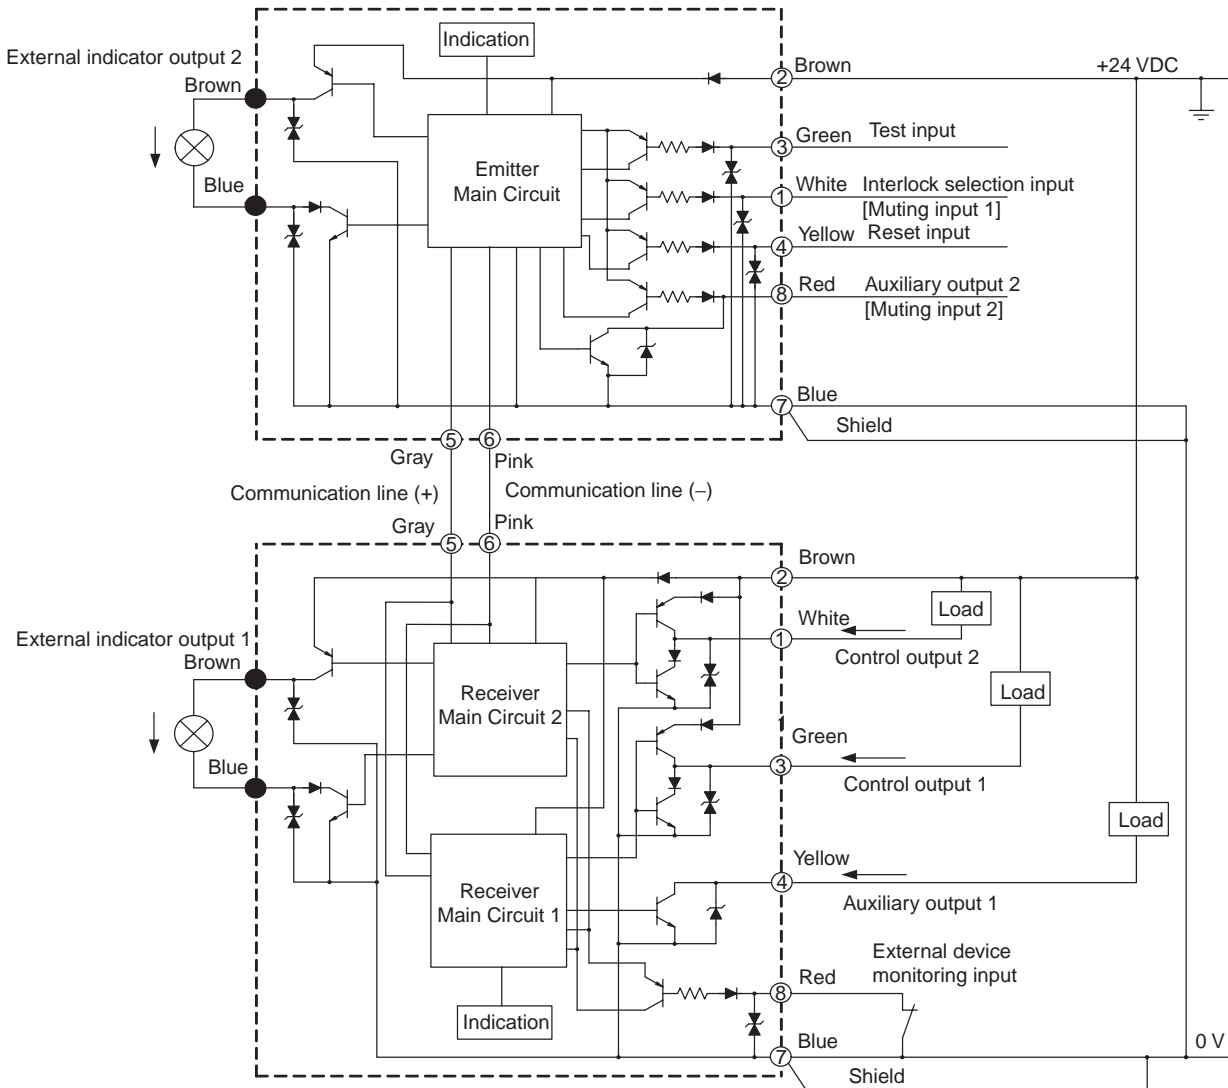

## ■ Single-end Connector Cable

Model	Internal wiring	Pin No.	Wire color	Signal Name			
				Basic system (See note 1.)		Muting system (See note 1.)	
				Receiver	Emitter	Receiver	Emitter
F39-JC3A (3 m)		(1)	White	Safety output 2	Interlock selection input (See note 2.)	Safety output 2	Muting input 1
F39-JC7A (7 m)		(2)	Brown	+24 VDC	+24 VDC	+24 VDC	+24 VDC
F39-JC10A (10 m)		(3)	Green	Control output 1	Test Input	Control output 1	Test Input
F39-JC15A (15 m)		(4)	Yellow	Auxiliary output 1	Reset input	Auxiliary output 1	Reset input
		(5)	Gray	Communication line (+)	Communication line (+)	Communication line (+)	Communication line (+)
		(6)	Pink	Communication line (-)	Communication line (-)	Communication line (-)	Communication line (-)
		(7)	Blue	0 V	0 V	0 V	0 V
		(8)	Red	External device monitoring input	Auxiliary output 2 (See note 2.)	External device monitoring input	Muting input 2


**Note:** 1. Basic system indicates a system with default factory settings.

Muting system indicates a system attached with a muting keycap (F39-CN6) to enable muting function.

2. N.C. for models with the "-TS" suffix.

# Nomenclature


## ■ Main Unit and Cables

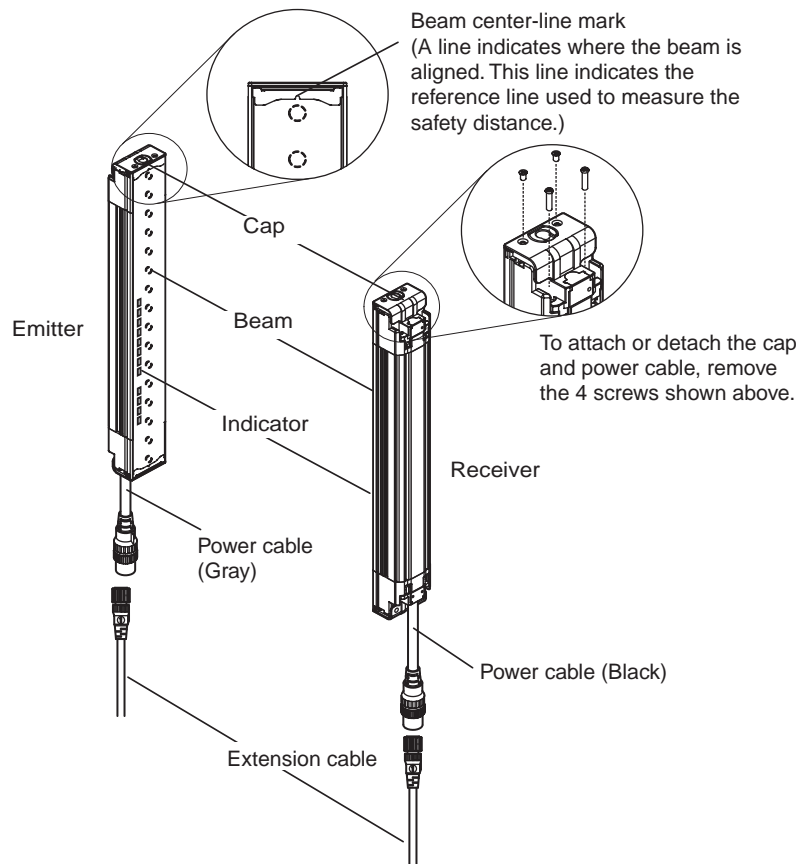

Component	Model	Description
Emitter, receiver	F3SJ-A□□□□P□□ or F3SJ-A□□□□N□□	Select a type name based on the required protective height and detection capability. (Cap and power cable are included) The type name can be understood as follows: F3SJ-A□□□□P□□-□ <div style="text-align: center;"> <p>1 2 3 4</p> </div> 1: Protective height (mm) 2: Output type (P=PNP output type, N=NPN output type) 3: Diameter of detection capability (mm) 4: L is emitter, D is receiver, and a blank is emitter/receiver set. For models with fixed auto reset, the suffix "-L-TS" is an emitter, "-D-TS" is a receiver, and "-TS" is an emitter/receiver set.
Extension cable	Single-end connector cable 	F39-JC□A This extension cable is used to connect to a terminal block controller (e.g. F3SX, G9SA, G9SB, G9SX) or to a safety processing system (e.g. DeviceNet safety).
	Double-end connector cable 	F39-JC□B This extension cable is used when the length of the connection cable is insufficient, or when connecting to an F3SP-B1P controller. The length can be specified.

# Internal Indicators


## Total View

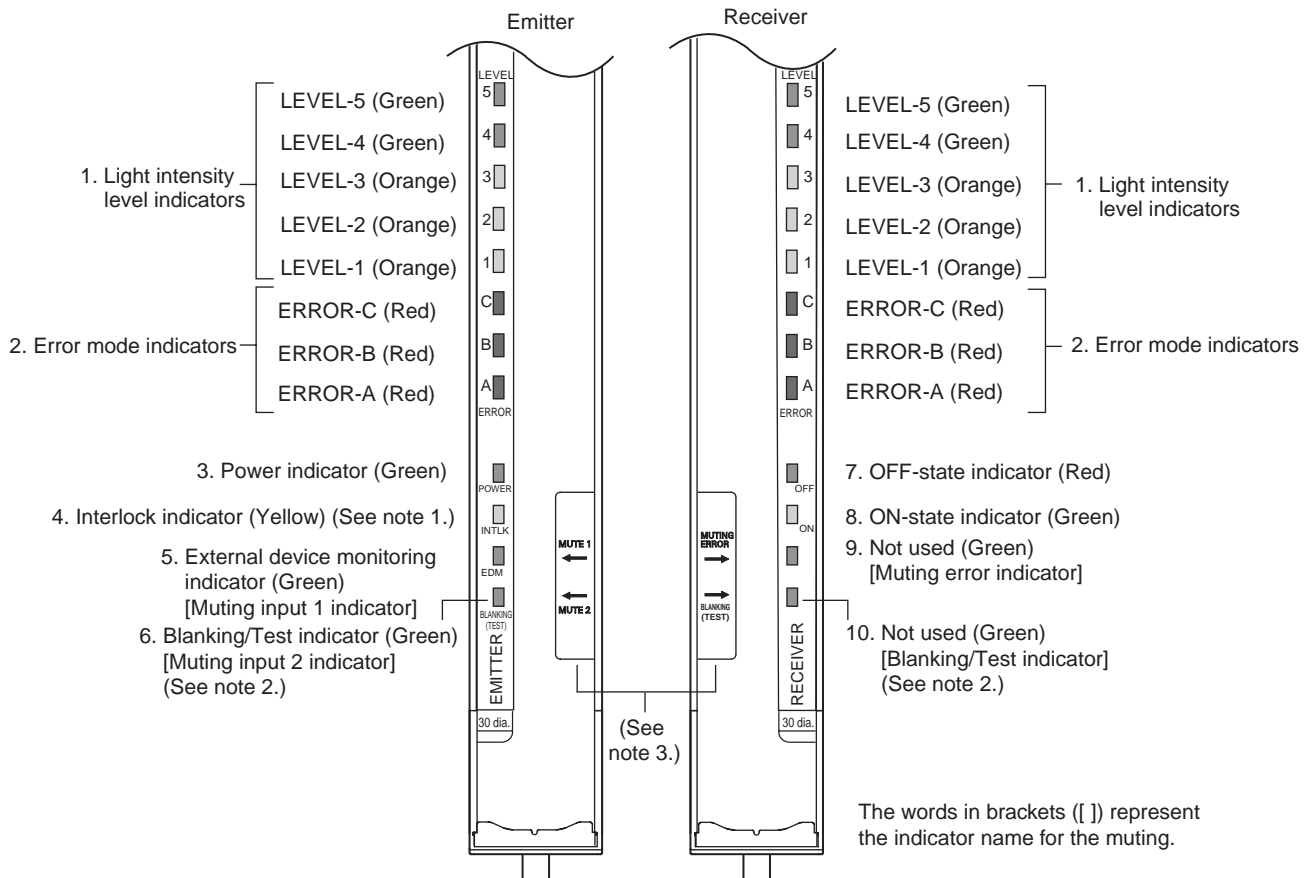







No.	Internal Indicators	Description	
		For basic system	For muting system
1	Light intensity level indicators (LEVEL-1 to 5) (refer to page 33.)	ON	Indication status of LEVEL-1 to 5 shows the light intensity level status of the F3SJ.
2	Error mode indicators (ERROR-A to C) (refer to page 33.)	ON/ Blinking	Turns ON or blinks only on the sensor where the error occurred when the F3SJ enters lockout. The error mode indicators turn OFF on sensors (emitters or receivers) where an error did not occur, or on other series-connected sensors. The indication status of ERROR-A to C shows the cause of the error. Affix the error mode label (included) near the F3SJ to allow for quick troubleshooting when errors occur.
3	Power indicator (POWER)	ON Blinking	Turns ON while the power is ON. Blinks when in maintenance mode.
4	Interlock indicator (INTLK) (See note 1.)	ON Blinking	Turns ON when F3SJ is in interlock state. Blinks when under lockout.
5	External device monitoring indicator (EDM) Muting input 1 indicator (MUTE1)	ON Blinking	Turns ON when an input is given to external device monitoring input. Not used Blinks during muting override.
6	Blanking/Test indicator (BLANKING/TEST) (See note 2.) Muting input 2 indicator (MUTE2)	ON Blinking	Turns ON when the blanking function and warning zone function are enabled. Blinks when external test is being performed. Turns ON when an input is given to muting input 2. Blinks during muting override.
7	OFF output indicator (OFF)	ON Blinking	Turns ON when control output is OFF. Blinks in the following states: • Lockout state • One or more beams are blocked in maintenance mode
8	ON output indicator (ON)	ON Blinking	Turns ON when safety output is ON. Blinks when no beams are blocked in maintenance mode
9	Muting error indicator (MUTING ERROR)	ON	Not used Turns ON when a muting error occurs.
10	Blanking/Test indicator (BLANKING/TEST) (See note 2.)	ON Blinking	Not used Not used Turns ON when the blanking function is enabled. Blinks when external test is being performed.

**Note:** 1. Lockout indicator (LOCKOUT) for models with the "-TS" suffix.  
 2. In the TS model, this is a test indicator labeled TEST.  
 3. This label is included with the F39-CN6 key cap for muting. Affix the label when the muting function is used.

## ■ Indication Patterns and Intensity Levels of the Light Intensity Level Indicators (LEVEL-1 to 5)











 
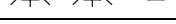





   
ON OFF

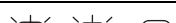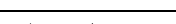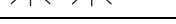1	2	3	4	5	Light intensity level
					170% or higher of control output ON level
					From 130 to 170% of control output ON level
					From 100 to 130% of control output ON level
					From 75 to 100% of control output ON level
					From 50 to 75% of control output ON level
					Less than 50% of control output ON level

**Note:** Operation is possible with light intensity level of 100% or more, but to ensure stability, operate when at least 5 of the indication lamps are ON.

## ■ Error Mode Indication Patterns and Cause of Errors (ERROR-A to C)

    
OFF Blinking ON

A	B	C	Cause of error
			Mutual interference or ambient incident light.
			Power supply voltage of F3SJ is out of the rated range. Insufficient current capacity of power supply.
			Incident light to blanking beams.
			Failure in communication line.
			Emitter and receiver have different F3SJ type names or number of series connections.
			Outside the effective range of parameters set by setting tool.
			Cap is not attached.
			External device monitor failure.
			Failure in interlock selection input line or reset input line.
			Muting wiring failure.
			Failure in control output wiring.
			Failure in series connection cable wiring.
			Failure in wiring of external display lamp output.
			Failure in wiring of auxiliary output.
			Broken series connection cable.
			Wiring error or broken communications wire.
			Influence of electrical noise, or failure in a series-connected F3SJ.

# Safety-related Functions

## Interlock Function

The F3SJ turns the safety outputs OFF when the power is turned ON or when a beam is interrupted, and maintains this state until a reset signal is applied. This state is called "interlock".

You can reset this interlock by 2 methods; "auto reset that automatically turns safety output ON when an interrupting object is removed" and "manual reset mode that keeps safety output OFF until a reset signal is provided if the interrupting object is removed".

### Auto Reset Mode

When an interrupting object is removed, safety output automatically turns ON. Auto reset is used on machines where a worker is not able to enter the area between the detection zone and the hazardous part of the machine.


**Note:** Auto reset is always used in the F3SJ-A□-TS series.

#### Auto reset wiring procedure:

For PNP output	For NPN output
1. Open the interlock selection input line, or short-circuit it to 0 to 1.5 V (pin 1/white).	1. Open the interlock selection input line, or short-circuit it to 9 to 24 V (pin 1/white).
2. Short-circuit the reset input line to 9 to 24 V (pin 4/yellow).	2. Short-circuit the reset input line to 0 to 1.5 V (pin 4/yellow).
3. Turn ON the power of F3SJ.	3. Turn ON the power of F3SJ.

### Manual Reset Mode

When a reset input is given while no interrupting object exists in a detection zone, the safety outputs turn ON. This allows the machine to be manually reset using a reset switch after ensuring safety, preventing unexpected startup.

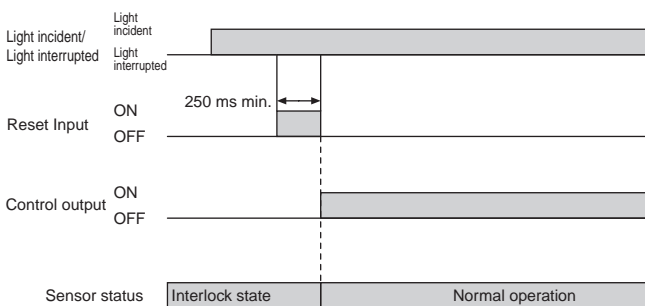

A sensor enters interlock state when:

- The power is turned ON (start interlock). This is useful if you want to keep the machine stopped until start inspection is completed after the power is turned ON.
- F3SJ is interrupted (restart interlock). After F3SJ is interrupted and the machine stops, the machine can be restarted after safety is ensured.

#### Manual Reset Wiring Procedure:

For PNP output	For NPN output
1. Connect the interlock selection input line to 9 to 24 V (pin 1/white).	1. Connect the interlock selection input line to 0 to 1.5 V (pin 1/white).
2. Connect the reset input line to 9 to 24 V via the reset switch (NO-contact) (pin 4/yellow).	2. Connect the reset input line to 0 to 1.5 V via the reset switch (NO-contact) (pin 4/yellow).
3. Keep the reset switch contact open, and turn the power of F3SJ ON.	3. Keep the reset switch contact open, and turn the power of F3SJ ON.

#### To reset:

For PNP output	For NPN output
Apply voltage of 9 to 24 V for 250 ms or longer to the reset input line, and set it open or to 0 to 1.5 V.	Apply voltage of 0 to 1.5 V for 250 ms or longer to the reset input line, and set it open or to 9 to 24 V.

**Note:** Install the reset switch outside the hazardous area, where the operator can clearly see the hazardous area.

### Interlock Function in a Muting System

Because the interlock selection input line is used as muting input 1 when using the muting function, the default setting is auto reset. Use a setting tool for manual reset.


## Diagnostic Functions

### Self-test

A self-test is performed to check for errors when the power is turned ON (within 2 seconds / within 2.2 seconds when series connected). Also, the self-test is regularly performed (within the response time) while operating.

### Waveform of Control Outputs

When the F3SJ is receiving light, the control outputs cyclically turn OFF as shown below to test the output circuit. When this OFF signal is fed back, the output circuit is diagnosed as normal. If the output signal does not include an OFF pulse signal, the receiver determines that a failure has occurred with the output circuit or wiring, and enters lockout state. (Refer to the following illustration.)

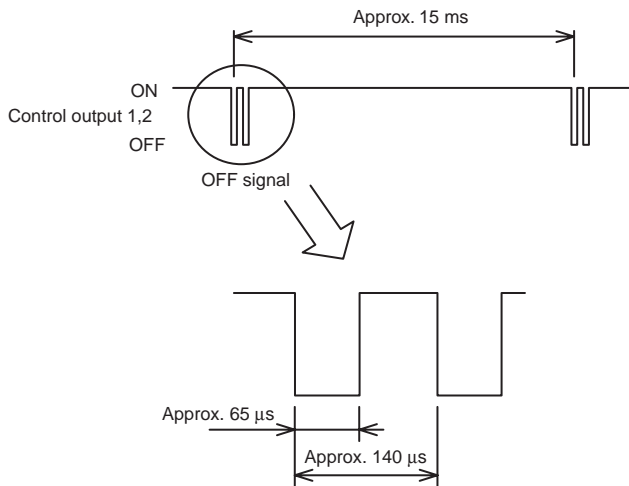

### External Test

This function performs a test to ensure that the safety system stops properly when the F3SJ is interrupted, by using an external signal to forcibly stop emission.

To stop emission, apply 9 to 24 V for PNP output types or 0 to 1.5 V for NPN output types to the test input line of the emitter. Apply the voltage for a minimum of 4 x the safety output response time.

### Lockout

If an error is found in the self-test, the sensor enters lockout state, keeps the safety output in the OFF state, and indicates the error at the same time.

### Resetting Lockout

When a cause of lockout is removed, you can release the lockout by using either of the following methods.

- Cycle the power back ON
- Reset input

#### [For PNP output]

After manual reset, apply voltage of 9 to 24 V for 100 ms or longer to the reset input line, and set it open or apply 0 to 1.5 V.

After auto reset, apply voltage of 0 to 1.5 V for 100 ms or longer to the reset input line, and set it open or apply 9 to 24 V.

#### [For NPN output]

After manual reset, apply voltage of 0 to 1.5 V for 100 ms or longer to the reset input line, and set it open or apply 9 to 24 V.

After auto reset, apply voltage of 9 to 24 V for 100 ms or longer to the reset input line, and set it open or apply 0 to 1.5 V.

### External Device Monitoring Function

This function detects malfunctions, such as welded contacts in external relays (or contactors) that control the hazardous area of a machine.

This function constantly monitors that a specified voltage is applied to the receiver's external device monitoring input line, and enters lockout state when an error occurs. The relay's operational delay can be up to 300 ms without being evaluated as an error.

For example, if a specified voltage is not applied to the external device monitoring line because the normally closed (NC) contact is not closed within 300 ms after the control outputs turn from ON to OFF, it is evaluated as an error and enters a lockout state.

To utilize this function properly, use safety relays and contactors that have forcibly guided or mechanically linked contact structure.

### Other Functions

#### Auxiliary Output (Non-safety output)

The auxiliary output is used to monitor the status of the F3SJ.

This output can be connected to a device such as a relay, indication lamp, programmable controller, etc.

There are two auxiliary outputs: Auxiliary output 1 and auxiliary output 2.

- Auxiliary output 1: Control output inversion signal
- Auxiliary output 2: Turns ON when the point of 30,000 operating hours is reached


The auxiliary output modes can be changed with a setting tool. See the User's Manual for details on the modes that can be set.

#### ! WARNING

Do not use the auxiliary output or external indicator output for safety applications.

Failure of these outputs may prevent detection of people and result in serious injury.

- Note:** 1. Auxiliary output 1 has a load current of 300 mA max., and auxiliary output 2 has a load current of 50 mA.
2. The timing when auxiliary output 1 is set as a control output inversion signal is shown in the diagram below.

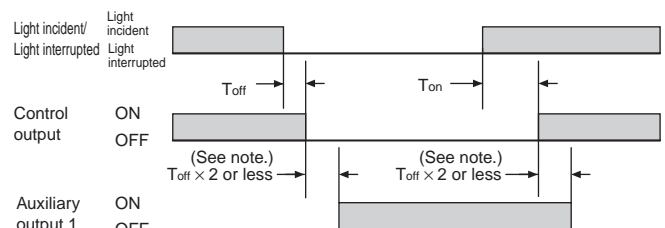


Toff: Response time of control output's ON to OFF, Ton: Response time of control output's OFF to ON

**Note:** When auxiliary output 2 is set as a control output inversion signal, the response delay for control output becomes Toff x 3 max.

# Selecting the System Configuration

## Selection Flowchart

The necessary system configuration varies depending on the functions to be used. Use the following flowchart to decide what kind of system is required.

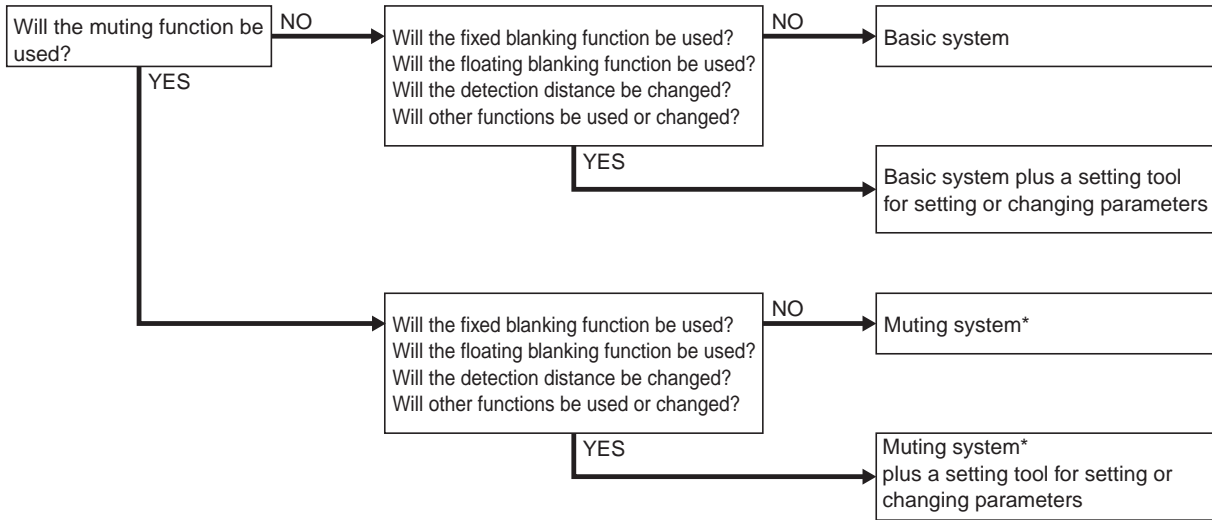

\*F39-CN6 Key Cap for muting is required.

**Note:** Refer to the User's Manual to determine whether the functions can be used in combination or not.


# System Configuration and Connection (Basic system)

"Basic system" refers to the F3SJ with its default factory settings. The basic system provides basic safety light curtain functions. Most functions can be used without performing additional configuration.

## Basic Connection

For PNP output (See page 39 for NPN output wiring.)

Wiring when using manual reset mode, external device monitoring

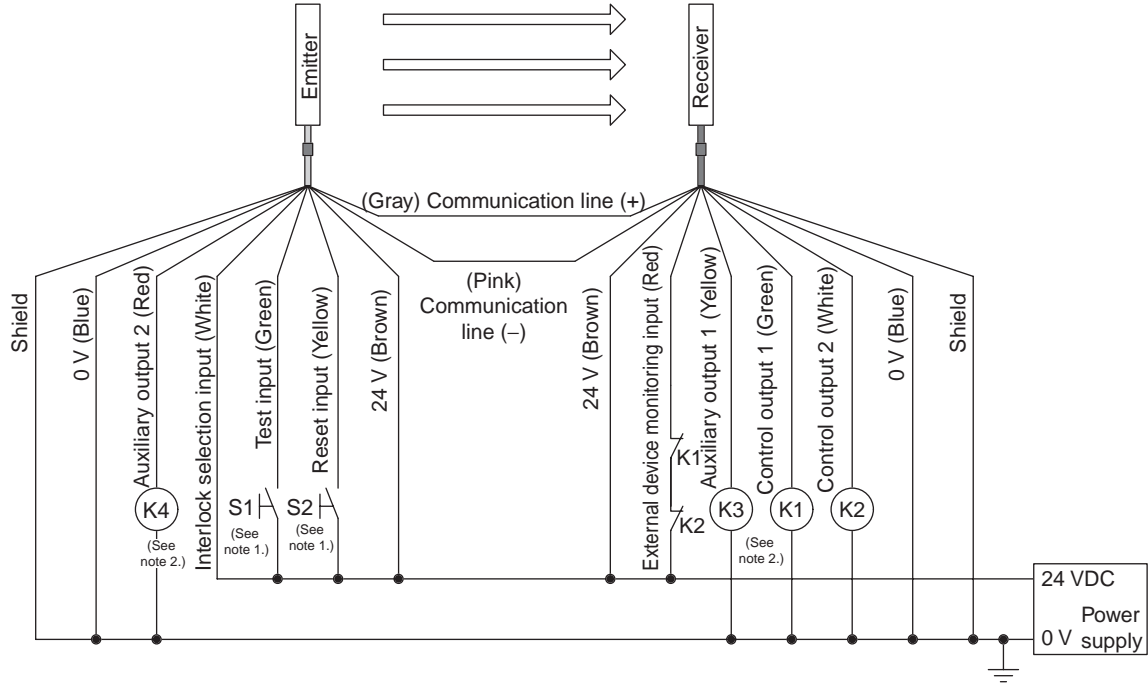


- S1: External test switch (connect to 0 V if the switch is not necessary.)
- S2: Interlock/lockout reset switch
- K1, K2: Relay or other device that controls hazardous parts of the machine
- K3, K4: Load or PLC, etc. (for monitoring)

- Note:**
1. Use a switch for micro loads (Input specifications: 24 V, 1.8 mA).
  2. F3SJ operates even when K3 and K4 are not connected.


**Wiring for auto reset mode**

The auto reset mode will be enabled when the emitter is wired as shown below.

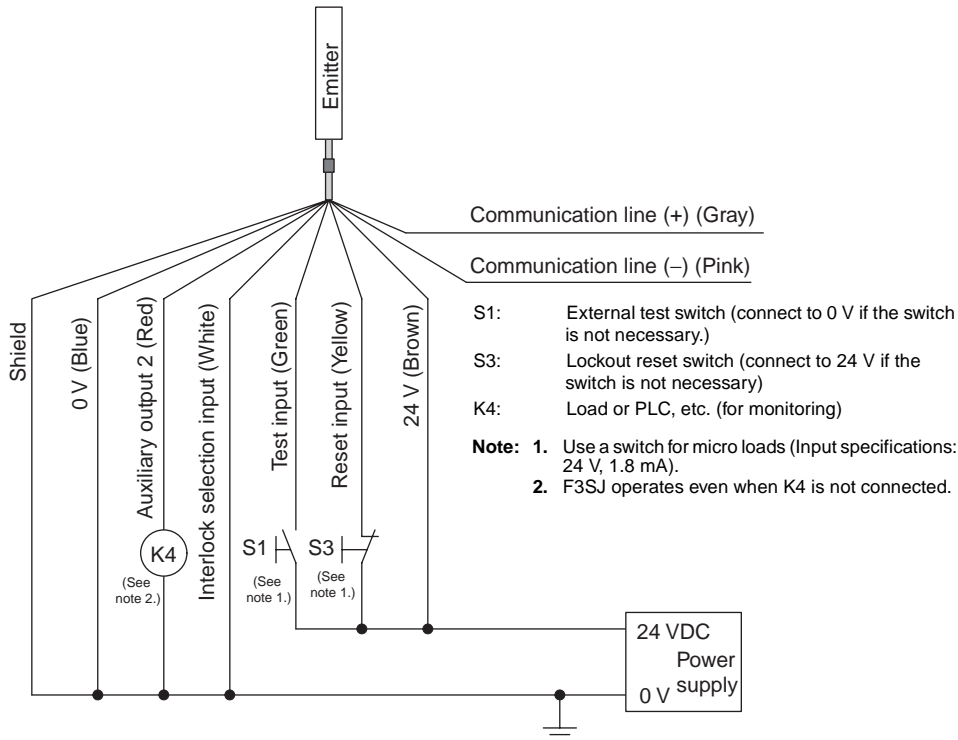


**Wiring when the external device monitoring function will not be used**

- Use a setting tool to set the external device monitoring function to "Disabled."
- When using an auxiliary output 1 that has not been changed (output operation mode is "control output data," and inverse of control output signals is "Enabled"), the external device monitoring function will be disabled when auxiliary output 1 and the external device monitoring input are connected as shown below.

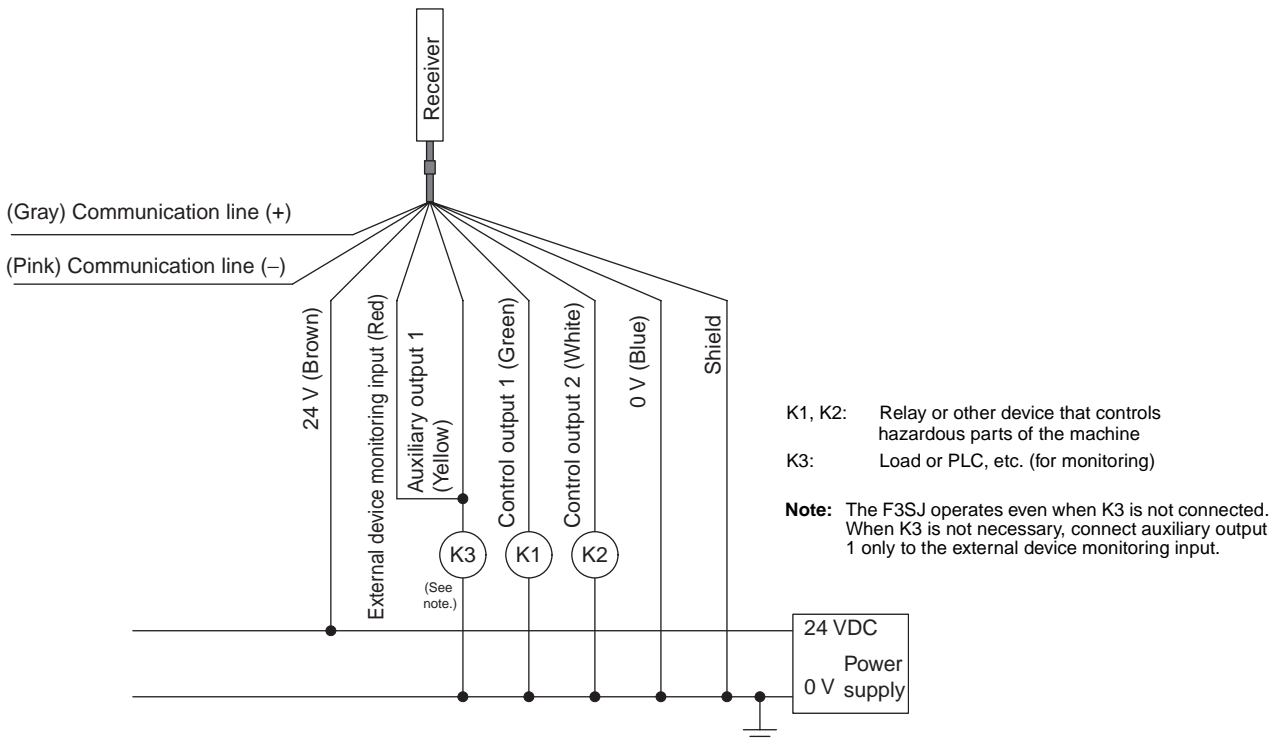

**For NPN output (See page 37 for PNP output wiring.)**

**Wiring when using manual reset mode, external device monitoring**

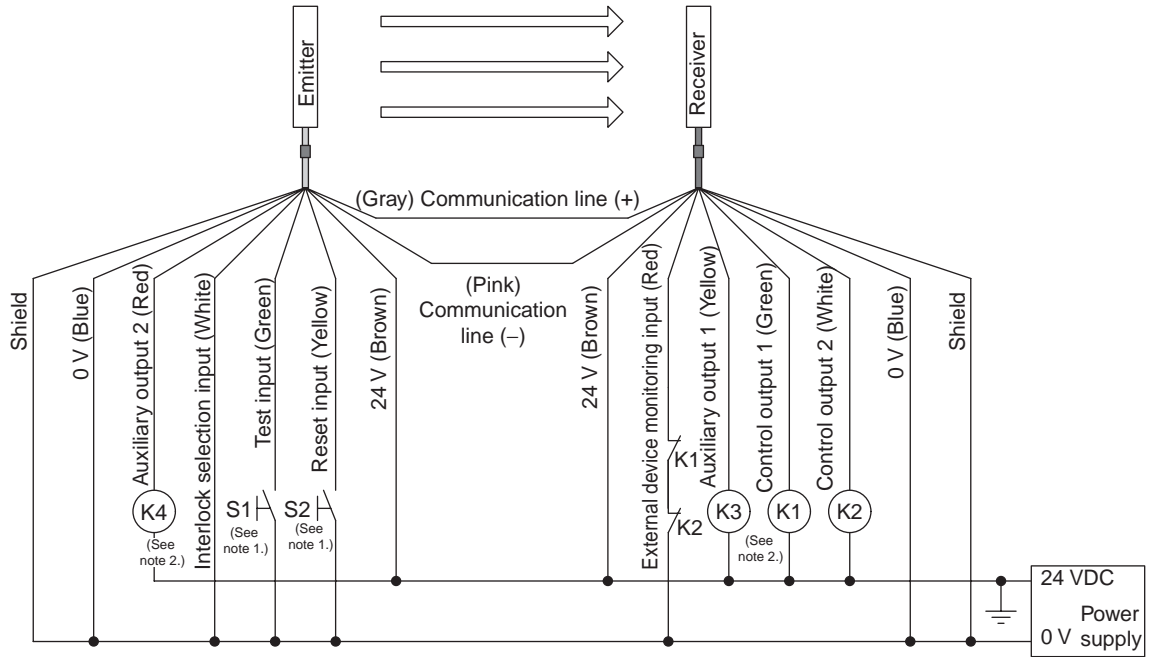


- S1: External test switch (connect to 24 V if the switch is not necessary.)
- S2: Interlock/lockout reset switch
- K1, K2: Relay or other device that controls hazardous parts of the machine
- K3, K4: Load or PLC, etc. (for monitoring)

- Note:**
1. Use a switch for micro loads (Input specifications: 5 V, 1 mA).
  2. F3SJ operates even when K3 and K4 are not connected.


**Wiring for auto reset mode**

The auto reset mode will be enabled when the emitter is wired as shown below.

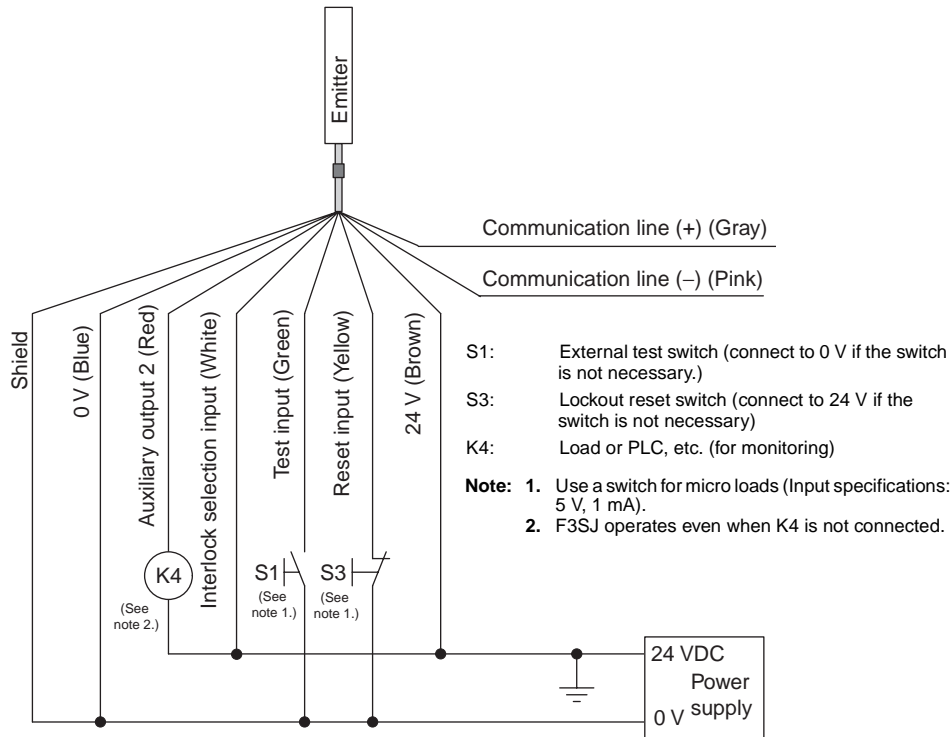

**Wiring when the external device monitoring function will not be used**

- Use a setting tool to set the external device monitoring function to "Disabled."
- When using an auxiliary output 1 that has not been changed (output operation mode is "control output data," and inverse of control output signals is "Enabled), the external device monitoring function will be disabled when auxiliary output 1 and the external device monitoring input are connected as shown below.

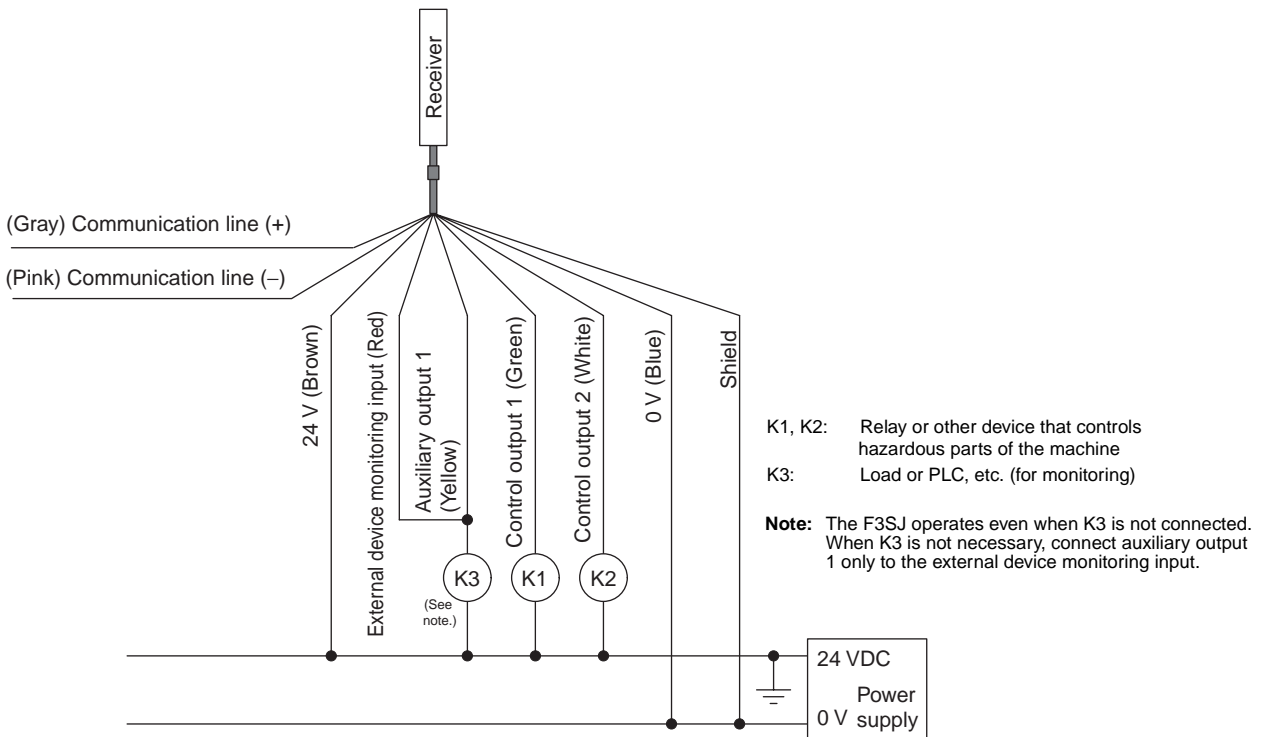


## Examples of Safety Circuits

For PNP output (See page 46 for NPN output wiring.)


### Wiring for single F3SJ application (category 4)

- Use of welded relay contact detection and interlock is possible without a controller or relay unit.

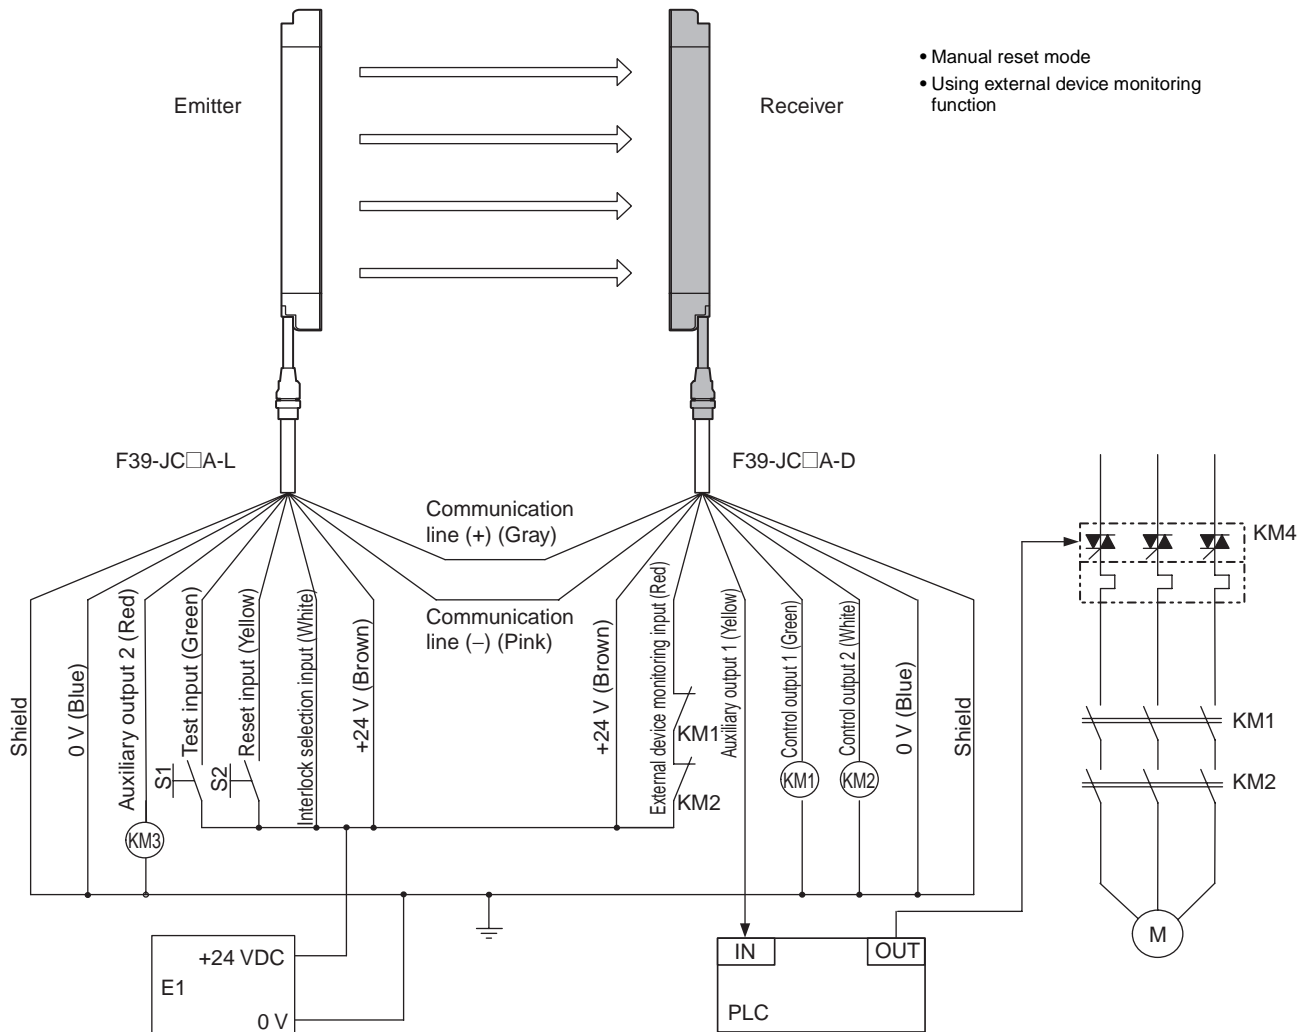

- Manual reset mode
- Using external device monitoring function

### Timing Chart

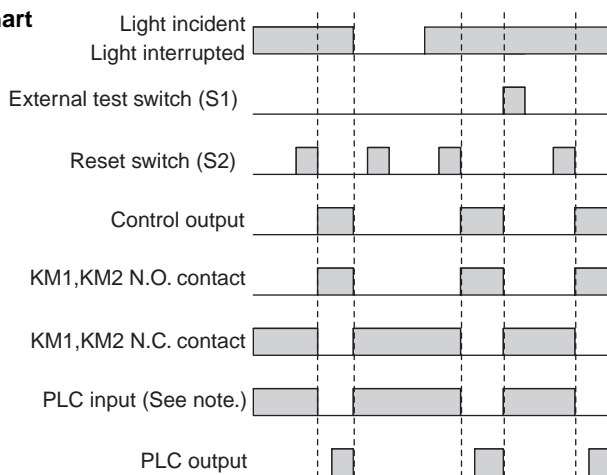


- S1: External test switch (connect to 0 V if the switch is not necessary.)
- S2: Interlock/lockout reset switch
- KM1, KM2: Safety relay with forcibly-guided contacts (G7SA) or magnetic contactor
- KM3: Load, PLC (for monitor)
- KM4: Solid state contactor (G3J)
- M: 3-phase motor
- E1: 24 VDC power supply (S82K)
- PLC: Programmable controller (Used for monitoring -- not related to safety system)

**Note:** The output operation mode for auxiliary output 1 is control output data/inverse of control output signals enabled (default setting).


**Wiring for connection with a controller F3SP-B1P (category 4) (PNP models only)**

- Reduced wiring due to connector connection
- Safety relay included

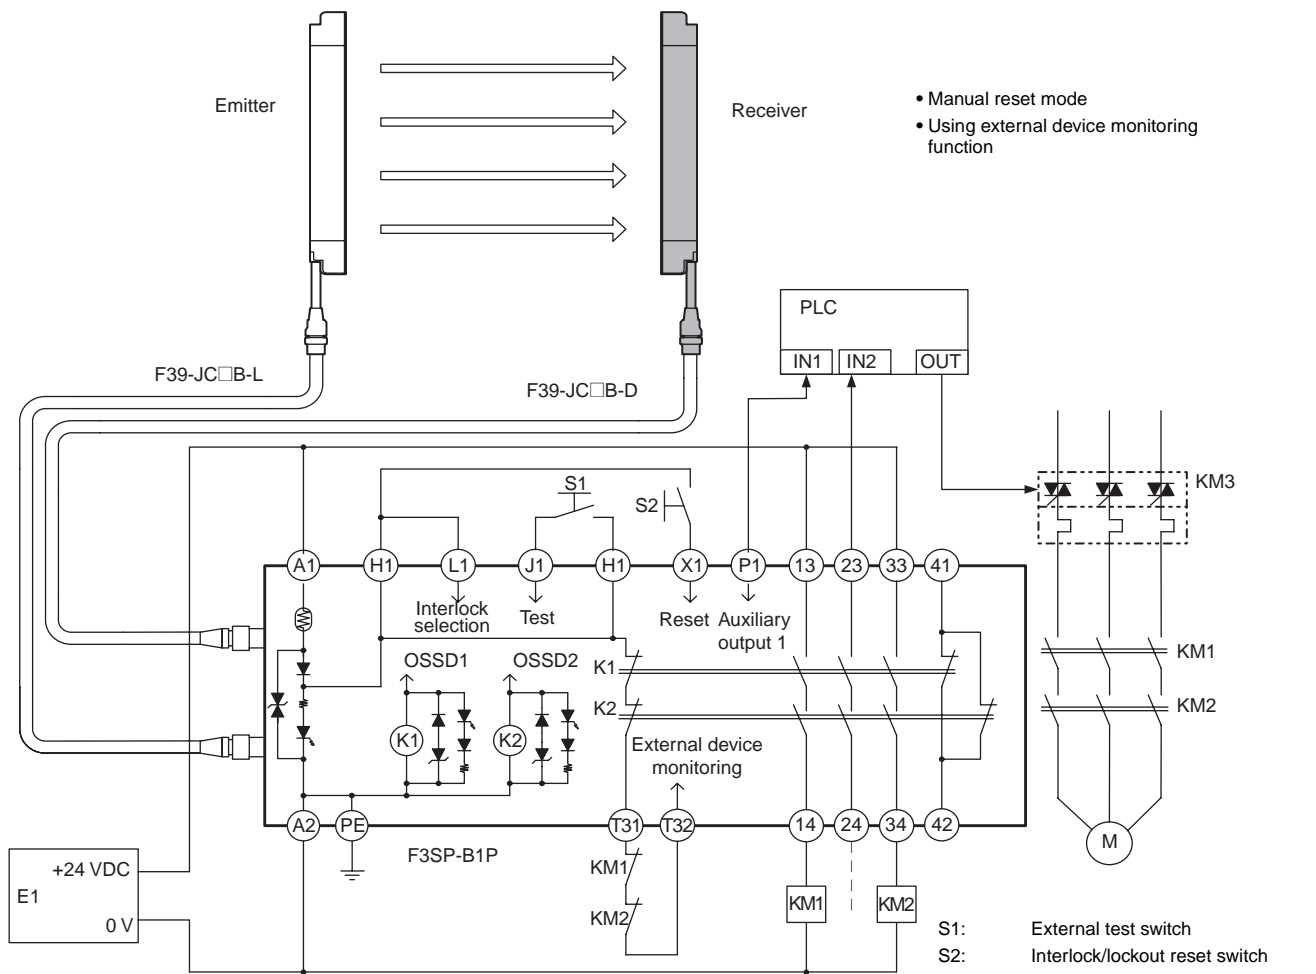

- Manual reset mode
- Using external device monitoring function


**Timing Chart**

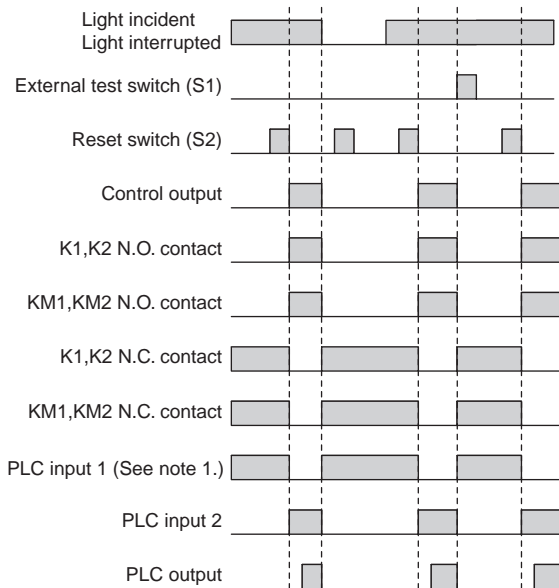


- S1: External test switch
- S2: Interlock/lockout reset switch
- KM1, KM2: Magnetic contactor
- KM3: Solid state contactor (G3J)
- M: 3-phase motor
- E1: 24 VDC power supply (S82K)
- PLC: Programmable controller (Used for monitoring -- not related to safety system)

- Note: 1.** The output operation mode for auxiliary output 1 is control output data/inverse of control output signals enabled (default setting).
- Note: 2.** When the F3SP-B1P is used, the system cannot be used as a muting system.

**Wiring for auto reset mode**




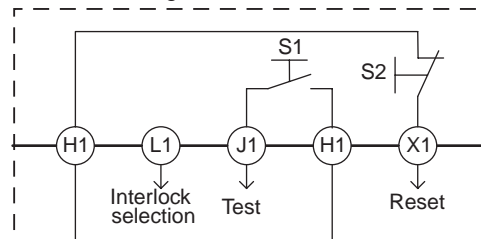


**Wiring when the external device monitoring function will not be used**

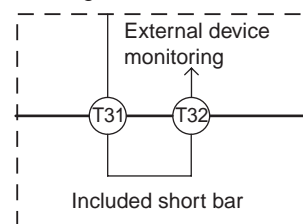


**Wiring for connection with a controller F3SX-E-L2R (category 4) (PNP models only)**

- Emergency stop switch can be connected.
- Door switch, two hand control, single beam, or relay unit can be used in combination with F3SX.
- Various settings can be changed and input/output terminals can be monitored using the setting support software for F3SX.

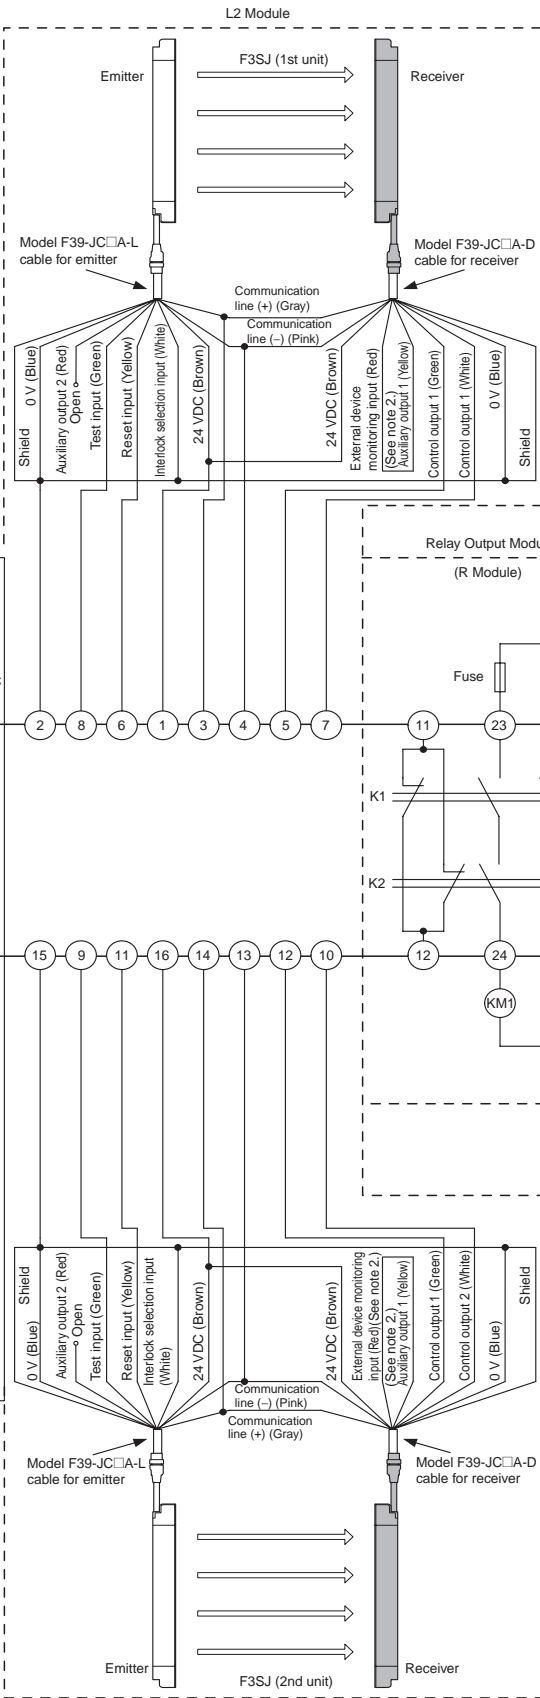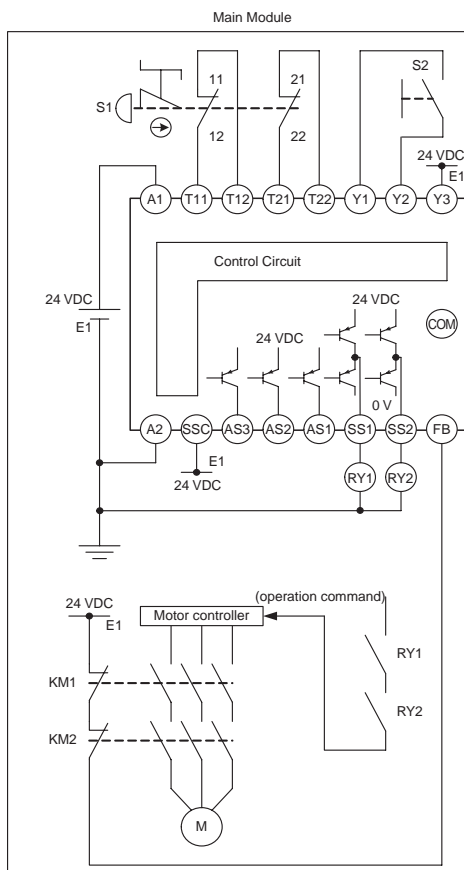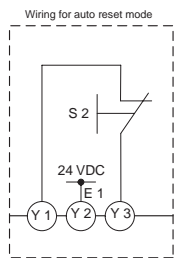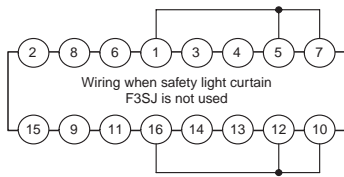


- F3SJ settings
- Auto reset mode
  - External device monitoring function disabled
- F3SX-E-L2R settings
- Manual reset mode
  - Using feedback time monitoring function

- S1: Emergency stop switch (direct opening contacts)(A165E, A22E)
- S2: Reset switch
- KM1, KM2: Magnetic contactor (LC1D)
- RY1, RY2: Relay
- M: 3-phase motor
- E1: 24 VDC power supply (S82K)
- Note:**
1. This wiring example is for category 4.
  2. This example shows the connection when auxiliary output 1 is in the standard setting (ON when light is interrupted).
  3. When the F3SJ is series-connected, or 5 or more sets are connected to the total system of F3SX, power must be supplied to F3SJ from external source. For details, see instruction manual of F3SX.

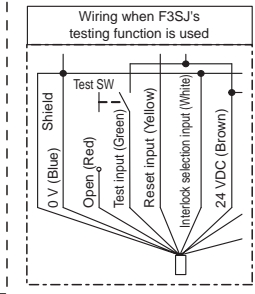


Wiring for connection with a controller G9SA-301 (category 4) (PNP models only)

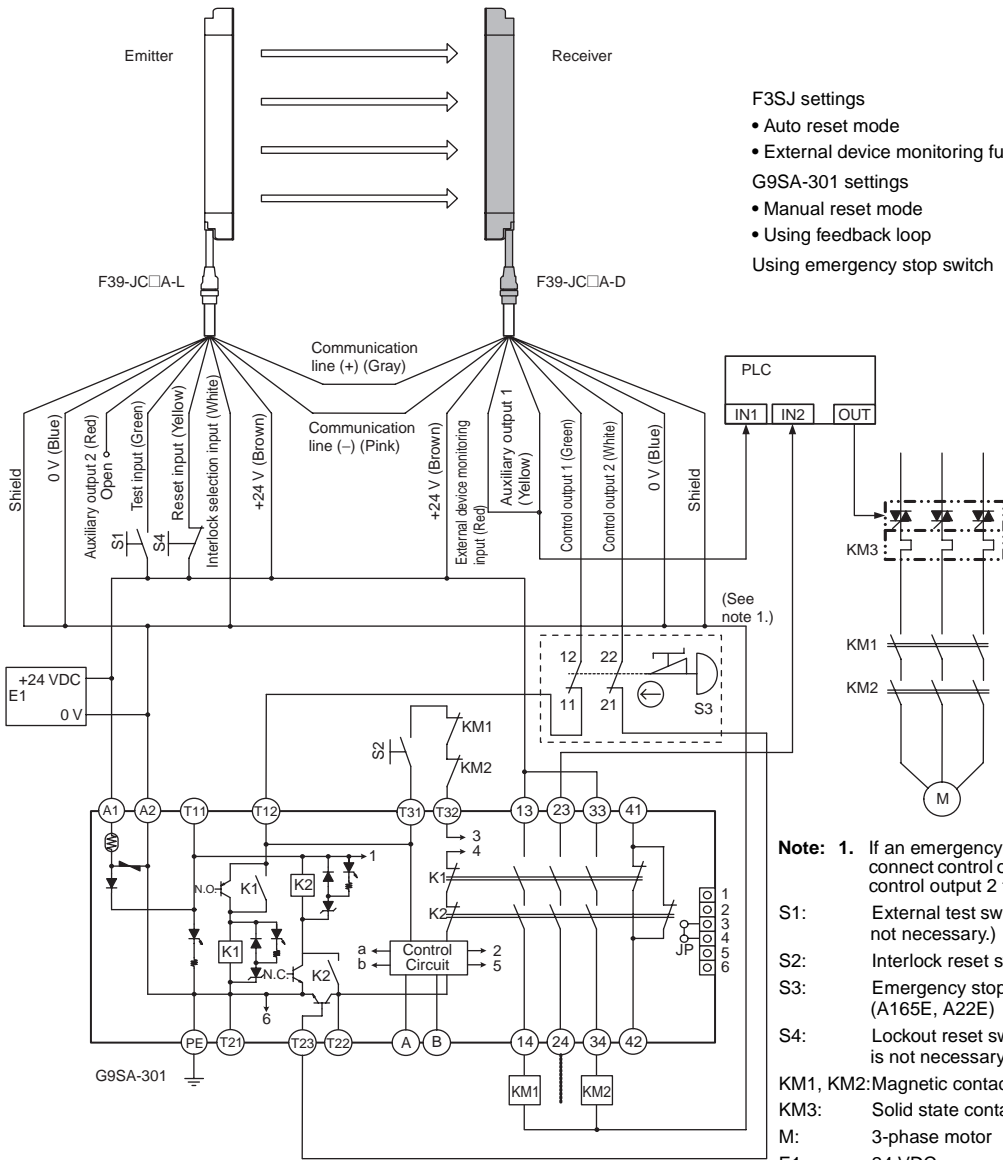

- F3SJ settings
- Auto reset mode
  - External device monitoring function disabled
- G9SA-301 settings
- Manual reset mode
  - Using feedback loop
- Using emergency stop switch


- Note: 1.** If an emergency stop switch is not used, connect control output 1 to T12 terminal and control output 2 to T23 directly.
- S1: External test switch (connect to 0 V if the switch is not necessary.)
- S2: Interlock reset switch
- S3: Emergency stop switch (direct opening contacts) (A165E, A22E)
- S4: Lockout reset switch (connect to 24 V if the switch is not necessary.)
- KM1, KM2: Magnetic contactor
- KM3: Solid state contactor (G3J)
- M: 3-phase motor
- E1: 24 VDC power supply (S82K)
- PLC: Programmable controller (Used for monitoring -- not related to safety system)

Timing Chart

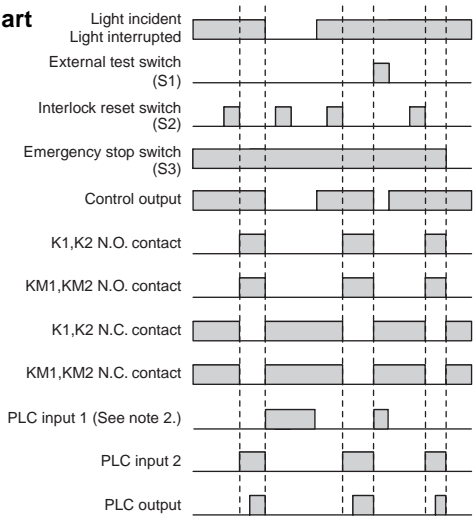


**Note: 2.** The output operation mode for auxiliary output 1 is control output data/inverse of control output signals enabled (default setting).

Wiring for auto reset mode

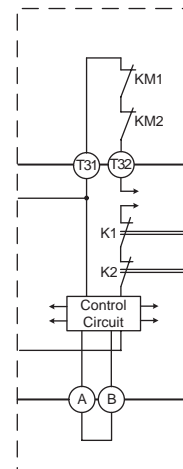


**Wiring for connection with a controller G9SX-AD322-T15 (category 4) (PNP models only)**

- Can be configured for partial control and total control.
- Can be extended to connect a door switch or a relay unit.

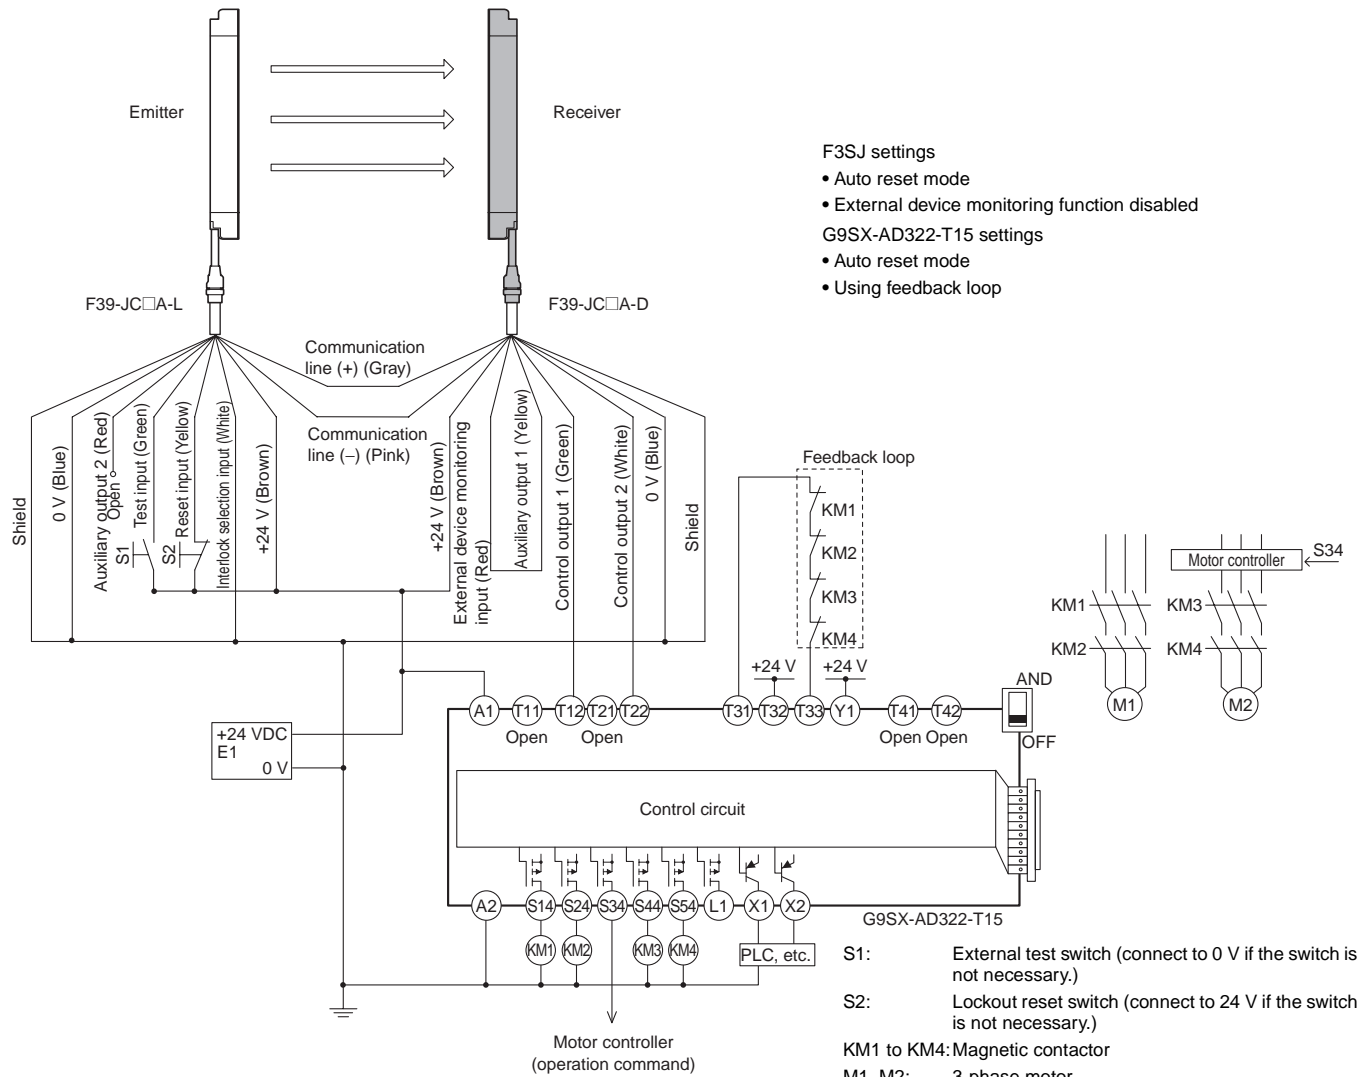


**Timing Chart**

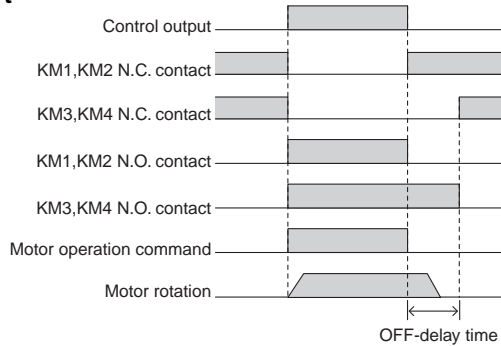

- S1: External test switch (connect to 0 V if the switch is not necessary.)
- S2: Lockout reset switch (connect to 24 V if the switch is not necessary.)
- KM1 to KM4: Magnetic contactor
- M1, M2: 3-phase motor
- E1: 24 VDC power supply (S82K)
- PLC: Programmable controller (Used for monitoring -- not related to safety system)


**Wiring for manual reset mode**

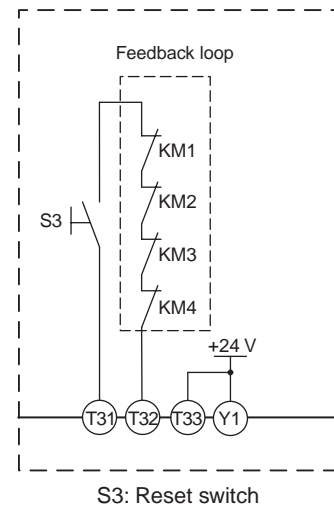

**For NPN output (See page 41 for PNP output wiring.)**


**Wiring for single F3SJ application (category 4)**

- Use of relay welded relay contact detection and interlock is possible without a controller or relay unit.

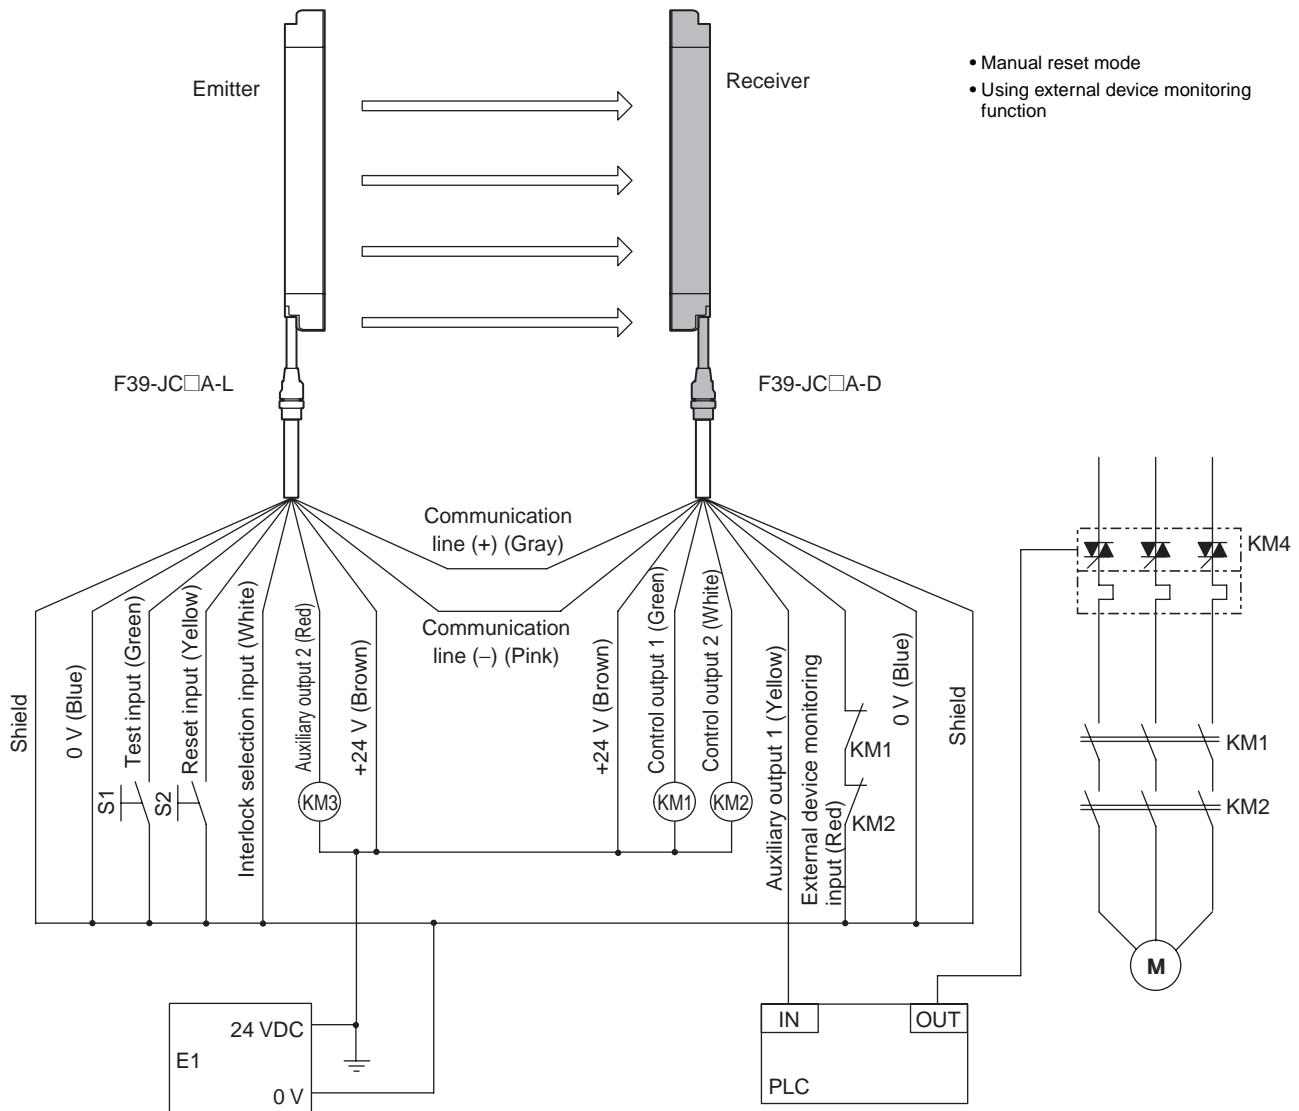

- Manual reset mode
- Using external device monitoring function


**Timing Chart**

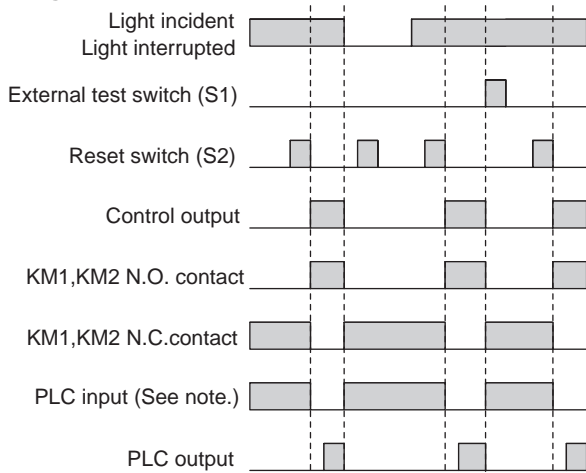

- S1: External test switch (connect to 24 V if the switch is not necessary.)
- S2: Interlock/lockout reset switch
- KM1, KM2: Safety relay with forcibly-guided contacts (G7SA) or magnetic contactor
- KM3: Load, PLC (for monitor)
- KM4: Solid state contactor (G3J)
- M: 3-phase motor
- E1: 24 VDC power supply (S82K)
- PLC: Programmable controller (Used for monitoring -- not related to safety system)

**Note:** The output operation mode for auxiliary output 1 is control output data/inverse of control output signals enabled (default setting).

Wiring for connection with a controller G9SA-301-P (category 4) (NPN models only)

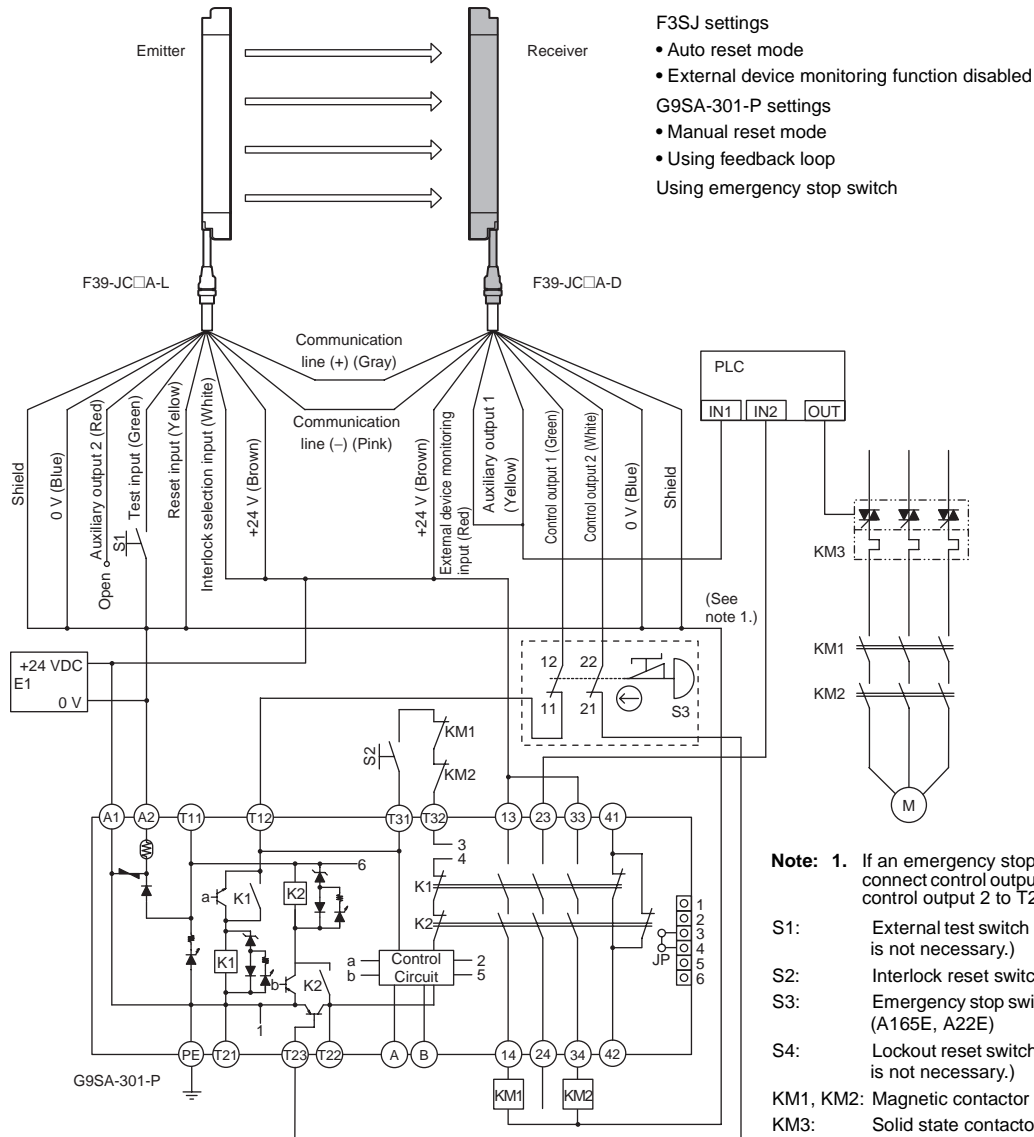

**Note: 1.** If an emergency stop switch is not used, connect control output 1 to T12 terminal and control output 2 to T23 directly.

S1: External test switch (connect to 24 V if the switch is not necessary.)

S2: Interlock reset switch

S3: Emergency stop switch (direct opening contacts) (A165E, A22E)

S4: Lockout reset switch (connect to 0 V if the switch is not necessary.)

KM1, KM2: Magnetic contactor


KM3: Solid state contactor (G3J)

M: 3-phase motor

E1: 24 VDC power supply (S82K)


PLC: Programmable controller (Used for monitoring -- not related to safety system)

Timing Chart

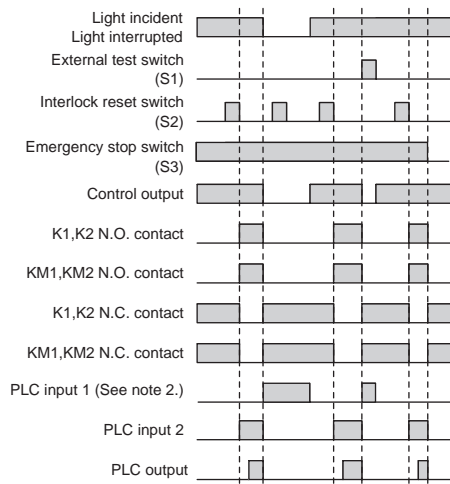

**Note: 2.** The output operation mode for auxiliary output 1 is control output data/inverse of control output signals enabled (default setting).

Wiring for auto reset mode

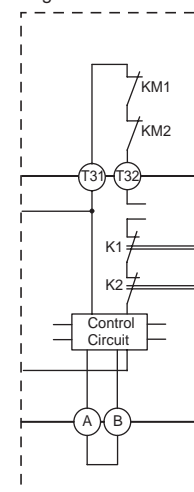


# System Configuration and Connection (Muting system)

## Muting System

The muting function temporarily disables the safety function of the F3SJ, keeping the control outputs ON even if beams are interrupted. This makes it possible to install safety light curtains for AGV passage, enabling both safety and productivity.

When muting, the muting lamp (external indicator) blinks to notify people in the surrounding area that the safety functions are disabled.

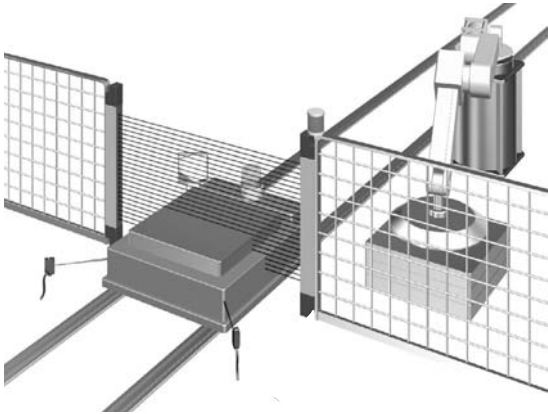

### WARNING

The muting and override functions disable the safety functions of the device. Additional safety measures must be taken to ensure safety while these functions are working.


Install muting sensors so that they can distinguish between the object that is being allowed to pass through the detection zone and a person.

If the muting function is activated by the detection of a person, it may result in serious injury.

Muting lamps (external indicators) that indicate the state of the muting and override functions must be installed where they are clearly visible to workers from all the operating positions.

## Upgrading F3SJ for Muting System

1. Remove the caps of the emitter and receiver.  
(A screwdriver is included with the key cap for muting.)
2. Install a muting lamp (external indicator) on either the emitter or receiver.
3. Attach the key cap for muting to the emitter/receiver on which the muting lamp (external indicator) was not installed.

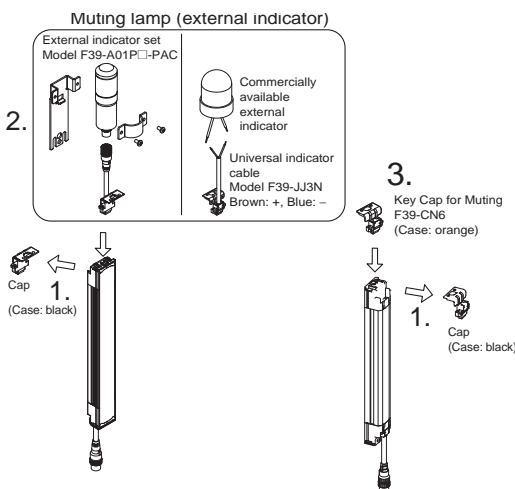

## Muting Sensor

The muting sensor is the sensor that is the trigger for temporarily disabling the safety functions of F3SJ. You can use a photoelectric switch of through-beam or retro-reflective types, proximity sensor, or limit switch. (OMRON's E3Z series, E2E series, and D4N series sensors are recommended.) For the PNP type F3SJ, use a sensor with PNP transistor outputs or N.O type contacts. For the NPN type F3SJ, use a sensor with NPN transistor outputs or N.O type contacts. For NPN type F3SJ, use a sensor with NPN transistor outputs or N.O type contacts.

## Muting Lamp (External indicator)


To notify workers that the muting function is working, external lamp(s) must be installed. Use the F39-A01P□-PAC external indicator set or an F39-JJ3N universal indicator cable with a commercially available external indicator.

## F3SJ Internal Indicators

- The muting input 1 indicator turns ON when input is applied to muting input 1.
- The muting input 2 indicator turns ON when input is applied to muting input 2.
- The muting input 1 indicator and muting input 2 indicator blink under muting override.
- The muting error indicator on the receiver side turns ON when there is a muting error.

## Attachment Positions for Included Labels

Internal indicator labels are included with the F39-CN6 Key Cap for Muting. When using a muting system, attach the internal indicator labels so the arrows will be in line with the positions of the indicators, as shown by the shading below.

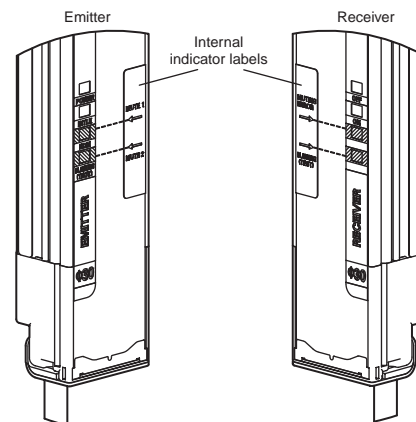

## Standard Muting Mode

The F3SJ is set to this operation mode when it is shipped from the factory. The muting function is enabled by providing a time lag between muting inputs 1 and 2. Use a separately purchased setting tool to change parameters related to muting time, or to select other muting operation modes.

### Start Conditions

If both of the following 2 conditions are present, muting is activated.

1. No interrupting object is found in the F3SJ's detection zone, and control output is ON.
2. After muting input 1 is turned ON (connected to 9 to 24 V for PNP types, or to 0 to 1.5 V for NPN types), muting input 2 is turned ON (connected to 9 to 24 V for PNP types, or to 0 to 1.5 V for NPN types) within the muting input time limit T1 min. to T1 max. (0.03 to 3 s).

Once the conditions in item 2 above are met, the muting function will be enabled in 0.15 s max.

When condition 1 is satisfied but time condition of 2 is not, a muting sequence error occurs and receiver's muting error indicator turns ON.

However, the F3SJ safety functions will continue operating and the F3SJ will operate normally even during a muting error.


A muting error is released when either of the following occurs:

- When muting is started using a proper procedure
- When power is turned on while muting inputs 1 and 2 are OFF

### End Conditions

If either of the following conditions are satisfied, the muting state is released.

1. Muting input 1 or 2 turns OFF for T3 (0.1 s) or longer.
2. When the muting continuation time exceeds the muting time limit of T2 (60 s) (a setting tool can be used to change the limit in the range of 1 to 600 s, or to eliminate the time limit)

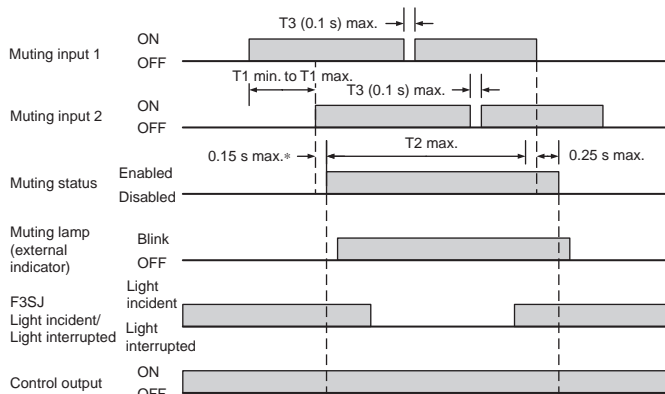

\*: This value is the time when the F3SJ is used singly. When used in a series, this time is as shown in the table below.

Number of Connected Units	* Time (s)
1	0.15
Series of 2	0.26
Series of 3	0.29
Series of 4	0.32

- T1 min: Muting input time limit (min.)  
This is the minimum input time lag between muting inputs 1 and 2, and is set to 0.03 s. If the time lag between muting inputs 1 and 2 are shorter than this value, a muting error is generated.
- T1 max: Muting input time limit (max.)  
This is the maximum input time lag between muting inputs 1 and 2, and is set to 3 s. The minimum value must be less than the maximum value (min. < max.).

- T2: Muting time limit  
This is the continuous time of the muting function, and is set to 60 s. If the muting status exceeds this time, muting is cancelled.
- T3: Allowable pulse-change time for muting input signals  
This is the maximum time allowed for a change in the waveform pulse of muting inputs 1 and 2 while in the muting status.

**Note:** The muting status can be released even when the system enters lockout.

The following values can be changed using the Setting Support Software for the F3SJ:

- T1 min: Muting input time limit (min.)
- T1 max: Muting input time limit (max.)
- T2: Muting time limit

The following values can be changed using the Setting Console:

- T2: Muting time limit


### Installation Standard for Muting Sensors

- Set the muting sensors so that they can detect all of the passing detection objects (palettes, automobiles, etc.). Do not install in a position so that only the front or rear end of the detection object is detected.
- Set the muting sensors so that they detect the objects even when they are loaded on palettes or other transport devices.
- Install the F3SJ and muting sensors so that each object passes through all muting sensors before the next object arrives at the first muting sensor. Also, install all F3SJ and muting sensors so that no person is able to accidentally enter the hazardous area while the muting function is enabled.
- When objects pass through the muting area at different speeds, consider limiting the muting time.
- For a muting sensor installation example, see the instruction manual.
- For details about the override function, see the instruction manual.

## Basic Connection for Muting System

For PNP output (See page 51 for NPN output wiring.)

Wiring when using muting and external device monitoring functions

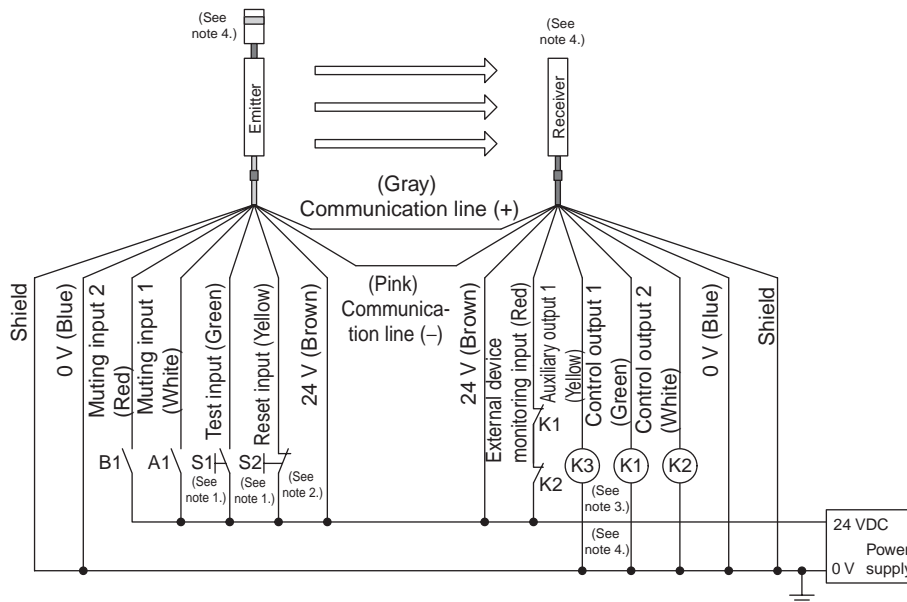


- S1: External test switch (connect to 0 V if the switch is not necessary.)
- S2: Lockout reset switch (connect to 24 V if the switch is not necessary.)
- A1: Contact by muting sensor A1
- B1: Contact by muting sensor B1
- K1, K2: Relay or other device that controls hazardous parts of the machine
- K3: Load or PLC, etc. (for monitoring)
- M1: Muting lamp

- Note:**
1. Use a switch for small loads (input specifications: 24 V, 1.8 mA)
  2. When using the interlock function, this also functions as an interlock reset switch. (Must be set with a setting tool.)
  3. The F3SJ will operate even if K3 is not connected.
  4. Connect the muting lamp to either the external indicator output or auxiliary output 1 for the emitter or the receiver. When connecting the muting lamp to auxiliary output 1, the parameter must be changed with a setting tool.


### Wiring when the external device monitoring function will not be used

- Use a setting tool to set the external device monitoring function to "Disabled."
- When using an auxiliary output 1 that has not been changed (output operation mode is "control output data," and inverse of control output signals is "Enabled"), the external device monitoring function will be disabled when auxiliary output 1 and the external device monitoring input are connected as shown below.

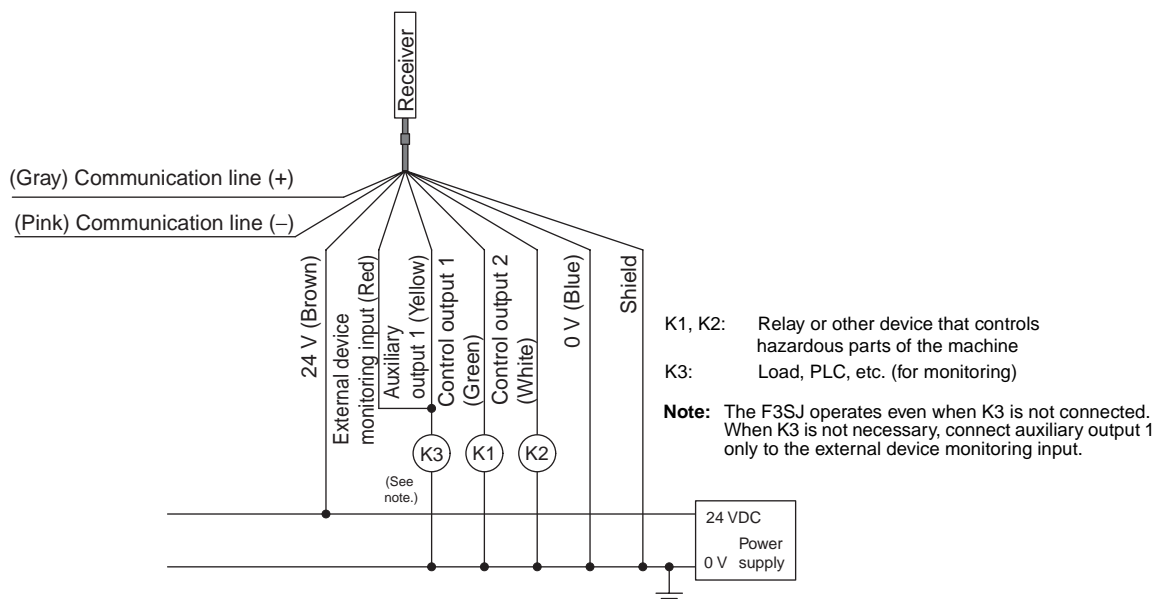

**For NPN output (See page 50 for PNP output wiring.)**

**Wiring when using muting and external device monitoring functions**

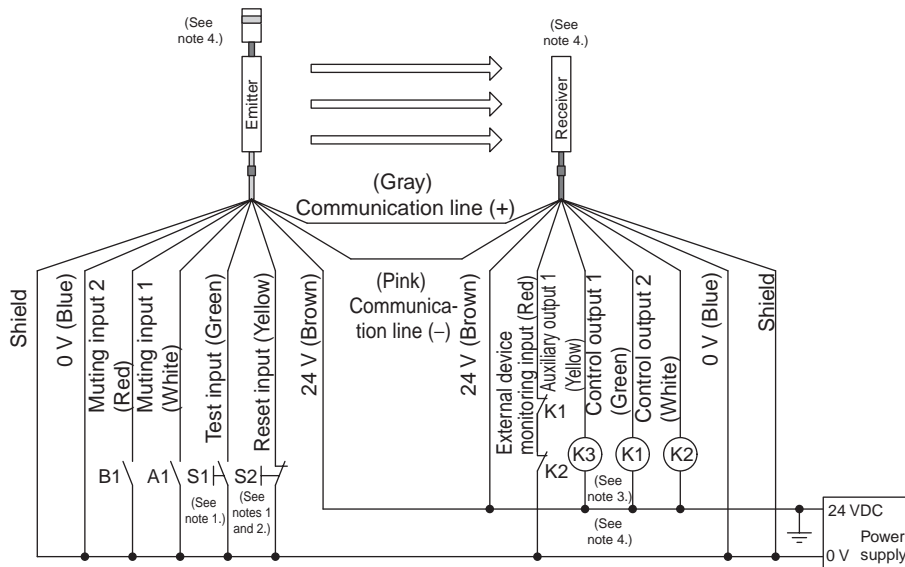


- S1: External test switch (connect to 24 V if the switch is not necessary.)
- S2: Lockout reset switch (connect to 0 V if the switch is not necessary.)
- A1: Contact by muting sensor A1
- B1: Contact by muting sensor B1
- K1, K2: Relay or other device that controls hazardous parts of the machine
- K3: Load or PLC, etc. (for monitoring)
- M1: Muting lamp

- Note:**
1. Use a switch for small loads (input specifications: 5 V, 1 mA).
  2. When using the interlock function, this also functions as an interlock reset switch. (Must be set with a setting tool.)
  3. The F3SJ operates even when K3 is not connected.
  4. Connect the muting lamp to either the external indicator output or auxiliary output 1 for the emitter or the receiver. When connecting the muting lamp to auxiliary output 1, the parameter must be changed with a setting tool.

**Wiring when the external device monitoring function will not be used**

- Use a setting tool to set the external device monitoring function to "Disabled."
- When using an auxiliary output 1 that has not been changed (output operation mode is "control output data," and inverse of control output signals is "Enabled"), the external device monitoring function will be disabled when auxiliary output 1 and the external device monitoring input are connected as shown below.

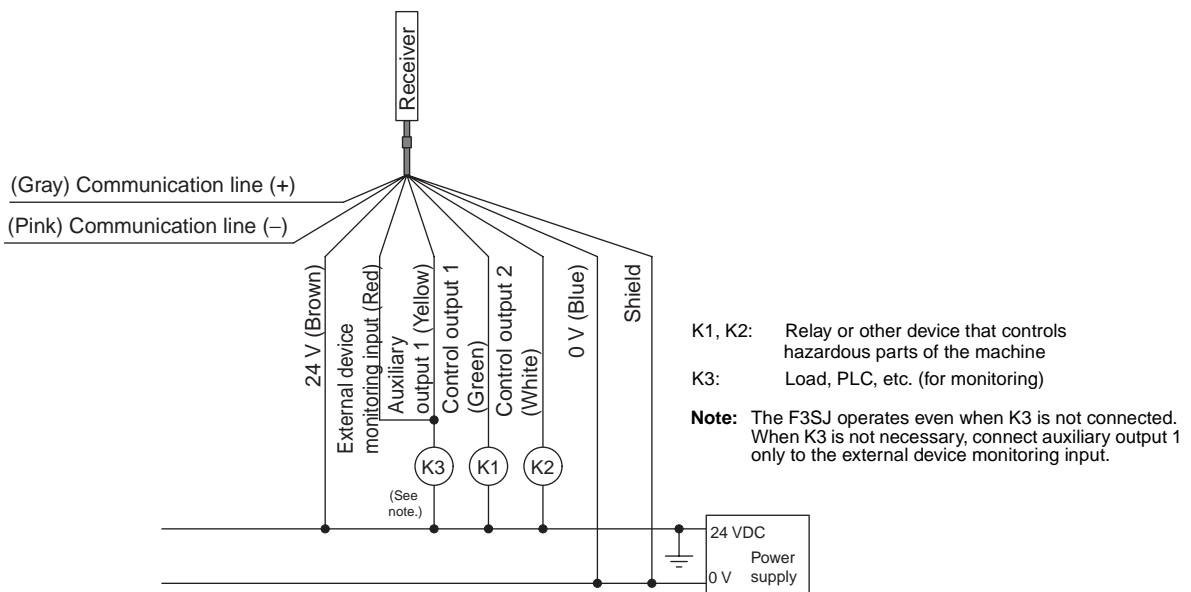

- K1, K2: Relay or other device that controls hazardous parts of the machine
- K3: Load, PLC, etc. (for monitoring)

- Note:** The F3SJ operates even when K3 is not connected. When K3 is not necessary, connect auxiliary output 1 only to the external device monitoring input.


## Example of a Safety Circuit with the Muting System

### For PNP output

#### Wiring for muting function with single F3SJ application (category 4)


#### When two muting sensors are connected

- Attaching a keycap for muting (F39-CN6) enables the muting function to be used.

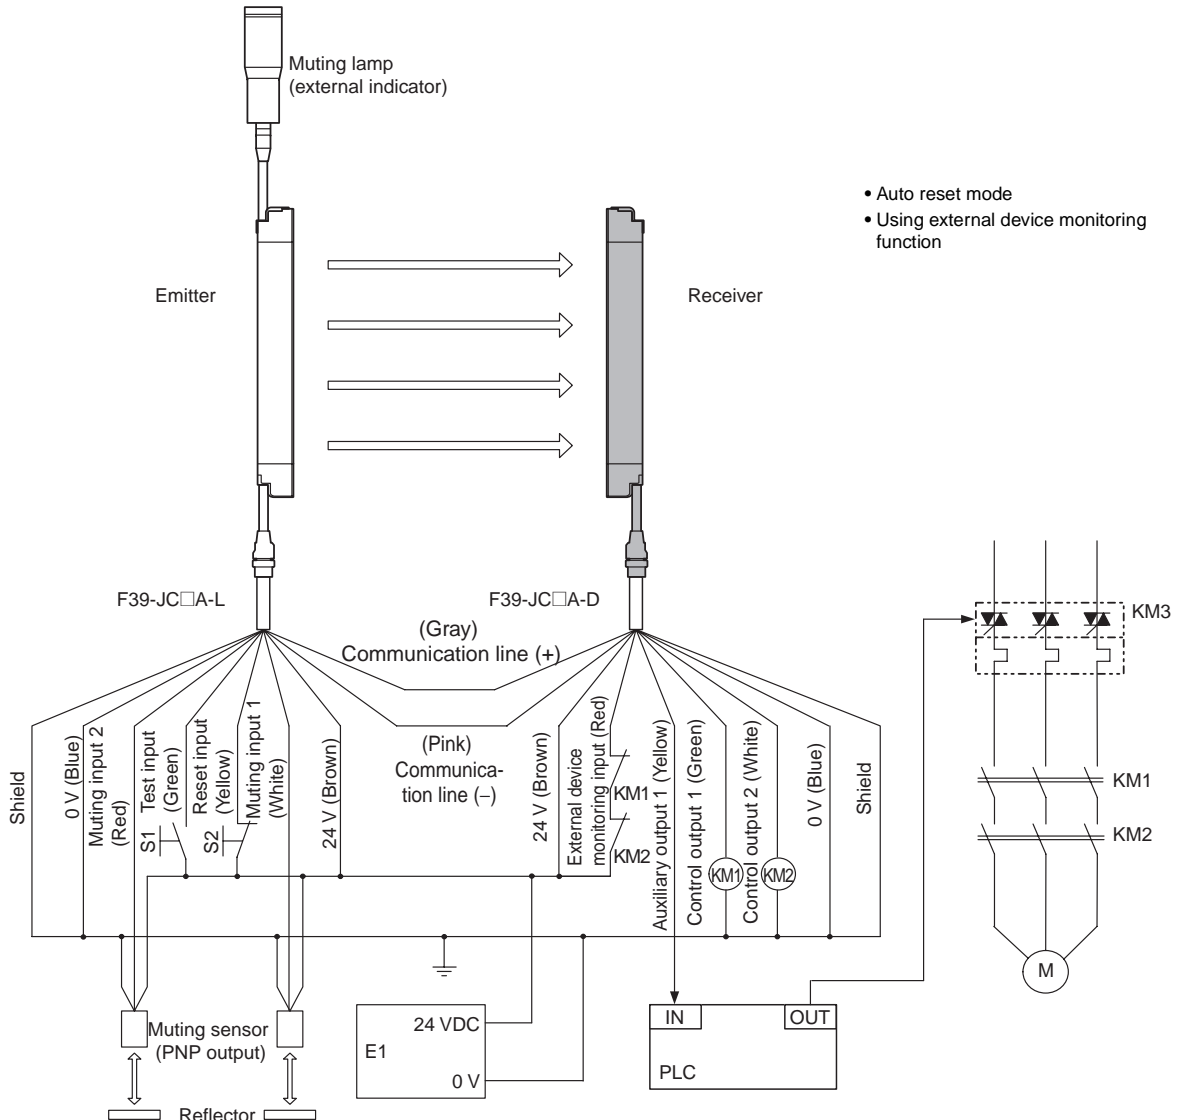

- Auto reset mode
- Using external device monitoring function

#### Timing Chart

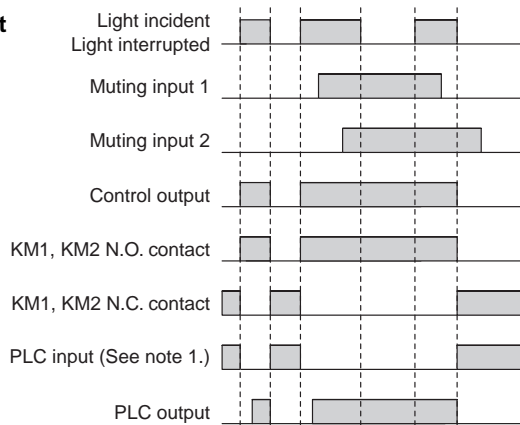


- S1: External test switch (connect to 0 V if the switch is not necessary.)
- S2: Lockout reset switch (connect to 24 V if the switch is not necessary.)
- KM1, KM2: Safety relay with forcibly-guided contacts (G7SA) or magnetic contactor
- KM3: Solid state contactor (G3J)
- M: 3-phase motor
- E1: 24 VDC power supply (S82K)
- PLC: Programmable controller (Used for monitoring -- not related to safety system)
- Muting sensor: Retro-reflective photoelectric sensor (E3Z-R81)

- Note:**
- The output operation mode for auxiliary output 1 is control output data/inverse of control output signals enabled (default setting).
  - Start interlock and restart interlock can be used with a setting tool.

**When four muting sensors are connected**

- The muting function can be used by attaching the F39-CN6 Key Cap.

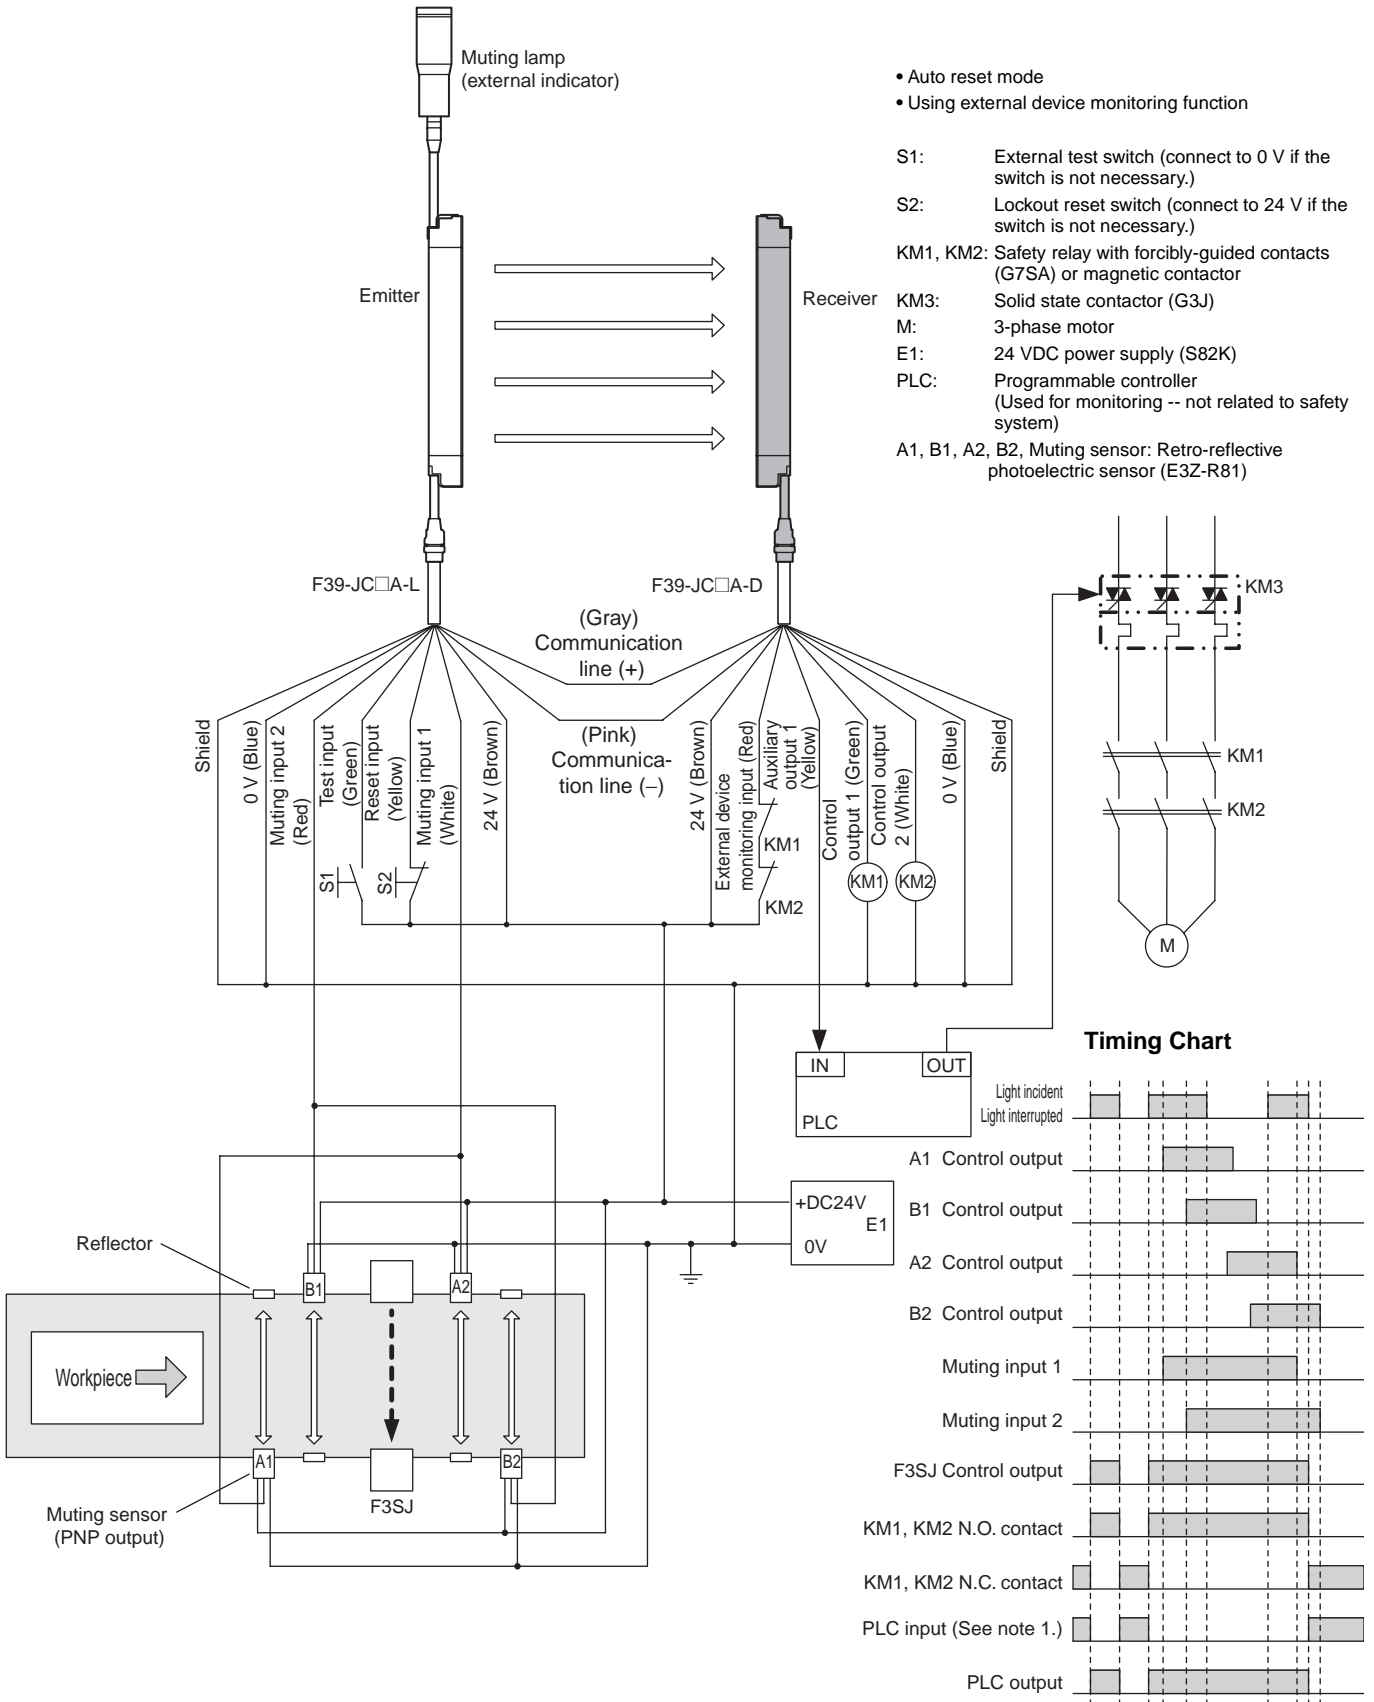


- Note:**
1. The output operation mode for auxiliary output 1 is control output data/inverse of control output signals enabled (default setting).
  2. Start interlock and restart interlock can be used with a setting tool.

## For NPN output

### Wiring for muting function with single F3SJ application (category 4)


#### When two muting sensors are connected

- Attaching a keycap for muting (F39-CN6) enables the muting function to be used.

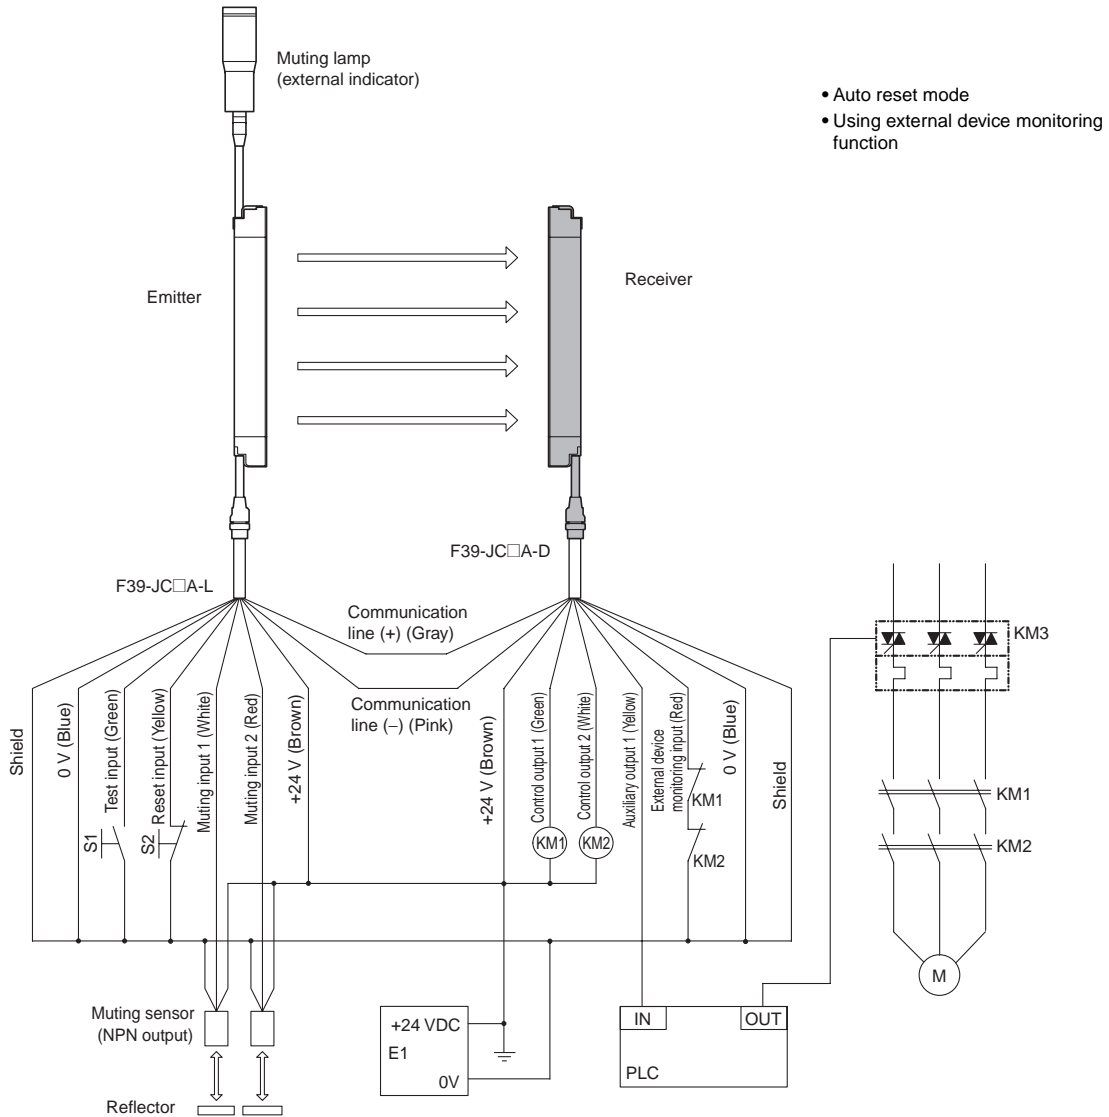

- Auto reset mode
- Using external device monitoring function

#### Timing Chart

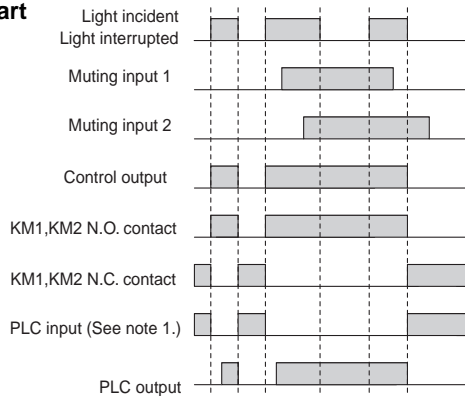


- S1: External test switch (connect to 24 V if the switch is not necessary.)
- S2: Lockout reset switch (connect to 0 V if the switch is not necessary.)
- KM1, KM2: Safety relay with forcibly-guided contacts (G7SA) or magnetic contactor
- KM3: Solid state contactor (G3J)
- M: 3-phase motor
- E1: 24 VDC power supply (S82K)
- PLC: Programmable controller (Used for monitoring -- not related to safety system)
- Muting sensor: Retro-reflective photoelectric sensor (E3Z-R61)

**Note: 1.** The output operation mode for auxiliary output 1 is control output data/inverse of control output signals enabled (default setting).

**2.** Start interlock and restart interlock can be used with a setting tool.

**When four muting sensors are connected**


- The muting function can be used by attaching the F39-CN6 Key Cap.

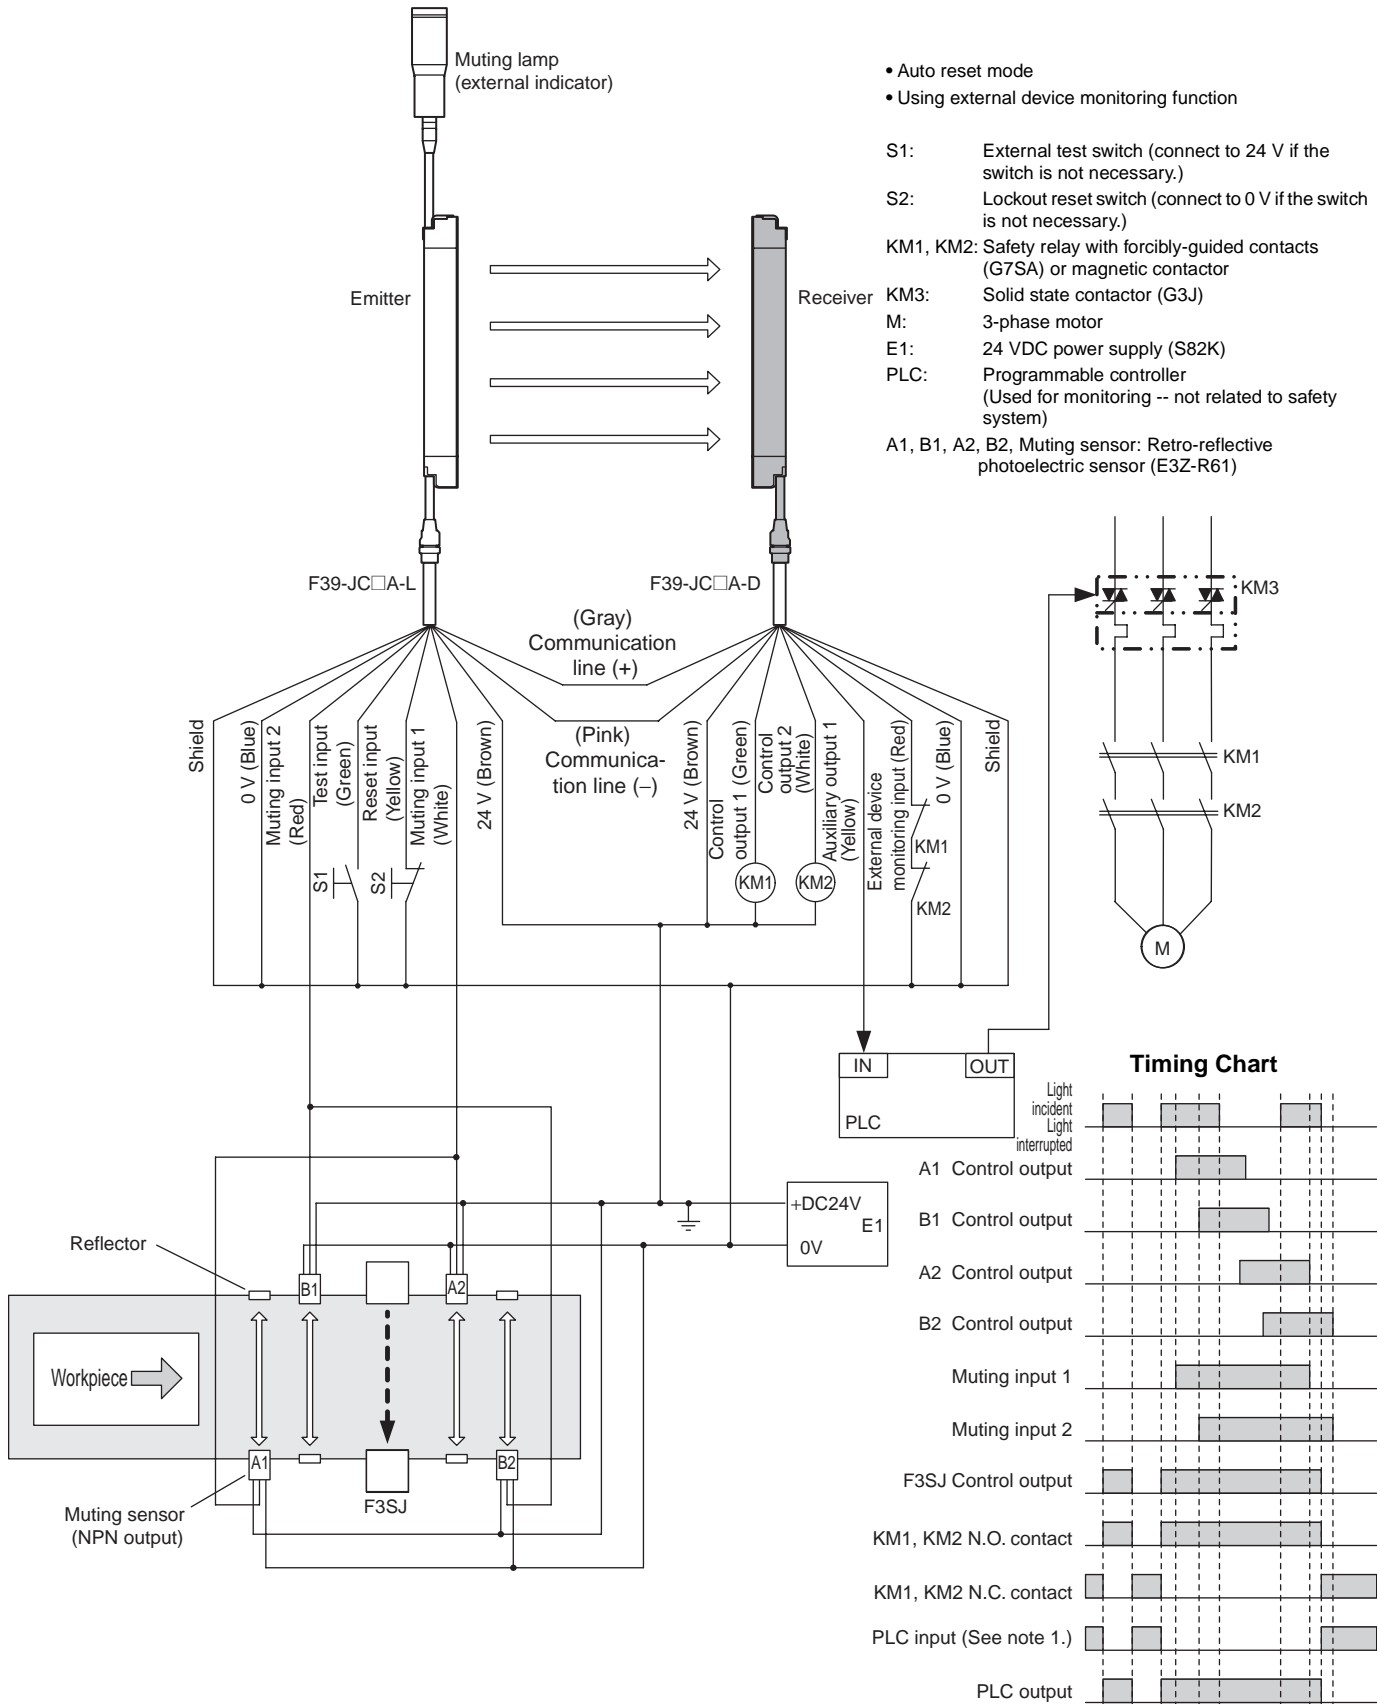


**Note:** 1. The output operation mode for auxiliary output 1 is control output data/inverse of control output signals enabled (default setting).  
 2. Start interlock and restart interlock can be used with a setting tool.

## Setting Bi-directional Muting

Connect the outer muting sensors A1 and A2 to muting input 1 and the inner muting sensors B1 and B2 to muting input 2.

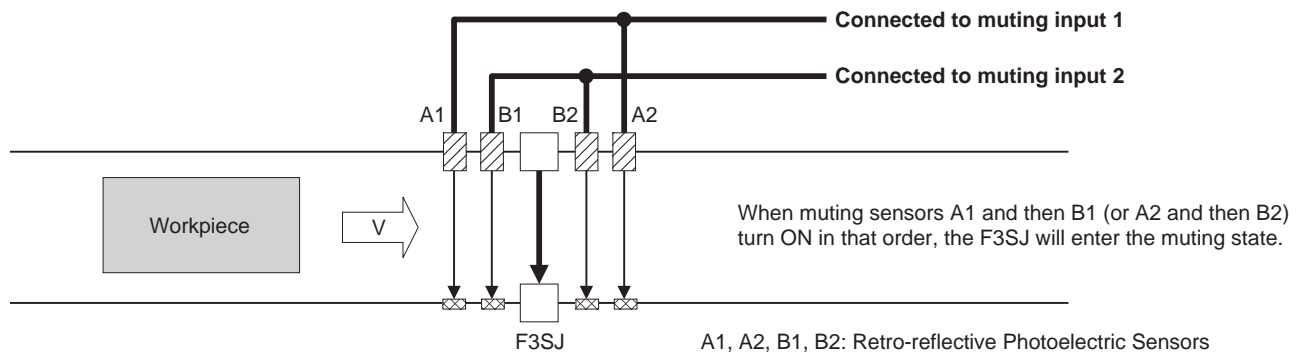

Muting from the opposite direction is also possible.

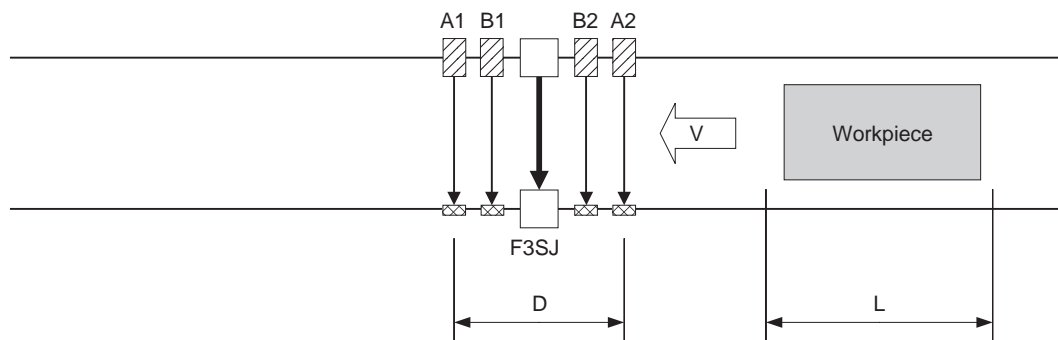

- Note:**
1. This example arrangement uses E3Z-R□□ Retro-reflective Photoelectric Sensors as the muting sensors. Mutual interference must be taken into account when installing these Sensors.
  2. The muting sensors must be installed so that distance D between muting sensors A1 and A2 is smaller than workpiece length L.
  3. Through-beam or Retro-reflective Photoelectric Sensors, Proximity Sensors, or Limit Switches can be used as the muting sensors.

# Safety Precautions

This catalog is intended as a guide for product selection. Be sure to use the instruction manual provided with the product for actual operation.

## ■ Regulations and Standards

1. Application of an F3SJ-A sensor alone cannot receive type certification provided by Article 44-2 of the Labour Safety and Health Law of Japan. It is necessary to apply it in a system. Therefore, when using the F3SJ-A in Japan as a "safety system for pressing or shearing machines" prescribed in Article 42 of that law, the system must receive type certification.
2. The F3SJ-A is electro-sensitive protective equipment (ESPE) in accordance with European Union (EU) Machinery Directive Index Annex IV, B, Safety Components, Item 1.
3. The F3SJ-A complies with the following legislation and standards:
  1. EU Regulations
    - Machinery Directive: Directive 98/37/EC
    - EMC Directive: Directive 89/336/EEC
  2. European standards:
    - EN61496-1 (TYPE 4 ESPE),
    - prEN61496-2 (TYPE 4 AOPD),
    - EN61508-1 to -7 (SIL3)
  3. International standards:
    - IEC61496-1 (TYPE 4 ESPE),
    - IEC61496-2 (TYPE 4 AOPD),
    - EN61508-1 to -7 (SIL3)
  4. JIS standards:
    - JIS B9704-1 (TYPE 4 ESPE),
    - JIS B9704-2 (TYPE 4 AOPD)
4. The F3SJ-A received the following certification from the EU-accredited body, TÜV SÜD Product Service GmbH:
  - EC type test based on machinery directive Type 4 ESPE (EN61496-1), Type 4 AOPD(prEN61496-2)
  - EMC Competent Body Certificate (Test power supply: OMRON's S82K)
  - TÜV SÜD Product Service Type Certification Type 4 ESPE (EN61496-1), Type 4 AOPD (prEN61496-2), SIL1, 2, 3 (EN61508-1 to -7) Application: EN954-1 categories B, 1, 2, 3, 4
5. The F3SJ-A has received certificates of UL listing for US and Canadian safety standards from the Third Party Assessment Body UL.
  - Type 4 ESPE (UL61496-1), Type 4 AOPD (UL61496-2)
6. The F3SJ-A is designed according to the standards listed below. To make sure that the final system complies with the following standards and regulations, you are asked to design and use it in accordance with all other related standards, laws, and regulations. If you have any questions, consult with specialized organizations such as the body responsible for prescribing and/or enforcing machinery safety regulations in the location where the equipment is to be used.
  - European Standards: EN415-4, EN692, EN693
  - US Occupational Safety and Health Administration: OSHA 29 CFR 1910.212
  - US Occupational Safety and Health Administration: OSHA 29 CFR 1910.217
  - American National Standard Institute: ANSI B11.1 to B11.19
  - American National Standard Institute ANSI/RIA 15.06
  - Canadian Standards Association CSA Z142, Z432, Z434
  - SEMI standard SEMI S2
  - Japanese Ministry of Health, Labour and Welfare Announcement: "Guidelines for Comprehensive Safety Standards of Machinery" Announcement No.501, June 1, 2001

## ■ Precautions for Safe Use

Indication and meaning for safe use

Meanings of Signal Words

To ensure safe use of the F3SJ-A, signal words and an alert symbol are used in this catalog to indicate safety-related instructions. Because these instructions describe details very important to your safety, it is extremely important that you understand and follow the instructions. The signal words and alert symbol used in this catalog are shown below.


### WARNING

Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally, there may be significant property damage.

### CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.

## Definition of Symbol

	Prohibited Indicates a prohibited action.
---	--

## Warning Labels

### For users

#### WARNING

The F3SJ must be installed, set, and integrated into the mechanical control system by a qualified technician who has received the appropriate training. Failure to make correct settings may prevent detection of people and result in serious injury.

When changing parameters with a setting tool (F39-GWUM or F39-MC21), the change must be made and the contents of the change must be managed by the person in charge of the system. Unintentional or mistaken parameter changes may prevent detection of people and result in serious injury.

### For machines

#### WARNING

Do not use this sensor for machines that cannot possibly be stopped by electrical control. For example, do not use it for a pressing machine that uses full-rotation clutch. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.

Do not use the auxiliary output or external indicator output for safety applications. Failure of the F3SJ may cause a person to go undetected, resulting in serious injury.

## For mounting

### WARNING

Make sure to test the operation of the F3SJ after installation to verify that the F3SJ operates as intended. Do not operate the machine until the test has been completed and F3SJ operation has been verified. Unintended function settings may cause a person to go undetected, resulting in serious injury.

Make sure to secure the safety distance between the F3SJ and the hazardous parts. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.

Install a protective structure so that the hazardous part of a machine can only be reached by passing through the sensor's detection zone. Install the sensors so that part of the person is always present in the detection zone when working in a machine's hazardous areas. If a person is able to step into the hazardous area of a machine and remain behind the F3SJ's detection zone, configure the system with an interlock function that prevents the machine from being restarted. Otherwise it may result in heavy injury.

Install the interlock reset switch in a location that provides a clear view of the entire hazardous area and where it cannot be activated from within the hazardous area.

The F3SJ cannot protect a person from an object flying from a hazardous area. Install protective cover(s) or fence(s).

When detection of an area has been disabled by the fixed blanking function, provide a protective structure around the entire area that will prevent a person from passing through it and reaching the hazardous part of the machinery. Failure to do so may prevent detection of people and result in serious injury.

After setting the fixed blanking function, be sure to confirm that a test rod is detected within all areas that require detection. Failure to do so may prevent detection of people and result in serious injury.

When the fixed blanking function or the floating blanking function is used, the diameter for the smallest detectable object becomes larger. Be sure to use the diameter for the smallest detectable object for the fixed blanking function or the floating blanking function when calculating the safety distance. Failure to do so may prevent the machinery from stopping before a person reaches the hazardous part of the machinery, and result in serious injury.

The muting and override functions disable the safety functions of the device. Additional safety measures must be taken to ensure safety while these functions are working.

Install muting sensors so that they can distinguish between the object that is being allowed to pass through the detection zone and a person. If the muting function is activated by the detection of a person, it may result in serious injury.

Muting lamps (external indicators) that indicate the state of the muting and override functions must be installed where they are clearly visible to workers from all the operating positions.

Muting times must be precisely set according to the application by qualified personnel who have received appropriate training. In particular, if the muting time limit is to be set to infinity, the person who makes the setting must bear responsibility.

Use two independent input devices for the muting inputs.

Install the F3SJ, Muting Sensors, or a protective wall so that workers cannot enter hazardous areas while muting is in effect, and set muting times.

Position the switch that is used to activate the override function in a location where the entire hazardous area can be seen, and where the switch cannot be operated from inside the hazardous area. Make sure that nobody is in the hazardous area before activating the override function.



Install the sensor system so that it is not affected by reflective surfaces. Failure to do so may hinder detection, resulting in serious injury.

When using more than 1 set of F3SJ, install them so that mutual interference does not occur, such as by configuring series connections or using physical barriers between adjacent sets.

Make sure that the F3SJ is securely mounted and its cables and connectors are properly connected.

Make sure that no foreign material, such as water, oil or dust, enters the inside of the F3SJ while the cap is removed.

Do not use the sensor system with mirrors in as retro-reflective configuration. Doing so may hinder detection. It is possible to use mirrors to "bend" the detection zone to a 90-degree angle.

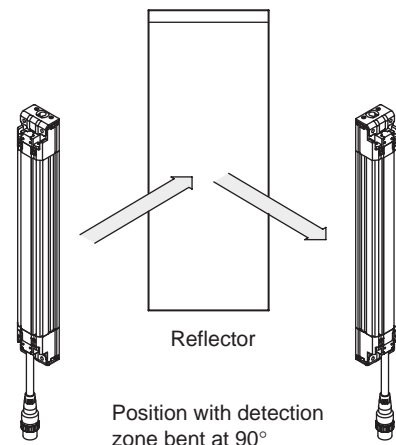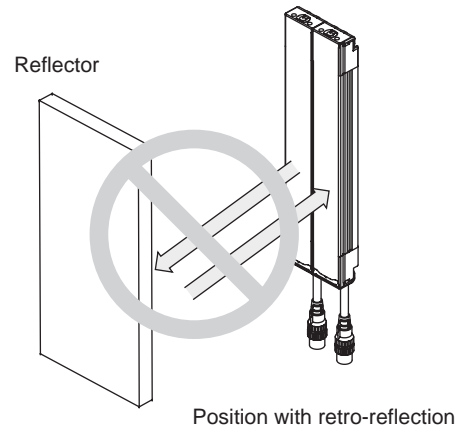

When using series connections, perform inspection of all connected F3SJs as instructed in the User's Manual.

## For wiring

### WARNING

For PNP output, connect the load between the output and 0 V line. For NPN output, connect the load between the output and +24 V line. Connecting the load between the +24 V and 0 V lines results in a dangerous condition because the operation mode is reversed to "ON when light is interrupted".

[For PNP output]  
Do not short-circuit an output line to +24 V line. Otherwise, the output is always ON, creating a dangerous situation. Also, 0 V of the power supply must be grounded so that output should not turn ON due to grounding of the output line.

[For NPN output]  
Do not short-circuit an output line to 0 V line. Otherwise, the output is always ON, creating a dangerous situation. Also, the +24 V line of the power supply must be grounded so that output does not turn ON due to grounding of the output line.

Configure the system by using the optimal number of control outputs that satisfy the requirements of the necessary safety category.

Do not connect each line of F3SJ to a DC power supply higher than 24 V+20%. Also, do not connect to an AC power supply. Failure to do so may result in electric shock.

For F3SJ to comply with IEC 61496-1 and UL 508, the DC power supply unit must satisfy all of the following conditions:

- Must be within rated power voltage (24 VDC±20%).
- Must have tolerance against the total rated current of devices if it is connected to multiple devices.
- Must comply with EMC directives (industrial environment)
- Double or enhanced insulation must be applied between the primary and secondary circuits.
- Automatic recovery of overcurrent protection characteristics (reversed L sagging)
- Output holding time must be 20 ms or longer.
- Must satisfy output characteristic requirements for class 2 circuit or limited voltage current circuit defined by UL508.
- Must comply with EMC, laws, and regulations of a country or a region where F3SJ is used. (Ex: In EU, the power supply must comply with EMC Low Voltage Directive.)

Double or enhanced insulation from hazardous voltage must be applied to all input and output lines. Failure to do so may result in electric shock.

The cable extension length must be no greater than the specified length. Otherwise, the safety functions may fail to work properly, resulting in danger.

**Others**

**⚠ WARNING**

To use the F3SJ in PSDI mode (restart of cycle operation by the sensor), you must configure an appropriate circuit between the F3SJ and the machine. For details about PSDI, refer to OSHA1910.217, IEC61496-1, and other relevant standards and regulations.

Do not try to disassemble, repair, or modify this product. Doing so may cause the safety functions to stop working properly.

Do not use the F3SJ in environments where flammable or explosive gases are present. Doing so may result in explosion.

Perform daily and 6-month inspections for the F3SJ. Otherwise, the system may fail to work properly, resulting in serious injury.

**Installation Conditions**

**Operating Range and Approach**

**⚠ WARNING**

Install a protective structure so that the hazardous part of a machine can only be reached by passing through the sensor's detection zone. Install the sensors so that part of the person is always present in the detection zone when working in a machine's hazardous areas. If a person is able to step into the hazardous area of a machine and remain behind the F3SJ's detection zone, configure the system with an interlock function that prevents the machine from being restarted. Otherwise it may result in heavy injury.

Install the interlock reset switch in a location that provides a clear view of the entire hazardous area and where it cannot be activated from within the hazardous area.

The F3SJ cannot protect a person from an object flying from a hazardous area. Install protective cover(s) or fence(s).

**Correct position**

The hazardous area of a machine can be reached only by passing through the sensor's detection zone.

A person can only reach the hazardous part of the machinery by passing through the sensor's detection zone.



A person enters the detection zone during operation.



**Incorrect positions**

A person can reach the hazardous part of the machinery without passing through the sensor's detection zone.




A person is between the sensor's detection zone and the hazardous part of the machinery.



## Safety Distance

The safety distance is the distance that must be set between the F3SJ and a machine's hazardous part to stop the hazardous part before a person or object reaches it. The safety distance varies according to the standards of each country and the individual specifications of each machine. In addition, the calculation of the safety distance differs if the direction of approach is not perpendicular to the detection zone of the F3SJ. Always refer to relevant standards.

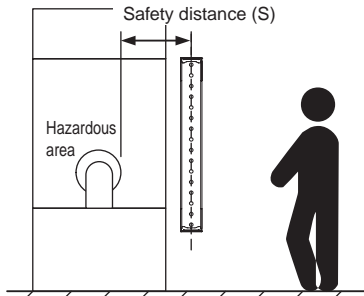

### **WARNING**

Make sure to secure the safety distance (S) between the F3SJ and the hazardous part. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.

**Note:** The response time of a machine is the time period from when the machine receives a stop signal to when the machine's hazardous part stops. Measure the response time on the actual system. Also, periodically check that the response time of the machine has not changed.

#### How to calculate the safety distance specified by International standard ISO13855-2002 (European standard EN999-1999) (reference)

If a person approaches the detection zone of the F3SJ perpendicularly, calculate the safety distance as shown below.

$$S = K \times T + C \dots \text{Eq. (1)}$$

- S: Safety distance
- K: Approach speed to the detection zone
- T: Total response time of the machine and F3SJ
- C: Additional distance calculated by the detection capability of the F3SJ

System that has detection capability of 40 mm max. Use  $K = 2,000 \text{ mm/s}$  and  $C = 8 \times (d - 14 \text{ mm})$  in equation (1) for the calculation.

$$S = 2,000 \text{ mm/s} \times (T_m + T_s) + 8 \times (d - 14 \text{ mm})$$

- S = Safety distance (mm)
- $T_m$  = Machine's response time (s)
- $T_s$  = Response time of the F3SJ from ON to OFF (s)
- d = Size of F3SJ's detection capability (mm)

[Calculation example]

When  $T_m = 0.05 \text{ s}$ ,  $T_s = 0.01 \text{ s}$ , and  $d = 14 \text{ mm}$ :  
 $S = 2,000 \text{ mm/s} \times (0.05 \text{ s} + 0.01 \text{ s}) + 8 \times (14 \text{ mm} - 14 \text{ mm})$   
 $= 120 \text{ mm} \dots \text{Eq. (2)}$

If the result is less than 100 mm, use  $S = 100 \text{ mm}$ .

If the result exceeds 500 mm, use the following equation where  $K = 1,600 \text{ mm/s}$ .

$$S = 1,600 \text{ mm/s} \times (T_m + T_s) + 8 \times (d - 14 \text{ mm}) \dots \text{Eq. (3)}$$

If the result of this Eq. (3) is less than 500 mm, use  $S = 500 \text{ mm}$ .

Systems with a Smallest Detectable Object Size (Diameter) Greater than 40 mm

Assuming  $K = 1,600 \text{ mm/s}$  and  $C = 850 \text{ mm}$ , the following calculation is made using Eq. (1).

$$S = 1,600 \text{ mm/s} \times (T_m + T_s) + 850 \dots \text{Eq. 4,}$$

- S = Safety distance (mm)
- $T_m$  = Machine's response time (s)
- $T_s$  = Response time of the F3SJ from ON to OFF (s)

Calculation example:

When  $T_m = 0.05 \text{ s}$  and  $T_s = 0.01 \text{ s}$ ,

$$S = 1,600 \text{ mm/s} \times (0.05 \text{ s} + 0.01 \text{ s}) + 850 \text{ mm} = 946 \text{ mm}$$

#### How to calculate the safety distance specified by American standard ANSI B11.19

(Ref.)

If a person approaches the detection zone of the F3SJ perpendicularly, calculate the safety distance as shown below.

$$S = K \times (T_s + T_c + T_r + T_{bm}) + D_{pf}$$

- S: Safety distance
- K: Approach speed to the detection zone (the value recommended by OSHA standard is 1,600 mm/s)

Approach speed K is not specified in the ANSI B.11.19 standard. To determine the value of K to apply, consider all factors, including the operator's physical ability.

- $T_s$  = Machine's stop time (s)
- $T_r$  = Response time of the F3SJ from ON to OFF (s)
- $T_c$  = Machine control circuit's maximum response time required to activate its brake (s)
- $T_{bm}$  = Additional time (s)

If a machine has a brake monitor, " $T_{bm}$  = Brake monitor setting time - ( $T_s + T_c$ )". If it has no brake monitor, we recommend using 20% or more of ( $T_s + T_c$ ) as additional time.

- $D_{pf}$  = Additional distance

According to ANSI's formula,  $D_{pf}$  is calculated as shown below:

$D_{pf} = 3.4 \times (d - 7.0)$ : Where d is the detection capability of the F3SJ (unit: mm)

[Calculation example]

When  $K = 1,600 \text{ mm/s}$ ,  $T_s + T_c = 0.06 \text{ s}$ , brake monitor setting time = 0.1 s,  $T_r = 0.01 \text{ s}$ ,  $d = 14 \text{ mm}$ :

$$T_{bm} = 0.1 - 0.06 = 0.04 \text{ s}$$

$$D_{pf} = 3.4 \times (14 - 7.0) = 23.8 \text{ mm}$$


$$S = 1,600 \times (0.06 + 0.01 + 0.04) + 23.8 = 199.8 \text{ mm}$$

### Distance from Glossy Surface

**⚠ WARNING**

Install the sensor system so that it is not affected by reflection from a glossy surface. Failure to do so may hinder detection, resulting in serious injury.

Install the sensor system at distance D or further from highly reflective surfaces such as metallic walls, floors, ceilings, or workpieces, as shown below.

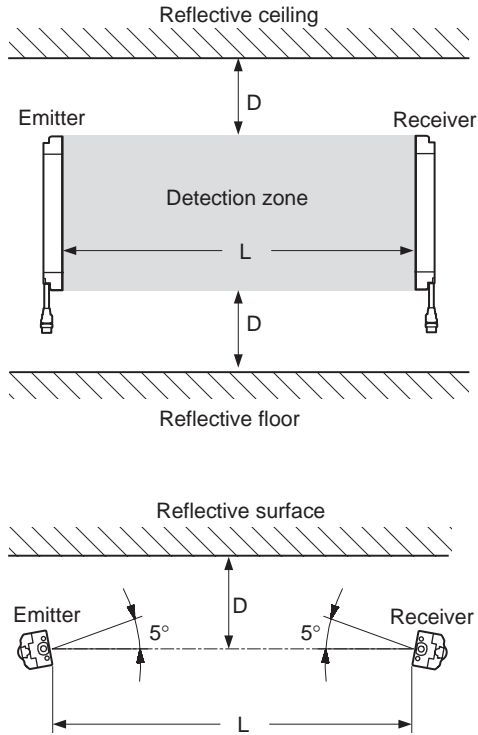

Distance between emitter and receiver (Detection Distance L)	Allowable installation distance D
For 0.2 to 3 m	0.13 m
For 3 m or more	$L/2 \times \tan 5^\circ = L \times 0.044$ (m)

### Prevention of Mutual Interference

Do not use a sensor system in a reflective configuration. Doing so may hinder detection.  
Mirrors can be used change the optical route.




When using more than 1 set of F3SJ, install them so that mutual interference does not occur, such as by configuring series connections or using physical barriers between adjacent sets.



Mutual interference from other F3SJ is prevented in up to 3 sets without series connection.

#### For series connection


Series connections can prevent mutual interference when multiple sensors are used. Up to 4 sets, 400 beams, can be connected (except for the F3SJ-A□-TS Series, for which up to 3 sets, 240 beams, can be connected). The emission of series-connected F3SJ is time-divided, so mutual interference does not occur and safety is ensured.

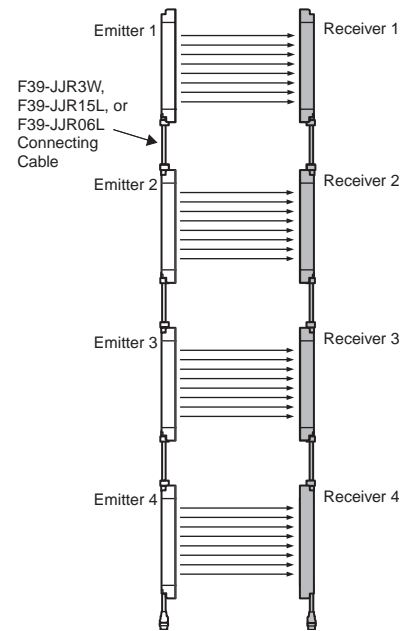


#### For no series connection

An interference light prevention algorithm prevents mutual interference in up to 3 unconnected sets. If 4 or more sets of F3SJ are installed and are not connected to each other, arrange them so that mutual interference does not occur. If 2 sets are installed near each other, reflection from the surface of the F3SJ may cause mutual interference. When mutual interference occurs, the F3SJ enters lockout. Combining countermeasures 1 to 3 below is effective.

1. Install a physical barrier

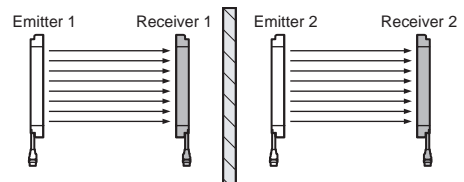

2. Alternate the direction of emission (alternation)

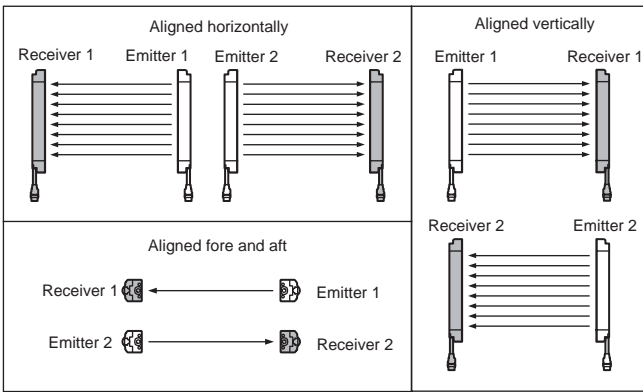


If sensors of 2 sets are installed too close to each other, mutual interference may occur due to reflection by the surface.


This can be resolved by using a setting tool to shorten the detection distance.

3. Shorten the detection distance (Must be set with a setting tool).


Before changing

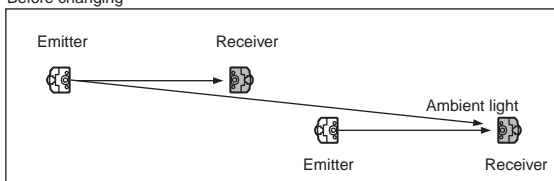

After changing

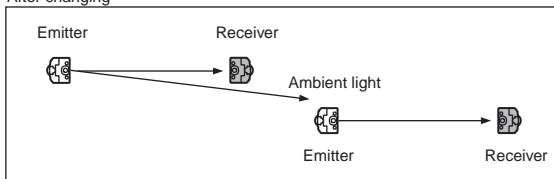


4. Keep sufficient distance between them

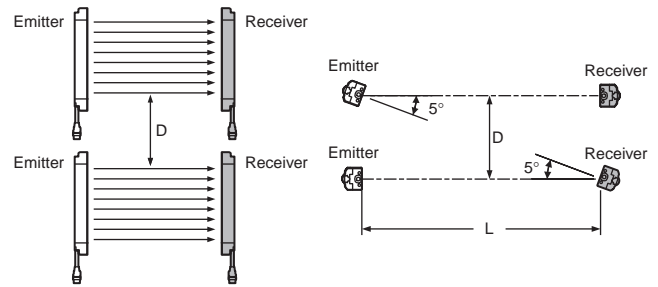

Distance between emitter and receiver (Detection Distance L)	Allowable installation distance D
For 0.2 to 3 m	0.26 m
For 3 m or more	$L \times \tan 5^\circ = L \times 0.088$ (m)

The installations shown below may cause mutual interference.

When mutual interference occurs, the F3SJ enters lockout.

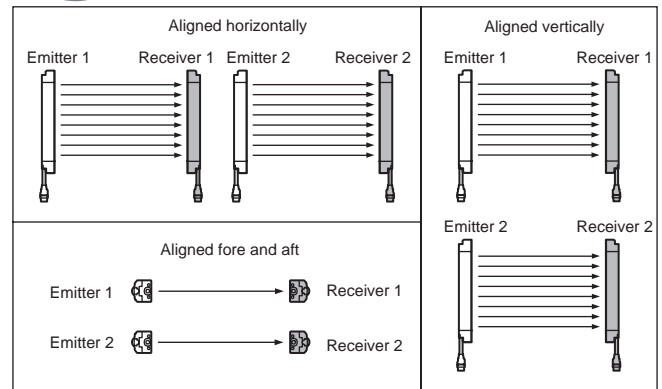

# Using Setting Tools

The following setting tools (sold separately) can be purchased in order to change or confirm various F3SJ-series parameters.

- F39-MC21 Setting Console
- F39-GWUM SD Manager Setting Support Software for the F3SJ

The Setting Console cannot be used with the F3SJ-A□-TS Series.

## ⚠ WARNING

The FS3J must be installed, set, and integrated into the mechanical control system by a qualified technician who has received the appropriate training. Failure to make correct settings may prevent detection of people and result in serious injury.


## F3SJ Versions

Setting tools can be used with Version 2 and later versions of the F3SJ. The setting tools cannot be used with Version 1.


The setting tools cannot be used even if a Version 1 F3SJ is combined in series with compatible F3SJ Units. (A communications error lockout will occur.)

Unfortunately, the F3SJ's version cannot be upgraded.

The F3SJ's version number appears on its label, as shown in the following diagram.

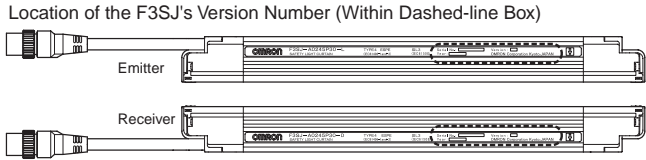

Close-up View of Dashed-line Box

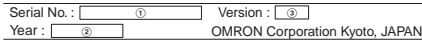

- ①: Serial number
- ②: Year of manufacture
- ③: F3SJ's version number (Verify that the version is Version 2 or later.)

### Functions Editable with Setting Tools

○: Can be used.

×: Cannot be used.

Function or monitored item		F39-MC21 Setting Console	F39-GWUM SD Manager Setting Support Software for the F3SJ
Settings for individual applications	Fixed blanking function (See note 1.)	○	○
	Floating braking function (See note 1.)	○	○
	Warning zone function (See note 1.)	○	○
	Muting function (See note 2.) (when using the muting system)	○	○
	Override function (See note 2.) (when using the muting system)	○	○
Indicator and I/O settings	Auxiliary output (See note 2.)	○	○
	Specified light beam output function (See note 1.)	×	○
	External indicator output (See note 2.)	○	○
	Interlock function (See note 2.)	○	○
	External device monitoring function (See note 2.)	○	○
Changing detection distance	Change detection distance function (See note 1.)	○	○
Monitoring operation	Light intensity indicators (See note 1.)	○	○
	Ambient light intensity indicators (See note 1.)	○	○
	Status indicators (See note 1.)	×	○
Maintenance information	Error log (See note 1.)	○	○
	Power ON time (See note 1.)	○	○
	Number of load switching operations (See note 1.)	○	○
Recovering settings	Recover settings function (See note 1.)	○	○
Other functions	Safety distance calculation function (See note 1.)	×	○
	Power cable length calculation Function (See note 1.)	×	○
	Rated response time check (See note 1.)	○	○

- Note:** 1. These functions were newly added in Version 2. A setting tool can be used to enable these functions or read the function settings.  
 2. These functions can be used even without a setting tool. A setting tool can be used to make more detailed settings.

## Two Kinds of Setting Tools

The following accessories (sold separately) can be purchased in order to use various F3SJ-series functions and change settings.

- F39-MC21 Setting Console  
A Setting Console can easily make settings onsite.
- F39-GWUM SD Manager Setting Support Software for the F3SJ  
With this software, a personal computer can be connected to make settings. The SD Manager Setting Support Software for the F3SJ can make more detailed settings than the Setting Console.


### Setting Console

The following items are included with the F39-MC21 Setting Console.

- Setting Console
- Branch Connector (with Connector Cap)
- Special Cable
- Special Cable with Plug
- Error Mode Label
- Instruction Manual

### Connecting the Setting Console

Connect the F3SJ to the Setting Console as shown in the following diagram. The Branch Connector can be used on either the emitter side or receiver side. After the F3SJ has been wired, turn ON the power and change parameters as required. If it is not possible to connect a branch connector because the connector is concealed by equipment or otherwise inaccessible, use the Special Cable with Plug to connect to the + and - communications lines. For details, refer to the F39-MC21 Instruction Manual.

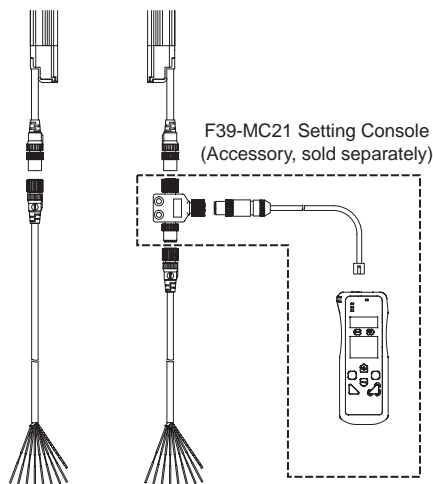

### SD Manager Setting Support Software for the F3SJ


The following items are included with the F39-GWUM SD Manager Setting Support Software for the F3SJ.

- CD-ROM (SD Manager Setting Support Software for the F3SJ, Communications Unit Driver)
- Communications Unit
- Branch Connector (with Connector Cap)
- Special Cable
- Instruction Manual (Installation Guide)
- Special Cable with Plug

The F3SJ's operating status can be checked and its parameters can be changed in the SD Manager Setting Support Software for the F3SJ.

### Connecting the SD Manager Setting Support Software

Connect the F3SJ, Communications Unit, and personal computer as shown in the following diagram. The branch connector can be used on either the emitter side or receiver side. After the F3SJ has been wired, turn ON the power and start the Setting Support Software. If it is not possible to connect a branch connector because the connector is concealed by equipment or otherwise inaccessible, use the Special Cable with Plug to connect to the + and - communications lines. For details, refer to the SD Manager's Help function.

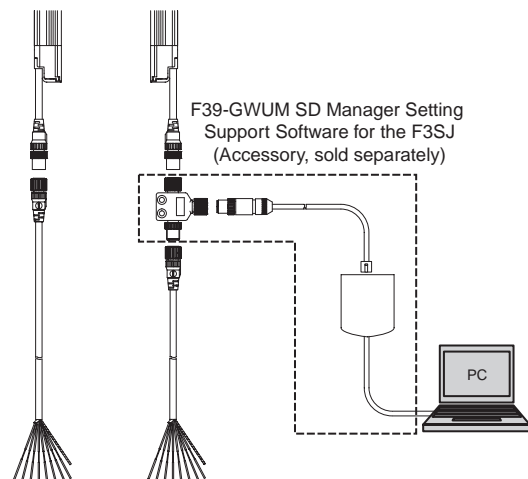

# Applications Supported by the Setting Tools

## Fixed Blanking Function

### Summary

Disables specific F3SJ light beams.

**⚠ WARNING**

When the fixed blanking function is used to disable detection in an area, install blocking structures or shielding to prevent passage into the entire hazardous area where detection has been disabled. Failure to do so may prevent detection of people and result in serious injury.

When an allowable range of light beams has been set for fixed blanking, the size of the smallest detectable object will be larger in the vicinity of interrupting objects. Calculate the safety distance to match the settings.

After setting the fixed blanking function, you must verify that the F3SJ detects a test rod at any position in the entire area where intrusion must be detected. Failure to do so may prevent detection of people and result in serious injury.

### Example Application

In this example, there is always an object such as a conveyor belt in the detection area, and we want to ignore the conveyor belt.

### Description of Functions

## Fixed Blanking Function


This function disables part of the F3SJ's detection area and maintains the control output's ON status even if there is an object in the disabled area.

The light beams set for fixed blanking must be one area of consecutive light beams and up to five areas can be set (areas 1 to 5). Fixed blanking cannot be set for all of the light beams.

## Setting the Fixed Blanking Area

Set the area that will be subject to fixed blanking.

An interrupting object can be placed in the detection area to perform teaching and specify light beams for manual settings.

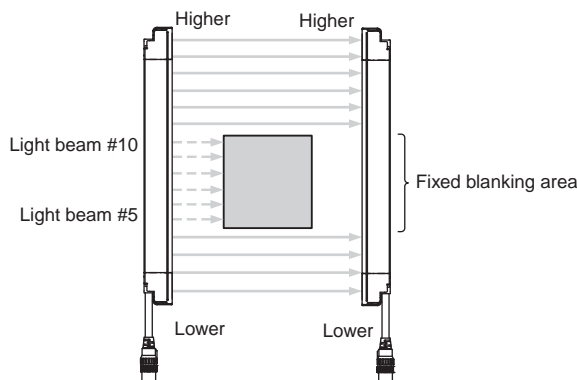

- Note:**
1. When the Setting Console is being used, only one area can be set as a fixed blanking area.
  2. When the SD Manager Setting Support Software is being used, up to five areas can be set as fixed blanking areas.

## Floating Blanking Function

### Summary

Increases the diameter of the F3SJ's smallest detectable object and turns OFF the control output when multiple objects are detected.

**⚠ WARNING**

When the floating blanking function is used, it increases the diameter of the F3SJ's smallest detectable object. Always use the larger diameter when calculating the safety distance. If the incorrect diameter is used in the calculation, the machinery may fail to stop before an operator reaches the hazardous area, resulting in serious injury.

After setting the floating blanking function, always verify that the F3SJ system operates as expected. Serious injury may result if an individual is not detected.

### Example Application

When there is a moving object with a fixed width in the detection area that we do not want to detect, the detection function can be disabled.


### Description of Functions

## Floating Blanking Function

This function increases the diameter of the smallest detectable object to allow passage of objects of a certain size or allow interrupting objects in multiple locations.

## Setting the Floating Blanking Area

When the Setting Console is being used, all of the light beams are set as the floating blanking area. When the SD Manager Setting Support Software is being used, just one area can be set but the range of the area can be specified. In the following example, the floating blanking area is set from the 5th light beam to the 10th light beam (counting from the bottom). An interrupting object can be placed in the detection area to perform teaching and specify light beams for manual settings.

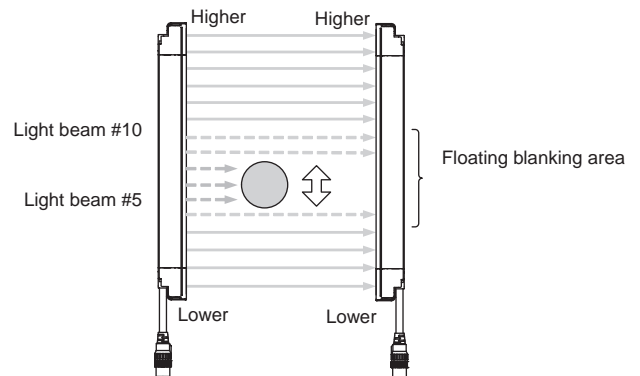

## Floating Light Beams


The following charts show the relationship between the number of floating light beams and the safety output operation (safety output not going OFF). Measure the size of the interrupting object (maximum diameter) and set the number of floating light beams so that the object's size is less than the corresponding dimension shown in the chart.

**Example Setting**


When an F3SJ-A□14 is being used with an interrupting object that is 20 mm in diameter, set three light beams as floating light beams. With this setting, the F3SJ's safety output will not turn OFF even if there is an interrupting object up to 22-mm wide in the floating blanking area.

**Effective Range vs. Number of Floating Light Beams**


F3SJ-A□14 Series

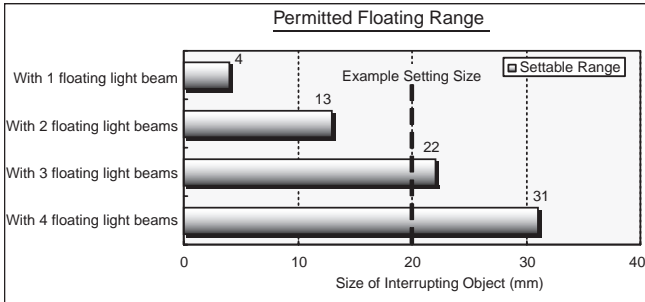


F3SJ-A□20 Series

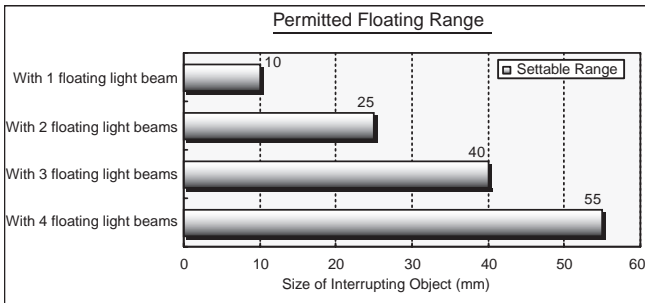

F3SJ-A□30 Series

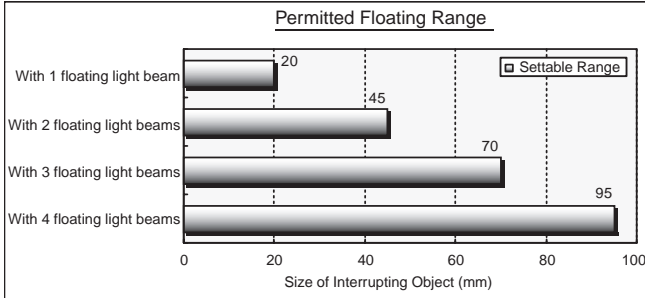

F3SJ-A□55 series

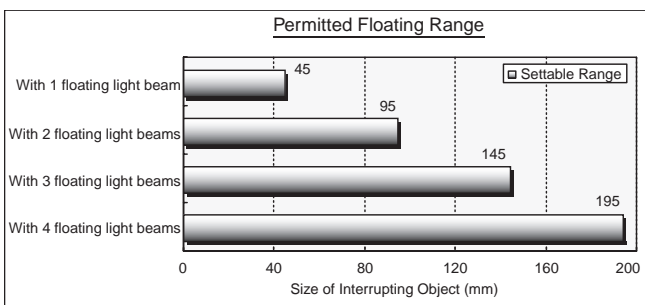

**Floating Blanking Mode**

The floating blanking function has two operation modes.

- 1. Continuous Light Beam Mode**  
 The safety output will not go OFF if the interrupting object is smaller than the set size, although the safety output will go OFF if objects pass through several areas in the detection area. The floating blanking monitor function can be set in this mode. Refer to the User's Manual for details.
- 2. Discontinuous Light Beam Mode**  
 A light blockage is detected when the number of light beams blocked in the area is equal to or greater than the preset number of light beams.

## Warning Zone Function

### Summary


The detection zone can be divided into the detection zone and a warning zone.

### ! WARNING

The warning zone output is not a safety output. Do not include this area in the safety distance calculation. Shortening the safety distance may result in serious injury.

The warning zone cannot be used for safety purposes. Always install the system so that the hazard is reached by passing through the detection zone.

The warning zone function can be used only when the F3SJ is installed horizontally. This function cannot be used when the F3SJ is installed vertically.

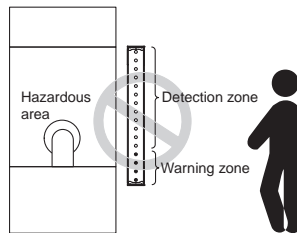

### Example Application

When an individual enters, a warning lamp lights or buzzer sounds without stopping the equipment.

### Description of Function

### Warning Zone Function

Use teaching to set the light beams that you want to set as the warning zone or manually specify the light beams from the lowest or highest beam. (See figures 1 and 2.)

To indicate that the warning zone is blocked, allocate the auxiliary output or external indicator output as the warning zone information.

The following settings cannot be made:

- Setting all light beams as the warning zone (figure 4)
- Setting a warning zone that does not include one of the outer light beams (figure 5)

If Safety Light Curtains are connected in series, and at least one of an F3SJ's light beams is a normal light beam, all of a Light Curtain's light beams can be set as a warning zone (figure 3).

### Example Warning Zone Settings (Figures 1 to 3)


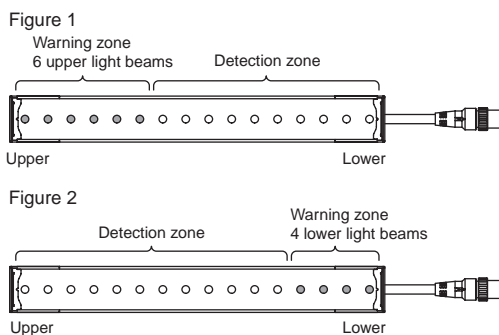


Figure 3

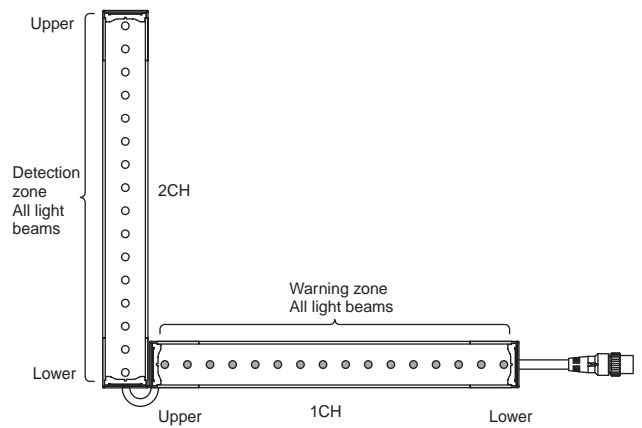

### Examples of Unacceptable Warning Zone Settings (Figures 4 and 5)

Figure 4



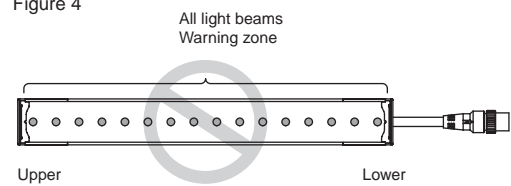


Figure 5

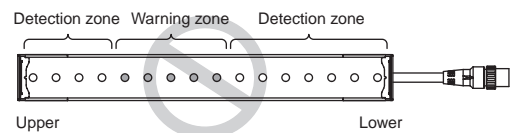

### Warning Zone Display Label

When the warning zone is set, affix this label to indicate which areas belong to the normal detection zone and the warning zone.

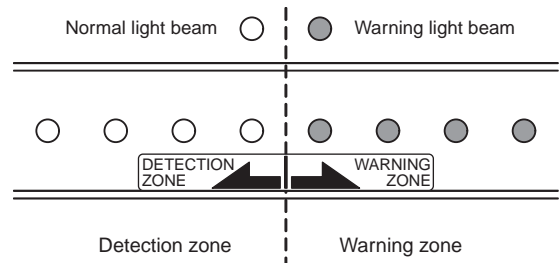

## Muting Function

### Summary

Makes settings related to the muting function.

#### WARNING

The muting function disables the safety functions of the device. Additional safety measures must be taken to ensure safety while this function is working.

Install muting sensors so that they can distinguish between the object that is being allowed to be pass through the detection zone and a person.

Muting lamps (external indicators) that indicate the status of the muting function must be installed where they are clearly visible to workers from all the operating positions.

Muting times must be precisely set according to the application by qualified personnel who have received appropriate training. In particular, if the muting time limit is to be set to infinity, the person who makes the setting must bear responsibility.

Use two independent input devices for the muting inputs. (For the PNP output-type F3SJ, use a sensor with a PNP transistor output or N.O. contact. For the NPN output-type F3SJ, use a sensor with an NPN transistor output or N.O. type contact.)

To prevent a worker from entering the hazardous area while the muting function is engaged, install the F3SJ, muting sensor, and then a protective barrier and set a limited muting time.

### Example Applications

- Allowing only work pieces to pass into the conveyor entrance
- Operating the muting function in a specific area only
- Setting a different muting mode when standard muting is not appropriate for the application

### Description of Functions (See User's Manual for details.)

### Operation Modes

When the SD Manager Setting Support Software is being used, any one of the following three operation modes can be selected for the muting function.

1. Standard Muting Mode  
This is the default operation mode, which is set when the F3SJ is shipped from the factory.  
The muting function is enabled by turning ON muting inputs 1 and 2 with a time lag.

**Note:** Settings such as the muting time limit value can be changed.

2. Specialized Exit Muting Mode (Can be set with the SD Manager Setting Support Software only.)  
The muting function is enabled by turning ON muting inputs 1 and 2 with a time lag.  
Installation of the muting input sensors is simpler than standard mode because the Safety Light Curtain's blocked light status is used to end muting.
3. Position Detection Muting Mode (Can be set with the SD Manager Setting Support Software only.)  
Sensors such as limit switches are used for the muting inputs and the muting function is enabled by turning muting input from OFF to ON and then turning muting input 2 from ON to OFF within time difference T1 max. Use hybrid redundant inputs such as a combination of an N.O. contact input and an N.C. contact input. (When using a PNP-output photoelectric switch, use L/ON operation on one side and D/ON operation on the other side.)  
This mode is useful when you want to disable the F3SJ temporarily, such as when a person is placing an object at the conveyor entrance.

### Partial Muting (Muting area) Settings

The light beams controlled by the muting function can be specified with a setting tool. (When the F3SJ is shipped, all light beams are set.)

The light beams can be specified by teaching/recording the blocked light beams as muting light beams or manually specifying the desired light beams.

# Indicator and I/O Settings

## Auxiliary Output (Non-safety) and External Indicator Output (Non-safety)

### Summary

A setting tool can be used to change the allocation of auxiliary outputs 1 and 2, and external indicator outputs 1 and 2.

**! WARNING**

Do not use the auxiliary outputs or external indicator outputs for safety purposes. Serious injury may result if an output fails and a person is not detected.

### Example Applications

- Allocating a lockout output or warning zone output to an auxiliary output
- Connecting an external indicator to an auxiliary output and making it flash

An auxiliary output or external indicator output can be connected to an incandescent light to function as a broken-wire or short-circuit detector. Refer to the User's Manual for details.

### Output Operation Modes (when allocated to an auxiliary output or external indicator output)

Output operation mode	Description of operation (Output will go ON in the following situation.)	Setting Console	SD Manager Setting Support Software
Control output	The control output is ON	<input type="radio"/>	<input type="radio"/>
Light intensity diagnosis (See note 1.)	The F3SJ is ON and the received light intensity is 100% to 130% of the threshold value for more than 10 seconds.	<input type="radio"/>	<input type="radio"/>
Error/Lockout	The F3SJ is in error or lockout status.	<input type="radio"/>	<input type="radio"/>
Muting/Override	The F3SJ is in muting or override status.	<input type="radio"/>	<input type="radio"/>
Blanking/Warning Zone (See note 2.)	The fixed blanking, floating blanking, or warning zone function is enabled.	<input type="radio"/>	<input type="radio"/>
Specified light beam output (See note 3.)	A specified light beam is blocked.	×	<input type="radio"/>
Power ON time	The power ON time has exceeded the threshold value.	<input type="radio"/>	<input type="radio"/>
Warning zone (See note 4.)	Light is blocked in the warning zone.	<input type="radio"/>	<input type="radio"/>
Test input ON	The test input went ON.	<input type="radio"/>	<input type="radio"/>
Blanking light beam incident light	A fixed or floating light beam is receiving incident light.	<input type="radio"/>	<input type="radio"/>
Interlock	The F3SJ is in interlock status.	<input type="radio"/>	<input type="radio"/>
Muting error	The F3SJ is in muting error status.	<input type="radio"/>	<input type="radio"/>
Number of load switching operations exceeded	The number of load switching operations exceeded the threshold value.	<input type="radio"/>	<input type="radio"/>
Information trigger	An interlock, lockout, or muting error has occurred.	×	<input type="radio"/>
Individual linked sensor output (channel 1)	Channel 1 control output is ON when Units are linked in series.	<input type="radio"/> (Auxiliary output 1 only)	<input type="radio"/> (Auxiliary output 1 only)
Individual linked sensor output (channel 2)	Channel 2 control output is ON when Units are linked in series.	<input type="radio"/> (Auxiliary output 1 only)	<input type="radio"/> (Auxiliary output 1 only)
Individual linked sensor output (channel 3)	Channel 3 control output is ON when Units are linked in series.	<input type="radio"/> (Auxiliary output 1 only)	<input type="radio"/> (Auxiliary output 1 only)
Individual linked sensor output (channel 4)	Channel 4 control output is ON when Units are linked in series.	<input type="radio"/> (Auxiliary output 1 only)	<input type="radio"/> (Auxiliary output 1 only)

**Note:** 1. A light blockage was detected even though the output is not turned OFF because the blockage occurred at a light beam subject to fixed blanking, floating blanking, or muting. Blockages are also not processed during overrides.

2. The fixed blanking light beams or floating blanking light beams must be set.

3. The specified light beam must be set.

4. The warning zone light beams must be set.

5. When "specified light beam output" is allocated as the output operation mode for auxiliary output 1 or 2 or external indicator output 1 or 2, that mode cannot be allocated to the other output operations.

# Changing the Detection Distance

---

## Change detection distance function

### Summary

The F3SJ's detection distance can be shortened.

### Example Application

The F3SJ's detection distance can be shortened to avoid affecting other photoelectric sensors.

When devices are installed close together, shortening the detection distance can reduce mutual interference.

### Description of Function

The detection distance can be set to 0.5 m, 1 m, 2 m, 3 m, 5 m, or MAX (either 7 m or 9 m).

The most suitable detection distance can be set to match the installation distance.

**Note:** MAX represents the rated detection distance.

# Monitoring Operation

---

## Received Light Intensity Indicator

### Summary

It is possible to read the F3SJ's received light intensity.

### Example Application

Adjust the light beams while checking the F3SJ's received light intensity.

### Description of Function

Indicates the F3SJ's received light intensity.

The F3SJ's received light intensity level can be checked with a setting tool.

## Ambient Light Intensity Indicator

### Summary

It is possible to read the intensity of the light received by the F3SJ from ambient sources, such as other photoelectric sensors.

### Example Application

Display the ambient light level while taking steps to reduce light interference from sources such as photoelectric switches in the area and neighboring F3SJ Units.

### Description of Function

Indicates the ambient light level at the F3SJ from other light sources such as photoelectric sensors.

This function can help identify the photoelectric sensors that are the source of the light interference and identify the light beams being affected by the ambient light.

# Other Functions

---

The F3SJ is also equipped with the following functions.

Refer to the User's Manual for details on using these functions.

- Status indicators
- Error log
- Power ON time
- Number of load switching operations
- Safety distance calculation function
- Power cable length calculation function
- Rated response time check function



# Dimensions

Note: All units are in millimeters unless otherwise indicated.


## Main Units

### When Using Standard Mounting Brackets

#### Backside mounting

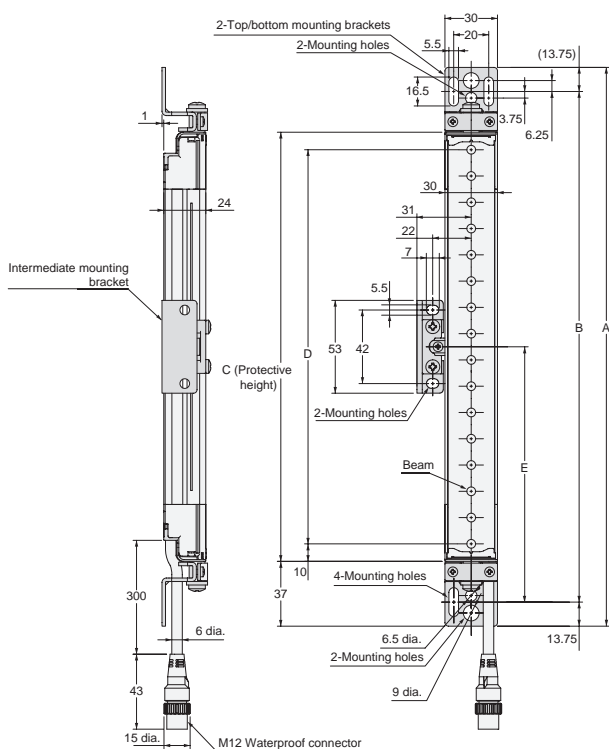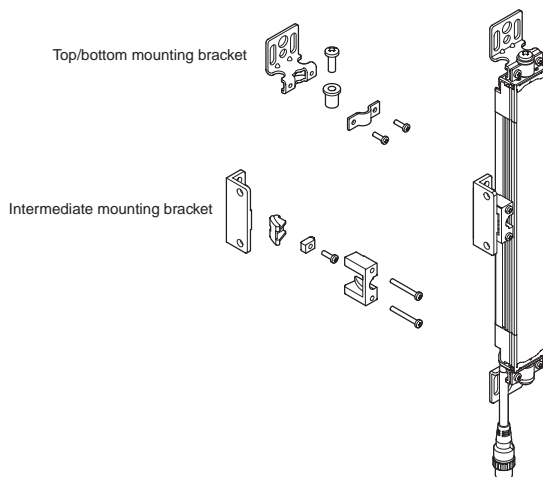


Mounting screw holes

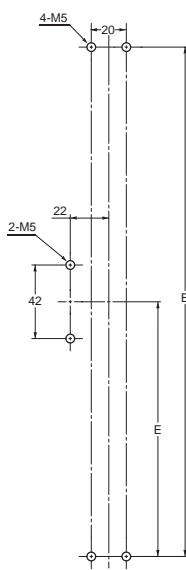

C (protective height): 4-digit number in the table  
 $A = C + 74$ ,  $B = C + 46.5$   
 $D = C - 20$ , E = See table below.





Protective height	Number of intermediate brackets	E (See note.)
0245 to 0596	0	---
0600 to 1130	1	$E = B / 2$
1136 to 1658	2	$E = B / 3$
1660 to 2180	3	$E = B / 4$
2195 to 2500	4	$E = B / 5$

Note: Use  $E = 530$  or less when none of the E values shown above are used.

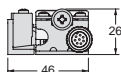

Side mounting

Mounting screw holes

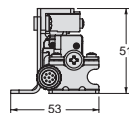
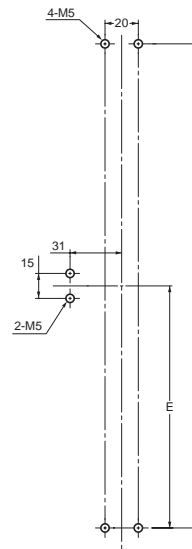
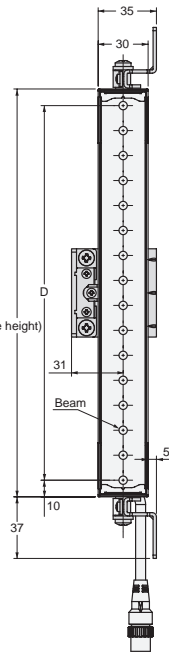
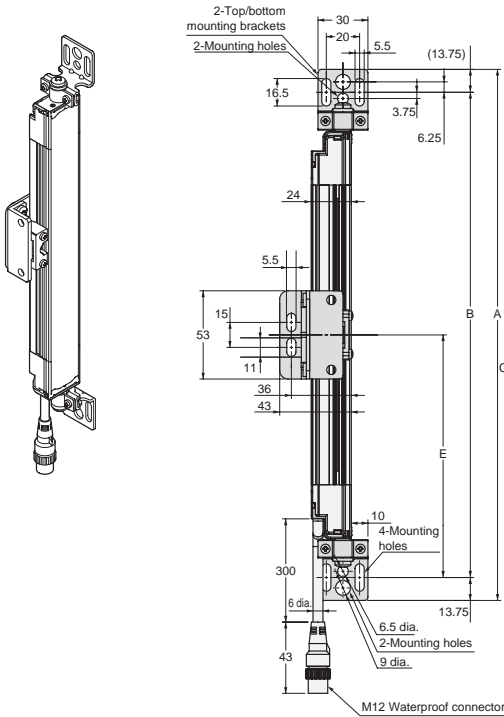


C (protective height): 4-digit number in the table  
 $A = C + 74$ ,  $B = C + 46.5$   
 $D = C - 20$ ,  $E =$  See table below.

Protective height	Number of intermediate brackets	E (See note.)
0245 to 0596	0	---
0600 to 1130	1	$E = B / 2$
1136 to 1658	2	$E = B / 3$
1660 to 2180	3	$E = B / 4$
2195 to 2500	4	$E = B / 5$



**Note:** Use  $E = 530$  or less when none of the  $E$  values shown above are used.

F39-LJ1 Detailed Dimensions of Bracket

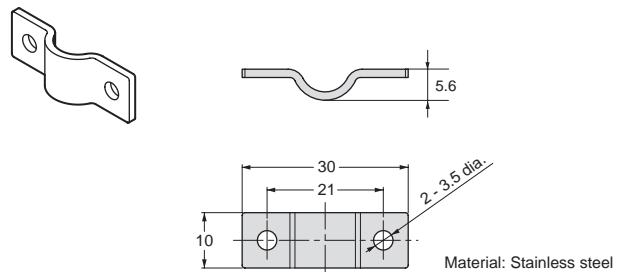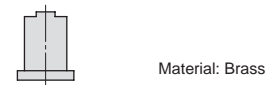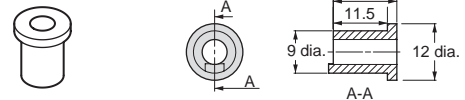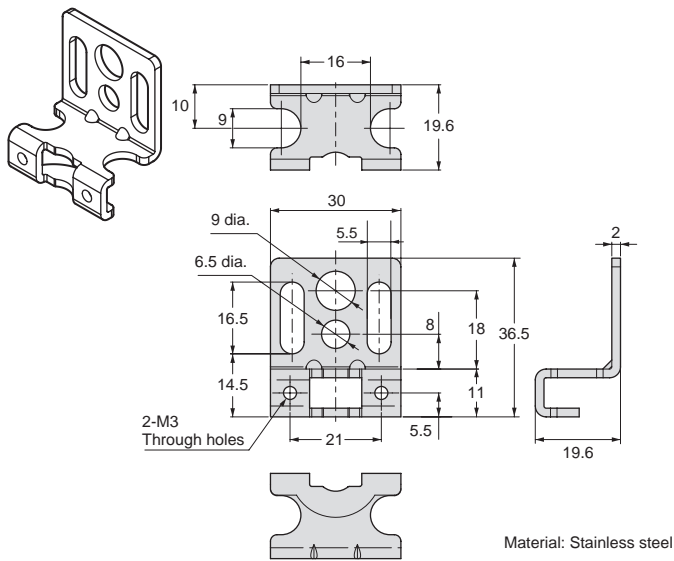


### Using Side Flat Mounting Bracket (F39-LJ2)

F39-LJ2  
Material: Stainless steel

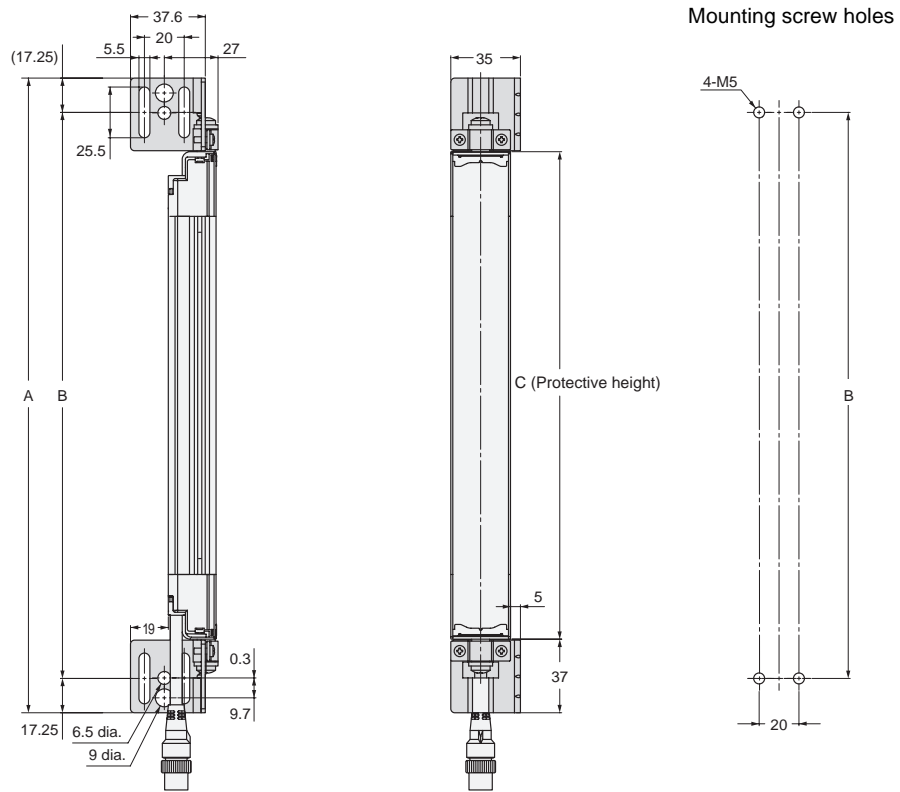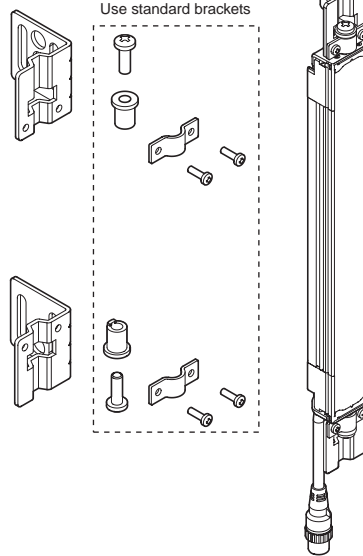

Dimensions A to C



A	C + 74
B	C + 39.5
C	4-digit number of the model name (protective height)

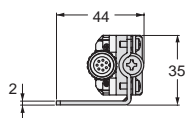


## Using Free Location Mounting Bracket (F39-LJ3)

### Backside mounting

F39-LJ3  
Material: Zinc die-cast

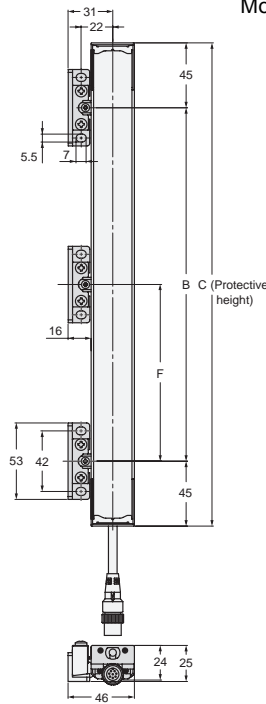
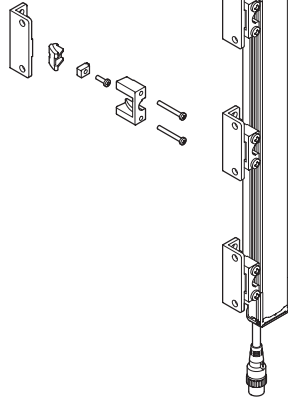


### Mounting screw holes

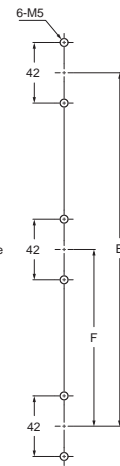


### Side mounting

F39-LJ3  
Material: Zinc die-cast/stainless

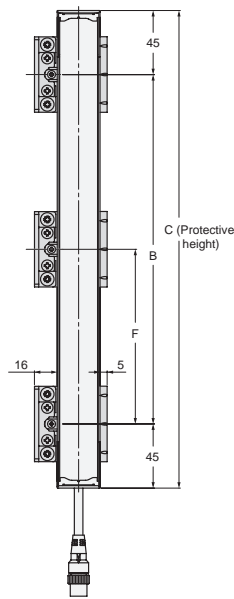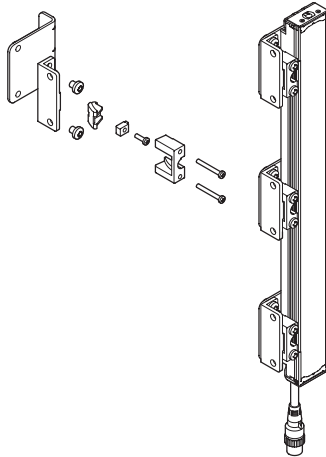

### Mounting screw holes

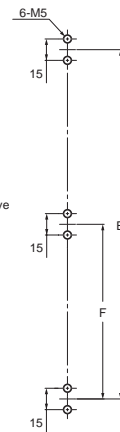

**Dimensions B, C, and F**

B	C - 90
C	4-digit number of the model name (protective height)
F	Depends on the protective height. See the table on the right.

**Dimension F**

Protective height	Number of intermediate mounting brackets	F (See note.)
0245 to 0440	2	---
0443 to 0785	3	B / 2
0794 to 1140	4	B / 3
1145 to 1490	5	B / 4
1495 to 1840	6	B / 5
1845 to 2180	7	B / 6
2195 to 2500	8	B / 7

**Note:** Use F = 350 or less when none of the F values shown above are used.

When only F39-LJ3 free-location mounting brackets are used without standard brackets, allow a space of at least 350 mm between the brackets. The number of brackets required varies according to the protective height. For details about the number of required brackets, refer to the table below.


The standard included intermediate mounting brackets are the same as the F39-LJ3 free-location mounting brackets. Purchase brackets as necessary if there are fewer intermediate mounting brackets than required. When intermediate mounting brackets are included, they can be used as free-location mounting brackets.

**Required number of F39-LJ3 free-location mounting brackets for 1 F3SJ set (emitter/receiver) (2 pieces are included with F39-LJ3)**

Protective height	Number of included free location brackets as intermediate brackets	Number of free location brackets to mount F3SJ	Number of free location brackets to be purchased
0245 to 0440	0	4	2 sets
0443 to 0596	0	6	3 sets
0600 to 0785	2	6	2 sets
0794 to 1130	2	8	3 sets
1136 to 1140	4	8	2 sets
1145 to 1490	4	10	3 sets
1495 to 1658	4	12	4 sets
1660 to 1840	6	12	3 sets
1845 to 2180	6	14	4 sets
2195 to 2500	8	16	4 sets

**Using Top/Bottom Mounting Bracket B (F39-LJ4)**

**Backside mounting**

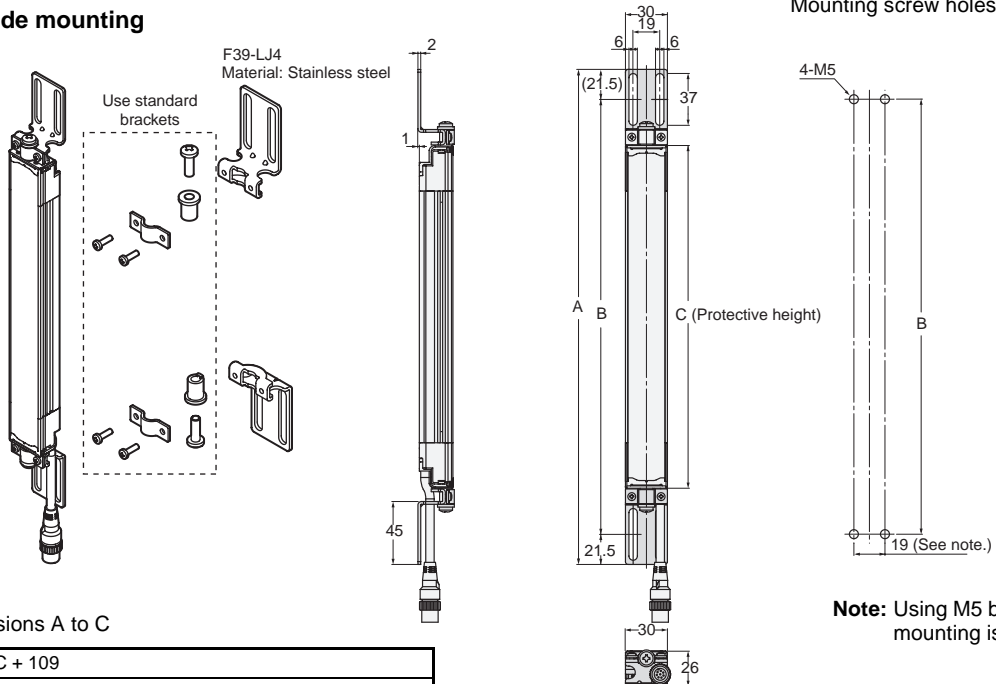

**Dimensions A to C**


A	C + 109
B	C + 66
C	4-digit number of the model name (protective height)

**Note:** Refer to the *User's Manual* (Cat. No. SCHG-718 and SCHG-719) for the dimensions for side mounting.


**Note:** Using M5 bolt, available range for mounting is 18 to 20.

## Using Mounting Bracket for Short-length F3SN (F39-LJ5)


### Inward-facing mounting

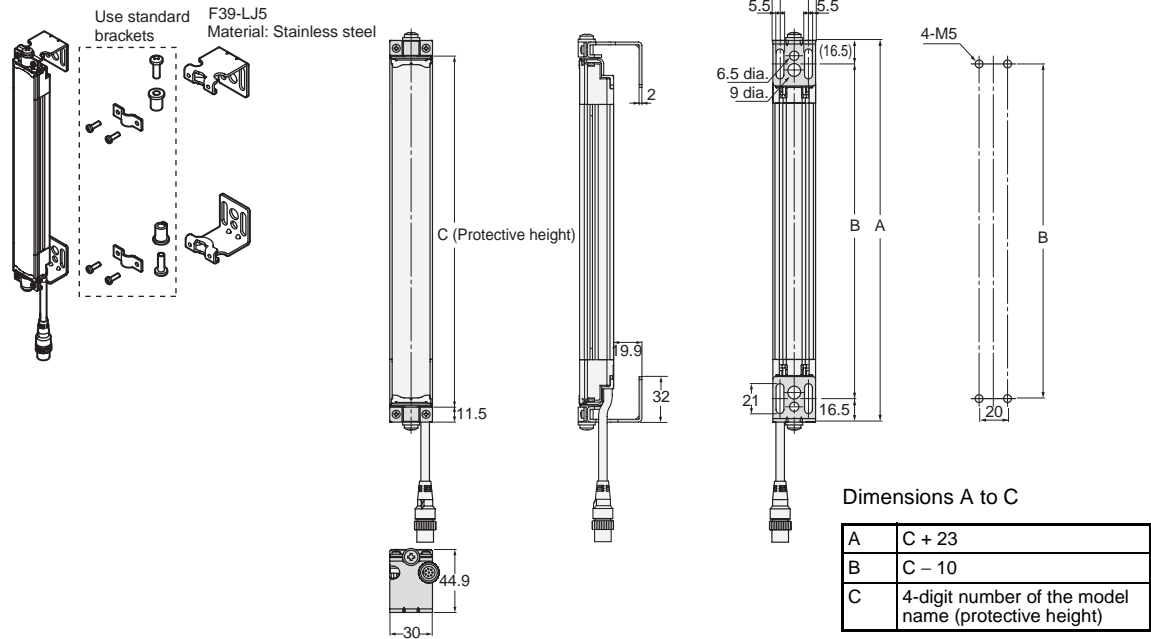

### Outward-facing mounting

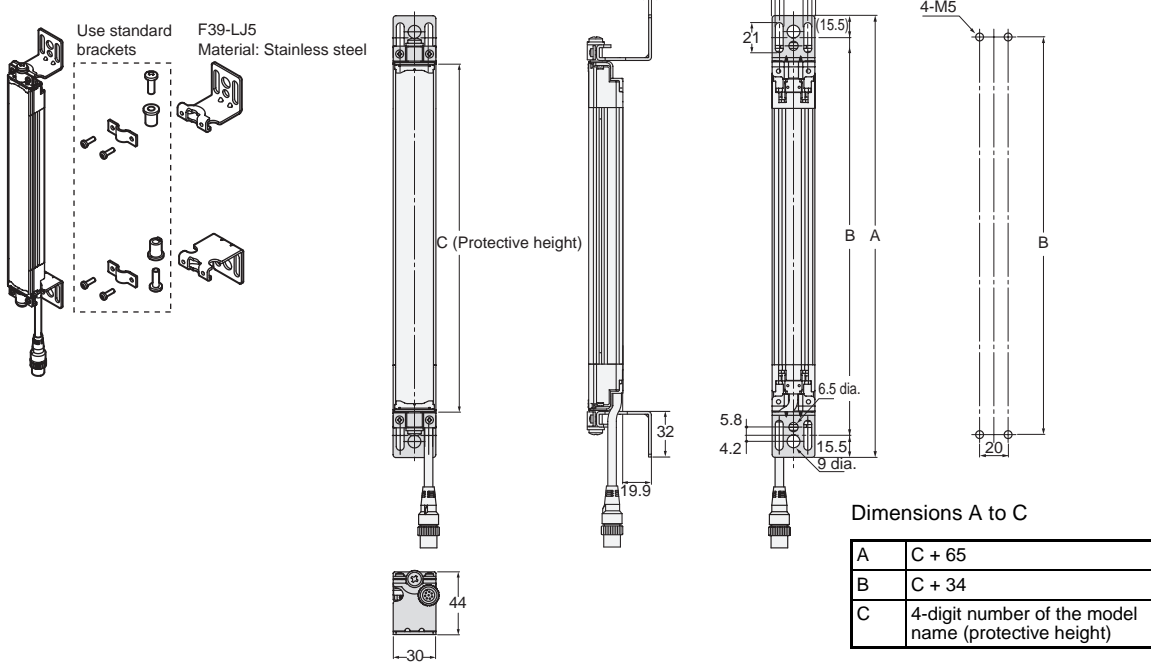

**Inward + outward-facing mounting**

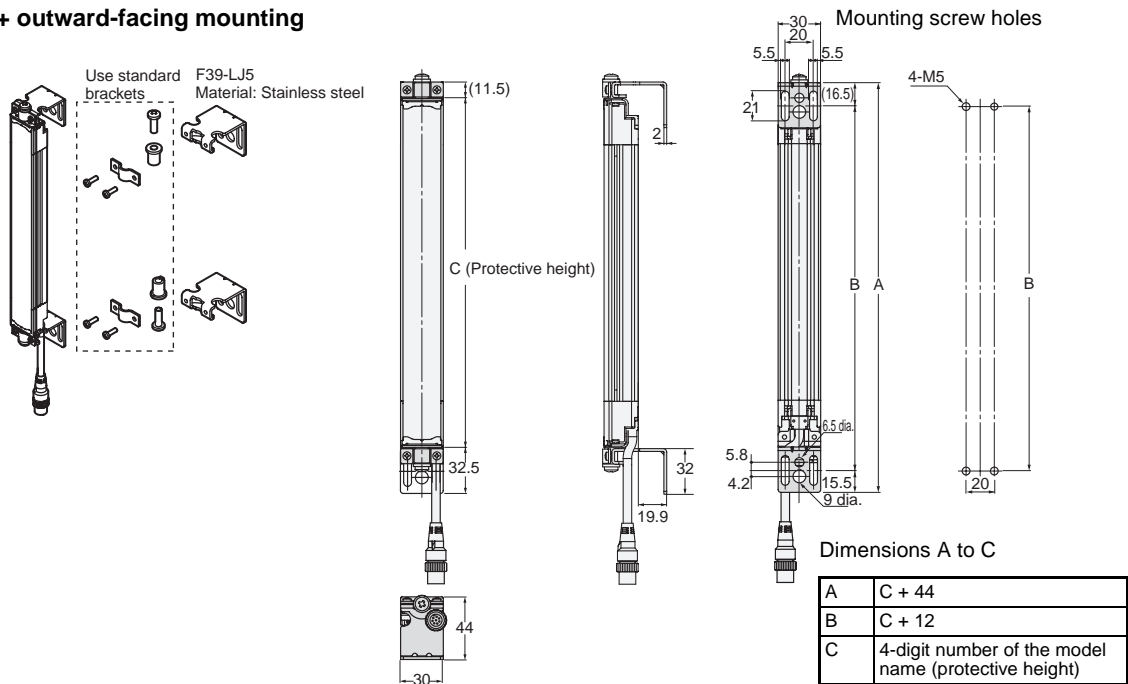

F3SN replacement correspondence table (F3SN mounting holes can be used without modification)

**When replacing F3SN-□□□□P(N)14 with F3SJ-A□□□□P(N)14**

F3SN		Replacement F3SJ		Replacement method using F39-LJ5
Model	Protective height	Model	Protective height	
F3SN-□0153P(N)14	153	---	---	---
F3SN-□0180P(N)14	180	F3SJ-A0245P(N)14	245	Inward-facing mounting
F3SN-□0189P(N)14	189	F3SJ-A0245P(N)14	245	Inward-facing mounting
F3SN-□0198P(N)14	198	F3SJ-A0245P(N)14	245	Inward + outward-facing mounting
F3SN-□0207P(N)14	207	F3SJ-A0245P(N)14	245	Inward + outward-facing mounting
F3SN-□0216P(N)14	216	F3SJ-A0245P(N)14	245	Outward-facing mounting
F3SN-□0225P(N)14	225	F3SJ-A0245P(N)14	245	Outward-facing mounting

**For length greater than F3SN-□0234P(N)14:**

Add 11 to the F3SN's 4-digit number and apply it as the F3SJ's 4-digit number, and then replace with the standard brackets included with the product.

[Selection example] F3SN-A0315P(N)14 becomes F3SJ-A0326P(N)14 (replace with standard brackets)

**Note:** 1. The protective height becomes 11 mm longer.

2. Replace with outward-facing mounting of F39-LJ5 when you want to set the detection surface height to be same as the F3SN. However, the F39-LJ5 and intermediate mounting brackets cannot be mounted simultaneously, so set the protective height to 600 mm or less.

**When replacing F3SN-□□□□P (N)25 with F3SJ-A□□□□P (N)20**

F3SN		Replacement F3SJ		Replacement method using F39-LJ5
Model	Protective height	Model	Protective height	
F3SN-□0187P(N)25	187	---	---	---
F3SN-□0217P(N)25	217	F3SJ-A0260P(N)20	260	Inward-facing mounting
F3SN-□0232P(N)25	232	F3SJ-A0260P(N)20	260	Inward + outward-facing mounting
F3SN-□0247P(N)25	247	F3SJ-A0245P(N)20	245	Outward-facing mounting

**For length greater than F3SN-□0262P(N)25:**

Subtract 17 from the F3SN's 4-digit number and apply it as the F3SJ's 4-digit number, and then replace with the standard brackets included with the product.

[Selection example] F3SN-A0322P(N)25 becomes F3SJ-A0305P(N)20 (replace with standard brackets)



**Note:** 1. The protective height gets 17 mm shorter.

2. Replace with outward-facing mounting of F39-LJ5 when you want to set the detection surface height to be same as the F3SN. However, the F39-LJ5 and intermediate mounting brackets cannot be mounted simultaneously, so set the protective height to 600 mm or less.

## Using Space-saving Mounting Bracket (F39-LJ8)

### Backside mounting

F39-LJ8  
Material: Stainless steel

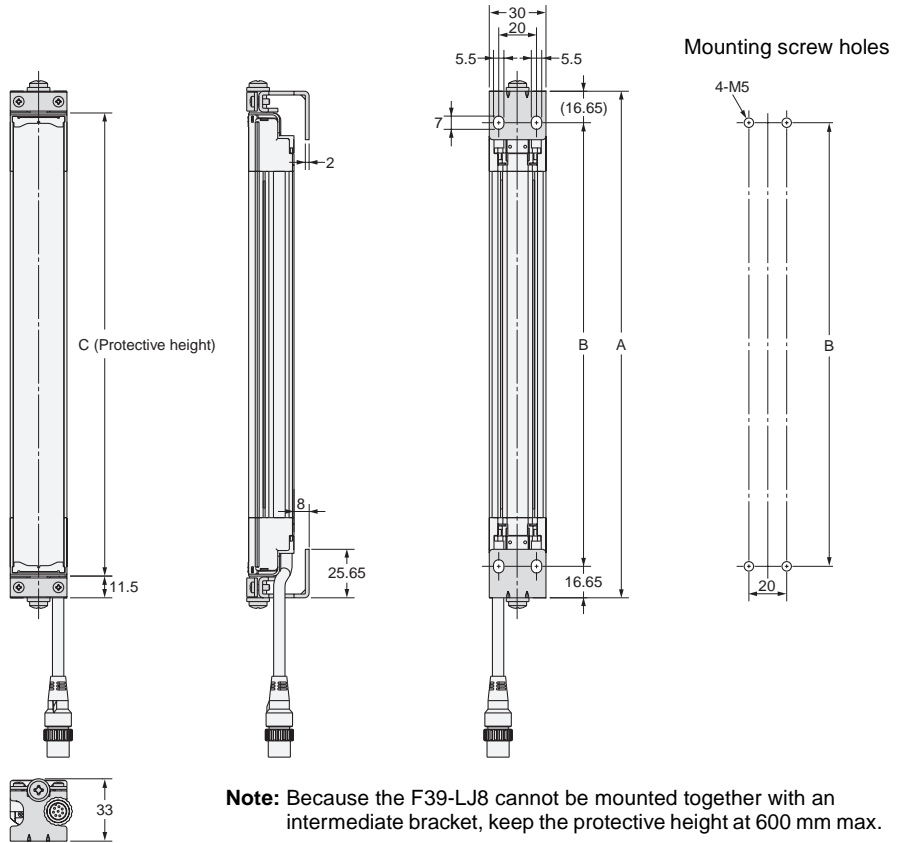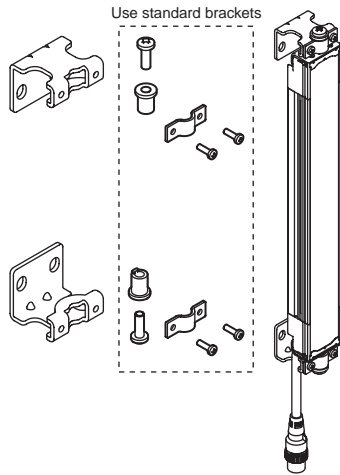

Dimensions A to C



A	C + 23
B	C - 10.3
C	4-digit number of the model name (protective height)

**Note:** Because the F39-LJ8 cannot be mounted together with an intermediate bracket, keep the protective height at 600 mm max.

## Mounting Bracket (F39-LJ9) Used when Replacing an F3W-C.

### Backside mounting

F39-LJ9  
Material: Stainless steel

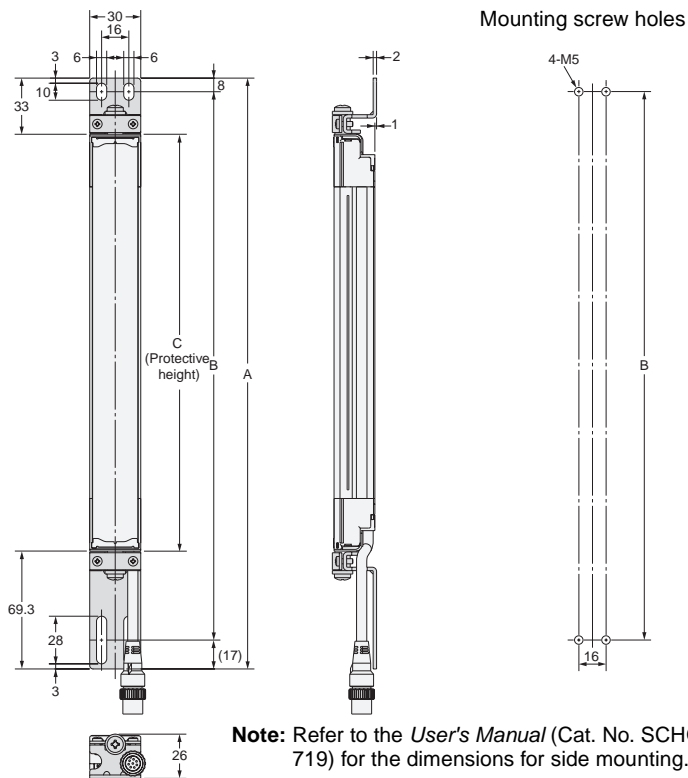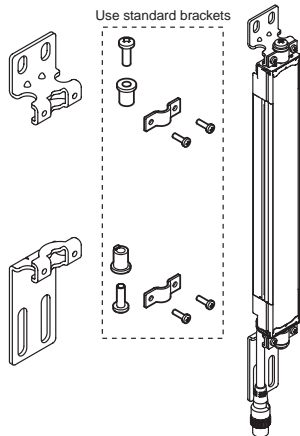

Dimensions A to C

A	C + 102.3
B	C + 77.3
C	4-digit number of the model name (protective height)

**Note:** Refer to the *User's Manual* (Cat. No. SCHG-718 and SCHG-719) for the dimensions for side mounting.



**F3W-C replacement correspondence table (F3W-C mounting holes can be used without modification)**

When replacing F3W-C□□□□ with F3SJ-A□□□□□30

F3W-C		Replacement F3SJ	
Model	Protective height	Model	Protective height
F3W-C044	120	---	---
F3W-C084	280	F3SJ-A0320□30	320
F3W-C124	440	F3SJ-A0470□30	470
F3W-C164	600	F3SJ-A0620□30 (See note.)	620
F3W-C204	760	F3SJ-A0795□30 (See note.)	795
F3W-C244	920	F3SJ-A0945□30 (See note.)	945

**Note:** New holes must be drilled for the intermediate bracket.

**Using Top/Bottom Mounting Bracket C (F39-LJ11)**

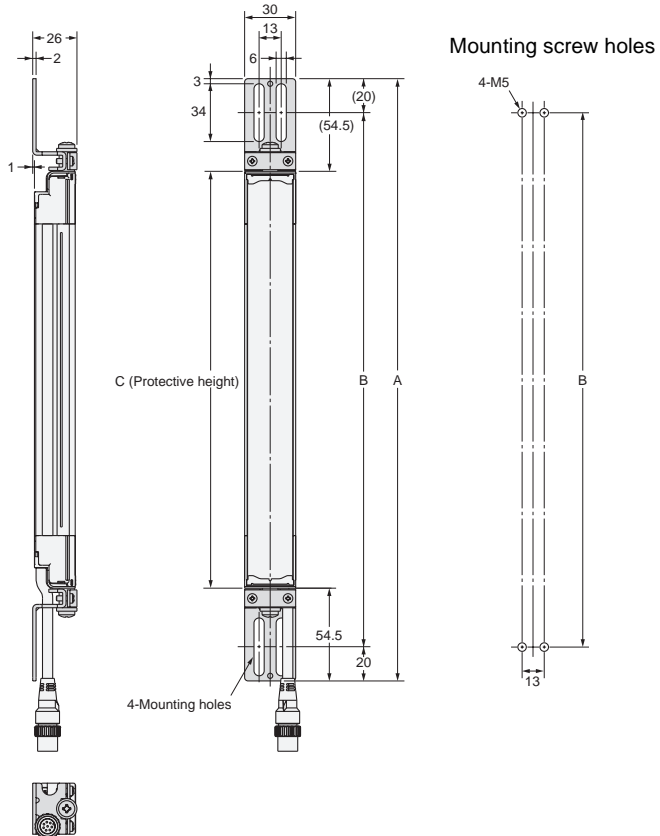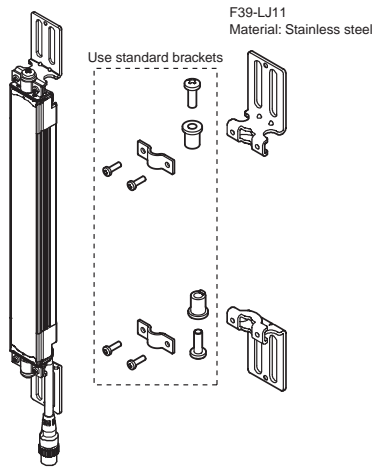


Dimensions A to C

A	C + 109
B	C + 69
C	4-digit number of the model name (protective height)

## ■ Accessories

### Single-end Connector Cable

- F39-JC3A (L = 3 m)
- F39-JC7A (L = 7 m)
- F39-JC10A (L = 10 m)
- F39-JC15A (L = 15 m)
- F39-JC20A (L = 20 m)

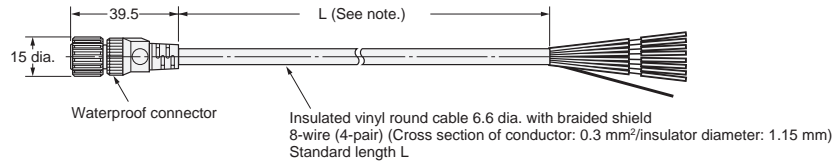


Color: Emitter (gray)  
Receiver (black)

**Note:** Cables with L=3, 7, 10, 15, and 20 m are available.

### Cables with Connectors on Both Ends


- F39-JCR5B (L = 0.5 m)
- F39-JC1B (L = 1 m)
- F39-JC3B (L = 3 m)
- F39-JC5B (L = 5 m)
- F39-JC7B (L = 7 m)
- F39-JC10B (L = 10 m)
- F39-JC15B (L = 15 m)
- F39-JC20B (L = 20 m)

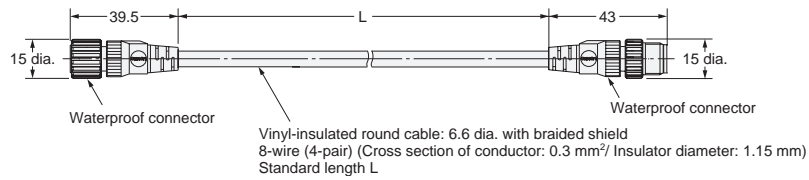


Color: Emitter (gray)  
Receiver (black)

### Control Unit

F3SP-B1P

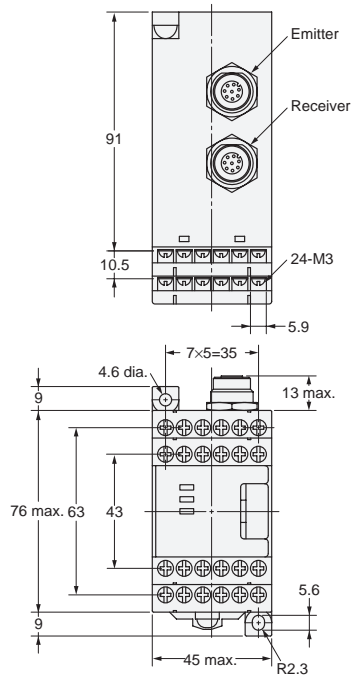


#### Mounting screw holes

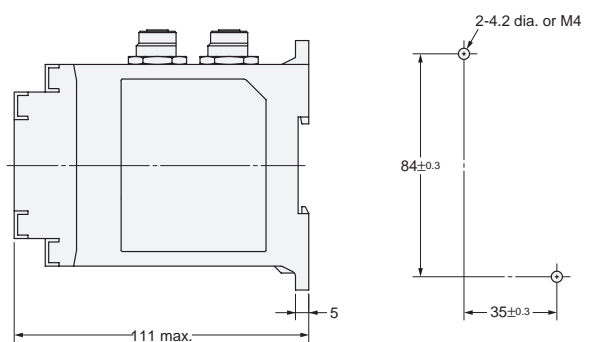

**Dedicated External Indicator Set**




F39-A01□-PAC

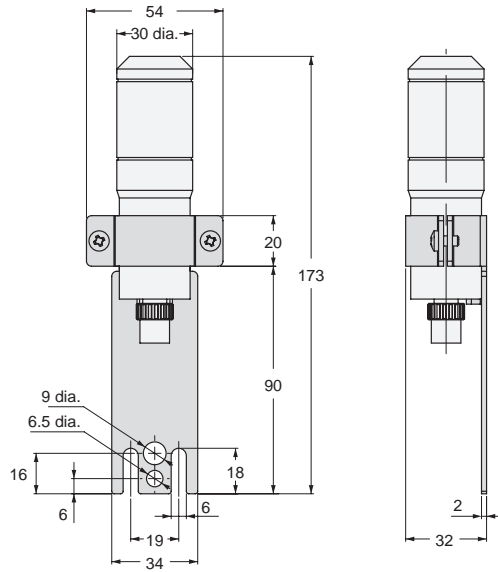


Material: Stainless steel

**Spatter Protection Cover**

F39-HJ□□□□

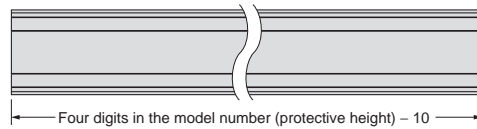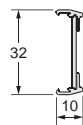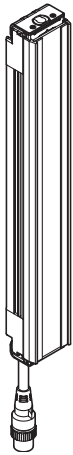


Assembled dimensions

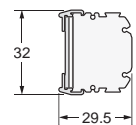

Material: polycarbonate (for the protective cover)


## Setting Support Software for the F3SJ

### F39-GWUM

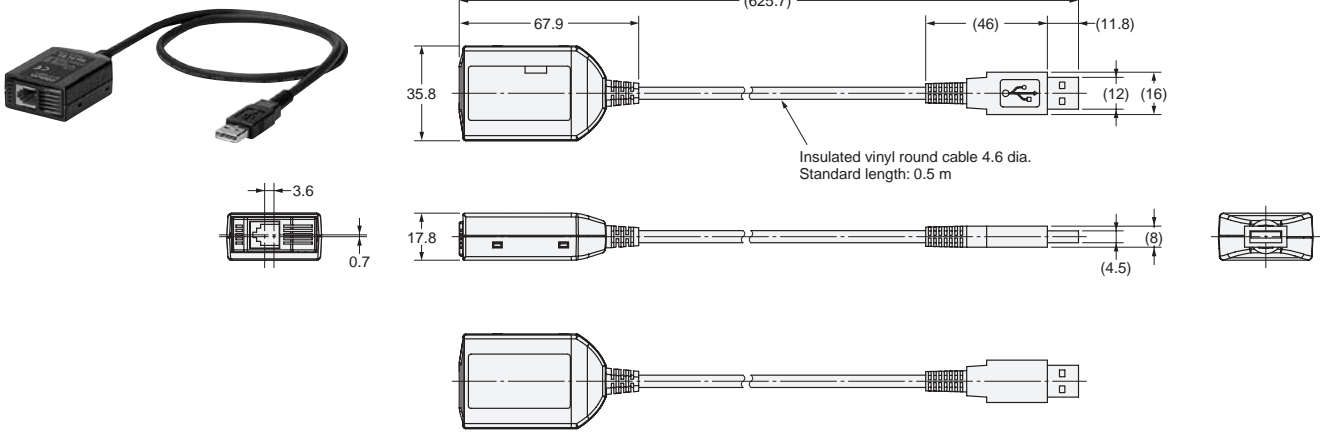


## Setting Console

### F39-MC21

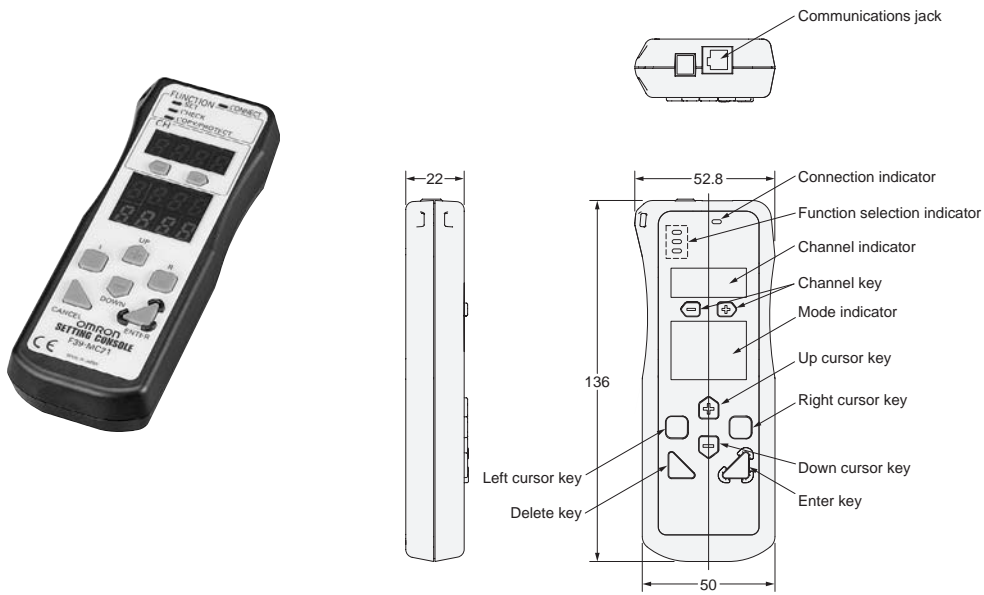

Protective Bar



F39-PJ□□□□-S  
Backside mounting

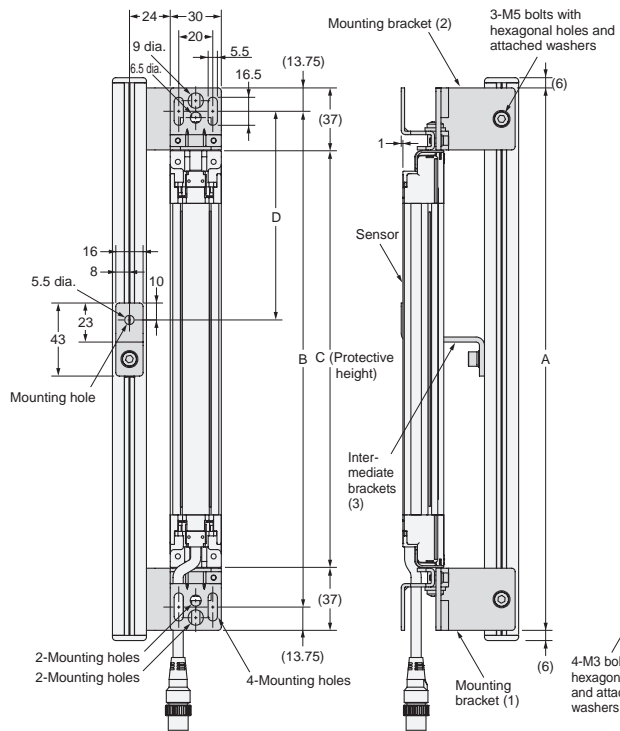

Mounting screw holes

When using M5

When using M6, M8

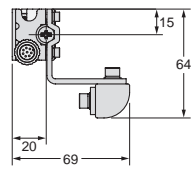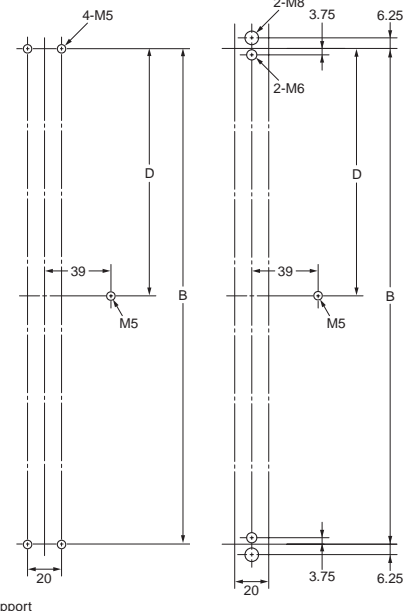

C (protective height): 4-digit number in the table

$A = C + 74$ ,  $B = C + 46.5$


Protective height	Number of intermediate brackets used (3)	D
0245 to 0995	0	---
1001 to 2000	1	B/2
2009 to 2500	2	B/3

**Note:** For reference, D is the dimension that will not interfere with the intermediate bracket on the Safety Light Curtain body.




**Water-resistant Case**

**F39-EJ□□□□-L(D)**  
**Backside mounting**

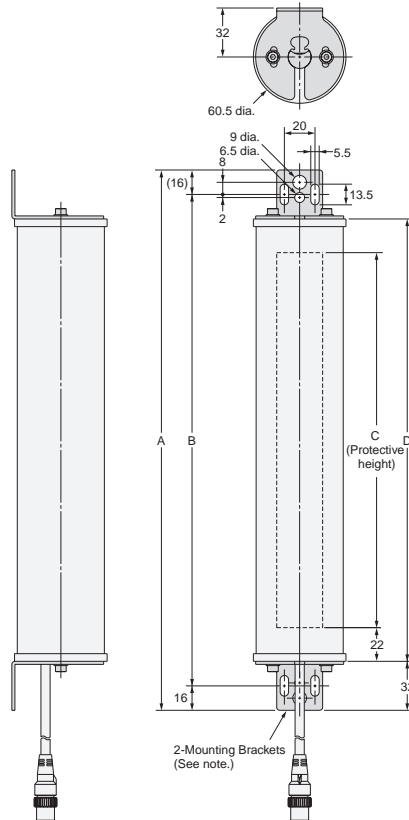

Mounting screw holes  
 When using M5      When using M6, M8

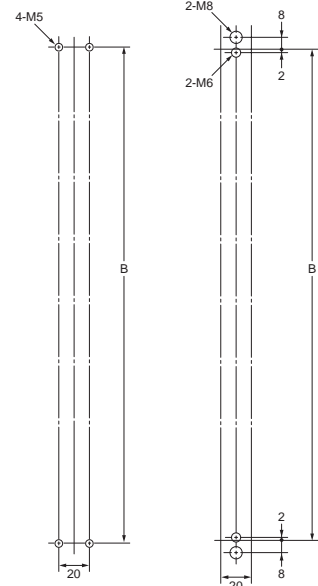


**Note:** The Mounting Brackets (F39-EJ-R) are sold separately.


Dimensions A to D

A	C + 108
B	C + 76
C	4-digit number of the model name (protective height)
D	C + 44

**Side mounting**

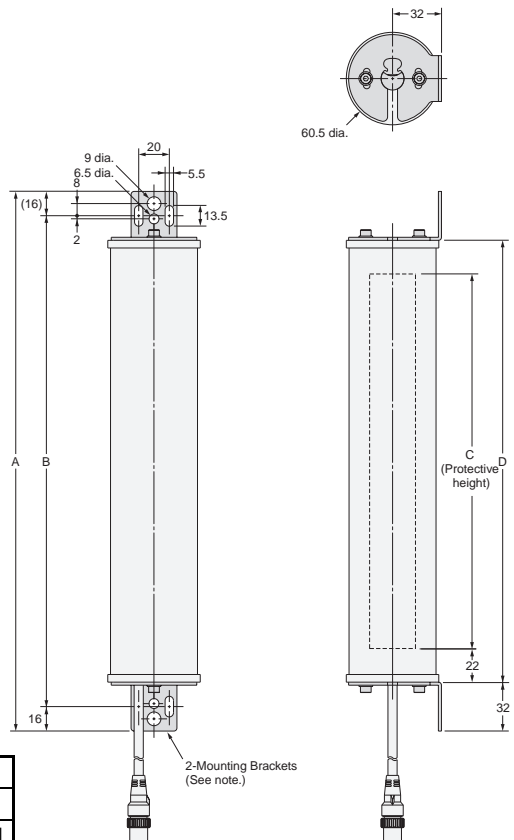

Mounting screw holes  
 When using M5      When using M6, M8

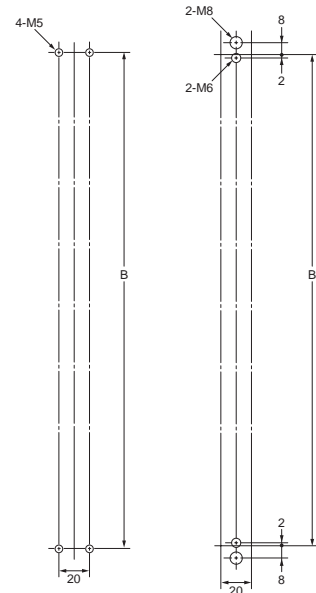

**Note:** The Mounting Brackets (F39-EJ-S) are sold separately.

Dimensions A to D

A	C + 108
B	C + 76
C	4-digit number of the model name (protective height)
D	C + 44



## **READ AND UNDERSTAND THIS CATALOG**

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

## **Warranty and Limitations of Liability**

### **WARRANTY**

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

### **LIMITATIONS OF LIABILITY**

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

## **Application Considerations**

### **SUITABILITY FOR USE**

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

## **Disclaimers**

### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

### **ERRORS AND OMISSIONS**

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

### **PERFORMANCE DATA**

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

### **PROGRAMMABLE PRODUCTS**

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

## **Copyright and Copy Permission**

### **COPYRIGHT AND COPY PERMISSION**

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

**OMRON Corporation**  
**Industrial Automation Company**

**Safety Devices Division**

Shiokoji Horikawa, Shimogyo-ku,  
Kyoto, 600-8530 Japan  
Tel: (81)75-344-7093/Fax: (81)75-344-8197

**Regional Headquarters**

**OMRON EUROPE B.V.**

Wegalaan 67-69, NL-2132 JD Hoofddorp  
The Netherlands  
Tel: (31)2356-81-300/Fax: (31)2356-81-388

**OMRON SCIENTIFIC TECHNOLOGIES INC.**

6550 Dumbarton Circle Fremont,  
CA 94555-3605 U.S.A.  
Tel: (1)510-608-3400/Fax: (1)510-744-1442

**OMRON ASIA PACIFIC PTE. LTD.**

83 Clemenceau Avenue,  
#11-01, UE Square,  
239920 Singapore  
Tel: (65)6835-3011/Fax: (65)6835-2711

**OMRON (CHINA) CO., LTD.**

Room 2211, Bank of China Tower,  
200 Yin Cheng Road (M),  
Shanghai, 200120 China  
Tel: (86)21-5037-2222/Fax: (86)21-5037-2200

**Authorized Distributor:**



**Ph: 03 5278 8222 Fax: 03 5278 9761**  
**65 Douro Street, North Geelong VIC 3215**  
**[www.factorycontrols.com.au](http://www.factorycontrols.com.au)**