

20" High Velocity Floor Fan

Use a "QR Code App" on your smart phone to access our website and browse our entire product offering or go to: www.hurricane-fans.com





www.hurricane-fans.com

Hurricane



20" High Velocity Floor Fan Instruction Guide

Hurrjcane™

www.hurricane-fans.com

SAFETY

CAUTION

Read Rules for Safe Operation and Instructions carefully.

WARNING


- 1. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- 2. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safely feature.
- 3. To reduce the risk of fire or electric shock, DO NOT use this fan with any solidstate speed control devices.
- 4. Do not leave the fan running unattended.
- 5. Please make sure the voltage of the power supply is the same as shown on the fan nameplate.

RULES FOR SAFETY OPERATION

- 1. Never insert fingers, pencils, or any other object through the grille when fan is running.
- 2. Disconnect fan when moving from one location to another.
- 3. Disconnect fan when removing grilles for cleaning.
- 4. Be sure fan is on stable surface when operating to avoid overturning.
- 5. DO NOT use fan in window, rain may create electrical hazard.
- 6. Indoor use only.

PART NAMES

- 1. Front Guard 2. Blade 3. Screw 4. Motor 5. Stand 6. Rear Guard
- 7. Nut 8. Screw 9. Spring Washer 10. Washer 11. Power Cord
- 12. Switch Box 13. Bolt 14. Plastic Washer 15. Knob 16. Nut 17. Screw

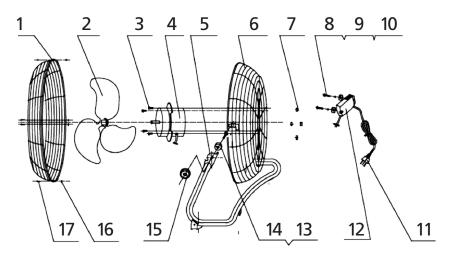

OPERATING INSTRUCTIONS

- 1. Only operate the fan with the recommended voltage designated on the fan rating label.
- 2. To adjust fan speed turn the speed control knob located on the switch box to the desired speed:
 - 0---Stop 1—Low 2—Medium 3—High
- 3. Adjust the tilt angle of the fan head by pushing the grille up or down to the desired position.

RULES FOR SAFETY OPERATION

- a) Never leave the fan running unattended. Unplug the fan when not in use.
- b) Position fan in an area that is free from obstructions. This will help to keep the fans air intake and discharge grille free from blockage.
- c) Never connect the fan to a power source while disassembled.
- d) Never insert fingers or any other object through the grille while the fan is running.
- e) Unplug from outlet when not in use or cleaning.
- f) If the power cord is damaged discontinue the use immediately
- g) Do not cover the power cord with a rug, carpet or other material. Keep the power cord out of high traffic areas to avoid injury or damage to the cord.

CLEANING AND MAINTENANCE

- a. Always unplug the fan before cleaning.
- b. Do not allow water to drip on or enter into the fan motor housing.
- c. Use a soft dry cloth to clean exterior fan grille and motor housing.
- d. Do not use chemicals to clean the fan