



Diagnosics for Control Board

MODEL/SERIAL # FDB1050 and FDB1250

PROBLEM Control board malfunction.

SOLUTION To determine if the control board is malfunctioning, complete the rotary switch test as follows:

1. Power Dishwasher OFF then back ON (the Washing, Drying and Clean LEDs will flash ON and OFF).
2. Press the Heat Dry, Delay Start and Start/Cancel keys at the same time until all 7 LEDs are flashing ON and OFF.
3. Open the door and all 7 LEDs will stay ON, but will stop flashing.
4. Shut the door and all 7 LEDs will go out.
5. Press the Start/Cancel key (depending on the position of the Rotary Switch, a specific LED will come on.)
6. Rotary Switch position and corresponding LED indicators:

Normal Wash	LED above the Heat Dry button
Pots and Pans	LED under the 2
Light Wash	LED under the 4
Upper Rack	Washing LED
Rinse Only	Clean LED

With each position of the Rotary Switch, push and pull the knob. If the led stays ON without flashing, go to the next position. If pushing and pulling the knob causes an LED to go out, replace the control.