



**LG**

Life's Good

ENGLISH

User Guide

**LG 238C**

XXXXXXXXXX (1.0)



[www.lg.com](http://www.lg.com)





ENGLISH

# User Guide

- Screen displays and illustrations may differ from those you see on actual phone.
- Actual displays and the color of the phone may vary.
- Some of the contents of this guide may not apply to your phone, depending on the software and your service provider. All information in this document is subject to change without notice.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2016 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.



## LIMITED WARRANTY STATEMENT

ARBITRATION NOTICE: THIS LIMITED WARRANTY CONTAINS AN ARBITRATION PROVISION THAT REQUIRES YOU AND LG TO RESOLVE DISPUTES BY BINDING ARBITRATION INSTEAD OF IN COURT, UNLESS YOU CHOOSE TO OPT OUT. IN ARBITRATION, CLASS ACTIONS AND JURY TRIALS ARE NOT PERMITTED. PLEASE SEE THE SECTION TITLED “PROCEDURE FOR RESOLVING DISPUTES” BELOW.

### Warranty Laws

The following laws govern warranties that arise in retail sales of consumer goods:

- The California Song-Beverly Consumer Warranty Act [CC §§1790 et seq],
- The California Uniform Commercial Code, Division Two [Com C §§2101 et seq], and
- The federal Magnuson-Moss Warranty Federal Trade Commission Improvement Act [15 USC §§2301 et seq; 16 CFR Parts 701– 703]. A typical Magnuson-Moss Act warranty is a written promise that the product is free of defects or a written promise to refund, repair, or replace defective goods. [See 15 USC §2301(6).] Remedies include damages for failing to honor a written warranty or service contract or for violating disclosure provisions. [See 15 USC §2310(d).] Except for some labeling and disclosure requirements, the federal Act does not preempt state law. [See 15 USC §2311.]

#### **1. WHAT THIS WARRANTY COVERS:**

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

## **2. WHAT THIS WARRANTY DOES NOT COVER:**

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### **3. WHAT LG WILL DO:**

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that is covered under this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

#### **4. STATE LAW RIGHTS:**

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

#### **5. HOW TO GET WARRANTY SERVICE:**

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

**Tel. 1-800-793-8896 or Fax. 1-800-448-4026**

Or visit <http://www.lg.com/us/support>. Correspondence may also be mailed to: LG Electronics Service- Mobile Handsets, P.O. Box 240007, Huntsville, AL 35824

**DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.** Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

## **PROCEDURE FOR RESOLVING DISPUTES:**

ALL DISPUTES BETWEEN YOU AND LG ARISING OUT OF OR RELATING IN ANY WAY TO THIS LIMITED WARRANTY OR THE PRODUCT SHALL BE RESOLVED EXCLUSIVELY THROUGH BINDING ARBITRATION, AND NOT IN A COURT OF GENERAL JURISDICTION. BINDING ARBITRATION MEANS THAT YOU AND LG ARE EACH WAIVING THE RIGHT TO A JURY TRIAL AND TO BRING OR PARTICIPATE IN A CLASS ACTION.

Definitions. For the purposes of this section, references to “LG” mean LG Electronics MobileComm U.S.A., Inc., its parents, subsidiaries and affiliates, and each of their officers, directors, employees, agents, beneficiaries, predecessors in interest, successors, assigns and suppliers; references to “dispute” or “claim” shall include any dispute, claim or controversy of any kind whatsoever (whether based in contract, tort, statute, regulation, ordinance, fraud, misrepresentation or any other legal or equitable theory) arising out of or relating in any way to the sale, condition or performance of the product or this Limited Warranty.

Agreement to Binding Arbitration and Class Action Waiver. You and LG agree to resolve any claims between us only by binding arbitration on an individual basis, unless you opt out as provided below. Any dispute between you and LG shall not be combined or consolidated with a dispute involving any other person’s or entity’s product or claim. More specifically, without limitation of the foregoing, any dispute between you and LG shall not under any circumstances proceed as part of a class or representative action. Instead of arbitration, either party may bring an individual action in small claims court, but that small claims court action may not be brought on a class or representative basis.



Arbitration Rules and Procedures. To begin arbitration of a claim, either you or LG must make a written demand for arbitration. The arbitration will be administered by the American Arbitration Association (AAA) and will be conducted before a single arbitrator under the AAA's Consumer Arbitration Rules that are in effect at the time the arbitration is initiated (referred to as the "AAA Rules") and under the procedures set forth in this section. The AAA Rules are available online at [www.adr.org/consumer](http://www.adr.org/consumer). Send a copy of your written demand for arbitration, as well as a copy of this provision, to the AAA in the manner described in the AAA Rules. You must also send a copy of your written demand to LG at LG Electronics, USA, Inc. Attn: Legal Department-Arbitration 1000 Sylvan Avenue Englewood Cliffs, NJ 07632. If there is a conflict between the AAA Rules and the rules set forth in this section, the rules set forth in this section will govern. This arbitration provision is governed by the Federal Arbitration Act. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction. All issues are for the arbitrator to decide, except that issues relating to the scope and enforceability of the arbitration provision and to the arbitrability of the dispute are for the court to decide. The arbitrator is bound by the terms of this provision.

Governing Law: The law of the state of your residence shall govern this Limited Warranty and any disputes between us except to the extent that such law is preempted by or inconsistent with applicable federal law.

Fees/Costs. You do not need to pay any fee to begin an arbitration. Upon receipt of your written demand for arbitration, LG will promptly pay all arbitration filing fees to the AAA unless you seek more than \$25,000 in damages, in which case the payment of these fees will be governed by the AAA Rules. Except as otherwise provided for herein, LG will pay all AAA filing, administration and arbitrator fees

for any arbitration initiated in accordance with the AAA Rules and this arbitration provision. If you prevail in the arbitration, LG will pay your reasonable attorneys' fees and expenses to the extent required by applicable law. If the arbitrator finds either the substance of your claim or the relief sought in the demand is frivolous or brought for an improper purpose (as measured by the standards set forth in Federal Rule of Civil Procedure 11(b)), then the payment of all arbitration fees will be governed by the AAA Rules. In such a situation, you agree to reimburse LG for all monies previously disbursed by it that are otherwise your obligation to pay under the AAA Rules. Except as otherwise provided for, LG waives any rights it may have to seek attorneys' fees and expenses from you if LG prevails in the arbitration.

Hearings and Location. If your claim is for \$25,000 or less, you may choose to have the arbitration conducted solely on the basis of (1) documents submitted to the arbitrator, (2) through a telephonic hearing, or (3) by an in-person hearing as established by the AAA Rules. If your claim exceeds \$25,000, the right to a hearing will be determined by the AAA Rules. Any in-person arbitration hearings will be held at a location within the federal judicial district in which you reside unless we both agree to another location or we agree to a telephonic arbitration.

Opt Out. You may opt out of this dispute resolution procedure. If you opt out, neither you nor LG can require the other to participate in an arbitration proceeding. To opt out, you must send notice to LG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the product by either: (i) sending an e-mail to [optout@lge.com](mailto:optout@lge.com), with the subject line: "Arbitration Opt Out" or (ii) calling 1-800-980-2973. You must include in the opt out e-mail or provide by telephone: (a) your name and address; (b) the date on which the product was

purchased; (c) the product model name or model number; and (d) the IMEI or MEID or Serial Number, as applicable (the IMEI or MEID or Serial Number can be found (i) on the product box; (ii) on a label on the back of the product beneath the battery, if the batter is removable; or (iii) from the settings menu via the following path: **Settings > Phone info > ESN/MEID**). You may only opt out of the dispute resolution procedure in the manner described above (that is, by e-mail or telephone); no other form of notice will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the full benefits of the Limited Warranty. If you keep this product and do not opt out, then you accept all terms and conditions of the arbitration provision described above.

# Contents

<b>Contents</b> .....	<b>10</b>	Call Waiting .....	26
<b>Phone Overview</b> .....	<b>13</b>	3-way call .....	26
<b>Menus Overview</b> .....	<b>16</b>	Caller ID .....	27
Menu Access .....	16	Voice commands .....	27
<b>Getting Started with Your Phone</b> .....	<b>19</b>	<b>Entering and Editing Information</b> .....	<b>28</b>
The Battery.....	19	Text Input .....	28
Charging the Battery.....	20	<b>Contacts in Your Phone's Memory</b> ....	<b>29</b>
Charging with a USB cable.....	21	Storing Basics .....	29
Battery Temperature Protection.....	21	Customizing Individual Entries .....	29
Battery Charge Level .....	22	Speed Dial .....	30
Signal Strength.....	22	Storing a Number with Pauses.....	30
Turning the Phone On and Off .....	22	Adding Another Phone Number .....	32
Making Calls.....	23	Changing Saved Information.....	33
Redialing Calls.....	23	Changing the Default Number .....	33
Receiving Calls .....	24	Deleting.....	34
Screen Icons.....	24	Speed Dialing .....	35
<b>Quick Access to Convenient Features</b> ..	<b>25</b>	<b>Using the Phone Menus</b> .....	<b>36</b>
Vibrate mode .....	25	Prepaid.....	36
Sounds Off.....	25	1. Add airtime.....	36
Mute Function .....	25	2. Buy airtime .....	36
Quick Volume Adjustment .....	25	3. My phone number.....	37
Quick Font Resize .....	26	4. My airtime info.....	37
		5. Airtime display .....	37
		6. Serial number .....	38

<b>Contacts</b> .....	<b>38</b>	1. Take picture .....	56
1. New contact .....	38	2. Record voice .....	58
2. Contact list .....	39	3. Pictures .....	58
3. Favorites .....	39	4. Ringtones .....	60
4. Groups .....	40	<b>Tools</b> .....	<b>63</b>
5. Speed dials .....	41	1. Voice commands .....	63
6. My vCard .....	42	2. Calculator .....	66
<b>Messages</b> .....	<b>42</b>	3. Ez tip calculator .....	66
1. New message .....	43	4. Eco-calculator .....	67
2. Inbox .....	46	5. Info search .....	68
3. Sent .....	48	6. Stopwatch .....	68
4. Drafts .....	48	7. Notepad .....	69
5. Voicemail .....	49	8. Unit converter .....	69
6. Templates .....	50	<b>My schedule</b> .....	<b>70</b>
Messages settings .....	50	1. Calendar .....	70
Erasing messages .....	52	2. Alarm clock .....	71
<b>Recent calls</b> .....	<b>52</b>	<b>Bluetooth</b> .....	<b>72</b>
1. Missed calls .....	52	1. Add new device .....	73
2. Received calls .....	53	My phone info .....	75
3. Dialed calls .....	54	Discovery mode .....	76
4. All calls .....	54	Supported profiles .....	76
5. Call timer .....	55	<b>Accessibility</b> .....	<b>77</b>
<b>Games &amp; apps</b> .....	<b>56</b>	1. Readout .....	77
<b>Browser</b> .....	<b>56</b>	2. Invert color .....	79
<b>Multimedia</b> .....	<b>56</b>	3. Large text .....	80

# Contents


4. Mono audio .....	80
5. Turn off all sounds.....	80
<b>Settings.....</b>	<b>81</b>
1. Sounds settings .....	81
2. Display settings .....	85
3. Phone settings .....	89
4. Call settings.....	96
5. Memory .....	99
6. Phone info.....	100
<b>Safety .....</b>	<b>103</b>
<b>Glossary .....</b>	<b>105</b>
Terminology.....	105
Acronyms and Abbreviations.....	105

# Phone Overview

 


- 1 Camera Lens** Lets you take pictures.
- 2 Earpiece** Lets you hear the caller and automated prompts.
- 3 LCD Screen** Displays messages and status icons. When the phone is turned on, Power Save mode automatically dims the screen and then darkens it if no keys are pressed.
- 4 Left Selection Key** Performs functions identified on the bottom-left corner of the screen.

## Phone Overview

- 5 Message Key** Quickly and easily opens a new text message.
- 6 Send Key** Use to make and answer calls. Press once to access the All Calls list.
- 7 Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
- 8 Vibrate Mode Key** Use to set Vibrate mode (from standby mode press and hold for about 3 seconds).
- 9 Lock Mode Key** Use to lock the phone from standby mode, press and hold for about 2 seconds.
- 10 Clear/Voice Commands Key** Deletes single spaces or characters with a quick press. Press and hold to delete entire words while entering text. Press once to back out of menus, one level at a time. For quick access to Voice commands, press this key once from the idle screen.
- 11 Power/End Key** Use to turn the power on/off and to end a call. Also returns to standby mode while browsing a menu or performing other actions.
- 12 Speakerphone Key** Use to change to speakerphone mode.
- 13 OK/Directional Key** Use the OK Key to select the function displayed at the bottom of the LCD between the Left and Right Selection Key functions. Use the Directional Key  to scroll through the menu items and highlight a specific field or object by moving up, down, left or right.
- 14 Right Selection Key** Performs functions identified on the bottom-right corner of the screen.
- 15 Alarm Key** Use to manage your alarms.



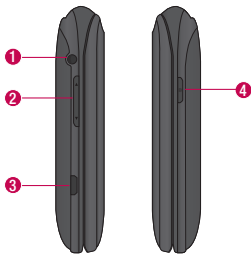

- 1 Headset Jack** Allows you to plug in an optional 3.5mm headset for convenient, hands-free conversations.
- 2 Volume Keys** Use to adjust the Master Volume in standby mode and the Earpiece Volume during a call. Use to adjust font sizes when viewing messages, entering phone numbers (in standby mode) or browsing menus (except for the Main menu).
- 3 Charger/Accessory Port** Connects the phone to the charger or other compatible accessories.



**Charging with PC & USB cable:** You can use your computer to charge your phone. Connect one end of a USB cable to the Charger/ Accessory Port on your phone and the other end to a high-power USB port on your PC (commonly located on the front panel of the computer).

- 4 Camera Key** Use to take photos. Keep it clean for optimal photo quality.

# Menu Overview

## Menu Access

While in standby mode, press the Left Selection Key  [Menu] to access your phone's menus. There are two methods of accessing menus and submenus:

- Use the Directional Keys  to highlight a menu/option and press  to select it.
- Press the number key on the keypad to activate the corresponding menu/option.

### Prepaid

1. Add airtime
2. Buy airtime
3. My phone number
4. My airtime info
5. Airtime display
  1. Balance
  2. Service end date
6. Serial number
7. Code entry mode

### Contacts

1. New contact
2. Contact list
3. Favorites

### 4. Groups

5. Speed dials
6. My vCard

### Messages

1. New message
2. Inbox
3. Sent
4. Drafts
5. Voicemail
6. Templates

### Recent calls

1. Missed calls
2. Received calls

### 3. Dialed calls

4. All calls
5. Call timer

### Games & apps

1. Buy games

### Browser

### Multimedia

1. Take picture
2. Record voice
3. Pictures
  1. My pictures

2. Default pictures

---

3. Buy graphics

---

4. Ringtones

---

1. My sounds

---

2. Default ringtones

---

3. Buy ringtones

---

---

## Tools

---

1. Voice commands

---

1. Call <Name or Number>

---

2. Send msg to <Name or Number or Group>

---

3. Go to <Menu>

---

4. Check <Item>

---

5. Contacts <Name>

---

6. Redial

---

7. Help

---

2. Calculator

---

3. Ez tip calculator

---

4. Eco-calculator

---

5. Info search

---

6. Stopwatch

---

7. Notepad

---

8. Unit converter

---

1. Area

---

2. Length

---

3. Mass

---

4. Temperature

---

5. Volume

---

6. Velocity

---

---

## My Schedule

---

1. Calendar

---

2. Alarm clock

---

---

## Bluetooth

---

1. Bluetooth menu

---

1. Add new device

---

---

## Accessibility

---

1. Readout

---

1. Full Readout

---

2. Menu Readout

---

3. Digit dial Readout

---

4. Caller ID Readout

---

5. Passwords Readout

---

6. Speech rate

---

2. Invert color

---

3. Large text

---

4. Mono audio

---

5. Turn off all sounds

---

---

## Settings

---

1. Sounds settings

---

1. Master volume

---

2. Call sounds

---

1. Call ringtone

---

2. Call vibrate

---

3. Caller ID Readout

---

3. Alert sounds

---

1. TXT message

---

2. Multimedia message

---

# Menus Overview

 
3. Voicemail	2. List	4. Call settings
4. Emergency tone	5. Font type	1. Answer options
5. Missed call	6. Font size	2. TTY mode
4. Keypad volume	1. Dial digits	3. One touch dial
5. Service alerts	2. Menu & list	4. Voice privacy
1. Call connect	3. Message	5. DTMF tones
2. Call disconnect	7. Clock format	5. Memory
3. Charge complete	8. Name match for dialing	1. Memory usage
6. Power on/off	3. Phone settings	2. My pictures
1. Power on	1. Airplane mode	3. My sounds
2. Power off	2. Set shortcut keys	4. My contacts
7. Hearing assist	1. Set my shortcuts	6. Phone info
2. Display settings	2. Set directional keys	1. My number
1. Backlight	3. Voice commands	2. ESN/MEID
1. Display backlight	1. Confirm choices	3. Icon glossary
2. Keypad backlight	2. Sensitivity	4. SW/HW version
2. Brightness	3. Train voice	5. Open Source License
3. Wallpaper	4. Prompts	
1. My pictures	4. Language	
2. Slide show	5. Location	
4. Menu style	6. Security	
1. Grid(Default)	7. System select	

# Getting Started with Your Phone

## The Battery

### Installing the Battery

 
- 1 Use the fingernail cutout at the bottom of the back cover to lift and remove the cover.
- 2 Align the battery contacts with the terminals near the top of the battery compartment and insert the battery into the compartment.
- 3 Align the back cover and press it downwards until it clicks into place.

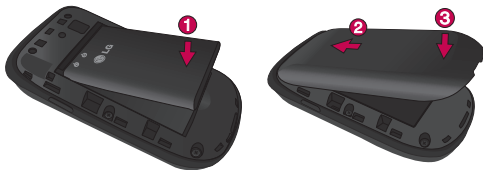

### Removing the Battery

- 1 Turn the phone off.
- 2 Use the fingernail cutout at the bottom of the back cover to lift and remove the cover.
- 3 Use the fingertip opening near the bottom of the battery compartment to lift the battery out.

## Getting Started with Your Phone

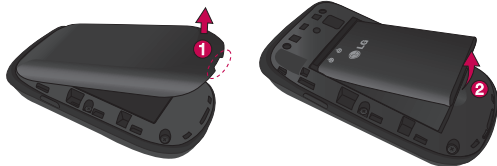

## Charging the Battery

Use the charger provided with your phone.

**WARNING:** Use only the charger provided with the phone. Using any charger other than the one included with the phone may damage your phone or battery.



**NOTICE:** Please make sure that the 'B' side faces up before inserting a charger or USB cable into the Charger/ Accessory Port of your phone.

Plug one end of the charging adapter into the phone's Charger/Accessory Port and the other end into an electrical outlet.

The charge time varies depending upon the battery level.

## Charging with a USB cable

You can use your computer to charge your phone. To be able to charge with the USB cable, you may need to have the necessary USB driver installed on your PC first. Connect one end of the USB cable to the Charger/Accessory Port on your phone and the other end to the USB port on your PC.


**NOTE:** Low-power USB ports are not supported, such as the USB ports on your keyboard or bus-powered USB hub.

## Battery Temperature Protection

If the battery gets overheated, the phone will automatically turn off. When you turn the phone back on, a message pops up alerting you that the phone was powered off for your safety.


## Getting Started with Your Phone

### Battery Charge Level

You can find the battery charge level  at the top right corner of the LCD screen. When the charge level becomes low, the battery sensor sounds a warning tone, blinks the battery icon, and/or displays a warning message.


If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

### Signal Strength

Call quality depends on the signal strength in your area. You can tell how much signal strength you have by the number of bars next to the signal strength icon : the more bars, the stronger the signal. If you're having problems with signal quality, move to an open area or, when inside a building, try moving near a window.

### Turning the Phone On and Off

#### Turning the Phone On



- 1 Insert the battery and connect the phone to an external power source if the battery level is low.
- 2 With the flip open, press the **Power/End Key**  until the LCD screen lights up.

#### Turning the Phone Off

With the flip open, press and hold the **Power/End Key**  until the LCD screen turns off.




## Making Calls

- 1 Make sure the phone is turned on.
- 2 Enter the phone number.
- 3 Press the **Send Key**  to dial the call.
- 4 Press the **Power/End Key**  to end the call.

**NOTE:** Your phone has a Voice commands feature that also lets you make calls by saying a phone number or contact name.

## Correcting Dialing Mistakes

While entering a phone number, press the **Clear Key**  once to erase the last digit entered. You can also hold it down for at least two seconds to delete all the digits you entered.

## Redialing Calls

With the flip open, press the **Send Key**  twice to redial the last number dialed.

# Getting Started with Your Phone

## Receiving Calls

- 1 When the phone rings or vibrates, you can answer the call by simply opening the flip.

**NOTE:** If the 'Flip open' (☰ Menu > ⚙ Settings > 4 <sup>PH</sup> Call settings > 1 <sup>ANS</sup> Answer options) answer option is NOT MARKED, you can:

- Open the flip and press the Left Selection Key ☒ **[Quiet]** to mute the ringing or vibration for that call.
- Open the flip and press the Right Selection Key ☑ **[Ignore]** to end the call and send it directly to Voicemail.
- Open the flip and press **OK** **[Text]** to end the call and send a quick text message.




- 2 Press the **Power/End Key** <sup>POWER</sup> <sub>END</sub> to end the call, or simply close the flip.

## Screen Icons

When the phone is on, the top line of the LCD screen displays phone status icons. To see the icon glossary, open the flip and go to ☰ **Menu** > ⚙ **Settings** > 6 <sup>INFO</sup> **Phone info** > ☰ **Icon glossary** on your phone.

## Quick Access to Convenient Features

### Vibrate mode

Sets the phone to vibrate instead of ringing ( is displayed). To set Vibrate Mode, open the flip and press and hold . To return to Normal mode, press and hold  again.

### Sounds Off

Quickly deactivate your phone's sounds when you're in a place where phone sounds would be disruptive.

From standby mode with the flip open, press and hold the lower volume key for 3 seconds. To return to normal sounds mode, press and hold the upper volume key.

### Mute Function

The Mute Function prevents the transmission of your voice to the caller. To quickly activate Mute while on a call, press the Left Selection Key  [Mute]. To unmute, press the Left Selection Key  [Unmute] again.


### Quick Volume Adjustment

Quickly adjust ringer and earpiece volumes by pressing the Volume Keys  on the left side of the phone. Press the upper volume key to increase and lower volume key to decrease the volume.

**NOTE:** The earpiece volume can only be adjusted during a call and Keypad Volume can only be adjusted through the Sounds settings menu.



## Quick Access to Convenient Features

### Quick Font Resize

When you view messages, enter phone numbers, or view sub-menus, press the Volume Keys  up or down to quickly adjust the font size. 3 levels (small, normal, large) of font sizes are available.





**NOTE:** Not supported on the Main menu.

### Call Waiting

During a call, one beep indicates another incoming call. Press the **Send Key**  to answer it and put the first call on hold. Press the **Send Key**  again to return to the first call.

### 3-way call


You can talk with two people at the same time with a three-way conversation on your wireless phone. Airtime and other charges, which may include toll or long distance charges, will apply for all simultaneous calls until you end one call.

- 1 While on the first call, dial the 10-digit number of the second person.
- 2 Press the **Send Key** . The first person is automatically put on hold while the call is made.
- 3 When the second person answers, press **OK**  **[Merge]** to create a conference call.
- 4 If the second person does not answer, press the **Send Key**  twice to end the connection and go back to the first person.
- 5 To end both conversations completely, press the **Power/End Key** .

## Caller ID

Caller ID displays the number and/or name and picture (if applicable) of the person calling when your phone rings.

## Voice commands

Voice commands allow you to do things by verbal command (e.g., make calls, check Voicemail, etc.). With the flip open, press the **Voice Commands Key**  on the keypad.







- 1 Call** Say "Call" and then call someone simply by saying the name or phone number.
- 2 Send msg to** Say "Send message" and the command will prompt you for the type of message.
- 3 Go to** This allows you to access a menu within the phone.
- 4 Check** This allows you to check out a wide range of items such as Phone status, Voicemail, Messages, Missed calls, Time, Signal strength, Battery level, Volume and My number.
- 5 Contacts** You can look up names in your Contacts as well as manage your Contact List including creating, erasing or modifying.
- 6 Redial** Say "Redial" and the phone will redial the last phone number.
- 7 Help** Provides a general guideline to using Voice commands.

**NOTE:** Voice commands can also be started with the designated key on your Bluetooth® device. Please check the user manual of the Bluetooth® device for further instructions.

# Entering and Editing Information

## Text Input

The following key functions are available to help with text entry:

-  **Left Selection Key:** Press to change the text input mode.
-  **Shift:** Press to change capitalization (initial cap, caps lock, lowercase).
-  **Next:** Press to display other matching words in the database in T9 word mode.
-  **Space:** Press to complete a word and insert a space.
-  **Clear:** Press to delete a single space or character. Hold to delete the entire text.
-  **Punctuation:** Press to insert punctuation symbols.

## Text Input Modes




In a text field, press the Left Selection Key  to select a text input mode:

**T9 Word/ Abc/ ABC/ 123/ T9 Palabra/ Symbols/ Templates**

**NOTE:** T9 Palabra is the Spanish counterpart of T9 Word which utilizes accents, tildas, etc. for correct Spanish word spelling.







# Contacts in Your Phone's Memory

## Storing Basics

- 1 With the flip open, enter a number (max. 48 digits), then press the Left Selection Key  [Save].
- 2 Use the Directional Key  to highlight **Add new contact/ Update existing**, then press **OK**.
- 3 Use the Directional Key  to highlight **Mobile 1/ Home/ Business/ Mobile 2/ Fax**, then press **OK**.
- 4 Enter a name (max. 32 characters), and any additional information, then press **OK** [Save].

**NOTE:** If you selected **Update existing** after you select the number type, the contact information is automatically updated.















## Customizing Individual Entries

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Contacts**.
- 3 Press  **Contact list**.
- 4 Use the Directional Key  to highlight a Contact entry, then press the Left Selection Key  [Edit].
- 5 Use the Directional Key  to highlight the information you want to customize.
- 6 Change the entry as you want, then press **OK** [Save] to save your changes.

## Contacts in Your Phone's Memory


### Speed Dial

Allows you to set up your Speed dials.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Contacts**.
- 3 Press  **Contact list**.
- 4 Use the Directional Key  to highlight a Contact entry, then press the Left Selection Key  [Edit].
- 5 Use the Directional Key  to highlight a phone number, then press the Right Selection Key  [Options].
- 6 Use the Directional Key  to highlight **Set speed dial**, then press .
- 7 Select a Speed dial digit.
  - Enter a digit using the keypad, then press  [Set].
  - Use the Directional Key  to highlight the Speed dial digit, then press  [Set].
- 8 Press  **Yes** to confirm, then press  [Save] to update your contact entry.





### Storing a Number with Pauses

Pauses allow you to enter additional series of numbers to access automated systems such as Voicemail or credit billing numbers. Pause types are:

**Wait (W)** The phone stops dialing until you press the Left Selection Key  [Release] to advance to the following series of numbers.

**2-Sec Pause (P)** The phone waits two seconds before dialing the next string of digits.












- 1 With the flip open, enter the phone number, then press the Right Selection Key  [Options].
- 2 Use the Directional Key  to highlight **Add 2-sec pause** or **Add wait**, then press .
- 3 Enter the additional number(s) (e.g., pin number, credit card number, etc.).
- 4 Press the Left Selection Key  [Save].
- 5 Choose **Add new contact/ Update existing**.
- 6 Choose **Mobile 1/ Home/ Business/ Mobile 2/ Fax**.
- 7 Continue entering information for the Contact entry as necessary.

**NOTE:** If you selected **Update existing** after you select the number type, the contact information is automatically updated. You do not have the option to enter additional information.

- 8 Press  [Save] to update your contact entry.

### Adding a Pause to an Existing Contact Entry

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Contacts**.
- 3 Press  **Contact list**.
- 4 Use the Directional Key  to highlight a Contact entry, then press the Left Selection Key  [Edit].
- 5 Use the Directional Key  to highlight the number, then press the Right Selection Key  [Options].
- 6 Press  **Add 2-sec pause** or  **Add wait**.

## Contacts in Your Phone's Memory

- 7 Enter the additional number(s), then press **OK** **[Save]** to update your contact entry.

### Adding Another Phone Number

#### From standby mode







 
- 1 With the flip open, enter a phone number, then press the Left Selection Key **←** **[Save]**.
- 2 Use the Directional Key **⬇** to highlight **Update existing**, then press **OK**.
- 3 Use the Directional Key **⬇** to highlight an existing entry then press **OK** to update your contact entry.
- 4 Use the Directional Key **⬇** to highlight **Mobile 1/ Home/ Business/ Mobile 2/ Fax**, then press **OK** to update your contact entry.

#### From the Contact list Screen

- 1 Open the flip and press Left Selection Key **←** **[Menu]**.
- 2 Press **2 abc** **Contacts**.
- 3 Press **2 abc** **Contact list**.
- 4 Use the Directional Key **⬇** to highlight an entry, then press the Left Selection Key **←** **[Edit]**.
- 5 Use the Directional Key **⬇** to highlight the phone number field you wish to add. Then enter the number and press **OK** **[Save]** to update your contact entry.












## Changing Saved Information

To edit any information you stored, access the Edit Contact screen:

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Contacts**.
- 3 Press  **Contact list**.
- 4 Use the Directional Key  to highlight a Contact entry, then press the Left Selection Key  [Edit].
- 5 Use the Directional Key  to highlight the field you want to change.
- 6 Make the changes, then press  [Save] to update your contact entry.

## Changing the Default Number








The Default Number is the phone number you first entered when you created the Contact. However, another number can be saved as the Default number.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Contacts**.
- 3 Press  **Contact list**.
- 4 Use the Directional Key  to highlight an entry.
- 5 Press the Left Selection Key  [Edit].
- 6 Use the Directional Key  to highlight a phone number, then press the Right Selection Key  [Options].
- 7 Use the Directional Key  to highlight **Set as default**, then press .
- 8 Press  [Yes] to confirm the new number as the default.  
A confirmation message is displayed.
- 9 Press  [Save] to update your contact entry.









# Contacts in Your Phone's Memory

## Deleting

### Deleting a Contact Entry

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Contacts**.
- 3 Press  **Contact list**.
- 4 Use the Directional Key  to highlight an entry.
- 5 Press the Right Selection Key  [Options].
- 6 Press  **Erase**.
- 7 Press  [Yes] to confirm.

### Removing a Speed Dial

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Contacts**.
- 3 Press  **Contact list**.
- 4 Use the Directional Key  to highlight a Contact entry to edit and press  [View].
- 5 Highlight the phone number with the speed dial, then press the Right Selection Key  [Options].
- 6 Press  **Remove speed dial**.
- 7 Press  [Yes] to confirm.

## Speed Dialing



Allows you to make phone calls quickly and easily to numbers stored in Contacts.


**NOTE:** Speed dial 1 is reserved for Voicemail.

### Single Digit Speed dials

Press and hold the speed dial digit. Your phone recalls the phone number from your Contacts, displays it, and dials it for you.

### Multiple Digit Speed dials

When you press and hold a number key, it signals the phone to call a Speed dial. To dial Speed dials with multiple digits, press the first digit(s), then press and hold the last digit. For example, to call Speed dial 25, press , then press and hold .

**NOTE:** You can also enter the Speed dial digit(s) and press the **Send Key** .





# Using the Phone Menus

## Prepaid

Allows you to access various prepaid services.




### 1. Add airtime

Allows you to add airtime.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Prepaid.**
- 3 Press  **Add airtime.**
- 4 Enter airtime PIN and press .
- 5 Read the displayed message, then select **Yes** or **No**.




### 2. Buy airtime

Allows you to buy airtime.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Prepaid.**
- 3 Press  **Buy airtime.**
- 4 Select the amount you would like to purchase from **60 mins./ 120 mins./ 200 mins./ 450 mins.**
- 5 Read the displayed message, then select **Yes** or **No**.
- 6 You will be asked to confirm you want to purchase the selected amount. Select **Yes** or **No**.




### 3. My phone number

This menu displays your phone number.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Prepaid.**
- 3 Press  **My phone number.**





### 4. My airtime info

This menu displays your available minutes and service end date.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Prepaid.**
- 3 Press  **My airtime info.**

### 5. Airtime display




You can choose to display or hide the balance and service end date on your Home screen.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Prepaid.**
- 3 Press  **Airtime display.**
- 4 Use the Directional Key  to check your balance and service end date.

## Using the Phone Menu

### 6. Serial number

This menu simply displays the information of your phone's MEID.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Prepaid.**
- 3 Press  **Serial number.**






### Contacts

The Contacts menu allows you to store names, phone numbers and other information in your phone's memory.

#### 1. New contact

Allows you to add a new contact to your Contact list.

**NOTE:** Using this submenu, the number is saved as a new Contact, not to an existing Contact.








- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Contacts.**
- 3 Press  **New contact.**
- 4 Enter the name and press the Directional Key  downward until the phone number type you want is highlighted.
- 5 Enter the number and any additional contact information and press  [Save] to update your contact entry.



**NOTE:** For more detailed information, see page 21.

## 2. Contact list




Allows you to view your Contact list.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Contacts**.
- 3 Press  **Contact list**.
- 4 Use the Directional Key  to scroll through your Contacts alphabetically.
  - Press the Right Selection Key  [Options] to select one of the following:  
**New contact/ Erase/ New message/ Call/ Manage contacts/  
Set as favorite/ Search entry mode**
  - Press the Left Selection Key  [Edit] to edit the contact.
  - Press  [View] to view the entry details.

**TIP:** Use the **Go to** field, for quick access to an entry without scrolling. For example, to go to "Vet", enter the letter V.

## 3. Favorites

Allows you to add Contact entries or Contact groups to your list of Favorites to easily view, call, or send messages.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Contacts**.
- 3 Press  **Favorites**.

## Using the Phone Menu

4 Press **OK** [Add].

**TIP:** You can add up to 10 Contacts and/or Contact groups as Favorites to easily make calls, send messages, and view messages.

5 Select whether you want to add a favorite from your **Contacts** or **Groups**.

6 Use the Directional Key **⬇️** to scroll through your Contacts or Groups alphabetically and press **OK** [Mark].

7 Press the Left Selection Key **⬅️** [Done]. Once you have added Contacts to the Favorites list, the following options will become available in the Favorites menu:

Left Selection Key **⬅️**: **View**

OK Key **OK**: **New message**

Right Selection Key **➡️**: **Options**

**Move position/ Remove/ Remove all**

## 4. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, delete a group, or send a message to everyone in the selected group.

1 Open the flip and press Left Selection Key **⬅️** [Menu].

2 Press **⌂** **Contacts**.



3 Press **4 gh** **Groups**.

The following options are available:

- **View a group**

Use the Directional Key **⬇️** to highlight a group, then press **OK** [View].

- **Add a new group**





Press the Left Selection Key  **[New]** to add a new group to the list. Enter a name, insert a picture (if necessary), and press  **[Save]**.

- **Group's options**

Press the Right Selection Key  **[Options]** to select one of the following:







 


**New message/ Edit group name & ID/ Edit members / Erase group/ Set as favorite/ Search entry mode**

### **Adding contacts to a group**

- 1 From Groups submenu, press  **[View]** and press  **[Add]**.
- 2 Highlight a desired contact and press  **[Mark]**.
- 3 Press Left Selection Key  **[Done]** to add the contact to the group.

## **5. Speed dials**







Allows you to view your list of Speed dials or designate Speed dials for numbers entered in your Contacts.


- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Contacts**.
- 3 Press  **Speed dials**.
- 4 Use the Directional Key  to highlight the Speed dial position, or enter the Speed dial digit and press  **[Set]**.
- 5 Use the Directional Key  to highlight the Contact and press  **[Set]**. (For Contacts with multiple numbers, highlight the number for the Speed dial, then press .)
- 6 Press  **[Yes]** to confirm.  
A confirmation message is displayed.

## Using the Phone Menu

### 6. My vCard


Allows you to create, edit, and view your own personal Contact information including name, phone numbers, and email address in one entry.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Contacts**.
- 3 Press  **My vCard**.
- 4 Press  **[Edit]** to enter your personal Contact information.
- 5 Use the Directional Key  to scroll to the information you want to enter.
- 6 Enter your information as necessary, then press  **[Save]**.

**NOTE:** Press the Right Selection Key  **[Send]** to send your name card.

### Messages

Depending on the content and size of your messages, the phone can store up to 790 messages (including a max. of 300 text messages, 100 emergency alerts, 100 multimedia message notifications, and 100 multimedia messages in the Inbox; 100 text messages and 50 multimedia messages in the Outbox; 20 text messages and 20 multimedia messages in Drafts). Content stored in the message may be limited by phone model and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

- When viewing a received message, you can call the sender back by pressing the **Send Key** .

## New Message Alert







Your phone can alert you when you have new messages. Options include:

- 1 The phone displays a message on the screen.
- 2 The message icon (✉) is displayed on the screen. In the case of a high priority message, the icon (✉) will flash.

## 1. New message







This menu allows you to send messages. Depending on the type of message you choose to send, you can also attach files to your messages including pictures, sounds, voice recordings and name cards.

### The Basics of Sending a Text Message

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Messages**.
- 3 Press  **New message**.  
To access this feature, you can press the Message Key  from standby mode.
- 4 Enter a phone number or a recipient's name in the To field.  
As you enter the phone number or a recipient's name, matching contacts appear. You can choose a suggested recipient or continue entering the phone number.
- 5 Press  to access the text field.
- 6 Use the keypad to enter your message.
- 7 Press  [Send].






## Using the Phone Menu

### Select Recipient(s) Using the Add Function

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  Messages.
- 3 Press  New message.
- 4 With the **To** field highlighted, press the Right Selection Key  Add.
- 5 Select an option and press  OK.
  - From contacts** To select a recipient from your Contact List.
  - From recent calls** To select a recipient from Recent calls.
  - Favorites** To select a recipient from Favorites.
  - Groups** To Select a recipient from your Groups.
  - To contacts** To save the number to your Contacts.
- 6 Use the keypad to enter your message.
- 7 Press  [Send].

### Multimedia Message Using Options

Allows you send messages with text, picture, sound and name card attachments.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  Messages.
- 3 Press  New message.
- 4 Enter a phone number or a recipient's name in the To field.
- 5 Press  to access the text field.
- 6 Use the keypad to enter your message.
- 7 Press the Right Selection Key  Options.

8 Select an option and press **OK**.

1. **Attach**

1. **Picture** Allows you to insert a picture. Highlight a picture, then press **OK**.

2. **Take picture** Allows you to take a picture and insert it.

3. **Sound** Allows you to insert a sound. Highlight a sound, then press **OK**.

4. **Record voice** Allows you to record a new sound file. Press **OK** to start recording and then press **OK** to stop.

5. **Name card**

1. **My vCard** Press **OK** to add your name card.

2. **From contacts** Press **OK** **[Mark]** to mark the name cards you want to send and press the Left Selection Key **←** **[Done]**.

2. **Preview** Allows you to preview the message before sending it.

3. **Insert templates** Allows you to insert a text template. Highlight the template and press **OK**.

4. **Save as draft** Allows you to save the message as a draft.

5. **Add slide** Allows you to add another slide so you can insert additional attachments.

6. **Priority level** Allows you to choose the message's priority level. Choose from **High** or **Normal** and press **OK** **[Set]**.

7. **Cancel message** Allows you to cancel editing the message. Select **Yes** to save the message in drafts or **No** to cancel the message without saving the message in drafts.

9 Use the keypad to enter your subject in the subject field.

10 Press **OK** **[Send]**.







# Using the Phone Menu

## 2. Inbox

The phone alerts you in up to 3 ways when you receive a new message:

- By displaying a notification message on the screen.
- By sounding a tone or vibration, if set.
- By displaying (The icon will be when you get a high priority message.)

### Viewing Your Inbox


















- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Messages**.
- 3 Press  **Inbox**.
- 4 Highlight a message. The following options are available.
  - Press  **[Open]** to view the message.
  - Press the Left Selection Key  **[Erase]** to erase the highlighted message.
  - Press the Right Selection Key  **[Options]** to access the following options:
    - Reply** Replies to the sender's address of the received message.
    - Reply with copy** Replies to the sender's address with a copy of the original message text included.
    - Forward** Forwards the message to other destination address(es).
    - Add to contacts** Stores the callback number, email address, and numbers from the address of the received message into your Contacts.
    - Extract addresses** Allows you to extract the message's contact addresses and save them (if desired).
    - Message info** Allows you to check the received message information.



**Manage inbox** Allows you to manage (lock, erase and more) multiple messages.

**Sort by sender/time** Allows you to sort messages alphabetically by sender's name or by time received.

## Message Icon Reference







	New text message		Read text message
	New media message received		Unread multimedia message
	Read multimedia message		Message delivered
	Message failed		Message sent
	Multiple messages delivered		Multiple messages failed
	Multiple messages delivery incomplete		Multiple messages sent
	Text message draft		Media message draft
	Namecard		High priority
	Lock		

\* Multimedia message indicates picture/voice message.

## Using the Phone Menu






### 3. Sent


The Sent menu stores your sent messages.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Messages**.
- 3 Press  **Sent**.
- 4 Highlight a message. The following options are available.
  - Press  **[Open]** to view the message.
  - Press the Left Selection Key  **[Erase]** to erase the message.
  - Press the Right Selection Key  **[Options]** for the following options:  
**Forward/ Send/ Add to contacts/ Message info/ Manage sent/ Sort by recipient**
- 5 While viewing a message, choose for the following options:  
**Play again/ Forward/ Lock/ Save as template/ Add to contacts/ Extract address/ Message info**

### 4. Drafts

Saved message drafts are stored here.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Drafts**.
- 3 Press  **Drafts**.
- 4 Highlight a message. The following options are available.
  - Press  **[Edit]** to continue editing the message.
  - Press the Left Selection Key  **[Erase]** to erase the message.

- Press the Right Selection Key  **[Options]** for the following options.
  - Send** Sends the selected message.
  - Add to contacts** Stores the number, email address, and numbers from the address included in the message into your Contacts.
  - Manage drafts** Allows you to manage (erase or lock) messages.

## Message Icon Reference





 


 Text Message Draft

 Media Message Draft

## 5. Voicemail

Allows you to view the number of new voice messages recorded in the Voicemail box. Once you exceed the storage limit, old messages are overwritten. When you have a new voice message, your phone will alert you.

### Checking Your Voicemail Box

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Messages**.
- 3 Press  **Voicemail**.
- 4 The following options are available.
  - Press the Left Selection Key  **[Clear]** to clear the Voicemail counter. Then press  **[Yes]**.
  - Press the **Send Key**  or  **[Call]** to listen to the message(s).

OR

## Using the Phone Menu

1 Enter your phone number and press the **Send Key**  from your phone or dial your wireless phone number from any touch-tone phone.

**OR**

Press and hold  from your phone, as a speed dial to your voicemail.

2 When the recorded announcement begins, press  to interrupt (if applicable).

3 When prompted, enter your password, then press .

## 6. Templates

Allows you to manage your text templates.

1 Open the flip and press Left Selection Key  **[Menu]**.

2 Press  **Messages**.

3 Press  **Templates**.

4 Select a message to view its content and edit it. Press  **[Save]** to save it.


## Messages settings

Allows you to configure settings for your messages.

1 With the flip open, press Left Selection Key  **[Menu]**.

2 Press  **Messages**.

3 Press the Left Selection Key  **[Settings]**.

4 Use the Directional Key  to highlight one of the settings and press  to select it.

## Message Settings Options

### 1 Entry mode

Select **T9 Word**, **Abc**, **ABC**, **123**, **T9 Palabra** to be your default input method.

### 2 Messages font size

Allows you to select **Small**, **Normal** or **Large** for the size of the text characters.

### 3 TXT instant reply

Select **On** to text a reply instantly. Or, select **Off**.

### 4 TXT auto scroll

Select **On** to automatically scroll text down while viewing messages.

Or, select **Off**.

### 5 CMAS alert

Set your configuration for receiving emergency alerts. This menu has three options: **Receive alerts/ Alert reminder/ Alert tone/ Alert vibrate**

### 6 Signature

Select **Custom** to create/edit a signature to automatically send with your messages. Select **None** for no signature.





### 7 TXT-media msg notification

Displays a pop-up notification when switching message types between text and media.

## Using the Phone Menu

### Erasing messages

You can erase messages stored in your inbox, sent, or drafts folders. You can also erase all messages at the same time.





- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  Messages.
- 3 Press the Right Selection Key  [Options] then select one of the following:  
**Erase inbox/ Erase sent/ Erase drafts/ Erase all**
- 4 Press  [Yes] to confirm the deletion or select which messages you want to delete.  
A confirmation message is displayed.

### Recent calls

The Recent calls menu has lists of phone numbers and/or Contacts entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

#### 1. Missed calls

Allows you to view the list of missed calls; up to 90 entries.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  Recent calls.
- 3 Press  Missed calls.
- 4 Use the Directional Key  to highlight an entry, then

- Press **OK** **[Open]** to open the entry.
- Press the **Send Key** **SEND** to place a call to the number.
- Press the Right Selection Key **⇒** **[Options]** to select:  
**Save to contacts(Contact info)/ Erase/ Lock(Unlock)/ Erase all/  
Call timer**
- Press the Left Selection Key **⇐** **[Message]** to send a message to the number.

## 2. Received calls









Allows you to view the list of incoming calls; up to 90 entries.

- 1 Open the flip and press Left Selection Key **⇐** **[Menu]**.
- 2 Press **4<sup>th</sup>** **Recent calls**.
- 3 Press **2<sup>nd</sup>** **Received calls**.
- 4 Use the Directional Key **⬇** to highlight an entry, then
  - Press **OK** **[Open]** to open the entry.
  - Press the **Send Key** **SEND** to place a call to the number.
  - Press the Right Selection Key **⇒** **[Options]** to select:  
**Save to contacts(Contact info)/ Erase/ Lock(Unlock)/ Erase all/  
Call timer**
  - Press the Left Selection Key **⇐** **[Message]** to send a message to the number.

## Using the Phone Menu








### 3. Dialed calls

Allows you to view the list of outgoing calls; up to 90 entries.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Recent calls**.
- 3 Press  **Dialed calls**.
- 4 Use the Directional Key  to highlight an entry, then
  - Press  **[Open]** to open the entry.
  - Press the **Send Key**  to place a call to the number.
  - Press the Right Selection Key  **[Options]** to select:  
**Save to contacts(Contact info)/ Erase/ Lock(Unlock)/ Erase all/  
Call timer**
  - Press the Left Selection Key  **[Message]** to send a message to the number.

### 4. All calls


Allows you to view the list of all calls; up to 270 entries.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Recent calls**.
- 3 Press  **All calls**.
- 4 Use the Directional Key  to highlight an entry, then
  - Press  **[Open]** to open the entry.
  - Press the **Send Key**  to place a call to the number.
  - Press the Right Selection Key  **[Options]** to select:









## Save to contacts(Contact info)/ Erase/ Lock(Unlock)/ Erase all/ Call timer

- Press the Left Selection Key  [Message] to send a message to the number.

**SHORTCUT:** To view a quick list of all your recent calls, press the **Send Key**  from standby mode.

## 5. Call timer

Allows you to view the duration of selected call types.




- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Recent calls**.
- 3 Press  **Call timer**.
- 4 Use the Directional Key  to highlight a call timer.  
**Last call/ All calls/ Received calls/ Dialed calls/ Roaming calls/  
Last reset/ Lifetime calls**
- 5 Press the Left Selection Key  [Reset] to reset the highlighted timer.
- 6 Reset all the recorded timers by pressing the Right Selection Key  [Reset all].

**NOTE:** Lifetime Calls cannot be reset.

## Using the Phone Menu

### Games & apps

Allows you to enjoy downloaded games and apps.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Games & apps**.
- 3 Select a game or press  **Buy games** to browse for more.

### Browser

Allows you to access news, sports, weather, and email from your device.

Accessibility and selections within this feature are dependent upon your service provider. For specific information on Internet access through your phone, contact your service provider.


- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Browser**.

### Multimedia






Everything you need to know while you're on the go.

#### 1. Take picture

Lets you to take digital pictures.

**SHORTCUT:** Press the Camera Key  from standby mode to open the camera function.

- 1 Open the flip and press Left Selection Key  [Menu].

- 2 Press  **Multimedia**.
- 3 Press  **Take picture**.
- 4 Set the brightness by pressing the Directional Key  up and down, zoom by pressing the Directional Key  left and right, and press the Right Selection Key  **[Options]** to change other settings.

**NOTE:** Zooming is not available on the highest resolution.

- Select the option(s) to customize.

**Resolution** Allows you to change the image resolution. Choose from **1280X960/ 640X480/ 320X240**.

**Self timer** Allows you to set a timer so that you can take part of the picture. Choose from **Off/ 3 Seconds/ 5 Seconds/ 10 Seconds**.

**White balance** Allows you to adjust the white balance for the image. Choose from **Auto/ Sunny/ Cloudy/ Fluorescent/ Glow**.

**Shutter sound** Allows you to choose the shutter sound heard when taking a picture. Choose from **Shutter/ No sound/ Say “cheese”/ Ready! 1 2 3**.

**Color effects** Allows you to adjust the color effects for the image. Choose from **Normal/ Negative/ Aqua/ Sepia/ Black&White**.



**Night mode** Allows you to set night mode. Choose from **On/ Off**.

**Noise reduction** Allows you to adjust the noise reduction. Choose from **On/ Off**.

**Auto save** Allows you to set if you would like to automatically save the image after taking it. Choose from **On/ Off**.




 

## Using the Phone Menu

**Preview** Allows you to choose the preview screen size. Choose from **Actual view/ Full screen**.

- 5 Take a picture by pressing  **[Take]**.
- 6 Press the Left Selection Key  **[Save]**. The picture is stored in My pictures.

## 2. Record voice




Allows you to record voice.

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Multimedia**.
- 3 Press  **Record voice**.
- 4 Press  to start recording and then press to  **[Stop]** to stop the recording.

## 3. Pictures

This menu allows you to view all of your pictures and buy graphics.

### Access and Options

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Multimedia**.
- 3 Press  **Pictures**.
- 4 Browse the submenus.

 


### 3.1 My pictures

Allows you to view and manage photos stored in the phone.

- 1 Open the flip and press Left Selection Key  **[Menu]**.

- 2 Press  **Multimedia**.
- 3 Press  **Pictures**.
- 4 Press  **My pictures**.
- 5 Highlight a picture with the Directional Key .

### The following options are available:

- Press  **[View]** to view it.
- Press the Left Selection Key  **[Erase]** to delete it.
- Press the Right Selection Key  **[Options]** to select from the following options:
  - Send** Allows you to share the picture with others via message or Bluetooth.
  - Set as** Allows you to set the picture as your wallpaper or picture ID for a contact.
  - Take picture** Allows you access the camera function to take a picture.
  - Slide show** Plays all pictures as a slide show.
  - Manage pictures** Allows you to mark multiple pictures to be erased, sent or locked/unlocked.
  - Rename** Allows you to change the file name.
  - Lock (Unlock)** Allows you to lock or unlock. Locked files can't be erased accidentally.
  - File info** Allows you to view information for the image file.

### Editing a Picture

Access My pictures, then use the Directional Key  to highlight a picture. Press  **[View]** and then press the Right Selection Key  **[Options]** and select **Edit** to zoom, rotate and crop the photo.

## Using the Phone Menu

### 3.2 Default pictures

Allows you to view and manage default photos stored in the phone.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Multimedia**.
- 3 Press  **Pictures**.
- 4 Press  **Default pictures**.
- 5 Highlight a picture with the Directional Key .

The following options are available:

- Press  [View] to view it.
- Press the Right Selection Key  [Options] to access the option to set the image as your wallpaper.

### 3.3 Buy graphics

This menu allows you to buy images.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Multimedia**.
- 3 Press  **Pictures**.
- 4 Press  **Buy graphics**.








## 4. Ringtones

Personalize your phone with ringtones. A wide variety of choices are available, such as current hits, pop, hip-hop, and more.






## 4.1 My sounds

Allows you to record a new sound or select a desired sound.




### How to record a new sound

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Multimedia**.
- 3 Press  **Ringtones**.
- 4 Press  **My sounds**.
- 5 Press  **Record new** and press  to start recording, then press  [Stop] to end recording.

### How to select a sound

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Multimedia**.
- 3 Press  **Ringtones**.
- 4 Press  **My sounds**.
- 5 Use the Directional Key  to scroll and highlight a preloaded sound.

### Options with a sound file highlighted:

- Press the Left Selection Key  [Set as] to set it as the Ringtone, Contact ID or Alert sounds.
- Press  [Play] to play the sound.
- Press the Right Selection Key  [Options] to select:  
**Send via bluetooth/ Rename/ Lock(Unlock)/ Erase/ Erase all/ File info.**

# Using the Phone Menu



## 4.2 Default ringtones

Allows you to manage your preloaded sounds.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Multimedia**.
- 3 Press  **Ringtones**.
- 4 Press  **Default ringtones**.
- 5 Use the Directional Key  to highlight a ringtone and press  [Play] to play the ringtone or the Left Selection Key  [Set as] to set the ringtone as:
  -  **Ringtone**: Sets the ringtone for your incoming calls.
  -  **Contact ID**: Highlight and select the Contact to be identified by the ringtone you selected.
  -  **Alert sounds**: Press the corresponding number key to set the ringtone for one of the following:  
**All messages/ TXT message/ Multimedia message/ Voicemail**

## 4.3 Buy ringtones


This menu allows you to buy ringtones.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Multimedia**.
- 3 Press  **Ringtones**.
- 4 Press  **Buy ringtones**.







## Tools

Your phone tools include Voice commands, Calculator, Ez tip calculator, Eco-calculator, Info search, Stopwatch, Notepad, and Unit converter.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Tools**.


### 1. Voice commands

This feature provides you with the following options equipped with AVR (Advanced Voice Recognition) technology. Each option has its detailed information on the phone and you can check it out by pressing the Left Selection Key  [Info].

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Tools**.
- 3 Press  **Voice commands**.

#### Access and Options

With the flip open, press the Voice Commands Key  on the keypad.

The Voice commands feature has several settings which allow you to customize how you want to use it. Access Voice commands, then press the Right Selection Key  [Settings].

**Confirm choices** Allows you to choose if the command system prompts you with a list of potential matches. Choose from **Automatic/ Always confirm/ Never confirm**.

**Sensitivity** Allows you to control how the system filters for matches. Choose from **More sensitive/ Automatic/ Less sensitive**.




# Using the Phone Menus


**Train voice** This option allows you to train the phone to recognize your voice patterns. Choose from **Train words/ Train digits**.

**Prompts** Allows you to set how you are notified by the voice commands system and the duration in which you can respond. Choose from **Mode/ Audio playback/ Timeout**.

- For Mode, set **Prompts/ Readout + Alerts/ Readout/ Tones only**.
- For Audio playback, set **Speakerphone** or **Earpiece**.
- For Timeout, set **5 Seconds** or **10 Seconds**.

## 1.1 Start command

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Tools**.
- 3 Press  **Voice commands**.

**NOTE:** You can also press the Voice Commands Key  from standby mode to quickly access the Voice commands feature.

### 1.1.1 Call <Name or Number>

Say "Call" and then call someone simply by saying the name or phone number. Please speak clearly and say the name or number exactly as it is entered in your Contact List. When you have more than one contact number, you can state the name and number type of the contact (for example, 'Call John Work').

### 1.1.2 Send msg to <Name or Number or Group>

Say "Send Message" and the command will prompt you for the type of message. After choosing the message type, you will be prompted for the contact name,

number or group. It will automatically start a message. If you say a full-sentence command, such as 'Send Message to Bob', it will automatically start a text message without asking for the message type. When using 'Send Message' command, speak clearly and say the name, number or group exactly as it is entered in your Contact List.

### **1.1.3 Go to <Menu>**

The 'Go to' command allows you to access a menu within the phone (for example, 'Go to Calendar').

If no menu option is stated, a list of options will be provided.

### **1.1.4 Check <Item>**

The 'Check' command allows you to check out a wide range of items such as Phone status, Voicemail, Messages, Missed calls, Time, Signal strength, Battery level, Volume and My number.

### **1.1.5 Contacts <Name>**

You can look up names in your Contacts (for example, 'Contacts John') as well as manage your Contact List including creating, erasing or modifying.

### **1.1.6 Redial**

Say "Redial" and the phone will redial the last phone number.








### **1.1.7 Help**

Provides a general guideline to using Voice commands.

## Using the Phone Menus

### 2. Calculator





Allows you to perform simple mathematical calculations.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Tools**.
- 3 Press  **Calculator**.
- 4 Enter the numbers to get the value you want. To clear entered items, press the Left Selection Key  [Clear].
- 5 Use the Right Selection Key  [Operators] to add other operators.
- 6 Use the Directional Key  to enter an operation between numbers and press  [=] for the result.

**NOTE:** To insert a decimal, press . To make the number positive and negative, press .

### 3. Ez tip calculator

Allows you to quickly and easily calculate bill amounts using the bill total, tip % and number of people as variables.


- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Tools**.
- 3 Press  **Ez tip calculator**.
- 4 Enter the variable fields (Total Bill, Tip (%), Split) and the corresponding calculation fields (tip and total for each person) appear automatically.
- 5 Press the Left Selection Key  [Reset] for another calculation.

## 4. Eco-calculator

Allows you to keep track of your walking and cycling distances. The amount of CO<sub>2</sub> that is decreased by walking and cycling is displayed for you to see.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Tools**.
- 3 Press  **Eco-calculator**.
- 4 Select the **Walking** or **Cycling** fields to edit the hours and miles.









**NOTE:** The decreasing CO<sub>2</sub> amount is automatically updated when you enter the hour or mile amounts.

- 5 Press the Left Selection Key  [Settings] to set the following settings.
  - **Mode** Allows you to switch the Eco-Calculator home screen animation to **Person** or **Tree**. Depending on what information you entered last (Walking or Cycling) an animation will appear. The number of trees in the animation is calculated depending on the amount of CO<sub>2</sub> decreased.
  - **Character** Allows you to change the character to **Man, Woman, or Man & Woman**. This option is unavailable when Tree is set as the Mode.
  - **Unit** Allows you to change the unit amount to **Hour** or **Mile**.
  - **My car** Allows you to select the type of fuel your car uses and the fuel efficiency (mpg) of your car to measure the amount of CO<sub>2</sub> discharged.

## Using the Phone Menu





### 5. Info search

Allows you to search items stored on the phone.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Tools**.
- 3 Press  **Info search**.
- 4 Enter two or more characters in the search field and press  [Search].
- 5 By default, the phone will search all the categories. To specify the categories, highlight **All** and press the Left Selection Key  [Set]. Use the Directional Key  to highlight a category and press  [Mark] to mark/unmark the category. After specifying the categories, press the Left Selection Key  [Done].
- 6 To view a search result, highlight the desired results and press  [View]. If you want to retry the search, press the Right Selection Key  [Retry]. If you want to start a new search, press the Left Selection Key  [Search], enter your key word, then press .
- 7 If no results are found, you will be prompted to try again. Choose **Yes** to try again or **No** to return to the Tools menu.

### 6. Stopwatch

Allows you to use your phone as a typical stopwatch.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Tools**.
- 3 Press  **Stopwatch**.
- 4 Press  [Start].

- 5 Pressing **OK** **[Stop]** will stop or resume Stopwatch time.
- While measuring time, press the Left Selection Key **←** **[Lap]** to record a lap.
  - After time has stopped, press the Right Selection Key **→** **[Reset]**.

## 7. Notepad

Allows you to add, read, edit, and erase notes to yourself.

- 1 Open the flip and press Left Selection Key **←** **[Menu]**.
- 2 Press **B<sup>TM</sup>** **Tools**.
- 3 Press **7<sup>NOTES</sup>** **Notepad**.
- 4 Press the Left Selection Key **←** **[Add]** to write a new note.
- 5 Press the Left Selection Key **←** to change the entry mode. Or press the Right Selection Key **→** **[Options]** to **Copy text** and **Paste** or to **Cancel** the notepad entry.
- 6 After filling in the note, press **OK** **[Save]** to save it.

## 8. Unit converter

Allows you to convert units to desired units.

- 1 Open the flip and press Left Selection Key **←** **[Menu]**.
- 2 Press **B<sup>TM</sup>** **Tools**.
- 3 Press **B<sup>TM</sup>** **Unit converter**.
- 4 Choose from **Area/ Length/ Mass/ Temperature/ Volume/ Velocity**.
- 5 Select the known unit type and enter the quantity you would like to convert. The conversion will occur upon entering the desired quantity.







# Using the Phone Menus

## My schedule

Allows you to keep your agenda convenient and easy to access. Simply store your appointments and your phone will alert you with a reminder you set.

### 1. Calendar

Allows you to keep your agenda convenient and easy to access. Simply store your appointments and your phone will alert you with a reminder you set.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **My schedule.**
- 3 Press  **Calendar.**
- 4 Use the Directional Key  to highlight the scheduled day.
  - Left:** Previous day
  - Right:** Next day
  - Up:** Previous week
  - Down:** Next week
- 5 Press the Left Selection Key  [Add].
- 6 Enter the subject, then scroll down to set the remaining settings.
- 7 Highlight a Calendar setting field, then press the Left Selection Key  [Set].  
For each Calendar event you can set:
  - Start date
  - Start time
  - End date
  - End time
  - Repeat
  - Until
  - Alerts
  - Tones
  - Vibrate









- 8 Use the Directional Key  to highlight the setting you want, then press .
- 9 Press  **[Save]** when Calendar information is complete.

### Editing and Deleting calendar entries

- 1 From the calendar entry list, press  **[View]**.
- 2 Press  **[Edit]** to edit the calendar entry or press the Left Selection Key  **[Erase]** to delete the calendar entry.

## 2. Alarm clock

Allows you to set up to 10 alarms. At the alarm time, your alarm will be displayed on the LCD screen and the alarm will sound.

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **My schedule**.
- 3 Press  **Alarm clock**.
- 4 Press the Left Selection Key  **[Add]**.
- 5 Use the Directional Key  to highlight the information you want to set, then press the Left Selection Key  **[Set]** to view your setting choices.

Enter the alarm information including:

- Turn on/off
- Set time
- Repeat
- Ringtone

- 6 Press  **[Save]** after setting all of the Alarm fields as necessary.

### How to delete alarms

- 1 From the Alarm clock list, press the Right Selection Key  **[Options]** to view the available options.

## Using the Phone Menus

- 2 Press  **Erase** to delete an alarm or  **Erase all** to delete all alarm entries.
- 3 Press  **[Yes]**.

### How to edit alarms

- 1 From the Alarm Clock list, press  **[View]** and then press  **[Edit]**.

## Bluetooth

Your phone is compatible with devices that support the Headset, Handsfree, Phonebook access, Object push, and File transfer profiles.




You may create and store 20 pairings within the phone and connect to one device. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (9.14 meters).

**NOTE:** Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

**NOTE:** Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology. The phone does not support ALL Bluetooth® OBEX Profiles.

### Turn On Bluetooth

Allows you to set the phone's Bluetooth® power On/Off.

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Bluetooth**.
- 3 Press  **Bluetooth menu**.









- 4 Press the Left Selection Key  [Turn on].

**NOTE:** By default, your device's Bluetooth® functionality is turned off.

## 1. Add new device

Pairing is the process that allows the handset to locate, establish, and register 1-to-1 connection with the target device.

### For pairing with a new Bluetooth® device

- 1 Follow the Bluetooth® accessory instructions to set the device to pairing mode.
- 2 Open the flip and press Left Selection Key  [Menu].
- 3 Press  **Bluetooth**.
- 4 Press  **Bluetooth menu**.
- 5 Press  **Add new device**.
- 6 Press .
- 7 Set the desired device to discovery mode.
- 8 The device will appear in Add New Device menu once it has been located. Highlight the device and press  [Pair].
- 9 The handset will prompt you for the passcode. Consult the Bluetooth® accessory instructions for the appropriate passcode (typically "0000" - 4 zeroes). Enter the passcode and press . When Auto Pair Handsfree is set to On, the device will try to autopair for headsets.
- 10 When pairing with the PC or PDA is successful, highlight either **Always ask** or **Always connect** and press  to connect with the device.







## Using the Phone Menus

- 11** Once connected, you will see the device listed in the Bluetooth® Menu and when the pair is transferring information the Bluetooth® indicator will show up on your screen.

### Icon Reference in Adding New Device

When the Bluetooth® wireless connection is built and paired devices are found, the following icons are displayed.

### Icon References When a Bluetooth® Wireless Connection is Searched (neither connected nor paired).



	When a carkit device is found by your phone.		When an audio device is found by your phone.
	When a PC is found by your phone.		When a PDA is found by your phone.
	When another phone device is found by your phone.		When other undefined devices are found by your phone.

### Icon References When Successfully Connected

The following options are available in the paired device.

- 1 Remove device:** You can remove the device from the pairing list.
- 2 Rename device:** You can rename the paired device.
- 3 Incoming security:** Allows you to set permission before connecting an incoming device.
- 4 Service discovery:** Allows you to search for the services that the selected device supports.

## 5 **Device info:** Shows the device information.

**NOTE:** While in the Bluetooth menu, you can turn the Bluetooth functionality off by pressing the Left Selection Key  [Turn off]. Reversely, you can turn it on by pressing the Left Selection Key  [Turn on].

When connected with a phone or PC supporting OPP, the following menus are possible:



- Send name card: Allows my contact data to send other device up to 999 contacts.
- Get name card: Allows you to pull name card from other devices.
- Exchange name card: Allows you to exchange the phone's name card with another device.
- Send calendar event: Allows you to send Calendar events to other devices.
- Send picture: Allows you to send your pictures to other devices.
- Send sound: Allows you to send your sounds to other devices.

## My phone info

Allows you to view and/or edit the name of the Bluetooth® device.








- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Bluetooth**.
- 3 Press  **Bluetooth menu**.
- 4 Press the Right Selection Key  [Options].
- 5 Press  **My phone info**.

## Using the Phone Menu

- 6 Press  to clear the existing name.
- 7 Use the keypad to enter a new custom name.
- 8 Press  **[Set]** to save and exit.

## Discovery mode





Allows you to set whether your device is able to be discovered/found by other Bluetooth® devices in the area.

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Bluetooth**.
- 3 Press  **Bluetooth menu**.
- 4 Press the Right Selection Key  **[Options]**.
- 5 Press  **Discovery mode**.
- 6 Use the Directional Key  to highlight a setting, then press  **[Set]**.

**NOTE:** If you choose On for Discovery mode, your device is able to be searched by other in-range Bluetooth® devices.

## Supported profiles

Allows you to see profiles that your phone can support.

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Bluetooth**.
- 3 Press  **Bluetooth menu**.
- 4 Press the Right Selection Key  **[Options]**.

- 5 Press  **Supported profiles.**
- 6 Choose a Bluetooth profile to view information about it.




## Accessibility

Allows you to set the Accessibility settings.

- 1 Open the flip and press Left Selection Key  **[Menu].**
- 2 Press  **Accessibility.**







### 1. Readout

Allows you to set the Readout settings.

- 1 Open the flip and press Left Selection Key  **[Menu].**
- 2 Press  **Accessibility.**
- 3 Press  **Readout.**

#### 1.1 Full Readout







Allows your phone to read the screens out loud for blind and low-vision users or when your eyes are busy.

- 1 Open the flip and press Left Selection Key  **[Menu].**
- 2 Press  **Accessibility.**
- 3 Press  **Readout.**
- 4 Press  **Full Readout.**
- 5 Use the Directional Key  to highlight a setting, then press  **[Set].**

# Using the Phone Menus







## 1.2 Menu Readout

Allows you to set the phone to read out menus.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Accessibility.**
- 3 Press  **Readout.**
- 4 Press  **Menu Readout.**
- 5 Use the Directional Key  to highlight a setting, then press  [Set].







## 1.3 Digit dial Readout

Allows you to set the phone to read out the digits entered in the dialing screen.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Accessibility.**
- 3 Press  **Readout.**
- 4 Press  **Digit dial Readout.**
- 5 Use the Directional Key  to highlight a setting, then press  [Set].

## 1.4 Caller ID Readout






 
Allows you to set how you want the Caller ID to be read out.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Accessibility.**
- 3 Press  **Readout.**
- 4 Press  **Caller ID Readout.**
- 5 Use the Directional Key  to highlight a setting, then press  [Set].









## 1.5 Passwords Readout

Allows the phone to read out your passwords.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Accessibility**.
- 3 Press  **Readout**.
- 4 Press  **Passwords Readout**.
- 5 Use the Directional Key  to highlight a setting, then press  [Set].

## 1.6 Speech rate

Allows you to set the menu readout speech rate.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Accessibility**.
- 3 Press  **Readout**.
- 4 Press  **Speech rate**.
- 5 Use the Directional Key  to highlight a setting, then press  [Set].

## 2. Invert color

Allows you to invert the color theme.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Accessibility**.
- 3 Press  **Invert color**.
- 4 Use the Directional Key  to highlight a setting, then press  [Set].

## Using the Phone Menu

### 3. Large text

Allows you to use larger font for menus.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Accessibility**.
- 3 Press  **Large text**.
- 4 Use the Directional Key  to highlight a setting, then press  [Set].

### 4. Mono audio

Allows you to play the same sounds to both earpieces so you can hear everything with just one ear.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Accessibility**.
- 3 Press  **Mono audio**.
- 4 Use the Directional Key  to highlight a setting, then press  [Set].

### 5. Turn off all sounds

This menu turns off all of device's sounds.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Accessibility**.
- 3 Press  **Turn off all sounds**.
- 4 Use the Directional Key  to highlight a setting, then press  [Set].

# Settings







This menu allows you to set various phone settings and view phone information.

## 1. Sounds settings

Provides options to customize the phone's sounds.





### 1.1 Master volume

Allows you to quickly set the main Sounds settings for keypad volume, incoming calls and messages (text, multimedia, and Voicemail).

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Sounds settings**.
- 4 Press  **Master volume**.
- 5 Adjust the volume with the Directional Key  and press  [Set] to save the setting.

### 1.2 Call sounds









Allows you to set how the phone alerts you for types of incoming calls.


- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Sounds settings**.
- 4 Press  **Call sounds**.

## Using the Phone Menu

### 1.2.1 Call ringtone







 
Allows you to set the ringtones for incoming calls.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Sounds settings**.
- 4 Press  **Call sounds**.
- 5 Press  **Call ringtone**.
- 6 Highlight a submenu and press  to open it.
- 7 Use the Directional Key  to highlight a ringtone, then press  [Set] to save the sound.

**TIP:** To hear a ringtone before you set it, press the Left Selection Key  [Play].








### 1.2.2 Call vibrate

Allows you to set the phone to vibrate when you receive an incoming call.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Sounds settings**.
- 4 Press  **Call sounds**.
- 5 Press  **Call vibrate**.
- 6 Use the Directional Key  to highlight a setting, then press  [Set].





### 1.2.3 Caller ID Readout

Allows you to set how you want the Caller ID to be read out.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Sounds settings**.
- 4 Press  **Call sounds**.
- 5 Press  **Caller ID readout**.
- 6 Use the Directional Key  to highlight a setting, then press  [Set].

### 1.3 Alert sounds

Allows you to select the alert type sounds.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Sounds settings**.
- 4 Press  **Alert sounds**.
- 5 Select **TXT message/ Multimedia message/ Voicemail/ Emergency tone/ Missed call**.

The Alert sounds menu has these options: **Tone/ Vibrate/ Reminder**

The exception for this is the Emergency tone menu. This menu includes the following options: **Alert/ Vibrate/ Off**.

### 1.4 Keypad volume

Allows you to set the keypad volume.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.

## Using the Phone Menu

- 3 Press **1** **Sounds settings.**
- 4 Press **4** **Keypad volume.**
- 5 Adjust the volume with the Directional Key and press **OK** **[Set]** to save the setting.

### 1.5 Service alerts

Allows you to set any of the three available service alerts.

- 1 Open the flip and press Left Selection Key **[Menu]**.
- 2 Press **#** **Settings.**
- 3 Press **1** **Sounds settings.**
- 4 Press **5** **Service alerts.**
- 5 Select an alert option.

**Call connect** Alerts you when the call is connected.

**Call disconnect** Alerts you when the call is disconnected.

**Charge complete** Alerts you when the battery is completely charged.

- 6 Use the Directional Key to highlight a setting, then press **OK** **[Set]**.

### 1.6 Power on/off






 
Allows you to select the sounds when turning the phone on and off.

- 1 Open the flip and press Left Selection Key **[Menu]**.
- 2 Press **#** **Settings.**
- 3 Press **1** **Sounds settings.**
- 4 Press **6** **Power on/off.**
- 5 Press **1** **Power on** or **2** **Power off.**
- 6 Use the Directional Key to highlight a setting, then press **OK** **[Set]**.

## 1.7 Hearing assist




Allows you to set the phone to automatically adapt to noisy environments by adjusting the listening level and improving speech intelligibility.

**NOTE:** The Hearing assist feature is automatically disabled when you use the speakerphone or the hands-free devices.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Sounds settings**.
- 4 Press  **Hearing assist**.
- 5 Use the Directional Key  to highlight a setting, then press  [Set].

## 2. Display settings

Provides options to customize the phone's display screen.




- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Display settings**.

### 2.1 Backlight

Allows you to set the duration for illuminating the backlight for the main display, front display, and keypad. Each is set separately.







- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.

## Using the Phone Menu

- 3 Press  **Display settings.**
- 4 Press  **Backlight.**
- 5 Highlight a Backlight submenu and press .
  - **Display backlight:**  
7 Seconds/ 15 Seconds/ 30 Seconds/ Always off
  - **Keypad backlight:**  
7 Seconds/ 15 Seconds/ 30 Seconds/ Always off

### 2.2 Brightness





Allows you to set the backlight levels.

- 1 Open the flip and press Left Selection Key  **[Menu].**
- 2 Press  **Settings.**
- 3 Press  **Display settings.**
- 4 Press  **Brightness.**
- 5 Use the Directional Key  to highlight a setting, then press  **[Set].**

**NOTE:** Brightness level can be 1 to 7.

### 2.3 Wallpaper

Allows you to choose the kind of background to be displayed on the phone's LCD in standby mode.

- 1 Open the flip and press Left Selection Key  **[Menu].**
- 2 Press  **Settings.**
- 3 Press  **Display settings.**
- 4 Press  **Wallpaper.**



- 5 Highlight a Wallpaper submenu and press **OK**.
- 6 Highlight a picture and press **OK** **[Set]** to set it as the wallpaper.

## 2.4 Menu style

Allows you to choose between the different themes for the phone's menus.

- 1 Open the flip and press Left Selection Key **[Menu]**.
- 2 Press **##** **Settings**.
- 3 Press **2** **Display settings**.
- 4 Press **4** **Menu style**.
- 5 Use the Directional Key **[Up]** to highlight a setting, then press **OK** **[Set]**.

**NOTE:** Press the Left Selection Key **[Menu]** **[Preview]** to preview the selected display theme. The default setting is Grid.

## 2.5 Font type


Allows you to set the font type.








- 1 Open the flip and press Left Selection Key **[Menu]**.
- 2 Press **##** **Settings**.
- 3 Press **2** **Display settings**.
- 4 Press **5** **Font type**.
- 5 Use the Directional Key **[Up]** to highlight a setting, then press **OK** **[Set]**.

**NOTE:** Press the Left Selection Key **[Menu]** **[Preview]** to preview the selected font type.

## Using the Phone Menu

### 2.6 Font size


Allows you to set the font size for Dial digits, Menu & List and Message. The Resizable setting allows you to use the Volume Keys  to instantly scale screen fonts. This setting is helpful for those who need the text to display a little bit larger.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  Settings.
- 3 Press  Display settings.
- 4 Press  Font size.
- 5 Use the Directional Key  to highlight **Dial digits/ Menu & list/ Message**.
- 6 Press the Directional Key  left and right to scroll through the settings, then press  [Set].

**Dial digits:** Resizable/ Small/ Normal/ Large




**Menu & list:** Resizable/ Small/ Normal/ Large

**Message:** Resizable/ Small/ Normal/ Large


**NOTE:** Press the Left Selection Key  [Preview] to preview the selected font size.

### 2.7 Clock format

Allows you to choose the kind of clock to be displayed on the front and main LCD screens.







- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  Settings.
- 3 Press  Display settings.

- 4 Press  **Clock format.**
- 5 Use the Directional Key  to highlight a setting, then press  **[Set].**

**NOTE:** Press the Left Selection Key  **[Preview]** to preview the selected clock format.

## 2.8 Name match for dialing

Allows you to display names when entering matching phone numbers to dial.







- 1 Open the flip and press Left Selection Key  **[Menu].**
- 2 Press  **Settings.**
- 3 Press  **Display settings.**
- 4 Press  **Name match for dialing.**
- 5 Use the Directional Key  to highlight a setting, then press  **[Set].**

## 3. Phone settings

The Phone Settings menu allows you to designate specific settings to customize how you use your phone.

### 3.1 Airplane mode

Turning on Airplane mode will disable all wireless communications.


- 1 Open the flip and press Left Selection Key  **[Menu].**
- 2 Press  **Settings.**
- 3 Press  **Phone settings.**
- 4 Press  **Airplane mode.**
- 5 Use the Directional Key  to highlight a setting, then press  **[Set].**










# Using the Phone Menus

## 3.2 Set shortcut keys


Allows you to set shortcuts to phone menus using the down, up, left and right Directional Keys.




### 3.2.1 Set my shortcuts

**NOTE:** To access these shortcuts, press the Directional Key  from standby mode (by default) to display My shortcuts.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Phone settings**.
- 4 Press  **Set shortcut keys**.
- 5 Press  **Set my shortcuts**.
- 6 Use the Directional Key  to highlight a shortcut key you want to set.
- 7 Press  **[Set]** to display the available shortcuts. Use the Directional Key  to highlight one, then press  **[Set]**.

### 3.2.2 Set directional keys

**NOTE:** To access these shortcuts open the flip, then press the Directional Key  in the direction (up, left) set from standby mode for the Shortcut you want to access.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Phone settings**.







- 4 Press  **Set shortcut keys.**
- 5 Press  **Set directional keys.**
- 6 Use the Directional Key  to highlight a shortcut key you want to set.
- 7 Press  **[Set]** to display the available shortcuts. Use the Directional Key  to highlight one, then press  **[Set]**.

### 3.3 Voice commands

Please refer to page 63 for details.







### 3.4 Language

Allows you to set your preferred language (English or Spanish).

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Settings.**
- 3 Press  **Phone settings.**
- 4 Press  **Language.**
- 5 Use the Directional Key  to highlight a setting, then Press  **[Set]**.

### 3.5 Location

Allows you to set GPS (Global Positioning System: Satellite assisted location information system) mode.

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Settings.**
- 3 Press  **Phone settings.**
- 4 Press  **Location.**
- 5 Use the Directional Key  to highlight a setting, then press  **[Set]**.





## Using the Phone Menus

### NOTES:

- GPS satellite signals are not always received by the phone, especially under bad atmospheric and environmental conditions, indoors, etc.
- When in Airplane Mode, services supporting Location On functionality will be suspended.

## 3.6 Security





The Security menu allows you to secure the phone electronically.


- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Phone settings**.
- 4 Press  **Security**.
- 5 Enter the four-digit lock code.

The lock code is the last 4 digits of your mobile phone number if it is set. The lock code is the last 4 digits of your MEID if your mobile phone number is not set.

### 3.6.1 Edit codes





 


 
Allows you to enter a new four-digit lock code.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Phone settings**.
- 4 Press  **Security**.
- 5 Enter the four-digit lock code.

- 6 Press  **Edit codes.**
- 7 Select **Phone only** or **Calls & services.**
- 8 Enter your new four-digit lock code.
- 9 For confirmation, you will be prompted to enter the new lock code again.

### 3.6.2 Restrictions

Allows you to set separate restrictions for calls, text and multimedia messages, and data.

- 1 Open the flip and press Left Selection Key  **[Menu].**
- 2 Press  **Settings.**
- 3 Press  **Phone settings.**
- 4 Press  **Security.**
- 5 Enter the four-digit lock code.
- 6 Press  **Restrictions.**
- 7 Enter the four-digit service code.
- 8 Select a Restrictions menu, then press .
- 9 Use the Directional Key  to highlight the restriction then press .

**Calls: Incoming calls** Allow all/ Contacts only/ Block all

**Calls: Outgoing calls** Allow all/ Contacts only/ Block all

**Text msgs: Incoming messages** Allow all/ Contacts only/ Block all

**Text msgs: Outgoing messages** Allow all/ Contacts only/ Block all

**Multimedia msgs: Incoming messages** Allow all/ Contacts only/ Block all





**Multimedia msgs: Outgoing messages** Allow all/ Contacts only/ Block all

**Data:** Allow all/ Block all

## Using the Phone Menus

### 3.6.3 Phone lock setting

Keeps your phone from unauthorized use. Once the phone is locked, it's in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls. You can modify the lock code using Edit codes submenu within the Security menu.






- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Phone settings**.
- 4 Press  **Security**.
- 5 Enter the four-digit lock code.
- 6 Press  **Phone lock setting**.
- 7 Highlight an option and press  [Set].

**Unlocked** The phone remains unlocked, by default.


**On power up** The phone is locked when it is turned on.

### 3.6.4 Lock phone now

Allows you to lock your phone immediately.








- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Phone settings**.
- 4 Press  **Security**.
- 5 Enter the four-digit lock code.
- 6 Press  **Lock phone now**.



**NOTE:** To unlock the phone from standby mode, press the Right Selection Key  **[Unlock]** and enter the four-digit lock code.

### 3.6.5 Reset default






 
Allows you to reset your phone to the factory default settings.

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Settings**.
- 3 Press  **Phone settings**.
- 4 Press  **Security**.
- 5 Enter the four-digit lock code.
- 6 Press  **Reset default**.
- 7 Press  after reading the warning message.
- 8 Highlight **Revert** and press .

A confirmation message is displayed briefly before the phone resets itself.

### 3.7 System select

Allows you to set up the phone management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

- 1 Open the flip and press Left Selection Key  **[Menu]**.
- 2 Press  **Settings**.
- 3 Press  **Phone settings**.
- 4 Press  **System select**.
- 5 Use the Directional Key  to highlight a setting, then press  **[Set]**.








## Using the Phone Menus

### 4. Call settings

The Call settings menu allows you to set various configurations for calling features.

#### 4.1 Answer options

Allows you to determine how the phone will answer an incoming call.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Call settings**.
- 4 Press  **Answer options**.
- 5 Use the Directional Key  to select the setting(s) you want to use, then press  [Mark].
- 6 Press the Left Selection Key  [Done] when you have marked the setting(s) you want.

**NOTE:** Auto with handsfree is available when any external device is connected to your phone or speaker is set to on.

#### 4.2 TTY mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.

- 3 Press **4** **Call settings**.
- 4 Press **2** **TTY mode**.
- 5 An explanation message is displayed.
- 6 Press **OK** to continue.
- 7 Use the Directional Key **⬇** to highlight a setting, then press **OK** **[Set]**.

**TTY full:** Users who cannot talk or hear send and receive a text message through TTY equipment.

**TTY + talk:** Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

**TTY + hear:** Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

**TTY off:** Users send and receive without TTY equipment.

## Connecting TTY Equipment and a Terminal

- 1 Connect a TTY cable to TTY connection on the terminal (TTY connection location is the same as a headset jack).
- 2 Enter the phone menu and set the desired TTY mode.
- 3 After setting a TTY mode, check the LCD screen of the phone for the TTY icon.
- 4 Connect the TTY equipment to the power source and turn it on.
- 5 Make a phone connection to the desired number.
- 6 When connection is made, use the TTY equipment to type in and send a text message or send voice.
- 7 The voice or text message from the receiver end displays on the TTY equipment display.







# Using the Phone Menu

## TTY mode (Teletypewriter)

Menu	User	Menu	Transmission/ Receiving Mode	When making communications with a non-TTY terminal
TTY full	For hearing-/ verbally- impaired		Text message transmission, text message receiving	Operator required
TTY + talk	For hearing- impaired	Able to talk	Voice transmission, text message receiving	Operator required
TTY + hear	For verbally- impaired	Audible	Text message transmission, voice receiving	Operator required
TTY off			Voice transmission, voice receiving	







## 4.3 One touch dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed dial numbers designated in your Contacts will not function.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  Settings.
- 3 Press  Call settings.
- 4 Press  One touch dial.
- 5 Use the Directional Key  to highlight a setting, then press  [Set].







## 4.4 Voice privacy

Allows you to set the voice privacy feature for CDMA calls. CDMA offers inherent voice privacy. Check with your service provider for availability.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Call settings**.
- 4 Press  **Voice privacy**.
- 5 Use the Directional Key  to highlight a setting, then press  [Set].






## 4.5 DTMF tones

Allows you to set the DTMF tone length.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Call settings**.
- 4 Press  **DTMF tones**.
- 5 Use the Directional Key  to highlight a setting, then press  [Set].

## 5. Memory




Allows you to check your phone's internal memory. Shows the memory information saved in your phone.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Memory**.
- 4 Use the Directional Key  to select a submenu, then press  to view the memory used.

# Using the Phone Menus





## 6. Phone info

Allows you to view the information specific to your phone and software.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Phone info**.





### 6.1 My number

Allows you to view your phone number.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Phone info**.
- 4 Press  **My number**.




### 6.2 ESN/MEID

Allows you to view your phone's ESN/ MEID number.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Phone info**.
- 4 Press  **ESN/MEID**.

### 6.3 Icon glossary





Allows you to view all the icons and their meanings.

- 1 Open the flip and press Left Selection Key  [Menu].
- 2 Press  **Settings**.
- 3 Press  **Phone info**.

- 4 Press  **Icon glossary.**
- 5 Select a submenu and browse through the icons.



## 6.4 SW/HW version

Allows you to view the versions of various applications such as SW, PRL, Browser, AVR, MMS, Bluetooth, and hardware version.

- 1 Open the flip and press Left Selection Key  **[Menu].**
- 2 Press  **Settings.**
- 3 Press  **Phone info.**
- 4 Press  **SW/HW version.**

## 6.5 Open Source License

Allows you to view the Open Source License.

- 1 Open the flip and press Left Selection Key  **[Menu].**
- 2 Press  **Settings.**
- 3 Press  **Phone info.**
- 4 Press  **Open Source License.**

## Using the Phone Menu

### **Notice: Open Source Software**

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.



## Safety

The highest SAR value for this model phone when tested for use at the ear is 1.18 W/kg and when worn on the body, as described in this user guide, is 0.79 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on FCC ID ZNFVN170.

- To reduce risk of fire or burns, do not expose to temperature above 45°C (113°F), or dispose of in fire.
- To reduce risk of fire or burns, do not dispose of in fire or water.
- Do not disassemble or open crush, bend or deform, puncture or shred.
- There is a danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 45°C (113°F), or dispose of in fire or water. Keep this product away from excessive moisture and extreme temperatures. Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain any metal. Please only use an approved charging accessory to charge

## Safety

your LG phone. Improper handling of the Accessory/Charger Port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.

# Glossary

## Terminology

### **Ez tip calculator**

Feature for easy bill calculation using the total cost, tip, and number of people as variables.

### **Voice commands**

Feature that allows you to perform a wide range of verbal commands by training the phone to recognize your individual speech patterns.

### **Bluetooth® wireless technology**

Technology used to allow mobile phones, computers, and other personal devices to be easily coordinated and interconnected using a short-range wireless connection.

## Acronyms and Abbreviations

### **DTMF**

**Dual-Tone Multi Frequency** (or “touch-tone”) is a method used to communicate keys pressed on the phone. Pressing a key generates two simultaneous tones, one for the row and one for the column to determine which key was pressed.

### **GPS**

**Global Positioning System** is a system of satellites, computers, and receivers able to determine the latitude and longitude of a specific receiver on Earth.

Position is calculated using time and distance.

## Glossary

### **IS 2000**

Type of digital signaling. It's the second generation of CDMA digital cellular, an extension of IS-95. Differences between signaling types have to do with pilot signal and links to provide more traffic channels, and control protocols.

### **NAM**

**N**umber **A**ssignment **M**odule is how the phone stores the phone number and its electronic serial number.

### **SSL**

**S**ecure **S**ockets **L**ayer Protocol is used to encrypt data sent over the air.

### **TTY**

**T**ele**t**ypewriter. An electromechanical typewriter that either transmits or receives messages coded in electrical signals. A phone with TTY support is able to translate typed characters to voice or translate voice into characters to display on the TTY.

