




PARTS & SERVICE DEPARTMENT
 Nashville, Tennessee
 615-889-8900 / Fax: 615-547-1000
 www.Lochinvar.com

Replacement Parts List

**Residential Gas
 Flammable Vapor Ignition
 Resistant Water Heaters**

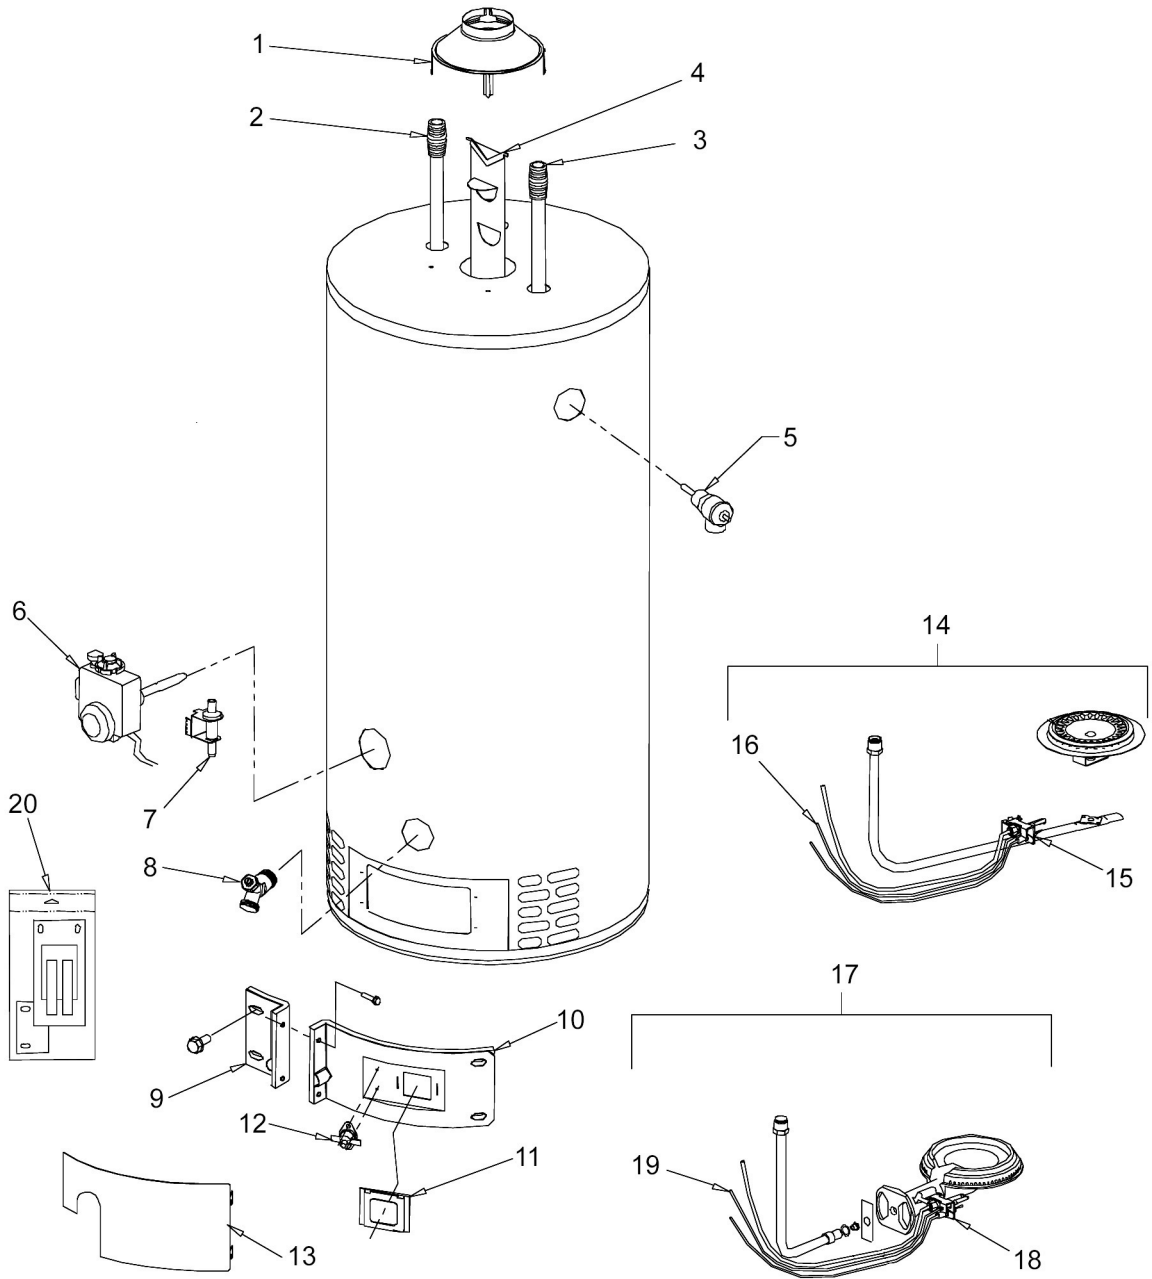

ITEM NO.	PART NO.	DESCRIPTION	MODEL NUMBER
1	DRH1000	Draft Hood	LT(N,L)040-4, LT(N,L)051, XD(N,L)050
1	DRH1020	Draft Hood	L(S,T)(N,L)030, L(S,T)(N,L)040, L(S,T)(N,L)040-3, LT(N,L)050
1	DRH1021	Draft Hood	LT(N,L)050-4
2	WTR1019	Hot Water Outlet/Anode, Magnesium	All Models
2	WTR1040	Hot Water Outlet/Aluminum Anode assembly	All Models
3	WTR1018	Cold Water Inlet Tube	All Models
4	JKT1005	Flue Baffle	LS(N,L)030
4	JKT1008	Flue Baffle	LT(N,L)040, LT(N,L)040-3
4	JKT1009	Flue Baffle	LT(N,L)050
4	JKT1010	Flue Baffle	LS(N,L)040, LS(N,L)040-3
4	JKT1011	Flue Baffle	LT(N,L)040-4, LT(N,L)050-4
4	JKT1013	Flue Baffle	LT(N,L)030
4	JKT1055	Flue Baffle	LT(N,L)051, XD(N,L)050
5	RLV1001	T&P Relief Valve	All Models
6	TST1006	Robertshaw Natural Gas Thermostat Kit	All Models
6	TST1000	Robertshaw Natural Gas Thermostat Kit	LTN051
6	TST1013	Robertshaw Natural Gas Thermostat Kit	XDN050
6	TST1007	Robertshaw LP Gas Thermostat Kit	All Models
6	TST1011	Robertshaw LP Gas Thermostat Kit	LTL051
6	TST1018	Robertshaw LP Gas Thermostat Kit	XDL050
7	PLT1063	Piezo Igniter	All Models
8	DRV1007	Brass Drain Valve	All Models
9	JKT1017	Left Side Inner Door with Gasket	LT(N,L)030
9	JKT1006	Left Side Inner Door with Gasket	LS(N,L)030, LT(N,L)040, LT(N,L)040-3, LT(N,L)040-4
9	JKT1019	Left Side Inner Door with Gasket	LS(N,L)040, LS(N,L)040-3, LT(N,L)050, LT(N,L)050-4, LT(N,L)051, XD(N,L)050
10	JKT1018	Right Side Inner Door with Gasket	LT(N,L)030
10	JKT1007	Right Side Inner Door with Gasket	LS(N,L)030, LT(N,L)040, LT(N,L)040-3, LT(N,L)040-4
10	JKT1021	Right Side Inner Door with Gasket	LS(N,L)040, LS(N,L)040-3, LT(N,L)050, LT(N,L)050-4, LT(N,L)051, XD(N,L)050
11	MSC1005	Sight Glass Assembly	All Models
12	RLY1002	Resettable Thermal Switch	LS(N,L)030, LTL040, LTL040-3, LS(N,L)040, LS(N,L)040-3, LT(N,L)050-4
12	PRS1024	Resettable Thermal Switch	LT(N,L)050, LT(N,L)051, XD(N,L)050
12	RLY1003	Resettable Thermal Switch	LT(N,L)030, LTN040, LTN040-3, LT(N,L)040-4
13	JKT1029	Outer Door	All Models
14	BNR1012	Complete NAT Burner Assembly	LSN030
14	BNR1022	Complete NAT Burner Assembly	LTN040, LTN040-3
14	BNR1025	Complete NAT Burner Assembly	LSN040, LSN040-3, LTN050
14	BNR1034	Complete NAT Burner Assembly	LTN040-4
14	BNR1036	Complete NAT Burner Assembly	LTN050-4
14	BNR1038	Complete NAT Burner Assembly	LTN030
14	BNR1069	Complete NAT Burner Assembly	LTN051, XDN050
15	PLT1067	Pilot Assembly Natural Gas	All Models
16	PLT1010	Thermocouple	All Models
17	BNR1021	Complete LP Cast Iron Burner Assembly	LTL030
17	BNR1023	Complete LP Cast Iron Burner Assembly	LTL040, LTL040-3
17	BNR1033	Complete LP Cast Iron Burner Assembly	LTL040, LTL040-3, LTL050
17	BNR1035	Complete LP Cast Iron Burner Assembly	LTL040-4
17	BNR1037	Complete LP Cast Iron Burner Assembly	LTL050-4
17	BNR1039	Complete LP Cast Iron Burner Assembly	LTL030
17	BNR1083	Complete LP Cast Iron Burner Assembly	LTL051, XDL050
18	PLT1061	Pilot Assembly LP Gas	All Models
19	PLT1010	Thermocouple	All Models
20	GKT1014	Inner Door Gasket kit	All Models

PLEASE HAVE MODEL NUMBER AND SERIAL NUMBER WHEN ORDERING PARTS