

Activate Lil Pump

LT

LB

Tank Drive (left)

Main Controller

Activate Lil Pump

RT

RB

Y: Raise winch

X

B: Spit cube

A: Lower winch

Tank Drive (right)



Co Controller

Activate Lil Pump

LT: Left intake wheel

RT: Right intake wheel

LB: while held, square cube left

RB: while held, square cube right

Y:

X

B: Toggle lift piston

Tank Drive (left) .5 speed

A:

Tank Drive (right) .5 speed

