

## User manual



## TAB-10C010-232

Congratulations on the purchase of your new tablet!

 
This manual contains important safety and operating information in order to prevent accidents!  
Please read this manual thoroughly and keep it for future reference.

**The information contained in this manual can be modified or extended without any prior notice.**

## Safety precautions

- To use this Tablet safely, please read and follow the instructions in this manual thoroughly before use.
- Never use the Tablet while driving or when operating any vehicle, as this could cause accident(s). It is also against the law in many areas.
- Do not listen to music at very high volumes using the earphones as this can permanently damage your hearing.
- Keep the Tablet clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- Do not put the Tablet in high temperature areas (over 40°C), especially not in a car with the windows closed in the summer.
- Keep the Tablet away from strong magnetic fields!
- Please don't turn on the device in areas where wireless equipment is forbidden or when the usage of the device will cause interference and danger.
- Press the Tablet's buttons gently. Pressing the buttons or the screen too hard can damage the Tablet.
- Do not use the Tablet in an extremely dry environment, as this can lead to static discharge, which can damage the Tablet.
- Do not subject the product to harsh impacts.
- Do not drop the appliance. This may result in damage to the product.
- Do not attempt to dismantle or repair this unit yourself, Repairs should be performed by qualified personnel only.
- We will not be responsible for any data loss caused by product damage, repairs or other reasons.
- In order to prevent program failure, never disconnect the Tablet suddenly from a connected device during downloading, uploading or formatting.
- Use a slightly damp, lint-free cloth to clean the Tablet. Do not use alcohol, thinner or benzene to clean the surface!
- Disconnect the tablet from its power source when cleaning it.

**About the tablet:**

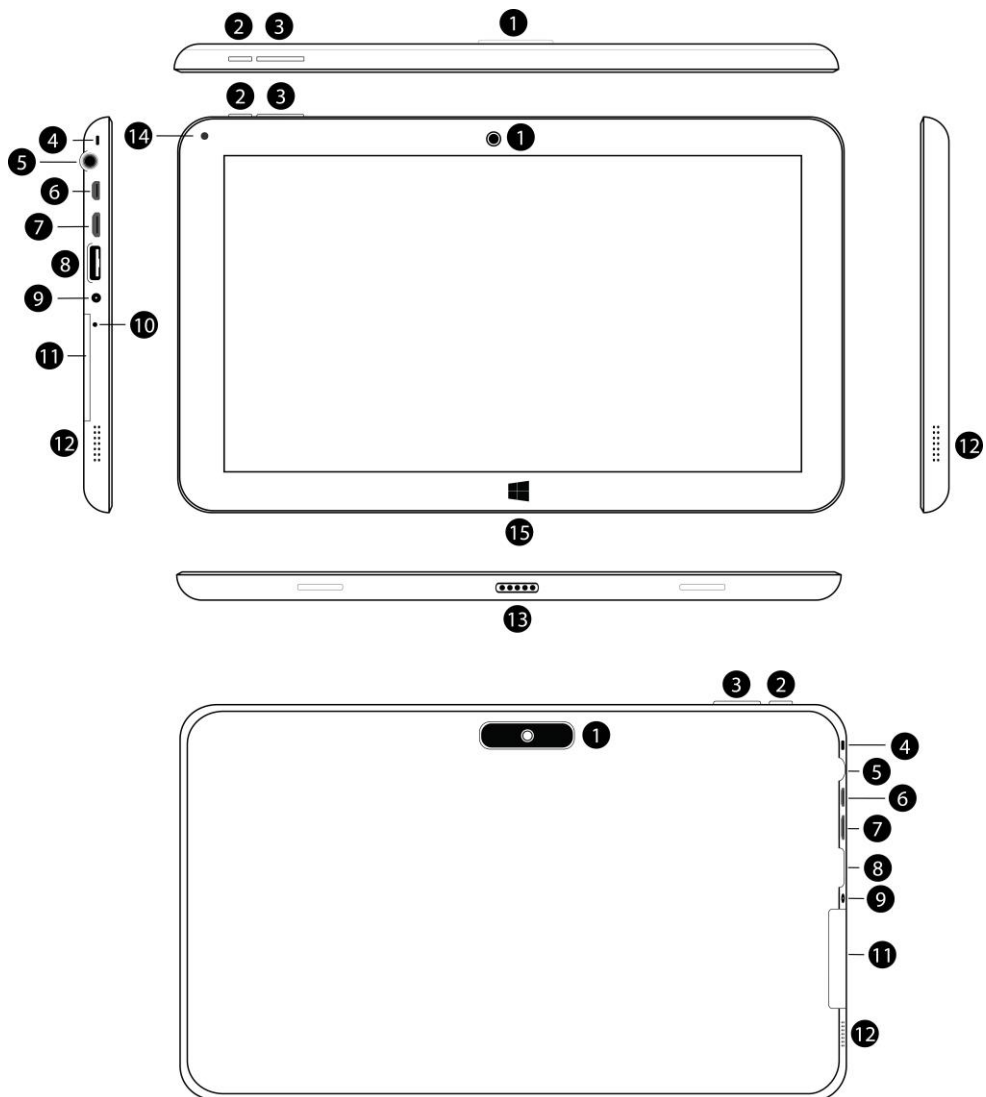


- |               |                              |
|---------------|------------------------------|
| 1. Camera     | 9. DC in                     |
| 2. On/off     | 10. Reset                    |
| 3. Volume +/- | 11. Micro SD + SIM card slot |
| 4. Microphone | 12. Speaker                  |
| 5. Headphone  | 13. POGO pin connector       |
| 6. Mini USB   | 14. Charging LED             |
| 7. Mini HDMI  | 15. Windows Button           |
| 8. USB        |                              |

## Introduction

1. Windows 10: Welcome to our traditional start screen. You have 2 options to choose from. Either you use your tablet in tablet mode or in desktop mode. (Desktop mode in picture 1) You can adjust this in the action center.



Picture 2 (Shows how to turn on tablet mode / desktop mode)

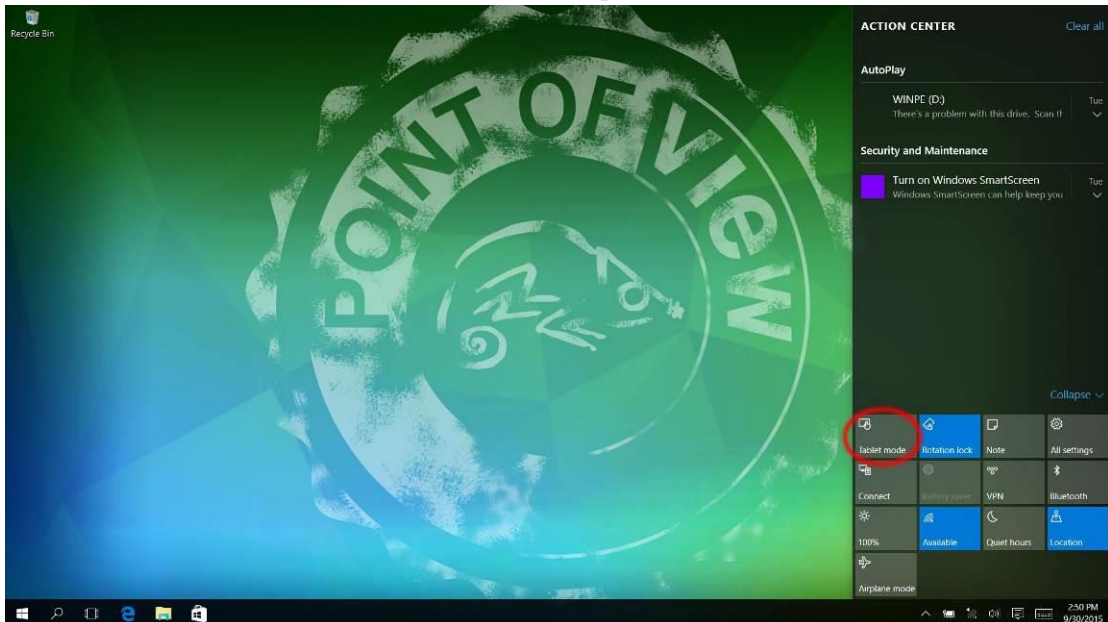 

## 2. Image slide applications

Slide to the right side,  
To move to the next screen (left sided)



Slide to the left side,  
To move to the next screen (right sided)



Reduce



On the touch screen, narrow two fingers  
to reduce the image size.

Enlarge



On the touch screen, widen two fingers  
to enlarge the image size

Slide downward,  
Pull down for system information



On the touch screen, slide from the bottom to the top

Slide with finger,  
General left - right hand movement.



Slide upward



Slide from bottom to top for system information.

 
### 3. Introduction to app Interface



Besides the application programs already fixed on the start screen, you can also start other programs in “all apps”, such as other software installed on the Tablet PC.

### 4. Device Menu


From the device menu you will be able to add or remove existing devices that are available within your network. For example: Printers, scanners, etc.

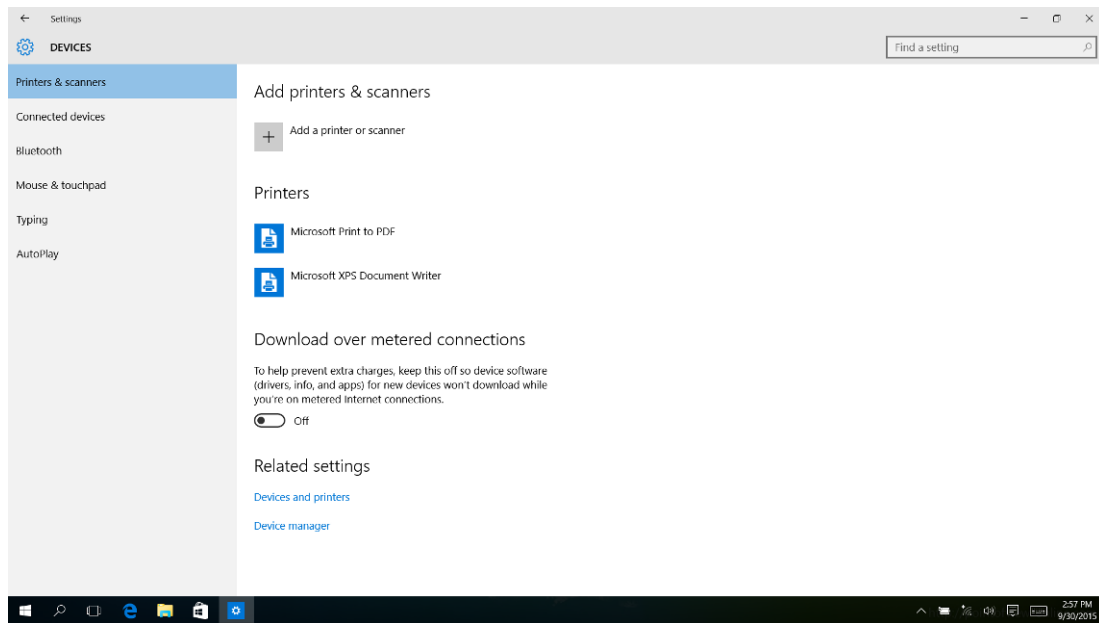

## 5. Dual-Screen Application

When you have an application open you can split and make it snap for dual screen purposes. The easiest way to make this split, (snap to the left) press the Windows logo + arrow key left. (Snap to the right) Windows logo + arrow key right.

 The program you have selected will snap. For example take the Calendar as shown below. Select the running program. Then use the combination Windows logo + arrow key right side.

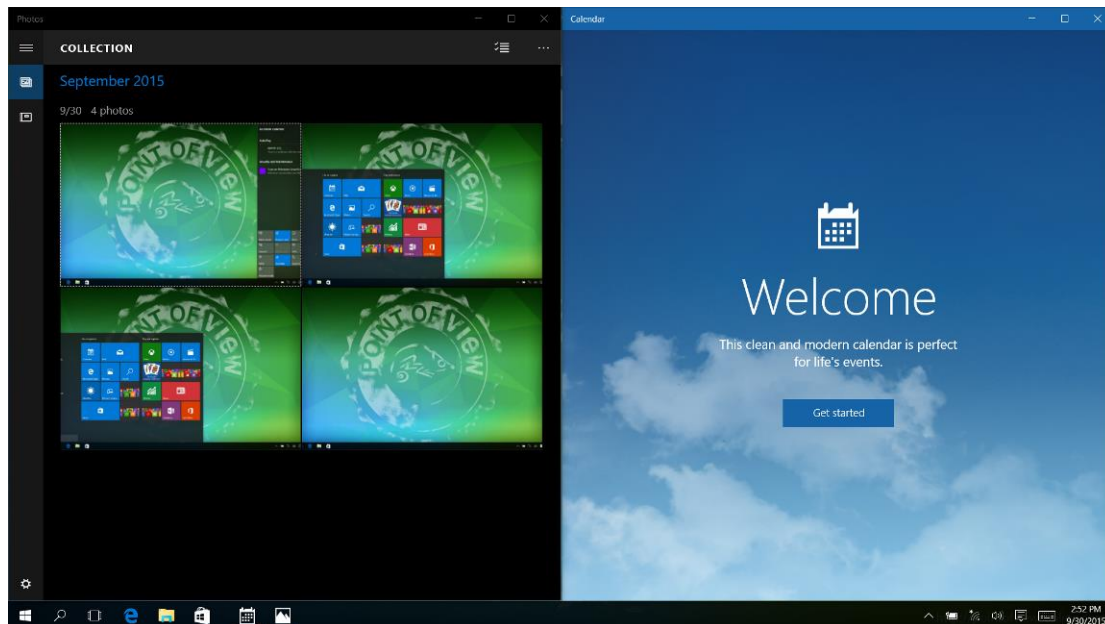


## 6. Dormancy, restart and power off




Here we can shut down / restart or bring the tablet in Dormancy mode.
 
## 7. Windows 10 settings screen (Control panel)

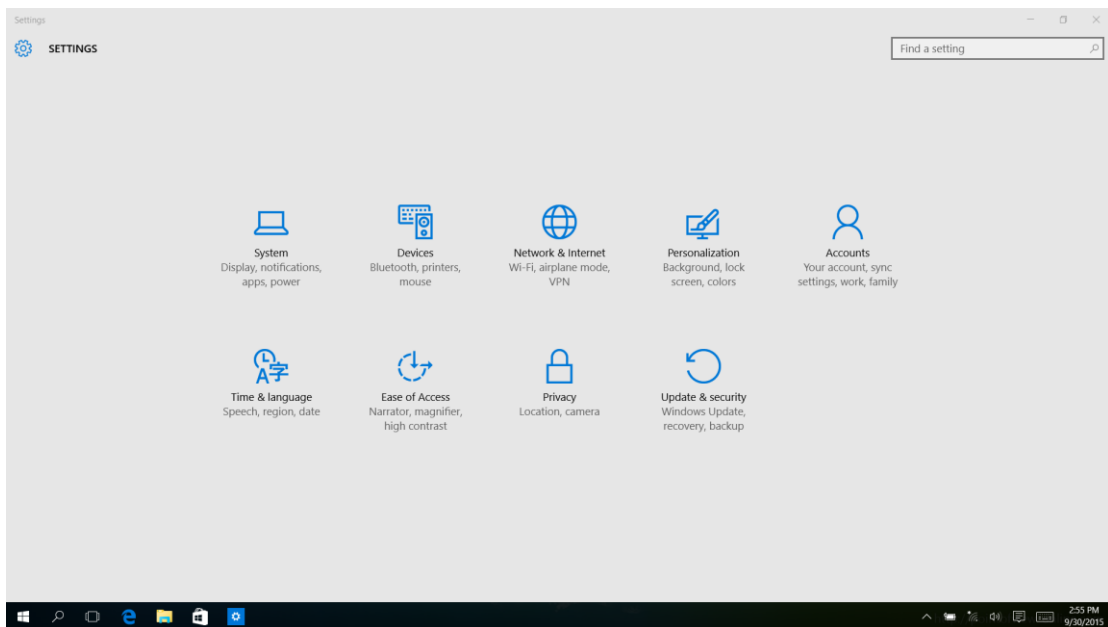

This is our “Control Panel” From this screen you will be able to edit almost everything for your Windows device.


## 8. Update & Security

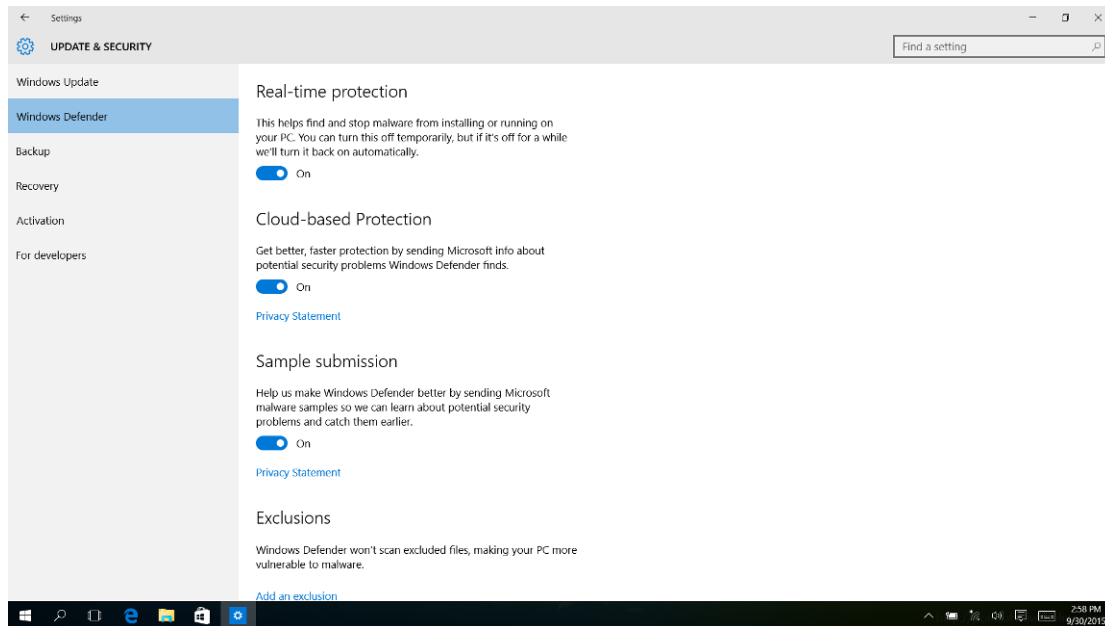 

Here you can see the security details of your Windows device.  
From this screen we will also perform Windows updates.

## 9. Account(s) settings

 Here you can adjust the account(s) settings of the device.

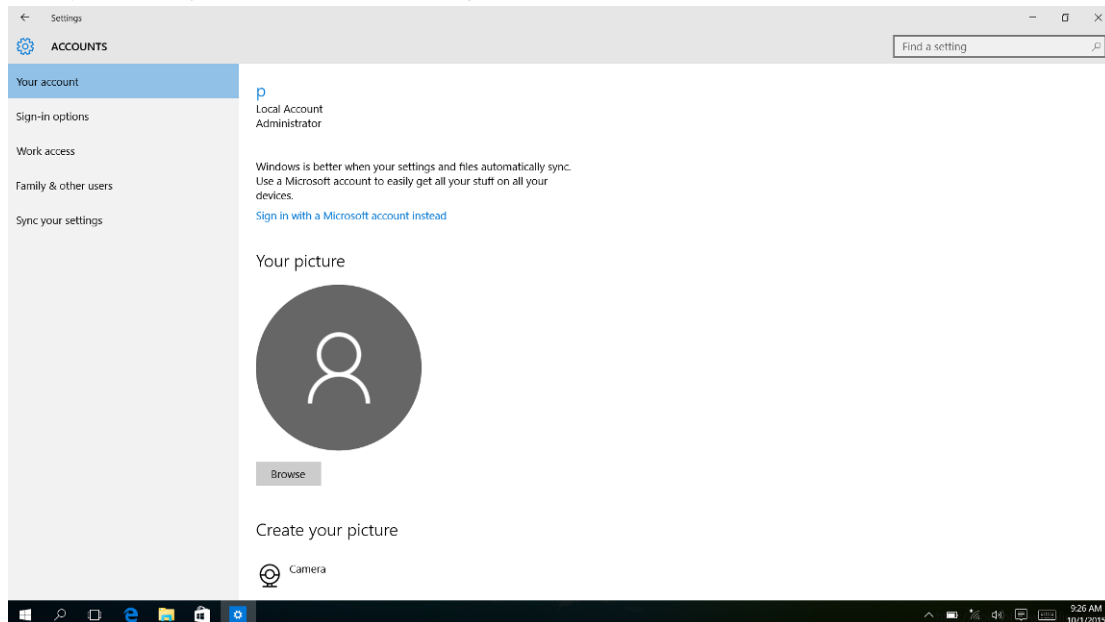

### 10. **How to use 3G!** (Optional)

When you have a 3G/4G version: (Look at the barcode on the back!)

You can insert the SIM card in the SIM card slot; you will get notified by your Windows device that you have the ability to make a connection with a local telecom provider or a local Wi-Fi signal.

When you are in the Action center, you will see a Wi-Fi symbol with Available next to it.

Press this button, you will see all available connections for your Windows device(s).

If you want to make an active 3G connection, please turn on “Mobile Broadband”.

### Troubleshooting

Problem	Solution
The device will turn itself off after a few seconds	Check if the battery is charged.
No volume is perceptible	Adjust the volume level Check if the audio file is broken
Screen is hard to see in bright light.	Adjust the screen brightness in the system menu. Avoid using the reader in direct sunlight.
Data on the screen is corrupted or a program is not responding properly	keep the power button pressed down for a long time to restart your Tablet
Can't copy files into the hard drive	Check if the device is connected to the computer correctly. Check if the memory space is full. Check if the USB cable is broken

Point of View B.V., declares that this Tablet PC is in compliance with the essential requirements and other relevant provisions of directive 1999/5/EC. The declaration of conformity may be consulted at [www.pointofview-online.com/DOC/](http://www.pointofview-online.com/DOC/)