

QUICK GUIDE

DOORS AND LOCKS

If the key fob batteries become discharged. Place the key fob on the section of the cup holder housing immediately behind the switch panel, to drive the car.

Configurable features

Auto door lock	Doors lock when vehicle drives away.
Door unlock	Only driver's door unlocks when an unlock request is received.

USA only

Operation of the key fob is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Canada only

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage.
2. L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.