

# Predator 24

CONTROLLER FOR PlayStation®2



**PELICAN**  
*Performance you can trust*



PL-6613

PL-6614

Ref#: 080805

# IMPORTANT NOTICE



Predator 2.4  
FCC ID: O7X-PRED-S1  
FCC ID: O7X-PRED-S2

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Pelican** and its logo are registered trademarks.

Sony is a registered trademark of **Sony Corp.**

PlayStation® 2 & PlayStation® are registered trademarks of **Sony Computer Entertainment Inc.**

This product is not designed, manufactured, sponsored or endorsed by **Sony Computer Entertainment Inc.**

# Table of Contents

Console Protection Guarantee .....	3
Product Layout.....	4-5
Overview .....	6
Features/Benefits .....	7
Directions .....	9
Trouble Shooting.....	10
Warranty/CustomerService.....	11

 
 
 
# Console Protection Guarantee



Pelican's Console Protection Guarantee assures you of Pelican's commitment to quality and customer satisfaction. The Protection Guarantee warrants the connection (the plug port of the video game console and the plug of the Pelican controller) between the controller and your video game console system., i.e., that with the proper use of our controller (see manual) we agree to replace or repair your video game system in the event that our controller directly causes damage to your game console as a result of our controller failing to perform properly. Circumstances that may cause our protection guarantee to take effect might be one of the following :the video game console does not acknowledge a controller which has been plugged in, original controller fails to operate after using a Pelican controller, other non-pad controllers fail to operate after using a Pelican Controller. This protection warranty does not include the video game power supply, any part relating to the CD/DVD load and read mechanism, internal operating system, nor the cabinet of the video game system. This warranty will not apply if the Pelican controller is not used as directed in the product manual enclosed. For further information or help please contact us toll free at (800) 331-3844 or on line at <http://www.pelicanperformance.com>


# Product Layout

## Predator 2.4 Controller

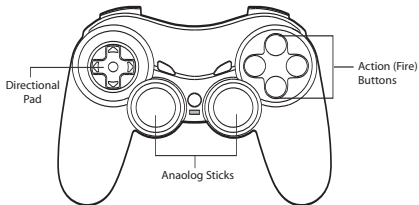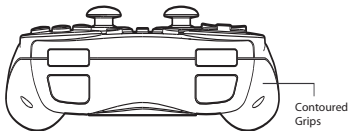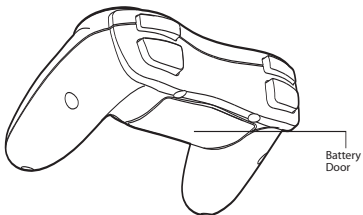


# Receiver/Transmitter Unit

 **Front View**

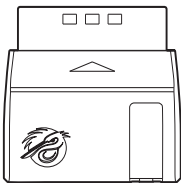

**Back View**

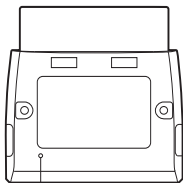 

Connect Button

**Bottom View**



Signal LED

## Overview

The Predator 2.4 Wireless Controller uses advanced 2.4 GHz technology and Channel-Hopping which gives you the ability to play without the limitations and hassles of typical corded controllers and switch-dependent controllers. All of this gives you lightning fast control over your favorite games without cords to trip over, channels to set, or fears of outside interference disturbing play control. There are a few buttons, LED's (lights), and features not found on your basic PlayStation®2 Controller. The following is an explanation of these elements.

**Auto-Hopping** This removes the hassle of setting channels via a series of switches or having your connection corrupted by interference. Auto-hopping moves to the nearest, clearest channel for you, with no breaks in play, to make sure your signal never lags behind your commands. Simply push the Reset Hole on the receiver, wait three seconds and press the Start button on the controller to make a connection.

# Features & Benefits

## **Auto On/Off:**

Touch any of the four action buttons Start, or Select to power up your new wireless controller.

**Hyper-Responsive Controls:** Our controls are made out of top quality components so that you lose nothing in control and response when you need it most and over the life of your controller.

## **Signal LED:**

Multi-function LEDs:

LED lights on controller and receiver are used to indicate various functions as illustrated in chart below.

LED OFF = Power OFF

LED solid RED = ANALOG mode

LED flash every 3-seconds = seeking connection with receiver

LED fast GREEN flash = Action buttons depressed

## **Rumble On/Off**

Depressing and holding the DOWN direction on the Directional Pad (D-Pad) while pressing the SELECT button once turns off the rumble motor. A short rumble indicates success. Depressing and holding the UP direction on the D-Pad while pressing the SELECT button once turns the rumble motors on. A long rumble indicates success.



### **Battery Compartment:**

Predator 2.4 Wireless Controller requires the use of two AA batteries (not included). The batteries were placed to balance the weight perfectly in the controller to increase comfort and controlling. Double check and make sure batteries are inserted correctly.

### **Power Save Mode:**

 
When not in use for 3 minutes the Predator 2.4 Wireless Controller automatically goes into a sleep mode to conserve batteries. A touch of any action button puts the controller back into play mode. Holding the Start button for 5 seconds will send the pad to sleep. After 15 minutes of non-use, it will power off. Press the Start button or one of the four action buttons to return the controller from sleep.

## **WARNING**

Please verify that all the batteries are inserted correctly. If they are put in wrong to inserted incorrectly, it may cause personal injury as well as damage to your Predator 2.4 Wireless Controller.

## Directions

1. Make sure your PlayStation®2 is turned off.
2. Remove the battery lid and place 2 AA batteries into the Predator 2.4 Wireless controller. Make sure the batteries are inserted as shown in the battery compartment. A pair of matched, fresh, premium, batteries will yield best results.
3. Insert the receiver into the PlayStation®2 controller slot 1 (or slot 2 if slot 1 is already occupied) and power up the Predator 2.4 and then your PlayStation®2. **Note:** Locate the Connect Button at the bottom of the receiver. Insert a pin into the hole and push the Connect Button inward once on the receiver (Signal LED will FLASH Slowly). Then press the Select Button on controller. This programs the Receiver to connect to that Controller every time it is used. This operation can be done again and again to connect to multiple Controllers.

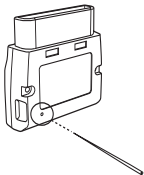

4. Alternatively, if any problems should occur during play (due to low batteries, receiver disconnection from the system, etc.) you can turn the controller off and then on, check the control, and if you still do not have signal, press the connect button on the receiver, wait three seconds and then press the Start button or one of the action Buttons.

**Note:** If you are using more than one Predator 2.4 Wireless Controller, simply repeat the above steps and it should connect exactly the same way on an available channel.

5. Insert a game into your PlayStation®2.
6. You are now ready to play.

## Troubleshooting

If you are having difficulties with your new Predator 2.4 Wireless Controller please refer below:

### ***My system turns on but I don't see anything on the TV.***

1. Check to verify that your A/V cable is properly connected to your system.
2. Check to verify that your A/V cable is properly plugged into your television set.

### ***My Predator 2.4 Wireless Controller does not respond.***

1. Check to verify that your batteries are inserted correctly.
2. Check to verify that the power is on. Check to verify that the signal LED is blinking.

### ***The power LED is on but my Predator 2.4 does not respond while in the system menu.***

1. Check to verify your Predator 2.4 Receiver / Transmitter unit is firmly and properly plugged into correct controller port.
2. Check to verify that the receiver is firmly connected to the system and the light is on. Then, press the connect button, wait three seconds and press Start or any action button on the controller in the corresponding slot.

## Warranty Card

Pelican warrants to the original consumer purchaser that the product will be free from defects in materials and / or workmanship for a period of 5 years from the date of purchase. If a defect covered by this warranty occurs during this period, Pelican at its option will repair or replace, at no charge, any part that Pelican determines to be defective.

To obtain warranty service during the warranty period, send the defective product postage pre-paid, with a money order for \$4.00 to cover the return postage and handling, along with proof of purchase, short description of the problem, your return address and the date of purchase to:

**Pelican**  
1840 East 27th Street  
Vernon, CA 90058

This warranty shall not apply if the product has been damaged by abuse, misuses, negligence, accident, modification, tampering or by any other causes unrelated to defective materials and / or workmanship.

Repair or replacement as provided under this warranty is Pelican Accessories' exclusive prerogative. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HERE BY LIMITED TO 5 YEARS FROM THE DATE OF PURCHASE AND ARE SUBJECT TO THE CONDITIONS SET FORTH IN THIS LIMITED WARRANTY. IN NO EVENT SHALL PELICAN BE ACCOUNTABLE FOR INCIDENTAL DAMAGES RESULTING FROM THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTIES. This warranty gives you specific legal rights, and you may also have other legal rights, which vary from state to state.



**PELICAN**

*Performance you can trust*

For technical questions please visit  
<http://www.pelicanperformance.com> or call us directly at:  
**1-800-331-3844**

# ***PELICAN***

1840 East 27th Street  
Vernon, CA 90058 USA  
800-331-9844

[www.pelicanperformance.com](http://www.pelicanperformance.com)



***PELICAN***  
*Performance you can trust*