



# Predator S-Type

FULL-FEATURED CONTROLLER FOR PS2®

**PELICAN**  
Performance you can trust



## Quick Setup

Thank you and congratulations on purchasing your new Predator S-Type Controller. We hope you enjoy hours of continuous play with this controller.

To get you started, your Predator S-Type Controller and Receiver have been electronically matched at the factory. Simply follow these steps to get started:

1. Insert batteries into your controller.
2. Plug the Receiver into your PlayStation®2.
3. Press the "Start," "Select," or any Action Button to turn on controller.

(Note: If Quick Setup does not work, please follow the manual setup below.)

## Manual Setup

1. Insert batteries into your controller. Make sure the batteries are inserted as shown in the battery compartment. A pair of matched, fresh, alkaline, batteries will yield best results.
2. Insert the Receiver in the PlayStation®2 controller slot 1 (or slot 2 if slot 1 is already occupied) and then power up your PlayStation®2. Note: Press the Connect Button on the bottom of the receiver by inserting a small pin (Signal LED will Flash slowly). Then press the "Select" Button on your controller. The Signal LED will remain on continuously after the controller and receiver are matched. You should only have to match the controller and receiver one time.

Note: If you are using more than one Predator S-Type Controller, simply perform step 2 for each controller and receiver set.

### Warning

Please verify that all the batteries are inserted correctly. If they are inserted incorrectly, it may cause personal injury as well as damage to your Predator S-Type Wireless Controller

## Troubleshooting

If you are having difficulties with your new Predator S-Type Wireless Controller please refer below:

### My Predator S-Type Controller does not respond:

1. Verify that your batteries are inserted correctly and have adequate power.
2. Make sure the receiver is fully plugged into the game console.
3. Press any button and verify that the controller power LED light blinks ON.

### The controller power LED is ON but my Predator S-Type does not respond:

1. Check to verify your Predator S-Type receiver is firmly and properly plugged into the correct controller port.
2. Match your receiver and controller by following the steps in the Manual Setup above.

## Warranty Card

Pelican Accessories warrants to the original consumer purchaser that the product will be free from defects in materials and / or workmanship for a period of 5 years from the date of purchase. If a defect covered by this warranty occurs during this period, Pelican Accessories at its option will repair or replace, at no charge, any part that Pelican Accessories determines to be defective.

To obtain warranty service during the warranty period, send the defective product postage pre-paid, with a money order for \$4.00 (in U.S. currency) to cover the return postage and handling, along with proof of purchase and the date of purchase to:

**Pelican Performance**  
1840 East 27th Street  
Vernon, CA 90058

This warranty shall not apply if the product has been damaged by abuse, misuse, negligence, accident, modification, tampering or by any other causes unrelated to defective materials and / or workmanship.

Repair or replacement as provided under this warranty is Pelican Accessories' exclusive prerogative. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO 5 YEARS FROM THE DATE OF PURCHASE. AN ARE SUBJECT TO THE CONDITIONS SET FORTH IN THIS LIMITED WARRANTY. IN NO EVENT SHALL PELICAN ACCESSORIES OR INCIDENTAL DAMAGES RESULT FROM THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTIES. This warranty gives you specific legal rights, and you may also have other legal rights, which vary from state to state.

### Important Notice

Predator S-Type  
FCC-ID: 07X-PRED-53  
FCC-ID: 07X-PRED-54

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

M3PL039



## Console Protection Guarantee

Pelican's Console Protection Guarantee assures you of Pelican's commitment to quality and customer satisfaction. The Protection Guarantee warrants the connection (the plug port of the video game console and the plug of the Pelican controller) between the controller and your video game console system, i.e. that with the proper use of our controller (see manual) we agree to replace or repair your video game system in the event that our controller directly causes damage to your game console as a result of our controller failing to perform properly. Circumstances that may cause our protection guarantee to take effect might be one of the following: the video game console does not acknowledge a controller which has been plugged in, original controller fails to operate after using a Pelican controller, other non-pad controllers fail to operate after using a Pelican Controller. This protection warranty does not include the video game power supply, any part relating to the CD/DVD load and read mechanism, internal operating system, nor the cabinet of the video game system. This warranty will not apply if the Pelican controller is not used as directed in the product manual enclosed. For further information or help please contact us toll free at 1800 331-3844 or on line at <http://www.pelicanperformance.com>

## Overview

The Predator S-Type Wireless Controller uses advanced 2.4 GHz technology and Channel-Hopping which gives you the ability to play without the limitations and hassles of typical corded controllers and switch-dependent controllers. All of this gives you lightning fast control over your favorite games without cords to trip over, channels to set, or fears of outside interference disturbing play control. There are a few buttons, LED's (lights), and features not found on your basic PlayStation®2 Controller. The following is an explanation of these elements.

### Auto-Hopping:

This removes the hassle of setting channels via a series of switches or having your connection corrupted by interference. Auto-hopping moves to the nearest, clearest channel for you, with no breaks in play, to make sure your signal never lags behind your commands. Simply press the connect button on the receiver, wait three seconds and press the Start button on the controller to make a connection.

## Features & Benefits

### Auto On/Off:

Touch any of the four action buttons Start, or Select to power up your new wireless controller.

### Hyper-Responsive Controls:

Our controls are made out of top quality components so that you lose nothing in control and response when you need it most and over the life of your controller.

### Signal LED:

#### Multi-function LEDs:

LED lights on controller and receiver are used to indicate various functions as illustrated in chart below.  
LED OFF = Power OFF  
LED solid RED = ANALOG mode  
LED flash every 3-seconds = seeking connection with receiver  
LED fast GREEN flash = Action buttons depressed

### Rumble On/Off

Depressing and holding the DOWN direction on the Directional Pad (D-Pad) while pressing the SELECT button once turns off the rumble motor. A short rumble indicates success. Depressing and holding the UP direction on the D-Pad while pressing the SELECT button once turns the rumble motors on. A long rumble indicates success.

### Battery Compartment:

Predator S Type controller requires the use of two AA batteries (not included). The batteries were placed to balance the weight perfectly in the controller to increase comfort and controlling. Double check and make sure batteries are inserted correctly.

### Power Save Mode:

When not in use for 3 minutes the Predator S Type Controller automatically goes into a sleep mode to conserve batteries. A touch of any action button puts the controller back into play mode. Holding the Start button for 5 seconds will send the pad to sleep. After 15 minutes of non-use, it will power off. Press the Start button or one of the four action buttons to return the controller from sleep.



Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect to equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.


## Product Layout

Predator S-Type Controller

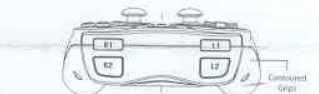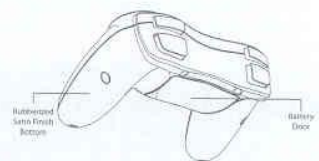

## Product Layout

Receiver/Transmitter Unit

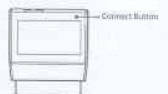

**NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**