



PELICAN

1840 EAST 27TH STREET
VERNON CA 90058 USA

www.pelicanperformance.com

Pelican and its logo are registered trademarks. Xbox™ is a registered trademark of **Microsoft Corporation**. This product is not designed, manufactured, sponsored or endorsed by **Microsoft Corporation**.



Spirit Wireless

FULL FEATURED CONTROLLER FOR XBOX™



PELICAN
Performance you can trust



PL-2044



Pelican's Console Protection Guarantee assures you of Pelican's commitment to customer satisfaction. The Protection Guarantee warrants the connection (the plug port of the video game console and the plug of the Pelican controller) between the controller and your video game console system, i.e., we agree to repair and replace your console in the event that our product directly causes damage to your console as a result of our controller failing to perform properly. Circumstances that may cause our protection guarantee to take effect might be one of the following: the video game console does not acknowledge a controller which has been plugged in, the original controller fails to operate after using a Pelican controller, or other non-pad controllers fail to operate after using a Pelican controller. This protection warranty does not include the video game console power supply, any part relating to the CD/DVD load and read mechanism, internal operating system, or the system cabinet. This warranty will not apply if the Pelican controller is not used as directed in the product manual enclosed. For further information or help, please contact us at (800) 331-3844 or online at pelicanperformance.com.

Gamers Guarantee

Our products are developed, tested and approved by gamers for gamers. Pelican's gamers guarantee states: If you are not 100% satisfied with your new Spirit Wireless Controller we will replace it, or provide a product of equal value.

IMPORTANT NOTICE



FCC ID#07X-XB-SPIRIT-1

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Pelican and its logo are registered trademarks. Xbox™ is a registered trademark of **Microsoft Corporation**. This product is not designed, manufactured, sponsored or endorsed by **Microsoft Corporation**

Table of Contents


Warranty Information	4
Product Layout	5
Overview	7
Directions	13
Trouble Shooting	15
Notes	17
FCC Notice	18

My Spirit Wireless Controller does not respond while in the game.



1. Check to verify your controller is firmly and properly plugged into controller port one.

Product Layout

Spirit Wireless Controller

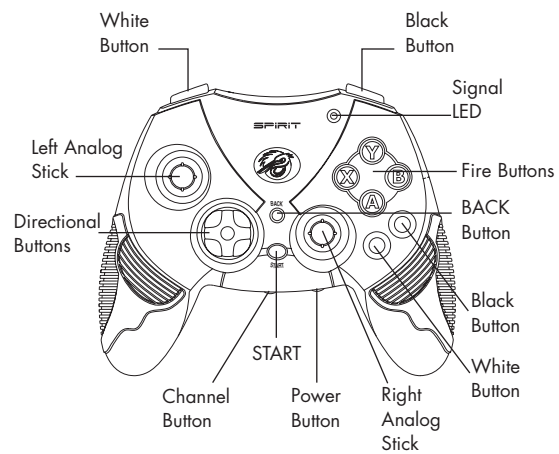

For technical questions please visit
<http://www.pelicanperformance.com>
or call us directly at 1-800-331-3844

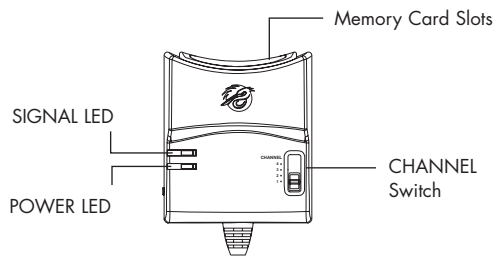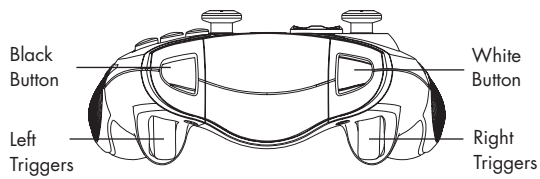

Troubleshooting

If you are having difficulties with your new Spirit Controller, please refer below:

My system turns on but I don't see anything on the TV.

1. Check to verify that your A/V cable is properly connected to your system.
2. Check to verify that your A/V cable is properly plugged into your television set.

My Spirit does not respond while in the system menu.

1. Check to verify your Spirit's dongle is firmly and properly plugged into controller port one.

Your middle fingers will be resting on the additional Black and White buttons. The picture below shows the proper finger placement to maximize comfort and performance.

4. Insert a game into your Xbox™
5. Turn on your Xbox™
6. You are now ready to play.

Overview

The Spirit Wireless Controller uses advanced technology which gives you the ability to play without the limitations of a typical corded controller, hence there are a few switches and LED (lights) not found on your basic Xbox™ Controller.

Channel Switch (Receiver and Controller)

This switch selects the broadcast channel of the radio frequency. There are four positions: 1,2,3 and 4. There is a corresponding Channel Switch on the receiver.

Additional Black & White Buttons:

The additional black & white buttons have been relocated to give the user greater comfort and a much quicker reaction time than other controllers.

Rubberized Hand Grips:

Eclipse's Rubberized Hand Grips give you the competitive edge in even the most intense gaming sessions by giving you the comfort and grip required.

Relocated Start & Back Buttons:

The Start and Back buttons have been relocated to give you easier and quicker access to them.

Signal LED:

The Signal LED will not come on when you have the Spirit Wireless switched into channel position 1, 2, or 3, and 4, it will be flashing whenever you press any button.

Directions

1. Make sure your Xbox™ is turned off and the power button on the controller is switched on.
2. Plug your new Spirit dongle into controller port one. If you already have a controller and want to use Spirit as a second controller, make sure you have a controller plugged into controller port one and plug Spirit dongle into controller port two.
3. Because of Spirit's additional Black and White buttons you will need hold the controller slightly different than you would a standard Xbox™ controller. Place your index finger on the additional Black and White buttons.

Battery Compartment:

Spirit Wireless requires the use of two AA batteries. There are two battery compartments on the Spirit Wireless. One battery will go in each handle. Because of the battery location the vibration motors have been removed from Spirit Wireless, meaning there is no vibration function. Double check and make sure batteries are inserted correctly.

WARNING

Please verify that all the batteries are inserted correctly. If they are inserted incorrectly, it may cause personal injury as well as damage to your Chameleon Wireless Controller.

Power Save Mode:

When not in use the Spirit Wireless Controller automatically turns off to conserve batteries. To turn on the Spirit Wireless controller you must turn the power switch to the "Off" position and then back to the desired channel.

NOTE: Turn off the controller when not in use to extend your battery life.

— |

|

| —



— 10
|

11 —
|