

LIMITED WARRANTY

Pelican Accessories warrants to the original consumer purchaser that the product will be free from defects in materials and / or workmanship for a period of 120 days from the date of purchase. If a defect covered by this warranty occurs during this period, Pelican Accessories at its option will repair or replace, at no charge, any part that Pelican Accessories determines to be defective.

To obtain warranty service during the warranty period, send the defective product postage pre-paid, with a money order for \$4.00 to cover the return postage and handling, along with proof of purchase and the date of purchase to:

PELICAN ACCESSORIES
1840 East 27th Street
Vernon, CA 90058

This warranty shall not apply if the product has been damaged by abuse, misuses, negligence, accident, modification, tampering or by any other causes unrelated to defective materials and / or workmanship.

Repair or replacement as provided under this warranty is Pelican Accessories' exclusive prerogative. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HERBY LIMITED TO 120 DAYS FROM THE DATE OF PURCHASE AN ARE SUBJECT TO THE CONDITIONS SET FORTH IN THIS LIMITED WARRANTY. IN NO EVENT SHALL PELICAN ACCESSORIES OR INCIDENTAL DAMAGES RESULT FROM THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTIES. This warranty gives you specific legal rights, and you may also have other legal rights, Which vary from state to state.

Changes or modifications not expressly approved by the manufacture could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For technical questions please visit
<http://www.pelicanacc.com>
or call us directly at 1-800-331-3844




Pelican and its logo are registered trademarks. Sony is a registered trademark of Sony Corp. PlayStation® 2 is registered trademarks of Sony Computer Entertainment Inc. This product is not designed, manufactured, sponsored or endorsed by Sony Computer Entertainment Inc.




PL-651

Instruction for Operation:

ShockWave Controller

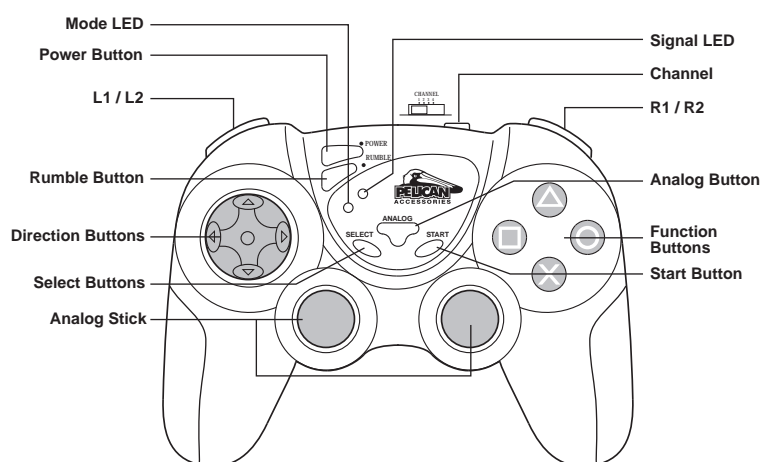

ShockWave Receiver

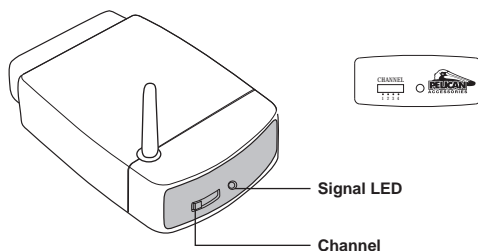

WARNING

Please verify that all the batteries are inserted correctly. If they are put in wrong, it may cause personal injury as well as damage to your ShockWave Wireless Controller.

Gamer's Guarantee

Our products are developed, tested, and approved by gamers for gamers. Pelican's Gamer's Guarantee states: If you are not 100% satisfied with your new ShockWave Wireless Controller we will replace it or replace it with an equal valued item.

PRODUCT OVERVIEW:

ShockWave Wireless Controller uses advance technology which gives you the ability to play without the limitations of a typical corded controller, hence there are a few switches and LED (lights) not found on your basic PlayStation® 2 Controller.

- **Channel Switch**
This switch selects the broadcast channel of the radio frequency. There are four positions; 1, 2, 3 and 4. There is a corresponding Channel Switch on the receiver.
- **Rumble ON/OFF Button:**
The rumble feature automatically turns on when the ShockWave is powered On. To turn off the Rumble feature, press the Rumble button. Press the button again to turn the feature back On. The motors will rumble to signify when the Rumble featured has been turned On.
- **Power Button**
This button turns your ShockWave wireless controller on. Press button to turn on.
- **Signal LED (Green, Receiver and Controller):**
When on or flickering data is being transmitted between Controller and Receiver.
- **Mode LED (Red, Controller)**
The Mode LED is Off for Digital Mode, On for Analog Mode, if the LED flashes, press the analog button again to enter a mode.
- **Analog Button**
Press the analog button to cycle through modes. To turn off the controller press and hold the analog button until the two LEDs flicker together then release and the controller will power off.

INSTRUCTIONS:

- 1. Insert Batteries:**
Remove the battery lid and place the four AAA batteries (included) into the ShockWave Wireless Controller. Make sure they are inserted as shown in the battery compartment. The batteries included are not long life.
- 2. Plug in the Receiver:**
With the PlayStation® 2 turned off, plug the receiver into controller port one (far left port).
- 3. Select a Channel on the Controller:**
You may select any channel you desire 1, 2, 3, or 4.
- 4. Select a Channel on the Receiver:**
This must match the channel selected on the Controller.
Note: If using more than one controller you must use different channel settings, i.e., the first controller and receiver are set to Channel 1, the second controller and receiver are set to channel 2. The channel position selected on the WaveStation controller and Receiver have no relation to the PlayStation® 2 controller ports.
- 5. Turn on the Controller:**
Press the Power button to turn ShockWave On, the signal LED will light.
Note: If you wish to extend battery life press the Rumble Off button. This will turn off the rumble effect in game play resulting in a doubling of your battery life. To turn the rumble back on, press the rumble button again. The motor will vibrate indicating the rumble feature has been turned on.
- 6. Turn off the controller:**
Press and hold the analog button until the two LEDs flicker together. Release the button and the controller will turn off.

OTHER FEATURES:

- **Multiple Players:**
You may play with up to four ShockWave Wireless controllers with the use of a MultiTap. Check to see that the channel switches are set as outlined above.
- **Power Save Mode:**
When not in use the ShockWave controller automatically goes into a sleep mode to conserve batteries. A touch of any button puts the controller back into play mode.
Note: Turn off the controller when not in use to extend your battery life.