



Peloton Tread Tablet
Model No.:PLTN-TC1VS-2

User Manual

FCC: 2AA3N-TC1VS2

IC: 21377 –TC1VS2



Welcome to the Peloton family!

We know that receiving these big boxes can be intimidating and so, before you do anything, we invite you to start your journey here:

 
<https://www.onepeloton.com/tread>

We look forward to seeing you in class.

- *The Peloton Team*



Peloton Tread Tablet installation

Peloton Tread tablet will be setting on Treadmill, Peloton Tread Tablet requires a professional installation, our engineer shall assembly it for you. Also, our professional installers will access the configuration UI for the device.

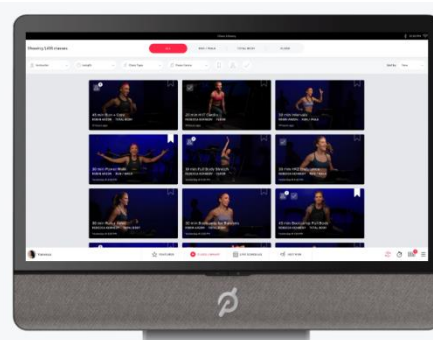

Peloton Tread Tablet Basic Info

  Getting to Know Your Peloton Tread Tablet

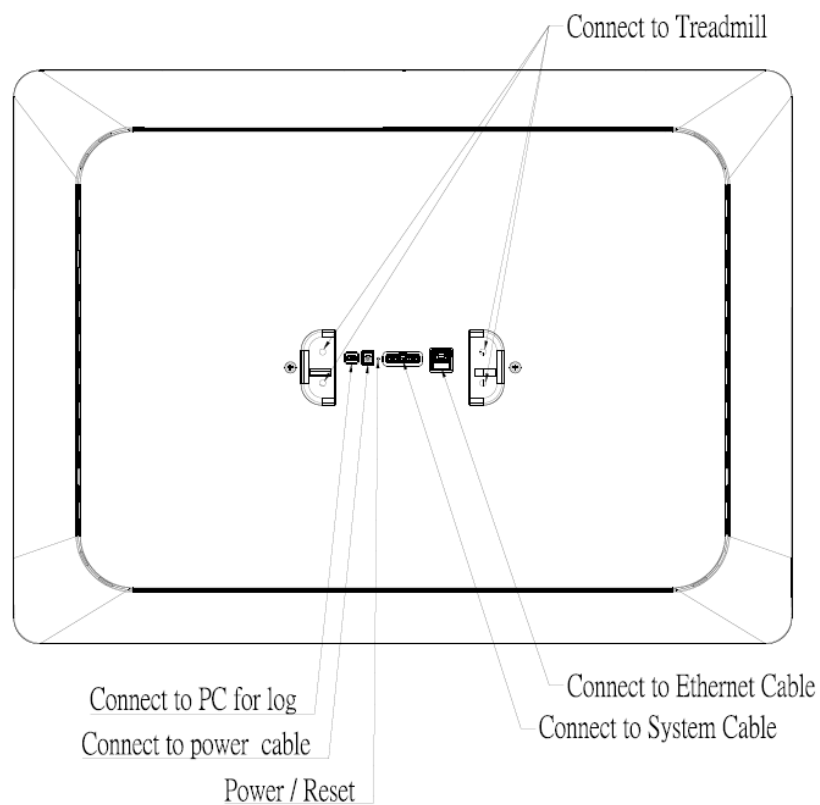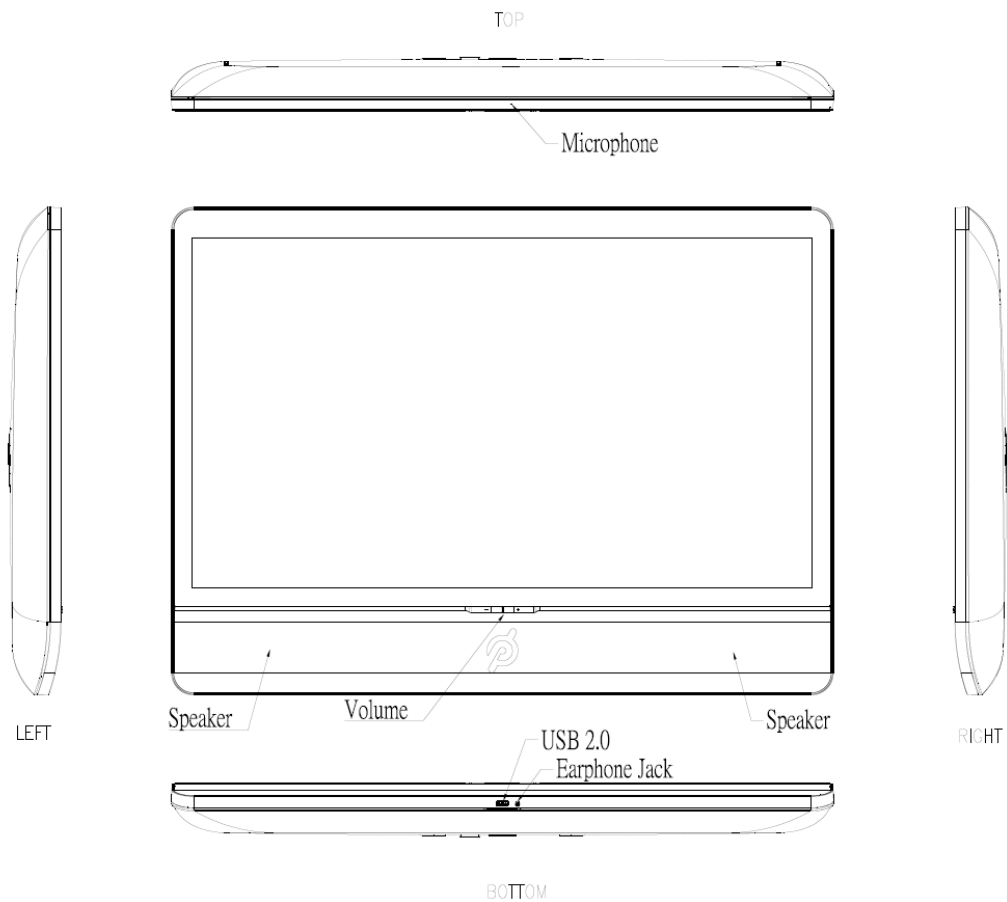

Peloton Tread Table specification

- **Introduction**

- The Peloton Tread Tablet is complete all-in-one, 32" full-HD LCD console, The computer will be mounted to Peloton's indoor exercise treadmill and serve as a console for runner.
- The supporting Wireless are 802.11 a/b/g/n/ac 2x2 MIMO and Bluetooth 2.1 EDR, BLE 4.2, ANT+, NFC and Ethernet Mega network access, the equipment can't function with battery, the power is from external 24V DC power adapter.

- **Wireless connectivity**

- The Peloton Tread Tablet is a console with support 802.11 a/b/g/n/ac 2x2 MIMO WLAN function at 20/40/80 MHz bandwidth and BLE V4.2.
- There wireless spec as below:
- Wi-Fi supported 2.4G band. Wi-Fi 2.4G operating frequencies are 2.412-2.472 GHz, The Maximum output power **14.3 dBm**
- Wi-Fi support 5G band operating frequency 5180 MHz ~ 5240 MHz, The Maximum output power **12.79 dBm**
- BT operating frequency is 2.402-2.480 GHz. The Maximum Output power : **13.92 dBm**
- ANT+ operating frequency is 2.402 -2.480 GHz. The Maximum Output power: **5.07 dBm**

Getting Around Your Peloton Tread Tablet

- There are different ways to navigate around the Home screen, menus and application screens on your Peloton Tread Tablet. You can also change the screen orientation of the Peloton Tread Tablet as well..

- **Touch**

When you want to type using the onscreen keyboard, select items onscreen such as Join Class and personal profile icons and touch them with your finger.







- **Swipe or slide**

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

-

- **Soft Key functions and status bar**

Touch the control keys on the front panel of your Peloton Tread Tablet to do the following:

Key	Function
HOME 	<ul style="list-style-type: none">• While on any application or screen, touch to return the main Home screen
BACK 	<ul style="list-style-type: none">• Touch to go back to the previous screen, or to close a dialog box, options menu, or close the Notifications panels.• Touch and hold to return to the main screen of the current application• When the onscreen keyboard is open, touch to close the onscreen keyboard
Time 	<ul style="list-style-type: none">• Display Local Time• There is Date and Time in the setting, it will be change by time zone an user define.
Ethernet 	<ul style="list-style-type: none">• Ethernet status icon• There is Ethernet menu in the setting, it will connect to Ethernet automatically by connecting RJ45 Ethernet cable.
Wi-Fi 	<ul style="list-style-type: none">• Wi-Fi status icon• There is Wi-Fi menu in the setting, it could be configure to connect AP.
BT 	<ul style="list-style-type: none">• Bluetooth status icon

Getting Started

The equipment can function with external DC adapter only, and no battery included.

Once you've plug in the DC adapter, you can turn on your Peloton Tread Tablet and start using it.

Turn your Peloton Tread Tablet on and off

 
To turn on the Peloton Tread Tablet

Press the **POWER** key on the top side of the Peloton Tread Tablet.


To turn off the Peloton Tread Tablet

- 1 Press and hold the **POWER**key until the **Power off** options menu opens.
- 2 Touch **OK** when prompted to turn off the Peloton Tread Tablet.

Set up your Peloton Tread Tablet for the first time

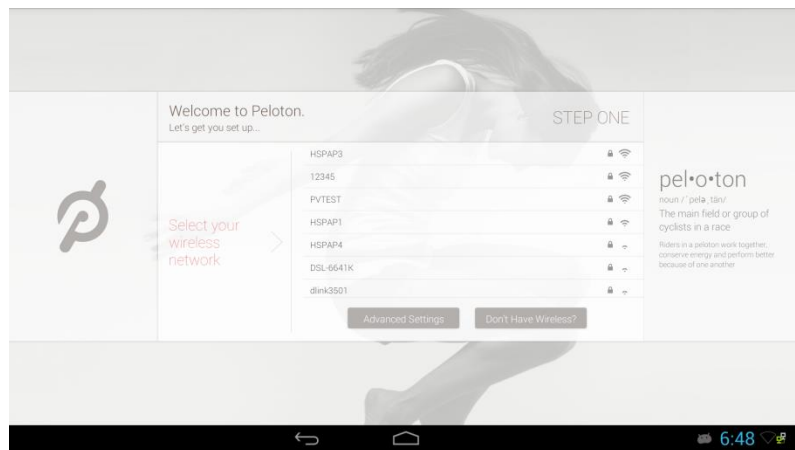


 When you turn on the Peloton Tread Tablet for the first time, you will be requested to connect to your Internet connection if any.

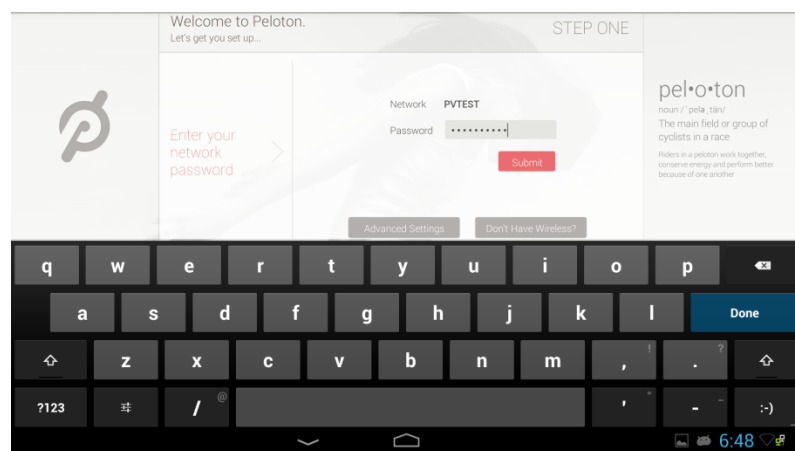


Please follow the instruction showed on the Peloton Tread Tablet.

 Home Screen

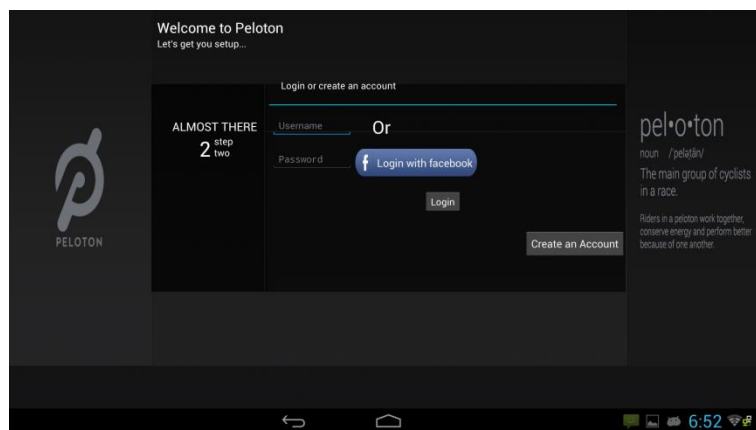

The Home screen is your starting point for using the applications on your Peloton Tread Tablet. You can control the icons on Home screen to process application.

 Settings

Press Status Bar on bottom Right of Peloton Tread Tabletscreen, then touch  to open the Notification tab, and then touch Settings

Ethernet configuration	Configure your Peloton Tread Tablet's Ethernet connections,
Wi-Fi	Configure your Peloton Tread Tablet's WLAN connections,
Bluetooth	Configure your Peloton Tread Tablet's BT connections,
Sound	Set the notification ring tones
Display	Set the screen brightness and screen timeout.
Storage	Check internal Storage and Available storage
Apps	Manage applications in system and check memory status
Security	Select the password visible, or set the screen unlock pattern
Language & keyboard	Set the operating system language and region. You can also set onscreen keyboard options.
Backup & Reset	Backup the personal settings and other application data, restore the backed up and back to the factory setting
Add Accounts	Sync your data with Google services.
Date & time	Set the date, time, time zone, and date or time format.
About Peloton Tread Tablet	View the Peloton Tread Tablet status such as the network type. You can also view the legal information and software version of your Peloton Tread Tablet.

Ethernet configuration

Ethernet connect will automatically connect to network and when you insert RJ45 connector.

You can Configure Ethernet connections for static IP, or DHCP etc,
To uncheck option to Turn Off Ethernet automatic connection
The internet connection will use Ethernet when Wi-Fi is Turn On.

WLAN connection

Wi-Fi can only be used when it connects with home Wi-Fi Access Point (AP) or a free unsecured Wi-Fi hotspot. Under “Wireless & networks”, tap “Wi-Fi” to turn it on. After a moment, your Wi-Fi network list should populate. If you need to rescan for available networks, tap "scan"

- **Turn on WLAN**

Tap “Settings” → then “Wireless & networks” → “Wi-Fi” to turn on Wi-Fi. Your Peloton Tread Tablet lists the networks it finds within range. Tap a network to connect. If necessary, enter Network SSID, Security, and Wireless password, and tap “Connect”. When your Peloton Tread Tablet is connected to the network, the wireless indicator appears in the status bar. Waves indicate connection strength.

BT connection

- **Make device discoverable:**

You must pair your Peloton Tread Tablet with a device before you can connect to it. Once you pair your Peloton Tread Tablet with a device, they stay paired unless you unpair them. Under “Settings”, choose “Bluetooth”. Tap Bluetooth to turn on it and tap “Search for devices”. The Bluetooth indicator then appears in the status bar.

- **Scan for devices**

After scanning, there will be a list of the IDs of all available Bluetooth devices in range. If the device you want to pair with isn't in the list, ensure that the other device is turned on and set to be discoverable.

- **Pair with the Bluetooth device**

Tap the name of an available Bluetooth device to pair with. In the popup “Bluetooth pairing request” dialog, type a PIN. If the pairing is successful, your Peloton Tread Tablet connects to the device. You can touch the right icon to unpair the device.

- **Note:** After pairing, it shows under the Bluetooth device “Paired but not connected”, but file transmission is still possible.

- **Adjusting the Volume**

Adjusting the Media volume changes the volume level of sound notifications and music or video playback.

To adjust the media volume

 
When playing music or watching video, touch the volume scroll bar to adjust the media volume or press volume keys directly to adjust. The Music/video volume window appears on the screen to display the volume level.

You can also adjust the media volume on the Settings screen.

1. Press **HOME**, then press **MENU**, and then touch **Settings**.
2. Touch **Sound >Volume**.
3. When the Media volume window appears, move the slider to the left (to lower the volume) or to the right (to increase the volume).
4. Touch **OK** to close the window.

Using the Onscreen Keyboard

When you start a program or select a field that requires text or numbers, the onscreen keyboard becomes available.

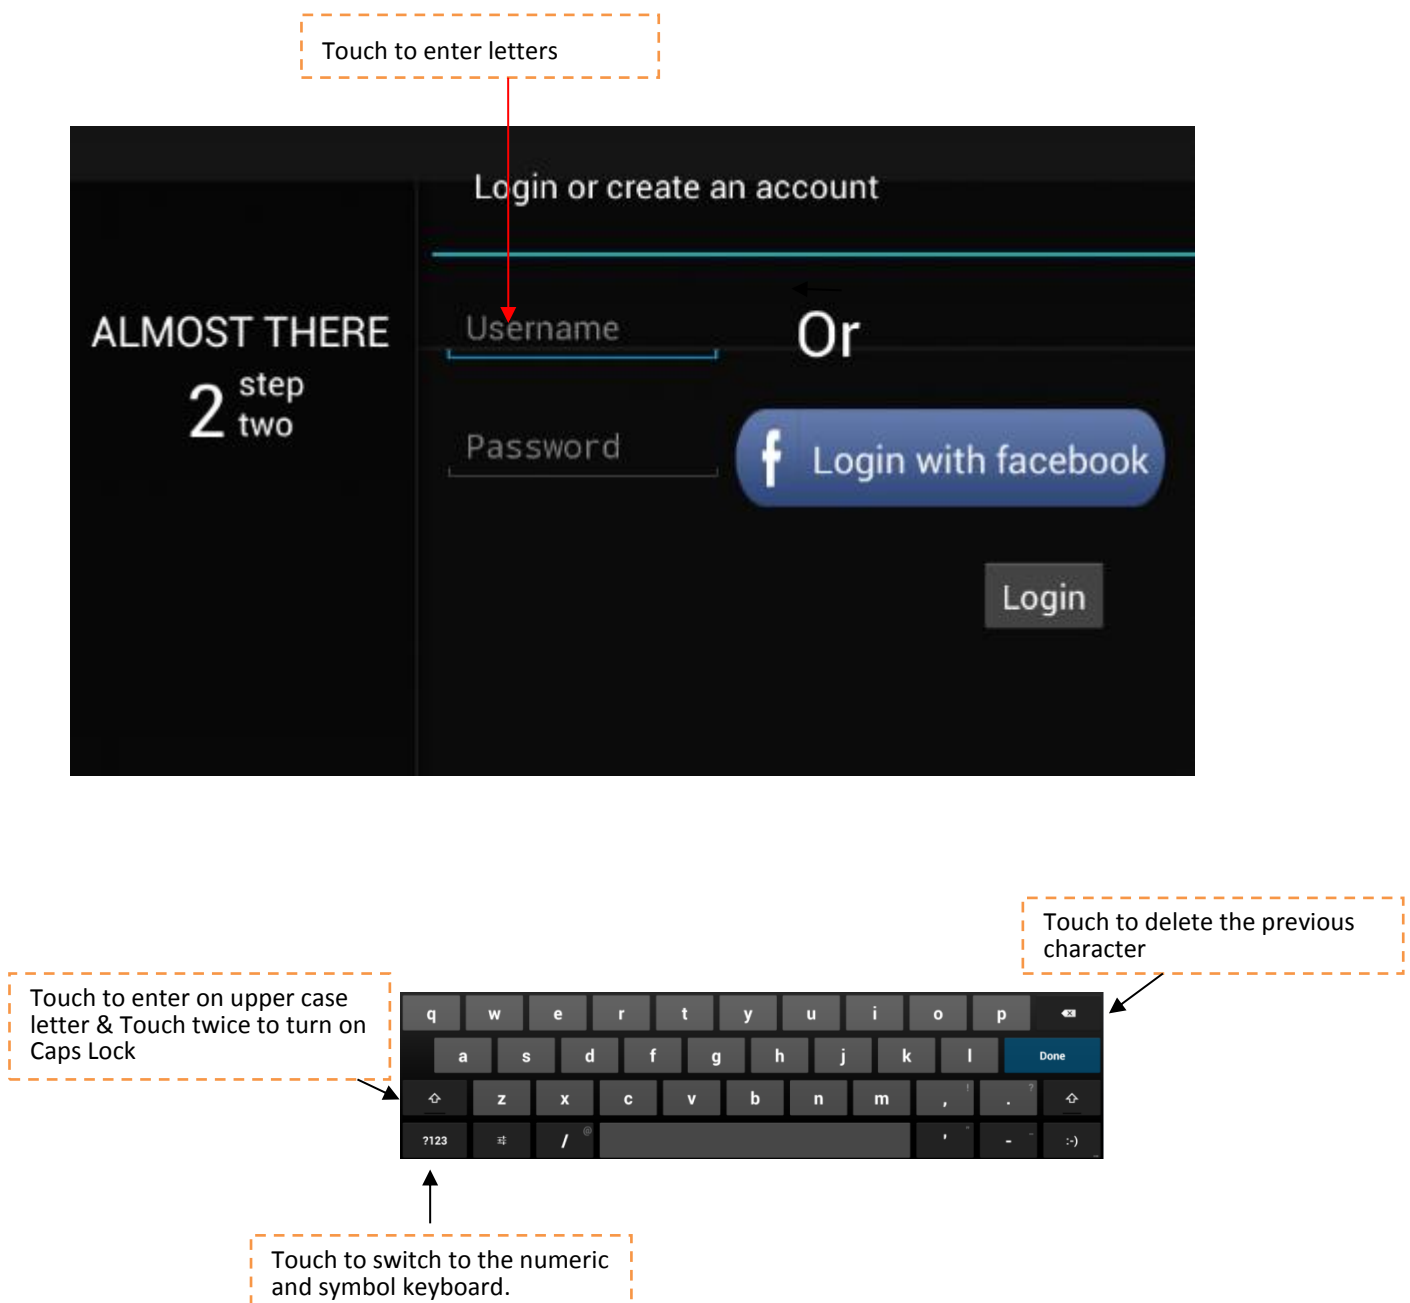

Touch and hold to access more punctuation marks.



Touch and hold to access the keyboard settings or switch input methods.

Touch and hold to access more face symbols.

Tips

- When you do not need the keyboard, you can close it by pressing **BACK**. To show the keyboard again, touch a text box onscreen.
- If you need to insert or delete a character, use the finger to position the cursor next to the character you want to edit.

Note The available keys on the keyboard will be different depending on the current text field selected. For example, in Browser, when you are in the URL field, some keys at the bottom row are replaced with alternate keys (for example, .com key) to make it faster for you to type web addresses.

NOTICES

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
4. Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

CAUTION:

1. To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.
2. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter
3. The device for operation in the band 5150 – 5250 MHz is only for indoor use.

Industry Canada statement:

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le manuel d'utilisation des appareils radio exempts de licence doit contenir l'énoncé qui suit, ou l'équivalent, à un endroit bien en vue dans le manuel d'utilisation ou sur l'appareil, ou encore aux deux endroits.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) l'appareil ne doit pas produire de brouillage;*
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

The transmitter may not be co-located with any other transmitter or antenna

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Le émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne.

Caution:

- (i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- (ii) the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall be such that the equipment still complies with the e.i.r.p. limit;
- (iii) the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and

Avertissement:

Le guide d'utilisation des dispositifs pour réseaux locaux doit inclure des instructions précises sur les restrictions susmentionnées, notamment :

(i) les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

(ii) le gain maximal d'antenne permis pour les dispositifs utilisant les bandes de 5250 à 5 350 MHz et de 5470 à 5725 MHz doit être conforme à la limite de la p.i.r.e;

(iii) le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5 725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée pour l'exploitation point à point et l'exploitation non point à point, selon le cas;



CALL US

Support & Orders
1-866-679-9129 Ext. 2

Headquarters
1-866-679-9129

NYC Studio
1-646-277-4497

Press Inquiries
Jaime Kinsley
1-866-679-9129 Ext. 601

EMAIL US

Support & Orders
support@pelotoncycle.com

Headquarters
hello@pelotoncycle.com

NYC Studio
nycstudio@pelotoncycle.com

Press Inquiries
Jaime Kinsley
jaime@pelotoncycle.com

Advertising Inquiries
advertising@pelotoncycle.com

CHAT LIVE

Speak to a customer experience representative now.

[Start a Live Chat](#)

Available everyday from 9am-9pm EST.

SPEAK TO A PRO

Can't make it to a Peloton Showroom? One of our experienced Peloton pros will reach out to you directly.

[Request a Consultation](#)

Note:

To whom it may concern,

Professional Install Justification:

Peloton Interactive Inc., the supplier of the device, declares that the PLTN-TC1VS-2 units are not sold or marketed to the general public and are only sold to wireless internet service providers and requires a professional installation.

The professional installers only shall have the account information which let them access to the configuration UI for the device. The account information for the professional installers shall not be revealed to end user.