 







e80™ Device Quick Start Guide

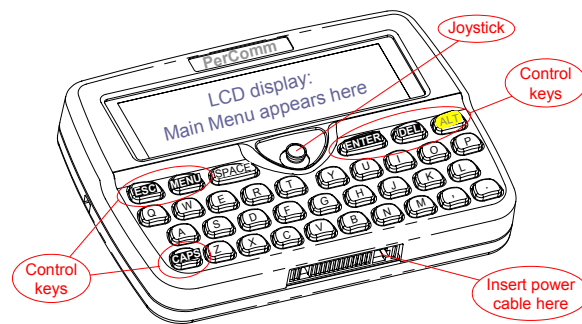

MAIN MENU

	SEND A MESSAGE		FOLDERS
	INBOX		ADDRESS BOOK
	NEWS		PREFERENCES
	OUTBOX		POWER OFF

CONTROL KEYS

ESC	<ul style="list-style-type: none">- Exit from current menu or text screen.- Press and hold to turn backlight on or off.
MENU	<ul style="list-style-type: none">- Display a popup menu (if one is available).
ENTER	<ul style="list-style-type: none">- Select highlighted item or next option in an option field or checkbox.
CAPS/SHIFT	<ul style="list-style-type: none">- Once to enter an uppercase letter.- Twice for Shift Lock (all uppercase).- Once again to return to lowercase characters.
	<ul style="list-style-type: none">- Once to enter a number or special character.- Twice for ALT Lock (all numbers or special characters).- Once again to return to normal characters.
 ENTER	<ul style="list-style-type: none">- Return to Main Menu.
 DEL	<ul style="list-style-type: none">- Clear (delete) all characters to the left of the cursor (while editing text).

For more information, see the *e80 Personal Messaging Device Reference Guide* on the accompanying CD-ROM.

Getting Started

INSTALL THE BATTERY

Figure showing
battery cover
being removed

Remove the battery cover by pressing down and outwards on the cover thumb grip.

Figure showing
battery being
installed

Position the PerComm Lithium Ion battery as shown, oriented so that the metal contacts on the back of the battery line up with the metal contacts inside the cabinet.

Figure showing
battery being
installed

Rotate the battery down into the cabinet while holding the lower edge in firmly, until it is in place with label facing up.

Do not force the battery in; if properly lined up it should snap in easily.

Figure showing
battery cover
being replaced

Replace the battery cover: position the cover tabs in the slots on both cabinet sides and slide the cover forward until the tongue on the leading edge snaps into place.

Use only a PerComm Lithium Ion battery in your e80 device. Any other battery type may cause damage.

CHARGE THE BATTERY

Figure showing
power cord being
inserted

Insert the power cable as shown in the illustration.

Plug the AC/DC transformer into an AC power source. Charging will begin immediately.

Figure showing
battery charging
indicator

When the battery is completely charged as indicated on the LCD display, unplug the power cable at both ends.

Your e80 device is now ready for use.

SET DATE / TIME AND OWNER INFORMATION

Select **PREFERENCES** in the Main Menu.

Select **Owner Information** and enter your name, phone number and any comments.

When done, press **ESC** to save changes and exit.

Select **Date and Time**.

Push the joystick **↑** and **↓** to move from field to field and press to select entries in each field.

When done, press **ESC** to save changes and exit.

Using Your e80 Device

SEND A MESSAGE

Send A Message

Select **SEND A MESSAGE** in the Main Menu.

Press **MENU** and select **Add Contact** or **Manual Entry** to enter address.

Type message in the *Msg:* field, press **MENU** and select **Send**.

Resend A Message

Select **OUTBOX** in the Main Menu.

Highlight a message to resend, press **MENU** and select **Resend**.

INBOX MESSAGES

Select **INBOX** in the Main Menu.

Read A Message

Highlight a message and press the joystick to open the message for viewing.

Forward A Message

While reading a message, press **MENU** and select **Forward**.

Enter address in *To:* field, press **MENU** and select **Send**.

Delete A Message

Highlight message to delete, press **MENU** and select **Delete**.

Reply To A Message

While reading a message, press **MENU** and select **Reply**.

Press **MENU** again and select an automatic reply message.

Or, select **Compose Reply** and enter a reply message, then press **MENU** and select **Send**.

NEWS MESSAGES

Select **NEWS** in the Main Menu.

You can **Read**, **Forward**, and **Delete** news messages in the same way as for Inbox messages.

THE ADDRESS BOOK

Select **ADDRESS BOOK** in the Main Menu.

Add A Contact Or Group

Press **MENU** and select **New Contact** or **New Group**.

Enter information as required.

When done, press **MENU** and select **Save**.

View A Contact Or Group

Highlight a contact or group and press the joystick to view details.

Using Your e80 Device

Edit/Delete A Contact/Group

Highlight a contact or group.

Press **MENU** and select **Edit** or **Delete (Contact/Group)**.

After editing, press **MENU** and select **Save**.

MEMOS AND PERSONAL FOLDERS

Select **FOLDERS** in the Main Menu.

View A Memo

Highlight the desired memo in the **Memos** folder and press the joystick.

Create A Memo

In the **Memos** folder, press **MENU** and select **New Memo**.

Enter memo label in **Label:** field and memo text in **Text:** field.

When done press **MENU** and select **Save**.

Edit/Delete A Memo

Highlight a memo in the **Memos** folder to edit or delete.

Press **MENU** and select **Edit** or **Delete**.

After editing, press **MENU** and select **Save**.

Add A Subfolder In News Archive/Personal Folders

Select the **News Archive** or **Personal** folder.

Press **MENU** and select **New Folder**.

Enter a name for the subfolder, press **MENU** and select **Save**.

SET PREFERENCES

Select **PREFERENCES** in the Main Menu.

Set the Mailbox Alert

Select **Mailbox Alerts** and make changes to alert volume and type of alert for different kinds of messages.

Press **ESC** to save and exit.

Set an Alarm

Select **Alarm Clock** and make changes to alert volume and alarm time and frequency for one or two different alarms.

Press **ESC** to save and exit.

Set Other Options

Select another option to modify: **Private Time**, **Quick Text**, **Signature**, **Address Book** or **Options** (display features).

Make changes, then press **ESC** to save and exit.

...AND MORE

For more features and ways to use your e80 device, see the *e80 Personal Messaging Device Reference Guide* on the accompanying CD-ROM.

RF EXPOSURE: the e80 device meets all FCC RF exposure guidelines when hand-held or used with PerComm supplied accessories.