

Rechargeable & Remote Dog Training Collar

Model:PT-302

User Manual

Instruction

Thanks for purchasing the rechargeable & remote dog training collar. This user manual is intended to provide you with guidelines to ensure safe operation and avoid harm to people. Please read all directions before using the product and keep this guide for reference. This dog training collar is designed to train dogs' behaviors by three training modes: tone,vibration and shock. Special design with SOS lights on the receiver can locate the dog in the dark.

RoHS (🏵 🕐



The Standard Configuration



Important Safety Information

Explanation of Attention Words and Symbols used in this guide



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

AWARNING WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

ACAUTION

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

CAUTION

CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.

AWARNING Not for use with aggressive dogs. Do not use this Product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is

appropriate for your dog, please consult your veterinarian or certified trainer.

AWARNING Risk of explosion if battery is replaced by an incorrect type. Do not short circuit, mix old and new batteries, dispose of in fire, or expose to water. When batteries are stored or disposed, they must be protected from shorting. Dispose of used batteries properly.

CAUTION Safety during on-leash training. It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash,

long enough for him to attempt to chase an object, but short enough for him not to reach a road or other unsafe area. You must also be physically strong enough to restrain your dog when he tries to chase.

CAUTION Risk of skin damage. Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long or made too tight on the pet's neck

may cause skin damage. Ranging from redness to pressure ulcers; this condition is commonly known as bed sores

- Avoid leaving the collar on the dog for more than 12 hours per day.
- When possible reposition the collar on the pet's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- Never connect a lead to the electronic collar; it will cause excessive pressure on the contacts.
- When using a separate collar for a lead, don't put pressure on the electronic collar.
- Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
- Examine the contact area daily for signs of a rash or a sore.
- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours, see your veterinarian.
- For additional information on bed sores and pressure necrosis, please visit our website.

These steps will help keep your pet safe and comfortable. Millions of pets are comfortable while they wear stainless steel contacts. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use until the skin has fully healed.

The Remote Trainer must be used only on healthy dogs. We recommend that you take your dog to a veterinarian before using the collar if he is not in good health.

Charging the Remote and Receiver

Both Remote Control and Receiver use rechargeable lithium batteries. Please charge the remote and receiver for 2 hours for the first time.

Use the charger to charge the remote. The charging port is at the left side of the remote. When charging the remote, the battery icon on the display will be flashing. When fully charged, the battery icon will be solid.



Open the rubber cover to charge the receiver. When charging the receiver, the red LED light will be flashing; when fully charged, the light will turn off.

Note: The charger is suitable for both remote and receiver.

Fitting the Collar Properly



Choosing Appropriate Contact Points

This is an important step and many people may overlook it. If you don't use the proper Contact Points, the collar won't work properly. For smaller dogs, the short contact points should be used. For larger dogs, or dogs with heavy hair, it's recommended to use the longer contact points.

- Real	12		Z
2	C	In	ALC:
161	11-1		
Step 2		1100	100

Fit the Collar to Your Dog

The collar needs to be fitted properly around the dog's neck, usually just a couple of inches below the ears. The collar should be stable rather than loosen around its neck, or the contact points can not touch the dog's skin, and it will not work. Properly if you can fit one finge under the collar, then it fits well.


(Note:Sometimes, it's necessary to shave the hair under the contact points).



Brush Coat and Check Skin Daily

Make sure you check the dog's neck and the contact points won't hurt the dog. It is also a good idea to brush their coat and check their skin daily.

Using the Remote

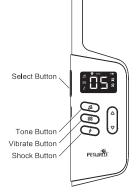

Select Button	
Functions	Choose collar 1 or collar 2 and awaken the remote from sleep mode.
To use	Press the button once to awaken remote from sleep mode. When in programming mode, press the button once to choose collar 1 or collar 2,

	Tone Button
Functions	Produce audible beep.
To use	Press the button once to make an audible beep. Press and hold the button to beep continuously.

	Vibrate Button
Functions	Produce vibration.
To use	Press the button once to make the receiver vibrate once. Press and hold the button to make the receiver vibrate continuously.

1		Shock Button
	Functions	Produce shock.
	To use	Press the button once to make the receiver produce shock. Press and hold the button to shock continuously.

Using the Remote




	SOS Button
Functions	Produce a SOS signal from the LED light on the collar.
To use	Press the button once to make the LED light flash twice. This can help you to find dogs easily in the dark. Press and hold the button for 2 seconds to make the LED light to flashing. This can help you to ask for help when in danger.

	Charging Port
Functions	Charge the remote control.
To use	Plug in the USB charger. When the battery indicator shows 4 bars, the remote is fully charged.

Increase Button	
Functions	Increase the levels of the training mode and pair collar 1 to the remote.
To use	When in programming mode, press the button once to increase the level of training mode from 1 to 5. Press and hold the button for 5 seconds to pair the receiver to the remote.

	Decrease Button
Functions	Decrease the level of training mode and pair collar 2 to the remote.
To use	When in programming mode, press the button once to decrease the level of the training mode from 5 to 1. Press and hold the button for 5 seconds to pair collar 2 to the remote.

 LED Light Power Button LED Light







	Power Button
Functions	Turn the receiver on/off.
To use	Press and hold the power button for 3 seconds until you hear a beep to turn the receiver on or off.

	Charging Port
Functions	Flash to locate the dogs.
To use	Press the button once to make LED light to flash twice. Press and hold the button for 2 seconds to send SOS signal via LED light.

Program the Remote



Firstly you must enter programming mode by pressing the select button once to program the remote.

At first, choose which collar channel you want to program. Press the select button to choose the collar channels. Select collar 1 or 2.

Tone

This tone setting can be set from 1 to 5 levels. The higher levels selected, the louder the collar will beep. To set this function, press the tone button once and the remote tone icon will appear on the screen. Press the increase button to increase the level, and the decrease button to decrease.

Vibrate

This vibrate setting can be set from 1 to 5 levels. The higher levels selected, The stronger the vibration will be. To set this function, press the vibrate button once and the remote vibrate icon will appear on the screen. Press the increase button to increase thel level, and the decrease button to decrease.

Shock

This shock setting can be set from 1 to 15 levels. The higher levels selected, The stronger the shock will be. To set this function, press the vibrate button once and the remote vibrate icon will appear on the screen. Press the increase button to increase the level, and the decrease button to decrease.

When you're going to use shock function, please refer to following suggestions.

Shock level 1-3 for dogs under 20 pounds.

Shock level 4–9 for dogs between 20 pounds and 40 pounds.

Shock level 10-15 for dogs above 40 pounds.



The way to test shock: Turn on the receiver, hold the test light contacts to the contacts points (as shown in the left), press the shock button on the remote, the light will flash, the higher levels selected, the brighter the light will flash.

Pair Remote & Receiver

When your collar arrives, it is already paired to the remote. You only need to press the select button to choose collar 1, then it can work properly. If something happens and it becomes disconnected from the remote for any reason, you can simply reset the receiver and re-pair the remote.

To Reset the Receiver:

Press and hold the power button for two seconds, the receiver will beep once and the white LED light will begin flashing. This will let you know the receiver is ready to pair to the remote. The LED light will flash ten times, please make sure the pairing is finished before the LED light stop flashing.

To Pair the Remote to the Receiver:

First, make sure the white LED light is flashing on the receiver. If it is not, refer to the above steps. Then choose which channel you want to assign to this collar. Press and hold increase/decrease button for 5 seconds to make collar 1/2 to pair the remote, this will cause the white LED light to flash rapidly and then stop. Now your remote and receiver are properly paired.

Using 2 Collars

One remote can be used to control two separate collars. Follow the pairing steps above if you wish to pair another collar, for up to two dogs. Select collar 1 or collar 2 to control each collar separately.

Training Guide

General Tips

- 🖑 Correct misbehavior or teach dogs to obey commands. If you move too fast, your pets may become confused.
- \Im Be consistent. Correct your pet every time he misbehaves.
- Unless you can supervise him, it is recommended to restrict your pet from situations in which he has a history of misbehaving. However, setting up a situation as a training session can dramatically improve your chances of success.
- If your pet reacts to the tones by hiding or acting fearfully. Different levels of sounds orders could redirect pets' attention to make differently appropriate behaviors, such as the "sit" command for level 1.
- $\$ Make sure pets should be at least 6 months old before using the Trainer.
- Only let responsible family members to use the Trainer. It is not a toy!
- Other pets in hearing range will be affected by the training tones. Therefore, training sessions should be conducted beyond the hearing range of other pets.
- Sound orders are mainly used for dogs training by giving sounds of different levels to train them to act differently. However, vibration orders and shock orders are mainly used for punishing dogs. Please use these function keys cautiously.

Teaching Your Pet the Positive Tone

Before using the Trainer to correct your pet, spend 10 to 15 minutes per day for 2 or 3 days helping him create the association of the tone with reward and praise. To accomplish this:

- 1. Press and hold the Tone Button.
- 2. Release the button immediately then spend 3 to 5 seconds to praise your dogs.
- 3. Repeat the above steps in few minutes. Praise the dog in different ways. When your dogs can act to the tone positively, the tone training succeeds.

warn

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B

digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between theequipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Petwant aims to creat a high-quality pet-keeping life for global pet lovers.

