
Know your product

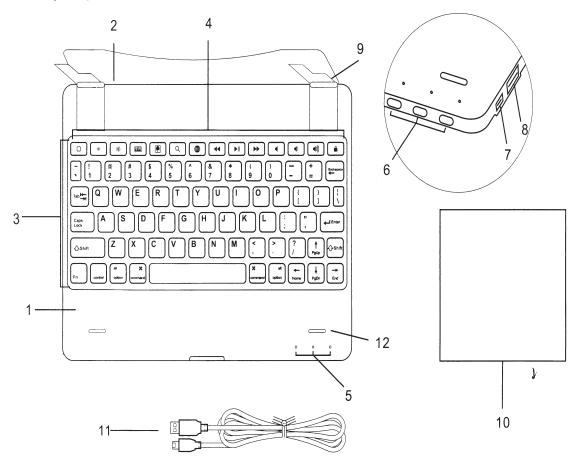

- 1.Protective cover
- 2. Magnetic slot
- 3.Keyboard
- 4. Function keys
- 5.Status light
- 6.Button

- 7. Charge for keyboard
- 8. External device charging port
- 9.Shaft
- 10. Manual
- 11.Micro-USB charging cable
- 12. Anti-friction pads

Keyboard battery disposal

- ·Insert screwdriver between plastic top and metal case at keyboard top or bottom
- ·Pry up plastic top and remove it completely. This action destroys keyboard
- ·Turn top over and remove tape from battery.
- ·Separate battery from circuit board
- Dispose of battery according to local laws. Recycle remaining keyboard parts.

Table of Toxic and Hazardous Substance / Elements and Their Content

Ingredients	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Cable	Х	0	0	0	0	0
PWAs	Х	0	0	0	0	0
Plastic parts	0	0	0	0	0	0
Membrane	0	0	0	0	0	0
Meter parts	Χ	0	0	0	0	0
Rubber dome	0	0	0	0	0	0

O stands for this toxic and hazardous content in homogeneous material is under the SJ/T11363-2006 Standards limits


X stands for this toxic and hazardous content in homogeneous material is beyond the SJ/T11363-2006 Standards limits

Under the ingredients with 'X' in the form all are up to ROHS;

"on 27 January 2003 the European parliament and the council announce electronic equipment in limiting the use of certain hazardous substances directive 2002/95/EC"

Note: the environmental protection using period reference standard depends on the product of the regular work temperature and humidity conditions.

Charge the batteries

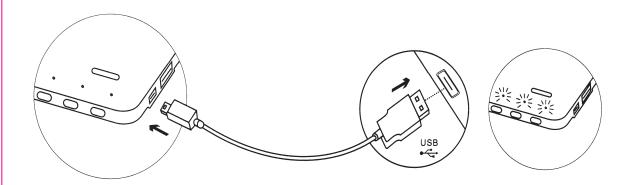

- Plug the Micro-Usb Charging cable into the Keyboard and a USB port on a computer. The Status light blinks green.
 Charge the betteries until the
- 2. Charge the batteries until the Status light turns solid green

Battery information:

- A fully charged battery provides about 6 months of power when the Keyboard is used about two hours a day.
- Charge the batteries when the status light briefly turns red after the Keyboard turns on.
- When not in use, turn off the Keyboard to conserve battery power.
- The Keyboard enters sleep mode if powered on and not used. Press any key to wake.

Troubleshooting

The Keyboard does not work

- Press any key to wake the Keyboard from sleep mode.
- Turn the Keyboard Off and than back On.
- Recharge the internal batteries.
 For more information, refer to
 "Charge the batteries."
- Re-establish the Bluetooth connection between the Keyboard and iPad:
- Verify that iPad's Bluetooth feature is turned on.
- Choose "Bluetooth Keyboard" from the Devices menu on your iPad.
 The Status light briefly turns blue after the Bluetooth connection is made.

Battery disposal

- Pry off top of keyboard with screwdriver.
- 2. Detach battery from circuit board and remove battery.
- 3. Dispose of your product and its battery according to local laws.





FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.