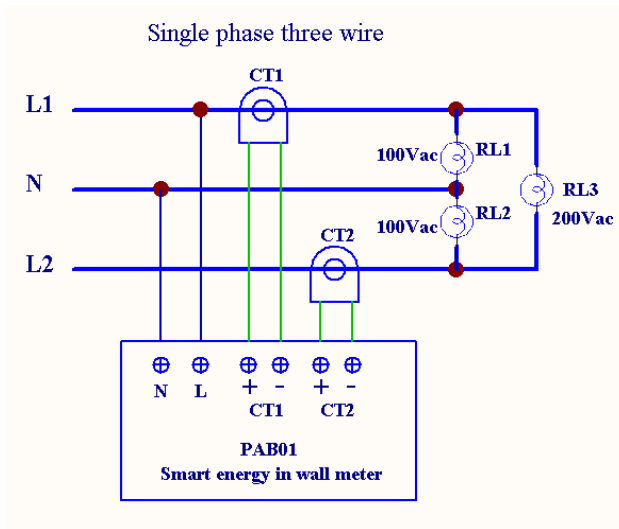
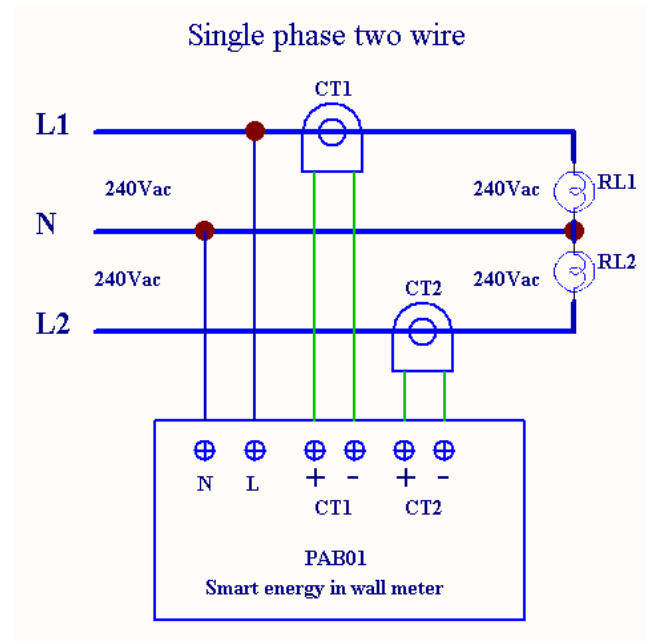


## PAB01 Smart Energy In Wall Meter



**Fig 1. Assembling**



**Fig 2. Assembling**

This dual meter module is a transceiver which is a Z-Wave™ enabled device and is fully compatible with any Z-Wave™ enabled network. Mini size design let the module can easily hide itself into the electricity distribution box and that will be good for the house decoration.

This dual meter module is able to detect Instant power wattage (13800W/230Vac)(60 Amperes) of connected light or appliances.

## Adding to Z-Wave™ Network

In the front casing, there is an on/off button with LED indicator below which is used to carry out inclusion, exclusion, reset or association. After being excluded, its LED flashes on and off alternately and repeatedly at 2-second intervals. It implies that it has not been assigned a node ID and cannot work with Z-Wave enabled devices.

### Auto Inclusion

The function of auto inclusion will be executed as long as the meter does not have Node ID and just connect the meter to main power. When first power is applied, its LED flashes on and off alternately and repeatedly at 0.5 second intervals. It implies that it is in learning mode now.

**Note:** Auto inclusion timeout is 2 minute during which the node information of explore frame will be emitted once every 5 seconds. Unlike “inclusion” function as shown in the table below, the execution of auto inclusion is free from pressing the On/Off button on the meter.

The table below lists an operation summary of basic Z-Wave functions. Please refer to the instructions for your Z-Wave™ Certificated Primary Controller to access the Setup function, and to include/exclude/associate devices

| Function   | Description                             | LED Indication            |
|------------|---|---------------------------|
| No node ID | The Z-Wave Controller does not allocate | 2-second on, 2-second off |

|             |  |                           |
|-------------|--|---------------------------|
|             | a node ID to the meter.  |                           |
| Inclusion   | 1. Have Z-Wave Controller entered inclusion mode.  | One press one flash       |
|             | 2. Pressing INCLUDE_BUTTON three times within 2 seconds will enter inclusion mode.   |                           |
| Exclusion   | 1. Have Z-Wave Controller entered exclusion mode.  | One press one flash       |
|             | 2. Pressing INCLUDE_BUTTON three times within 2 seconds will enter exclusion mode.   |                           |
|             | Node ID has been excluded.   | 2-second on, 2-second off |
| Reset       | 1. Pressing INCLUDE_BUTTON three times within 2 seconds will enter inclusion mode.   | One press one flash       |
|             | 2. Within 1 second, press and hold INCLUDE_BUTTON button again for 5 seconds until LED is off.   |                           |
|             | 3. IDs are excluded.   |                           |
| Association | 1. Have Z-Wave Controller entered association mode.<br>Or Pressing INCLUDE_BUTTON three times within 2 seconds will enter association mode | One press one flash       |
|             | 2. There are 3 groups for the meter  |                           |

⊗ Including a node ID allocated by Z-Wave Controller means inclusion. Excluding a node ID allocated by Z-Wave Controller means exclusion.

⊗ Failed or success in including/excluding the node ID can be viewed from the Z-Wave Controller.

## LED Indication


To distinguish what mode the meter is in, view from the LED for identification.

| State Type | LED Indication  |
|------------|---|
| No node ID | Under normal operation, when the meter has not been allocated a node ID, the LED flashes on and off alternately at 2 seconds intervals. |
| Learning   | When PAB01 is in learning mode, LED flashes on and off alternately and repeatedly at 0.5 second intervals.                              |

## Choosing a Suitable Location

1. Do not locate the meter facing direct sunlight, humid or dusty place.
2. The suitable ambient temperature for the Switch is 0°C~40°C.
3. Do not locate the meter where exists combustable substances or any source of heat, e.g. fires, radiators, boiler etc.
4. After putting it into use, the body of meter will become a little bit hot of which phenomenon is normal.

## Installation

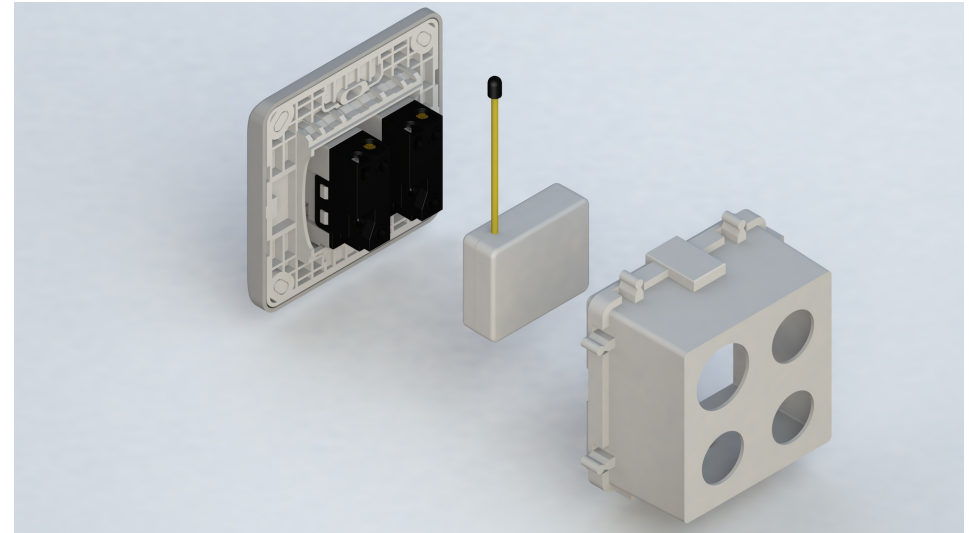

1. Put the in wall switch into a wall box and connect the AC power wire L,N to PAB01 connector L, N.
2. The black wire of current sensor, CT1 or CT2, should connected to the negative terminal of PAB01,CT1- or CT2-. Another wire should connected to the plus terminal of PAB01,CT1+ or CT1+.
3. There is a clasp on the side of the current sensor, it can lock or unlock the clamp. It is convenient to circle the already connected cable.

## Programming

### 1. Z-Wave's Groups (Association Command Class Version 2)

The meter can be set to send reports to associated Z-Wave devices. It supports 3 association groups which every group has one node support. Group1~Group3 support METER\_REPORT\_COMMAND\_V3

For group 1, the Switch will report (1) The sum of instant Power Consumption (Watt) read from CT1 and CT2 (2) The sum of accumulated Power Consumption (KWh) read from CT1 and CT2.

For group 2, the Switch will report (1) Instant Power Consumption (Watt) read from CT1 (2) Accumulated Power Consumption (KWh) read from CT1.

For group 3, the Switch will report (1) Instant Power Consumption (Watt) read from CT2 (2) Accumulated Power Consumption (KWh) read from CT2.

#### 2-1 Auto report to Grouping 1 ~3 (Maximum Node 1 per Group)

##### 2-1-1 Instant Power Consumption vary over 5% report

When the instant power consumption read from CT1 or CT2 vary over 5%, it will send Meter report to the nodes of Group

Meter Report Command: **[Command Class Meter , Meter Report , scale(bit 2) +Rate Type +Meter Type , Precision + Scale(bit 1,0)+ Size , Meter Value 1 , Meter Value 2 , Meter Value 3 , Meter Value 4]**

### 2-2 Response to Meter Get Command

The Switch will report its (1) instant Power Consumption (Watt) or (2) accumulated power consumption(KWH) or (3) AC input Voltage (V) or (4) AC load current ( I ) (5) load power factor (PF) to Z-Wave Controller after receive the Meter Get Command from Z-Wave Controller.

#### 2-2-1 Instant Power Consumption (Watt)

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

Meter Get Command: **[Command Class Meter, Meter Get, Scale =0x02(W)]**

Meter Report Command: **[Command Class Meter , Meter Report , scale(bit 2) +Rate Type +Meter Type , Precision + Scale(bit 1,0)+ Size , Meter Value 1 , Meter Value 2 , Meter Value 3 , Meter Value 4]**

Rate Type = 0x01

Meter Type = 0x01

Precision = 1

Scale = 0x02(W)

Size = 4 Bytes (Meter Value)

Meter Value 1 = (W) MSB

Meter Value 2 = (W)

Meter Value 3 = (W)

Meter Value 4 = (W)LSB

Example:

Meter Value 1 = 0x00 (W)

Meter Value 2 = 0x00 (W)

Meter Value 3 = 0x03 (W)

Meter Value 4 = 0xEA (W)

Meter(W) = Meter Value 3 \*256 + Meter Value 4 = 100.2W

### 2-2-2 Accumulated Power Consumption (KW/h)

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

Meter Get Command: [**Command Class Meter, Meter Get, Scale = 0x00 KW/h**]

Meter Report Command: [**Command Class Meter , Meter Report , scale(bit 2) +Rate Type +Meter Type , Precision + Scale(bit 1,0)+ Size , Meter Value 1 , Meter Value 2 , Meter Value 3 , Meter Value 4**]

Rate Type = 0x01

Meter Type = 0x01

Precision = 2

Scale = 0x00 (KWh)

Size = 4 bytes (Meter Value)

Meter Value 1 = (KWh) MSB

Meter Value 2 = (KWh)

Meter Value 3 = (KWh)

Meter Value 4 = (KWh) LSB

Example:

Scale = 0x00 (KWh)

Precision = 2

Size = 4 Bytes (KW/h)

Meter Value 1 = 0x00(KWh)

Meter Value 2 = 0x01(KWh)

Meter Value 3 = 0x38(KWh)

Meter Value 4 = 0xA3(KWh)

Accumulated power consumption (KW/h) = (Meter Value 2\*65536) + (Meter Value 3\*256) + (Meter Value 4) = 800.35 (KW/h)

### 2-2-3 Clearing accumulated power consumption

Meter Reset Command: [**Command Class Meter, Meter Reset**]

### 2-2-4 AC input Voltage (V)

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

Meter Get Command: **[Command Class Meter, Meter Get, Scale =0x04(V)]**

Meter Report Command:  
**[Command Class Meter , Meter Report , scale(bit 2) +Rate Type +Meter Type , Precision + Scale(bit 1,0)+ Size , Meter Value 1 , Meter Value 2]**

Rate Type = 0x01

Meter Type = 0x01

Precision = 1

Scale = 0x04(V)

Size = 2 Bytes (Meter Value)

Meter Value 1 = High Byte (V)

Meter Value 2 = Low Byte (V)

Example:

Scale = 0x04 (V)

Precision = 1

Size = 2 (2 Bytes of V)

Meter Value 1 = 0x09(V)

Meter Value 2 = 0x01(V)

AC load Voltage = (Meter Value 1\*256) +(Meter Value 2)= 230.5 (V)

## 2-2-5 AC load current ( I )

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

Meter Get Command: **[Command Class Meter, Meter Get, Scale =0x05(I)]**

Meter Report Command:  
**[Command Class Meter , Meter Report , scale(bit 2) +Rate Type +Meter Type , Precision + Scale(bit 1,0)+ Size , Meter Value 1 , Meter Value 2]**

Rate Type = 0x01

Meter Type = 0x01

Precision = 2

Scale = 0x05(I)

Size = 2 Bytes (Meter Value)

Meter Value 1 = High Byte (I)

Meter Value 2 = Low Byte (I)

Example:

Scale = 0x05 (I)

Precision = 2

Size = 2 (2 Bytes of I)

Meter Value 1 = 0x01(I)

Meter Value 2 = 0x21(I)

AC load current = (Meter Value 1\*256) +(Meter Value 2)= 2.89 (A)

### 2-2-6 load power factor (PF)

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

If the value of configuration parameter 3 is 1, it will report the power factor of CT1, but not the sum of PF of CT1 and CT2.

Meter Get Command: **[Command Class Meter, Meter Get, Scale =0x06(PF)]**

Meter Report Command:  
**[Command Class Meter , Meter Report , scale(bit 2) +Rate Type +Meter Type , Precision + Scale(bit 1,0)+ Size , Meter Value 1]**

Rate Type = 0x01

Meter Type = 0x01

Precision = 2

Scale = 0x06(PF)

Size = 1 Bytes

Meter Value 1

Example:

Scale = 0x06 (PF)

Precision = 2

Size = 1 (1 Byte of PF)

Meter Value 1 = 0x63(PF)

Load power factor (PF) = Meter Value 1 =0.99

### 2-3 Multi Channel Command Class Version 3

PAB01 also support muti channel command class(version 3) , which include METER\_SUPPORTED\_GET, METER\_RESET,METER\_GET.

You may get report from 3 endpoint of PAB01

#### 2-3-1 METER\_SUPPORTED\_GET :

This command is to ask the endpoint of PAB01 what kind of meter data can be reported

The example show how to get the meter report type

|  |  |
|--|--|
| COMMAND_CLASS_MULTI_CHANNEL                |  |
| MULTI_CHANNEL_CMD_ENCAP                    |  |
| Source End Point = 0x01                    | (this is the endpoint of command owner here we assume endpoint is 1 , if the owner doesn't support multi Channel this value will be 0) |
| (Bit Address+Destination End Point = 0x03) | (Bit Address =0 ; Destination End Point range1~3)  |
| Command Class = 0x32                       | ( Command_Class_Meter_V3 = 0x32)   |
| Command =0x03                              | (Meter_Supported_Get = 0x03)   |

Below is the example show PAB01 report to last command

|  |  |
|--|--|
| COMMAND_CLASS_MULTI_CHANNEL                |  |
| MULTI_CHANNEL_CMD_ENCAP                    |  |
| Source End Point = 0x03                    |  |
| (Bit Address+Destination End Point = 0x01) |  |
| Command Class = 0x32                       | (Command_Class_Meter_V3 = 0x32)                      |
| Command =0x04                              | (Meter_Supported_Report = 0x04)                      |
| Parameter 1 = 0x81                         | (Meter Reset =1 , Meter Type=0x01)                   |
| Parameter 2 = 0x75                         | (Scale Supported =<br>KWh+W+V+A+Power Factor = 0x75) |

#### 2-3-4 METER\_RESET

This command is to reset the Accumulated Power Consumption (KWh) to 0

The example show how to reset the KWh

|  |   |
|--|---|
| COMMAND_CLASS_MULTI_CHANNEL                |   |
| MULTI_CHANNEL_CMD_ENCAP                    |   |
| Source End Point = 0x03                    | (this is the endpoint of command owner, here we assume endpoint is 3 , if the owner doesn't support multi Channel this value will be 0) |
| (Bit Address+Destination End Point = 0x01) | (Bit Address =0 ; Destination End Point range1~3)   |
| Command Class = 0x32                       | ( Command_Class_Meter_V3 = 0x32)  |

|               |                       |
|---------------|-----------------------|
| Command =0x05 | ( Meter_Reset = 0x05) |
|---------------|-----------------------|

#### 2-3-5 METER\_GET :

Using meter get command to get the KWH,W,V,I,PF from endpoint of PAB01

2-3-5-1 Get KWH from endpoint

Meter\_GET example:

|  |   |
|--|---|
| COMMAND_CLASS_MULTI_CHANNEL                |   |
| MULTI_CHANNEL_CMD_ENCAP                    |   |
| Source End Point = 0x05                    | (this is the endpoint of command owner, here we assume endpoint is 5 , if the owner doesn't support multi Channel this value will be 0) |
| (Bit Address+Destination End Point = 0x03) | (Bit Address =0 ; Destination End Point range1~3)   |
| Command Class = 0x32                       | ( Command_Class_Meter_V3 = 0x32)  |
| Command =0x01                              | (Meter_Get = 0x01)  |
| Parameter 1 = 0x00                         | (Scale = KWH = 0x00)  |

Accumulated power consumption (KWH) Report example :

|                             |                            |
|-----------------------------|----------------------------|
| COMMAND_CLASS_MULTI_CHANNEL |                            |
| MULTI_CHANNEL_CMD_ENCAP     |                            |
| Source End Point = 0x03     | (Meter report = Endpoint3) |



|  |   |
|--|---|
| (Bit Address+Destination End Point = 0x05) | (Bit Address =0 : Destination End Point = command owner Endpoint value) |
| Command Class = 0x32                       | (Command_Class_Meter_V3 = 0x32)   |
| Command =0x02                              | (Meter_Report = 0x02)   |
| Parameter 1 = 0x21                         | (Scale Bit2 = 0 , Rate Type = 0x01 , Meter Type=0x01)                   |
| Parameter 2 = 0x44                         | (Precision = 2 , Scale Bit1Bit0 = 0 , Size = 4)                         |
| Parameter 3 = 0x00                         | Accumulated Power Consumption = 0x000005FD = 15.33 KWh                  |
| Parameter 4 = 0x00                         |   |
| Parameter 5 = 0x05                         |   |
| Parameter 6 = 0xFD                         |   |

**2-3-5-2 Get Instant Power Consumption (Watt) from endpoint**

METER\_GET example :

|                             |   |
|-----------------------------|---|
| COMMAND_CLASS_MULTI_CHANNEL | (this is the endpoint of command owner, here we assume endpoint is 5 , if the owner doesn't support multi Channel this value will be 0) |
| MULTI_CHANNEL_CMD_ENCAP     |   |
| Source End Point = 0x05     |   |

|  |  |
|--|--|
| (Bit Address+Destination End Point = 0x03) | (Bit Address =0 : Destination End Point range 1~3) |
| Command Class = 0x32                       | (Command_Class_Meter_V3 = 0x32)                    |
| Command =0x01                              | (Meter_Get = 0x01)                                 |
| Parameter 1 = 0x10                         | (Scale = W = 0x02)                                 |

PAB01 Instant Power Consumption (W) Report example :

|  |   |   |
|--|---|---|
| COMMAND_CLASS_MULTI_CHANNEL                | (Meter report = Endpoint3)<br><br>(Bit Address =0 : Destination End Point = command owner Endpoint value) |   |
| MULTI_CHANNEL_CMD_ENCAP                    |   |   |
| Source End Point = 0x03                    |   |   |
| (Bit Address+Destination End Point = 0x05) |   |   |
| Command Class = 0x32                       |   | (Command_Class_Meter_V3 = 0x32)                       |
| Command =0x02                              |   | (Meter_Report = 0x02)                                 |
| Parameter 1 = 0x21                         |   | (Scale Bit2 = 0 , Rate Type = 0x01 , Meter Type=0x01) |
| Parameter 2 = 0x34                         |   | (Precision = 1 , Scale Bit1Bit0 = 0x02 , Size = 4)    |
| Parameter 3 = 0x00                         |   |   |

|                    |   |
|--------------------|---|
| Parameter 4 = 0x00 | Instant Power Consumption =<br>0x000003EA<br>= 100.2W |
| Parameter 5 = 0x03 |   |
| Parameter 6 = 0xEA |   |

### 2-3-5-3 Get load voltage V from endpoint

Meter\_GET example:

|  |   |   |
|--|---|---|
| COMMAND_CLASS_MULTI_CHANNEL                | (this is the endpoint of command owner, here we assume endpoint is 5 , if the owner doesn't support multi Channel this value will be 0) |   |
| MULTI_CHANNEL_CMD_ENCAP                    |   |   |
| Source End Point = 0x05                    |   |   |
| (Bit Address+Destination End Point = 0x03) |   | (Bit Address =0 ; Destination End Point range1~3) |
| Command Class = 0x32                       |   | ( Command_Class_Meter_V3 = 0x32)                  |
| Command =0x01                              |   | (Meter_Get = 0x01)                                |
| Parameter 1 = 0x20                         |   | (Scale = V = 0x04)                                |

PAB01 AC input Voltage report example :

|                             |
|-----------------------------|
| COMMAND_CLASS_MULTI_CHANNEL |
|-----------------------------|

|  |   |
|--|---|
| MULTI_CHANNEL_CMD_ENCAP                    | (Meter report = Endpoint3)<br>(Bit Address =0 ; Destination End Point = command owner Endpoint value)<br>(Command_Class_Meter_V3 = 0x32)<br>(Meter_Report = 0x02)<br>(Scale Bit2 = 1 , Rate Type = 0x01 , Meter Type=0x01)<br>(Precision = 1 , Scale Bit1Bit0 = 0x00 , Size = 2)<br>Voltage = 0x0910 = 232.0V |
| Source End Point = 0x03                    |   |
| (Bit Address+Destination End Point = 0x05) |   |
| Command Class = 0x32                       |   |
| Command =0x02                              |   |
| Parameter 1 = 0xA1                         |   |
| Parameter 2 = 0x22                         |   |
| Parameter 3 = 0x09                         |   |
| Parameter 4 = 0x10                         |   |

### 2-3-5-4 Get load current I from endpoint

Meter\_GET example:

|                             |   |
|-----------------------------|---|
| COMMAND_CLASS_MULTI_CHANNEL | (this is the endpoint of command owner, here we assume endpoint is 5 , if the owner doesn't support multi Channel this value will be 0) |
| MULTI_CHANNEL_CMD_ENCAP     |   |
| Source End Point = 0x05     |   |

|  |   |
|--|---|
| (Bit Address+Destination End Point = 0x03) | (Bit Address =0 : Destination End Point range1~3) |
| Command Class = 0x32                       | ( Command_Class_Meter_V3 = 0x32)                  |
| Command =0x01                              | (Meter_Get = 0x01)                                |
| Parameter 1 = 0x28                         | (Scale = A = 0x05)                                |

PAB01 AC input current (I) example :

|  |   |
|--|---|
| COMMAND_CLASS_MULTI_CHANNEL                |   |
| MULTI_CHANNEL_CMD_ENCAP                    |   |
| Source End Point = 0x03                    | (Meter report = Endpoint3)  |
| (Bit Address+Destination End Point = 0x05) | (Bit Address =0 : Destination End Point = command owner Endpoint value) |
| Command Class = 0x32                       | (Command_Class_Meter_V3 = 0x32)   |
| Command =0x02                              | (Meter_Report = 0x02)   |
| Parameter 1 = 0xA1                         | (Scale Bit2 = 1 · Rate Type = 0x01 , Meter Type=0x01)                   |
| Parameter 2 = 0x4A                         | (Precision = 2 · Scale Bit1Bit0 = 0x01 · Size = 2)                      |
| Parameter 3 = 0x00                         | Current = 0x002B = 0.43A  |

|                    |  |
|--------------------|--|
| Parameter 4 = 0x2B |  |
|--------------------|--|

### 2-3-5-5 Get power factor PF from endpoint

Meter\_GET example:

|  |   |
|--|---|
| COMMAND_CLASS_MULTI_CHANNEL                | (this is the endpoint of command owner, here we assume endpoint is 5 · if the owner doesn't support multi Channel this value will be 0) |
| MULTI_CHANNEL_CMD_ENCAP                    |   |
| Source End Point = 0x05                    |   |
| (Bit Address+Destination End Point = 0x03) | (Bit Address =0 : Destination End Point range1~3)   |
| Command Class = 0x32                       | ( Command_Class_Meter_V3 = 0x32)  |
| Command =0x01                              | (Meter_Get = 0x01)  |
| Parameter 1 = 0x30                         | (Scale = PF = 0x06)   |

PAB01 power factor report example :

|                             |                            |
|-----------------------------|----------------------------|
| COMMAND_CLASS_MULTI_CHANNEL | (Meter report = Endpoint3) |
| MULTI_CHANNEL_CMD_ENCAP     |                            |
| Source End Point = 0x03     |                            |

|  |   |
|--|---|
| (Bit Address+Destination End Point = 0x05) | (Bit Address =0 : Destination End Point = command owner Endpoint value) |
| Command Class = 0x32                       | (Command_Class_Meter_V3 = 0x32)   |
| Command =0x02                              | (Meter_Report = 0x02)   |
| Parameter 1 = 0xA1                         | (Scale Bit2 = 1 , Rate Type = 0x01 , Meter Type=0x01)                   |
| Parameter 2 = 0x51                         | (Precision = 2 , Scale Bit1Bit0 = 0x10 , Size = 1)                      |
| Parameter 3 = 0x63                         | Power Factor = 0x63 = 0.99  |

Note : If the Destination End Point is 1, it will report the power factor of CT1, but not the sum of PF of CT1 and CT2.

### 3.Z-Wave's Configuration

| Configuration Parameter | Function                 | Size (Byte) | Value       | Unit | Default | Description         |
|-------------------------|--------------------------|-------------|-------------|------|---------|---------------------|
| 1                       | Watt Meter Report Period | 2           | 0x01-0x7FFF | 5s   | 720     | 5*720s=3600s=1 hour |
| 2                       | KWH                      | 2           | 0x01-       | 5s   | 720     | 5*720s=3600s=1      |

|   |                                       |   |         |       |       |                                       |
|---|---------------------------------------|---|---------|-------|-------|---------------------------------------|
|   | Meter Report Period                   |   | 0x7FFF  |       |       | hour                                  |
| 3 | Slected End Point                     | 1 | 1-3     |       | 1     | 1 : CT1 and CT2<br>2 : CT1<br>3 : CT2 |
| 4 | Threshold of Current for Load Caution | 2 | 10-750  | 0.01A | 750   | 750*0.01A=7.5A                        |
| 5 | Threshold of KWH for Load Caution     | 2 | 1-10000 | 1KWh  | 10000 |                                       |

#### 3-1 Watt Meter Report Period:

If the setting is configured for 1hour (set value =720), the PAB01 will report its instant power consumption every 1 hour to the node of correspond Group. The maximum interval to report its instant power consumption is 45 hours (5s\*32767/3600=45hr).

#### 3-2 KWH Meter Report Period:

If the setting is configured for 1hour (set value =720), the PAB01 will report its Accumulated Power Consumption (KW/h) every 1 hour to the node of correspond Group. The maximum interval to report its Accumulated Power Consumption (KW/h) is 45 hours (5s\*32767/3600=45hr).

### 3-3 Selected Endpoint

If Controller not using Multi\_Channel command class to access the endpoint of PAB01, you may configure the endpoint value to react the Basic Command Class  
 · Binary Switch Command Class or Meter Command Class V3

#### 3-3-1 Selected Endpoint 1 : Default Selected Endpoint is 1

| Get command | parameter       | Report to command sender         |
|-------------|-----------------|----------------------------------|
| Meter_Get   | KWh             | CT1 KWh1+CT2 KWh2                |
| Meter_Get   | Watt            | CT11 W1+CT2 W2                   |
| Meter_Get   | Voltage         | CT1 and CT2 are the same voltage |
| Meter_Get   | Current         | CT1 I1+CT2 I2                    |
| Meter_Get   | Power factor PF | CT1                              |

#### 3-3-2 Selected Endpoint 2

Similar like Selected Endpoint 1 but only relate to CT1 and ignore CT2

#### 3-3-3 Selected Endpoint 3

Similar like Selected Endpoint 1 but only relate to CT2 and ignore CT1

### 3-4 Threshold of Current for Load Caution

This is a warning when the current of load over the preset threshold value, If the setting value is 750, when the load wattage of CT1 or CT2 over 7.5A, PAB01 will send current Meter Report command to the node of correspond Group.

### 3-5 Threshold of KWh for Load Caution

This is a warning when the KWh of load over the preset threshold value, If the setting value is 10000, when the Accumulated Power Consumption of CT1 or CT2 over this value, PAB01 will send KWh Meter Report command to the node of correspond Group, minum value is 1KWh and default value is 10000 kWh

## 4. Command Classes

The Switch supports Command Classes including...

- \* COMMAND\_CLASS\_ZWAVEPLUS\_INFO
- \* COMMAND\_CLASS\_VERSION
- \* COMMAND\_CLASS\_MANUFACTURER\_SPECIFIC\_V2
- \* COMMAND\_CLASS\_DEVICE\_RESET\_LOCALLY
- \* COMMAND\_CLASS\_ASSOCIATION\_V2
- \* COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO
- \* COMMAND\_CLASS\_POWERLEVEL
- \* COMMAND\_CLASS\_MULTI\_CHANNEL\_V3
- \* COMMAND\_CLASS\_METER\_V3
- \* COMMAND\_CLASS\_CONFIGURATION

## Troubleshooting


| Symptom                              | Cause of Failure   | Recommendation   |
|--------------------------------------|--|--|
| The meter is not working and LED off | <ol style="list-style-type: none"> <li>1. The meter is not connect to the Main power</li> <li>2. The meter break down</li> </ol> | <ol style="list-style-type: none"> <li>1. Check power connections</li> <li>2. Don't open up the meter and send it for repair.</li> </ol> |
| The meter cannot report to the group | <ol style="list-style-type: none"> <li>1. Not carry out association</li> <li>2. Same frequency interference</li> </ol>           | <ol style="list-style-type: none"> <li>1. Carry out association</li> <li>2. Wait for a while to re-try</li> </ol>                        |

## Specification

|                       |  |
|-----------------------|--|
| Operating Voltage     | 100~240VAC   |
| Rated Primary Current | 0.05A~60A x 2 Channel ; Split Core Transformer   |
| Range                 | Minimum 40 m in door 100m outdoor line of sight  |
| Operating Temperature | 0°C ~ 40°C   |
| Frequency Range       | PAB01-1 868.40 & 869.85MHz (EU) /<br>PAB01-2 908.40 & 916.0MHz(USA/Canada) /<br>PAB01-3 922~927MHz (Taiwan/JP) |

\*\* Specifications are subject to change and improvement without notice.

 FCC ID : RHPAB01

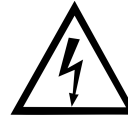

### DANGER

Danger of electrocution!

All works on the device may be performed only by a qualified and licensed electrician. Observe national regulations.

Any works introducing changes into the configuration must be always performed with disconnected voltage.

### Choosing a Suitable Location

1. Do not locate the Module facing direct sunlight, humid or dusty place.
2. The suitable ambient temperature for the Module is 0°C~40°C.
3. Do not locate the Module where exists combustibile substances or any source of heat, e.g. fires, radiators, boiler etc.
4. After putting it into use, the body of Module will become a little bit hot of which phenomenon is normal.

## Warning:

- 1.Plug out to disconnect from power supply; Do not plug in line.
2. Do not exceed the max rating.

## Disposal



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Company of License Holder : Philio Technology Corporation

Address of License Holder : 8F.,No.653-2,Zhongzheng Rd., Xinzhuang Dist., New Taipei City 24257,Taiwan(R.O.C)

## FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.