




## First-time setup

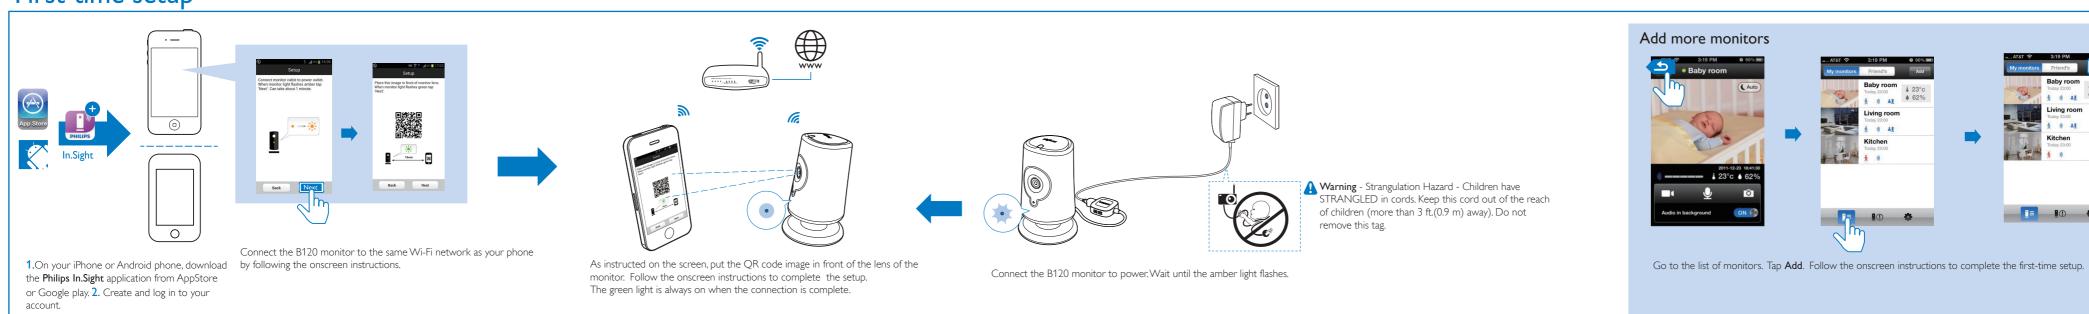


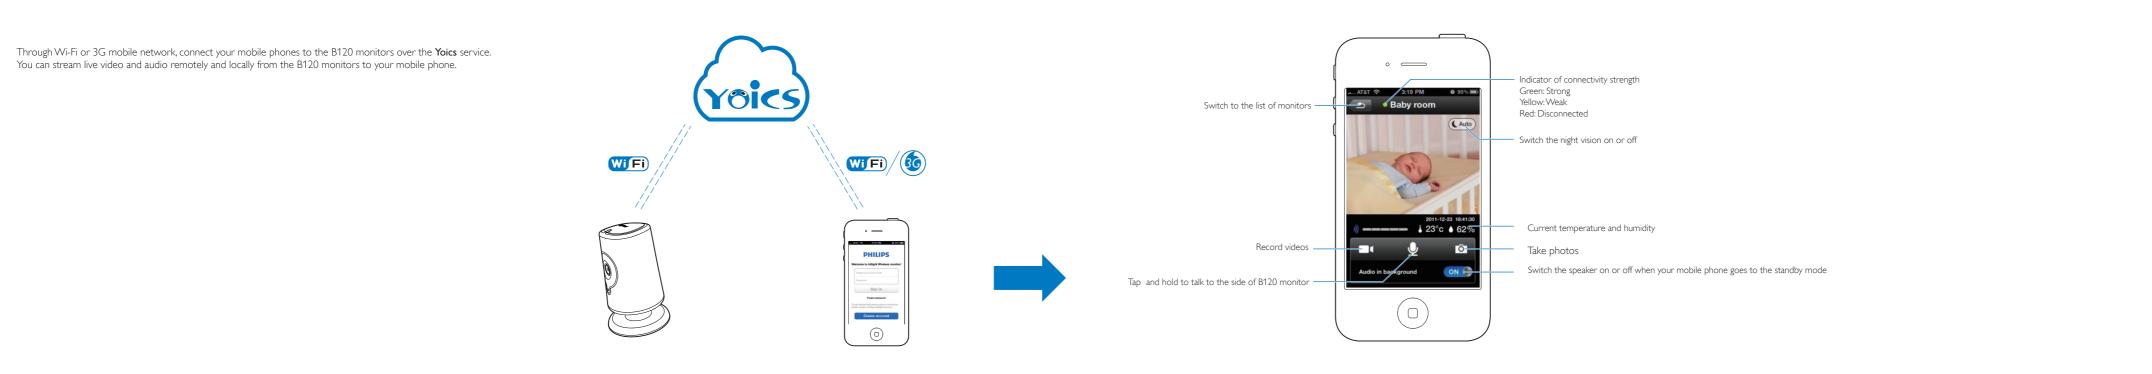






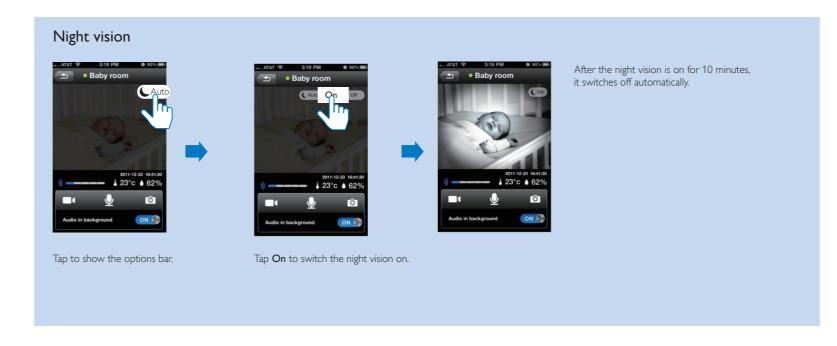

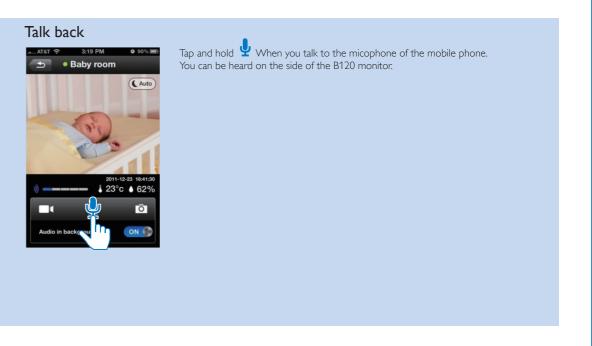


### Set alerts

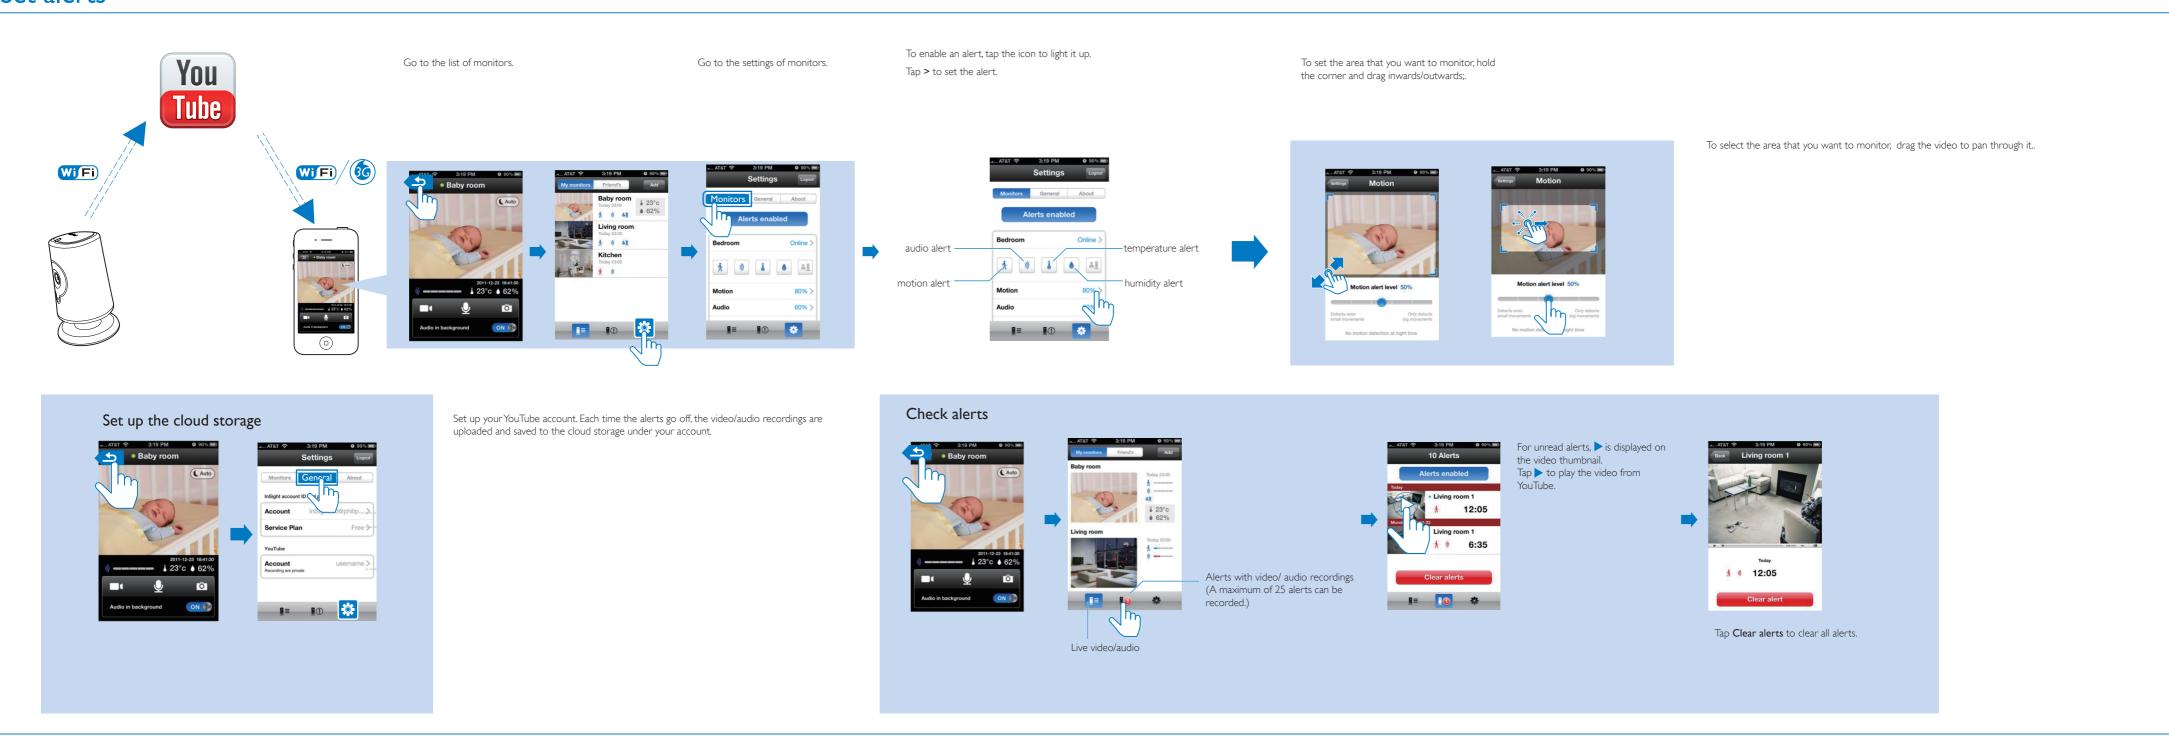


#### Setup the monitor


Temperature & humidity sensor Range: - 10 °C to 50 °C, 20% to 90%

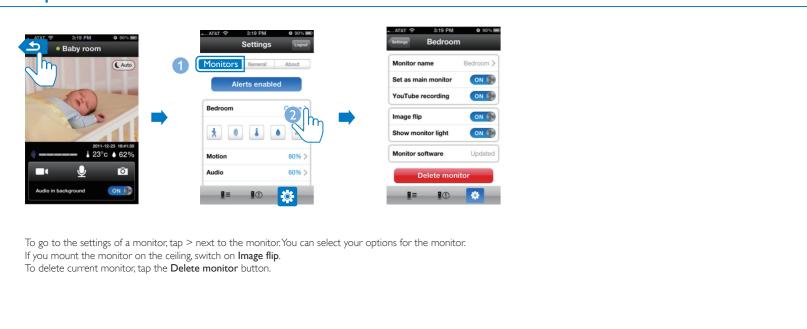

#### Share the monitor

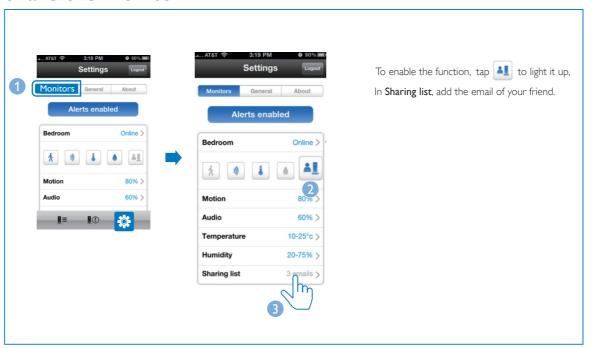

## Update the software

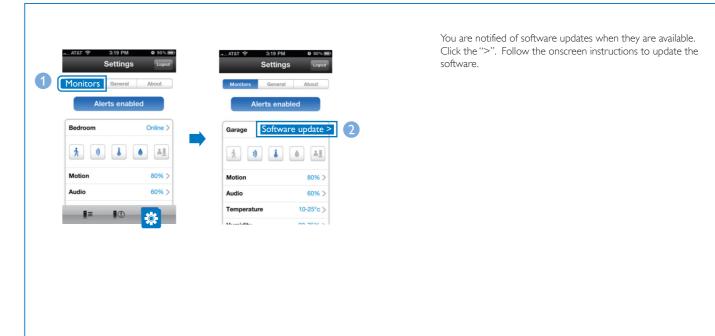

# **Specifications** Especificaciones Caractéristiques techniques

