

English

### DivX subtitles

- Press **SUBTITLE** to select a language.
- If the subtitle is not displayed correctly, change the character set that supports the DivX subtitle. Select a character set: press **≡**, and select **[Character Set]**.

Character set	Languages
<b>[Standard]</b>	English, Albanian, Danish, Dutch, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish, and Turkish
<b>[Central Europe]</b>	Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene, and Serbian
<b>[Cyrillic]</b>	Bulgarian, Belorussian, English, Macedonian, Moldavian, Russian, Serbian, and Ukrainian
<b>[Greek]</b>	Greek



#### Note

- To play DivX DRM protected files from a USB storage device, connect this player to a TV through HDMI.
- To use the subtitles, make sure that the subtitle file has the same name as the DivX video file name. For example, if the DivX video file is named "movie.avi", save the subtitle file as "movie.srt", or "movie.sub".
- This player can play subtitle files in the following formats: .srt, .sub, .txt, .ssa, and .smi.

## Play a musical slideshow

Play music and pictures simultaneously to create a musical slideshow.

 
- 1 From a disc or connected USB storage device, play a music file.
- 2 Press **▷**, and go to the picture folder.
- 3 Select a picture from the same disc or USB, and press **OK** to start slideshow.
- 4 Press **■** to stop slideshow.
- 5 Press **■** again to stop music play.

## BonusView on Blu-ray

View special content (such as commentaries) in a small screen window.

This feature is only applicable to Blu-ray discs compatible with BonusView (also known as picture in picture).

- 1 During play, press **≡**.  
→ The options menu is displayed.



- 2 Select [PIP Selection] > [PIP], and press **OK**.
  - ↳ PIP options [1]/[2] depend on the video contents.
  - ↳ The secondary video window is displayed.
- 3 Select [2nd Audio Language] or [2nd Subtitle Language], and press **OK**.

---

## BD-Live on Blu-ray

Access exclusive online services, such as movie trailers, games, ringtones and other bonus contents. This feature is only applicable to Blu-ray discs that are BD-Live enabled.

- 1 Prepare the Internet connection and set up a network (see "Set up a network").
- 2 Connect a USB storage device to this player.
  - A USB storage device is used to store the downloaded BD-Live content.
  - To delete the BD-Live previously downloaded on the USB storage device for memory release, press **Home** and select [Setup] > [Advanced] > [Clear memory].
- 3 Play a disc that is BD-Live enabled.
- 4 On the disc menu, select the BD-Live icon, and press **OK**.
  - ↳ BD-Live starts to load. The loading time depends on the disc and the Internet connection.
- 5 On the BD-Live interface, select an item to access.



### Note

 
- BD-Live services vary from discs and countries.
- When you use BD-Live, data on the disc and this player are accessed by the content provider
- Use a USB storage device with at least 1GB of free space to store the download.

---

## Play a Blu-ray 3D video

### Before you start, make sure that:

- the TV is 3D compliant, and is connected to this player through HDMI
  - the disc is a Blu-ray 3D disc
  - you have 3D glasses compatible with the TV.
- 1 Make sure that 3D output is turned on: press **Home**, and select [Setup] > [Video] > [Watch 3D video]> [Auto].
  - 2 Play a Blu-ray 3D video.
  - 3 Put on the 3D glasses for 3D effects.
    - To play 3D video in 2D, turn off Blu-ray 3D output (press **Home**, and select [Setup] > [Video] > [Watch 3D video]> [Off]).



## Set up a network

English

Connect this player to the Internet to access the services:

- **BD-Live:** access online bonus features (applicable to Blu-ray discs that are BD-Live enabled)
- **Update software:** update the software of this player via the Internet.
- **Netflix:** access online videos from Netflix.
- **Vudu:** access online videos from Vudu.

- 1** Connect this player to the Internet through wired (Ethernet) or wireless connection.
- For wired connection, connect a network cable (not supplied) to the **LAN** port on the back panel of this player.
  - For wireless connection, this player has a built-in Wi-Fi.



- 2** Perform the network installation.

- 1) Press **Home**.
- 2) Select **[Setup]**, and press **OK**.
- 3) Select **[Network] > [Network Installation]**, and press **OK**.
- 4) Follow the instructions on the TV screen to complete the installation. If necessary, use the alphanumeric buttons on the remote control to enter a password.



 
### Caution

- Before you connect to a network, familiarize yourself with the network router, and networking principles. If necessary, read documentation accompanying network components. Philips is not responsible for lost, damaged or corrupt data.

## Netflix

With this player, you can stream movies and TV episodes from Netflix to your TV over the Internet. Netflix provides online video rental service.

- 1 Connect this player to the Internet (see "Set up a network").
- 2 Press **Home**, select **[Netflix]**, and press **OK**.  
↳ The Netflix page is displayed on the TV screen.
- 3 Use the remote control to browse Netflix, and select a video to play.
  - To exit Netflix, press **Home**.



### Note

- For more detailed information on the Netflix service, visit [www.netflix.com](http://www.netflix.com) on your computer.
- Netflix customer service may ask you the ESN (electronic serial number) of this player during troubleshooting. To display the ESN, press **Home**, and select **[Setup] > [Advanced] > [Netflix ESN]**.

## Vudu

With this player, you can stream videos from Vudu to your TV over the Internet. Vudu provides on-demand videos which you can rent or purchase, and rich Internet applications.

- 1 Connect this player to the Internet (see "Set up a network").
- 2 Press **Home**, select **[Vudu]**, and press **OK**.  
↳ The Vudu page is displayed on the TV screen.
- 3 Use the remote control to browse Vudu, and select a video to play.
  - To exit Vudu, press **Home**.



### Note

- For more detailed information on the Vudu service, visit [www.vudu.com](http://www.vudu.com) on your computer.

## Use Philips EasyLink

This player supports Philips EasyLink which uses the HDMI CEC (Consumer Electronics Control) protocol. You can use a single remote control to control EasyLink compliant devices that are connected through HDMI. Philips does not guarantee 100% interoperability with all HDMI CEC devices.

 
- 1 Connect the HDMI CEC compliant devices through HDMI, and turn on the HDMI CEC operations on the TV and other connected devices (see the user manual of the TV or other devices for details).
- 2 Press **Home**.
- 3 Select **[Setup]> [EasyLink]**.
- 4 Select **[On]** under the options: **[EasyLink]**, **[One Touch Play]** and **[One Touch Standby]**.  
↳ EasyLink function is turned on.

### One Touch Play

When you play a disc on this player, the TV automatically switches to the correct video input source.

### One Touch Standby


When a connected device (for example TV) is put to standby with its own remote control, this player is put to standby automatically.



English

# 3 Change settings

This section helps you change the settings of this player.

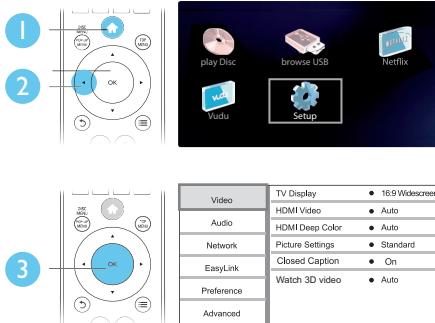


## Note

- You cannot change a menu option that is grayed out.
- To return to the previous menu, press . To exit the menu, press .

## Picture

 - 1 Press .
- 2 Select [Setup] > [Video] to access the video setup options.
  - **[TV Display]**: Select a picture display format to fit the TV screen.
  - **[HDMI Video]**: Select an HDMI video resolution.
  - **[HDMI Deep Color]**: Display colors with more shades and hues when the video content is recorded in Deep Color and the TV supports this feature.
  - **[Picture Settings]**: Select a predefined color setting.
  - **[Closed Caption]**: Turn on or off the display of sound effects in subtitles (applicable only when a disc and a TV support this feature).
  - **[Watch 3D video]**: Set to 3D or 2D output when playing a Blu-ray 3D disc. The player must be connected to a 3DTV through HDMI.



### Note

- If you change a setting, make sure that the TV supports the new setting.
- For settings related to HDMI, the TV must be connected through HDMI.
- For the composite connection (via the **VIDEO** connector), select a video resolution of 480i/576i or 480p/576p under **[HDMI Video]** to enable video output.

---

## Sound

- 1 Press **Home**.
- 2 Select **[Setup] > [Audio]** to access the audio setup options.
  - **[Night Mode]**: Select quiet or full dynamic sound. Night mode decreases the volume of loud sound and increases the volume of soft sound (such as speech).
  - **[Neo 6]**: Enable or disable a surround sound effect which is converted from 2.0 channel audio.
  - **[HDMI Audio]**: Set an HDMI audio format when this player is connected through HDMI.
  - **[Digital Audio]**: Select an audio format for the sound output when this player is connected through a digital connector (coaxial).
  - **[PCM Downsampling]**: Set the sampling rate for PCM audio output when this player is connected through a digital connector (coaxial).



### Note

- For settings related to HDMI, the TV must be connected through HDMI.
- Night mode is only available for Dolby encoded DVD and Blu-ray discs.

---

 
## Network (installation, status...)

- 1 Press **Home**.
- 2 Select **[Setup] > [Network]** to access the network setup options.
  - **[Network Installation]**: Start a wired or wireless installation to make the network work.
  - **[View Network Settings]**: Display the current network status.
  - **[View Wireless Settings]**: Display the current Wi-Fi status.

---

## Preference (languages, parental control...)

- 1 Press **Home**.
- 2 Select **[Setup] > [Preference]** to access the preference setup options.
  - **[Menu language]**: Select an onscreen display menu language.
  - **[Audio]**: Select an audio language for video.
  - **[Subtitle]**: Select a subtitle language for video.



English

- **[Disc Menu]**: Select a menu language for a video disc.
- **[Parental Control]**: Restrict access to discs that are encoded with ratings. Input "0000" to access the restriction options. To play all discs irrespective of the rating, select level "8".
- **[Screen Saver]**: Enable or disable screen saver mode. If enabled, the screen enters idle mode after 10 minutes of inactivity (for example, in pause or stop mode).
- **[Auto Subtitle Shift]**: Enable or disable subtitle shift. If enabled, the subtitle position is changed automatically to fit the TV screen (this feature works with some Philips TVs only).
- **[Change Password]**: Set or change a password to play a restricted disc. Input "0000" if you do not have a password or if you have forgotten your password.
- **[Display Panel]**: Change the brightness of the display panel of the player.
- **[Auto Standby]**: Enable or disable auto standby. If enabled, the player switches to standby after 30 minutes of inactivity (for example, in pause or stop mode).
- **[VCD PBC]**: Display or skip the content menu for VCD and SVCD.



#### Note

- If your preferred language is not available for disc language, audio or subtitle, you can select **[Other]** from the menu options and input 4-digit language code which can be found at the back of this user manual.
- If you select a language which is not available on a disc, this player uses the default language of the disc.

---

 
## Advanced options (BD-Live security, clear memory...)

- 1 Press .
- 2 Select **[Setup] > [Advanced]** to access the advanced setup options.
  - **[BD-Live Security]**: Restrict or allow access to BD-Live (only for non-commercial, user-created BD-Live discs).
  - **[Software Update]**: Select to update software from a network or from USB storage device.
  - **[Clear memory]**: Delete the previous BD-Live download on the USB storage device. A "BUDA" folder is automatically created to store the BD-Live download.
  - **[DivX® VOD Code]**: Display the DivX® registration code or the deregistration code for this player.
  - **[Netflix ESN]**: Display ESN (Electronic Serial Number) for this player.
  - **[Deactivation]**: Cancel Netflix or Vudu activation on this player.
  - **[Version Info.]**: Display the software version of this player.
  - **[Restore default settings]**: Reset this player to the default settings made at the factory.



#### Note

- You cannot restrict Internet access on commercial Blu-ray discs.
- Before you purchase DivX videos and play them on this player, register this player on [www.divx.com](http://www.divx.com) with the DivX VOD code.
- You cannot reset a parental control setting to the default value.



# 4 Update software

Before you update the software of this player, check the current software version:

- Press , and then select [Setup] > [Advanced] > [Version Info.], and press OK.

---

## Update software via the Internet

- 1 Connect the player to the Internet (see "Set up a network").
- 2 Press , and select [Setup].
- 3 Select [Advanced] > [Software Update]> [Network].
  - ↳ If an upgrade media is detected, you are prompted to start the update.
- 4 Follow the instructions on the TV screen to update the software.
  - ↳ When the update is complete, this player automatically turns off and on again.

---

 
## Update software via USB

- 1 Check the latest software version on [www.philips.com/support](http://www.philips.com/support).
  - Search for your model and click on "Software and drivers".
- 2 Download the software into a USB storage device.
  - ① Unzip the download, and make sure that the unzipped folder is named "UPG".
  - ② Put the "UPG" folder in the root directory.
- 3 Connect the USB storage device to the (USB) connector on this player.
- 4 Press , and select [Setup].
- 5 Select [Advanced] > [Software Update]> [USB].
  - ↳ If an upgrade media is detected, you are prompted to start the update.
- 6 Follow the instructions on the TV screen to update the software.
  - ↳ When the update is complete, this player automatically turns off and on again.



### Caution

- Do not turn off the power or remove the USB storage device when the software update is in progress because you might damage this player.



English

# 5 Specifications



## Note

- Specifications are subject to change without notice

### Region code

This player can play discs with the following region codes.

DVD	Blu-ray	Countries
		USA and Canada

### Playable media

- BD-Video, BD 3D
- DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL (Dual Layer)
- VCD/SVCD
- Audio CD, CD-R/CD-RW, MP3 media, WMA media, JPEG files
- DivX (Ultra)/DivX Plus HD media, MKV media
- USB storage device

### File format

 
- Video: .avi, .divx, .mp4, .mkv
- Audio: .mp3, .wma, .wav
- Picture: .jpg, .gif, .png

### Video

- Signal system: PAL / NTSC
- Composite video output: 1 Vp-p (75 ohm)
- HDMI output 480p, 576p, 720p, 1080i, 1080p, 1080p/24

### Audio

- 2 Channel analog output
  - Audio Front L&R : 2Vrms (> 1 kohm)
- Digital output: 0.5 Vp-p (75 ohm)
  - Coaxial
- HDMI output



- Sampling frequency:
  - MP3: 32 kHz, 44.1 kHz, 48 kHz
  - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
  - MP3: 112 kbps - 320 kpbs
  - WMA: 48 kpbs - 192 kpbs

#### USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: USB Mass Storage Class (JMS)
- File system: FAT16, FAT32
- Support HDD (a portable hard drive): an external power source may be needed.

#### Main unit

 
- Power supply rating: AC 110 - 127V~, 50Hz - 60Hz
- Power consumption: 18 W
- Power consumption in standby mode: < 0.5 W
- Dimensions (w x h x d): 435 x 41 x 195.5 (mm)
- Net Weight: 1.47 kg

#### Accessories supplied

- Remote control with 2 batteries
- User manual

#### Laser Specification

- Laser Type (Diode): AlGaN (BD), AlGnP (DVD/CD)
- Wave length: 405+7nm/-7nm (BD), 655+10nm/-10nm (DVD), 790+10/-20nm (CD)
- Output power: 1mW (BD), 0.26mW (DVD), 0.3mW (CD)



English

# 6 Troubleshooting



## Warning

- Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the player yourself.

If you have problems using this player, check the following points before you request service. If you still have a problem, visit [www.hd.philips.com](http://www.hd.philips.com).

If you contact Philips, you will be asked for the model and serial number of this player. The model number and serial number are on the back of this player. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

## Main unit

**The buttons on this player do not work.**

- Disconnect this player from the power supply for a few minutes, and then reconnect.

---

## Picture

**No picture.**

- Make sure that the TV is switched to the correct source input for this player.
- For the composite connection (via the **VIDEO** connector) to the TV, on this player select a video resolution of 480i/576i or 480p/576p under **[HDMI Video]** to enable video output.

**No picture on HDMI connection.**

- Make sure that the HDMI cable is not faulty. If it is faulty, replace with a new HDMI cable.
- On the remote control, press **▲** and then press "731" (numeric buttons) to recover picture display. Or wait for 10 seconds for auto recovery.
- If this player is connected to an unauthorized display device with an HDMI cable, the audio and video signals may not be output.

**The disc does not play high-definition video.**

- Make sure that the disc contains high-definition video.
- Make sure that the TV supports high-definition video.

---

 
## Sound

**No audio output from the TV.**

- Make sure that the audio cables are connected to the audio input of the TV.
- Make sure that the TV is switched to the correct source input for this player.

**No audio output from the loudspeakers of the external audio device (home theater or amplifier).**

- Make sure that the audio cables are connected to the audio input of the audio device.
- Switch the external audio device to the correct audio source input.



#### No sound on HDMI connection.

- You may not hear any sound from the HDMI output if the connected device is non-HDCP compliant or only DVI-compatible.

#### No secondary audio output for picture-in-picture feature.

- When [Bitstream] under the [HDMI Audio] or [Digital Audio] menu is selected, interactive sound like secondary sound for picture-in-picture feature is muted. Deselect [Bitstream].

---

## Play

#### Cannot play a disc.

- Clean the disc.
- Make sure that the disc is correctly loaded.
- Make sure that this player supports the disc. See "Specifications".
- Make sure that this player supports the region code of the DVD or BD.
- For DVD±RW or DVD±R, make sure that the disc is finalized.

#### Cannot play DivX video files.

- Make sure that the DivX video file is complete.
- Make sure that the video file name extension is correct.
- To play DivX DRM protected files from a USB storage device, connect this player to a TV through HDMI.

#### DivX subtitles do not display correctly.

- Make sure that the subtitle file has the same name as the DivX video file.
- Make sure that the subtitle file has an extension name supported by this player (.srt, .sub, .txt, .ssa, or .smi).

#### Cannot read the contents of a connected USB storage.

- Make sure that the format of the USB storage device is compatible with this player.
- Make sure that the file system on the USB storage device is supported by this player.
- For a USB HDD (a portable hard drive), an external power source may be needed.

#### 'No entry' or 'x' sign is displayed on the TV.

 
- The operation is not possible.

#### EasyLink feature does not work.

- Make sure that this player is connected to the Philips brand EasyLink TV, and the EasyLink option is turned on (see "Use your Blu-ray disc/ DVD player" > "Use Philips EasyLink").

#### Cannot access BD-Live features.

- Make sure that this player is connected to the network (see "Use your Blu-ray disc/ DVD player" > "Set up a network").
- Make sure that the network installation is made (see "Use your Blu-ray disc/ DVD player" > "Set up a network").
- Make sure that the Blu-ray disc supports BD-Live features.
- Clear memory storage (see "Change settings" > "Advanced options (BD-Live security, clear memory...)").



English

## Network

### Wireless network is not found or distorted.

- Make sure that the network is correctly connected (see "Use your Blu-ray disc/ DVD player" > "Set up a network").
- Make sure that the network installation is made (see "Use your Blu-ray disc/ DVD player" > "Set up a network").
- Make sure that the wireless network is not disturbed by microwave ovens, DECT phones, or other neighboring Wi-Fi devices.
- If the wireless network does not work properly, try a wired network installation (see "Use your Blu-ray disc/ DVD player" > "Set up a network").

### Netflix and Vudu does not work.

- Make sure that the network is correctly connected (see "Use your Blu-ray disc/ DVD player" > "Set up a network").
- Make sure that the network installation is made (see "Use your Blu-ray disc/ DVD player" > "Set up a network").
- Check the router connection (refer to the user manual for the router).

 
 
 
 
### Netflix and Vudu works slowly.

 
- Look in your wireless router's user manual for information on indoor range, transfer rate, and other factors of signal quality.
- You need a high speed Internet connection for your router.

## 3D videos

### Cannot see 3D effects

- Make sure that 3D output is turned on (see "Use your Blu-ray disc/ DVD player" > "Play a Blu-ray 3D video").
- Make sure that the disc title being played is Blu-ray 3D compliant.
- Make sure that the TV is 3D and HDMI compliant, and the TV is set to 3D mode (refer to the TV's user manual).
- Make sure that the 3D glasses are activated (refer to the TV's user manual).






# Contenido

Español

 
<b>1 Conexión y reproducción</b>	2-7
<b>2 Uso del reproductor de Blu-ray / DVD</b>	28
Controles básicos de reproducción	28
Opciones de video, audio e imagen	29
Vídeos DivX	31
Reproducción de una secuencia de diapositivas con música	31
Uso de Bonus View en Blu-ray	32
Acceso a BD-Live en Blu-ray	32
Reproducción de un video Blu-ray en 3D	33
Instalación de la red	33
Netflix	34
Vudu	34
Uso de Philips EasyLink	35
<b>3 Cambio de los ajustes</b>	36
Imagen	36
Sound	37
Red (instalación, estado...)	37
Preferencias (idiomas, control paterno...)	38
Opciones avanzadas (seguridad de BD-Live, liberación de espacio en la memoria...)	38
<b>4 Actualización de software</b>	40
Actualización de software a través de Internet	40
Actualización de software mediante USB	40
<b>5 Especificaciones</b>	41
<b>6 Solución de problemas</b>	43
<b>Garantía</b>	66



## 2 Uso del reproductor de Blu-ray / DVD


Felicitaciones por su compra y bienvenido a Philips. Para utilizar los servicios de asistencia técnica de Philips, visite [www.hd.philips.com](http://www.hd.philips.com).

### Controles básicos de reproducción

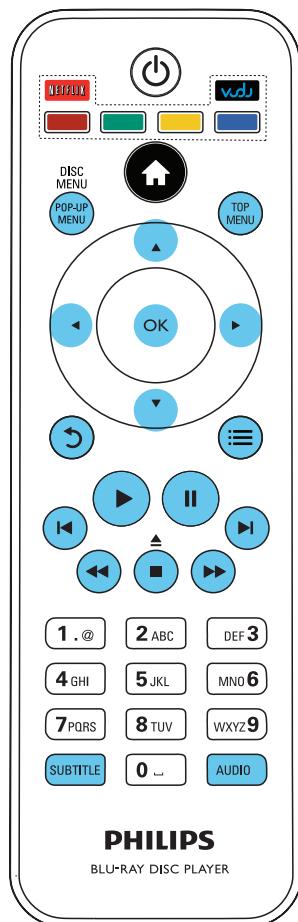

Pulse los siguientes botones para controlar la reproducción.

Botón	Acción
▲	Accede al menú de inicio.
▲ / ■	Detiene la reproducción. Mantenga pulsado (más de 4 segundos) para abrir o cerrar la bandeja de discos.
■	Hace una pausa en la reproducción. Pulse varias veces para avanzar lentamente cuadro por cuadro.
▶	Inicia o reanuda la reproducción.
◀ / ▶	Pasa la pista, capítulo o archivo anterior o siguiente.
◀◀ / ▶▶	Realiza búsquedas rápidas hacia atrás o hacia adelante. Pulse varias veces para incrementar la velocidad de búsqueda. Pulse ■ una vez y, a continuación, pulse ▶▶ para avanzar lentamente.
AUDIO	Selecciona un idioma o canal de audio.
SUBTITLE	Selecciona el idioma de los subtítulos.
DISC MENU / POP-UP MENU	Accede o sale del menú del disco.
TOP MENU	Permite acceder al menú principal de un disco de video.
Botones de color	Selecciona tareas u opciones para los discos Blu-ray. Pulse Netflix para conectarse a Netflix. Pulse Vudu para conectarse a Vudu.
▲▼◀▶	Navega a través de los menús. Pulse ▲▼ para girar una imagen a la derecha o a la izquierda durante la secuencia de diapositivas.
OK	Confirma una selección o una entrada.

 


5	Regresa al menú de pantalla anterior.
6	Permite acceder a más opciones durante la reproducción.

## Opciones de video, audio e imagen

Español


Hay más opciones disponibles para la reproducción de video o imágenes desde un disco o un dispositivo de almacenamiento USB.

### Opciones de video

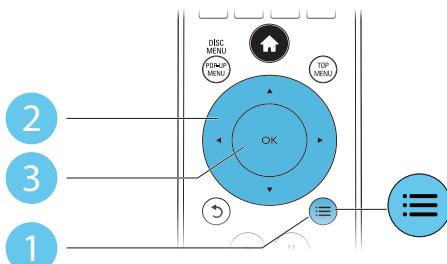

Permite acceder a más opciones durante la reproducción de video.

 - **[Idioma de audio]**: selecciona un idioma de audio.
- **[Idioma de subtítulos]**: selecciona el idioma de los subtítulos.
- **[Cambio de subtítulos]**: cambia la posición de los subtítulos en la pantalla. Pulse  $\blacktriangle \blacktriangledown$  para cambiar la posición de los subtítulos.
- **[Información]**: muestra la información de reproducción.
- **[Conjunto de caracteres]**: selecciona un conjunto de caracteres compatible con los subtítulos de video DivX (sólo para videos DivX).
- **[Búsqueda de tiempo]**: avanza a una hora específica mediante los botones numéricos del control remoto.
- **[2do idioma de audio]**: selecciona el segundo idioma de audio (sólo para discos Blu-ray compatibles con BonusView).
- **[2do idioma subtítulos]**: selecciona el segundo idioma de subtítulos (sólo para discos Blu-ray compatibles con BonusView).
- **[Títulos]**: selecciona un título.
- **[Capítulos]**: selecciona un capítulo.
- **[Lista de ángulos]**: selecciona un ángulo de cámara.
- **[Menús]**: muestra el menú del disco.
- **[Selección PIP]**: muestra la ventana Picture-in-Picture (sólo para discos Blu-ray compatibles con BonusView).
- **[Acercar]**: amplía una imagen de video. Pulse  $\blacktriangle \blacktriangleright$  para seleccionar un grado de zoom.
- **[Repetir]**: repite un capítulo o un título.



- **[Repetir A-B]:** marca dos puntos de un capítulo para repetir la reproducción o desactiva el modo de repetición.
- **[Ajustes de imagen]:** selecciona un ajuste de color predefinido.




### Nota

- Las opciones de video disponibles dependen de la fuente de video.

---

## Opciones de imagen

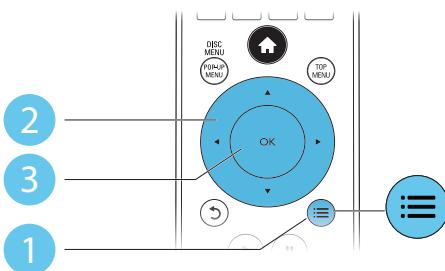


Puede acceder a más opciones durante la secuencia de diapositivas.

- **[Rotar +90]:** gira una imagen 90 grados a la derecha.
- **[Rotar -90]:** gira una imagen 90 grados a la izquierda.
- **[Acercar]:** amplía una imagen. Pulse **◀▶** para seleccionar un grado de zoom.
- **[Información]:** muestra la información de la imagen.
- **[Duración por diapos.]:** configura un intervalo de reproducción para una secuencia de diapositivas.
- **[Animación con diap.]:** selecciona un efecto de transición para una secuencia de diapositivas.
- **[Ajustes de imagen]:** selecciona un ajuste de color predefinido.
- **[Repetir]:** repite una carpeta seleccionada.

---

## Opciones de audio

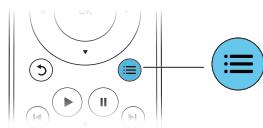

Pulse **⋮** varias veces para desplazarse por las siguientes opciones.

- Repite la pista actual.
- Repite todas las pistas del disco o la carpeta.
- Reproduce las pistas de audio en orden aleatorio.
- Desactiva el modo de repetición.