

Register your product and get support at

www.philips.com/welcome

User manual

PHILIPS

Contents

| | |
|--------------------|---|
| 1 Important | 2 |
| Safety | 2 |

| | |
|--------------------------------|---|
| 2 Your Docking Speaker | 4 |
| Introduction | 4 |
| What's in the box | 4 |
| Overview of the main unit | 5 |
| Overview of the remote control | 6 |

| | |
|----------------------------|---|
| 3 Get started | 7 |
| Prepare the remote control | 7 |
| Connect power | 7 |
| Turn on | 7 |

| | |
|------------------------------------|----|
| 4 Play | 8 |
| Play from iPod/iPhone/iPad | 8 |
| Play from Bluetooth device | 11 |
| Play from an external audio device | 12 |
| Adjust volume | 12 |
| Mute sound | 12 |

| | |
|-------------------------|----|
| 5 Specifications | 13 |
| Amplifier | 13 |
| Bluetooth | 13 |
| General information | 13 |

| | |
|--------------------------|----|
| 6 Troubleshooting | 14 |
| About Bluetooth device | 14 |

| | |
|---|----|
| 7 Notice | 15 |
| RSS | 15 |
| Disposal of your old product and batteries | 15 |

1 Important

Safety



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Important Safety Instructions

- ① Read these instructions.
 - ② Keep these instructions.
 - ③ Heed all warnings.
 - ④ Follow all instructions.
 - ⑤ Do not use this apparatus near water.
 - ⑥ Clean only with dry cloth.
 - ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 - ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - ⑩ Only use attachments/accessories specified by the manufacturer.
 - ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- The icon depicts a person walking and tripping over a power cord that is lying on the floor. The entire scene is enclosed within a circle with a diagonal slash through it, indicating a prohibition or warning against this action.
- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
 - ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - ⑭ Apparatus shall not be exposed to dripping or splashing.
 - ⑮ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
 - ⑯ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling

information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.

- ⑰ Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Keep the battery away from heat, sunshine or fire. Never discard battery in fire.
- Replace the battery with the same or equivalent type only.
- The battery contains chemical substances, so it should be disposed of properly.
- The button cell battery cannot be swallowed. Keep children away from the battery.
- The USB socket is for data transmission only.
- Never remove the casing of this apparatus.
- Make sure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

2 Your Docking Speaker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. _____

Serial No. _____

Introduction

With this docking speaker, you can

 
 
- enjoy audio from the iPod/iPhone/iPad, Bluetooth devices and other external audio devices; and
- synchronize the iPod/iPhone/iPad with your computer through USB socket.

What's in the box

Check and identify the contents of your package:

- Main unit
- Remote control (with battery)
- 1 x AC power adaptor
- Quick start guide

Overview of the main unit

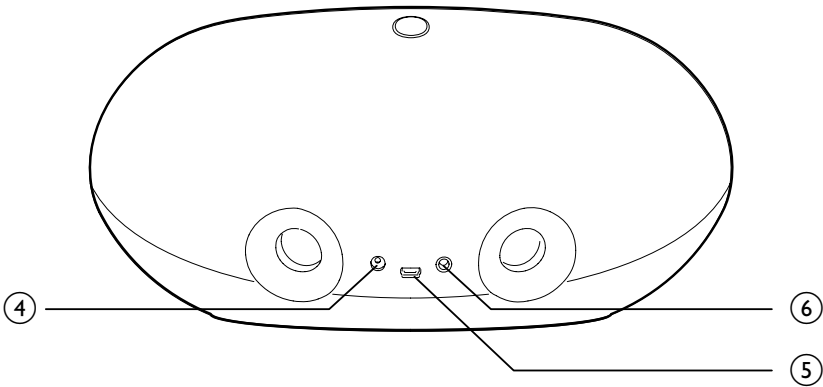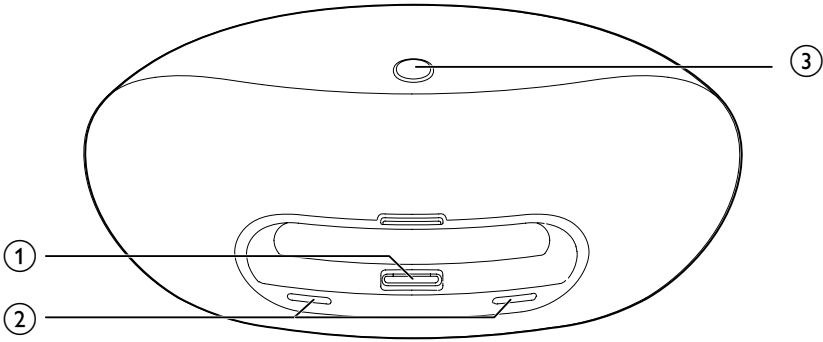

① **Dock for the iPod/iPhone/iPad**

② **+ / -**

- Adjust volume.
- As LED indicators, show system status.

③ *****

- Select Bluetooth mode.
- Turn the docking speaker on or off.

④ **Power supply socket**

- Connect AC power.

 
⑤ **↔**







- Connect a computer with a USB cable.

⑥ **MP3-LINK**

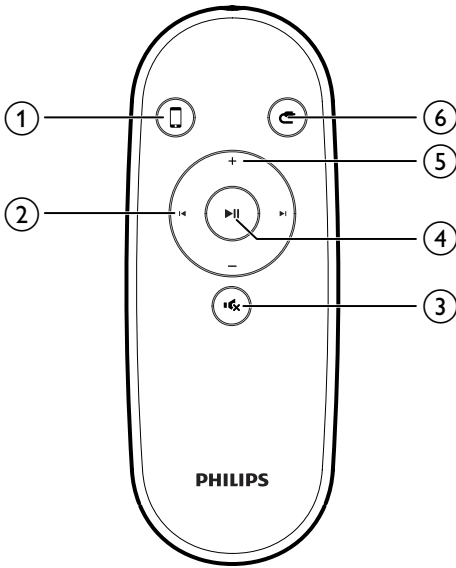- Connect an external audio device.

 Overview of the remote control



- ① 
 - Select iPod/iPhone/iPad dock mode.
- ② 
 - Skip to a track.
 - Search within play.
- ③ 
 - Mute volume.
- ④ 
 - Start or pause play.
- ⑤ 
 - Adjust volume.
- ⑥ 
 - Select MP3 link mode.

3 Get started

Always follow the instructions in this chapter in sequence.

 
Prepare the remote control

For first-time use:

Remove the protective tab to activate the remote control battery.

To replace the empty battery:

- 1 Open the battery tray.
- 2 Insert one CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery tray.

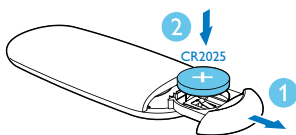

Connect power

! Caution

 
- Risk of product damage! Make sure that the power supply voltage matches the voltage printed on the bottom of the unit.
- Risk of electric shock! When you unplug the AC adaptor; always pull the plug from the socket. Never pull the cord.
- Before connecting the AC adaptor; ensure you have completed all other connections.

☰ Note

- The type plate is located at the back of the main unit.

Connect the AC power adaptor to:

- the power supply socket on the back of the docking speaker;
- the wall outlet.

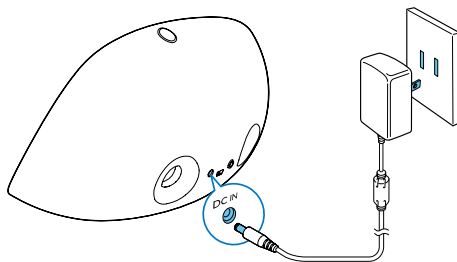

Turn on

Press and hold **⌘** on the main unit for 2 seconds.

↳ The + / - LED indicators light up.

Switch to standby mode

In the following situation, the docking speaker switches to standby mode automatically:

- In DOCK mode: the iPod/iPhone/iPad is disconnected or music is not played for 15 minutes.
- In MP3 Link mode: no MP3 link cable is connected for 15 minutes.
- In Bluetooth mode: the Bluetooth device does not play music for 15 minutes.

↳ The LED indicators turns off.

☰ Note

- In standby mode, if you press **⌘** on the main unit or **⏻** / **⏪** on the remote control, the docking speaker switches to the corresponding selected source.

4 Play

Play from iPod/iPhone/iPad

You can enjoy audio from iPod/iPhone/iPad through this docking speaker.

Compatible iPod/iPhone/iPad

The docking speaker supports the following iPod/iPhone/iPad models:

 
Made for:

- iPod touch (1st, 2nd, 3rd, and 4th generation)
- iPod nano (1st, 2nd, 3rd, 4th, 5th, and 6th generation)
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone
- iPad 2
- iPad

Install "DockStudio" app

Philips **DockStudio** app brings a suite of new features to your docking speaker, including Internet radio and a multi-function alarm clock. To enjoy more features, you are recommended to install this free application.

- 1 Insert your iPod/iPhone/iPad into the dock.
 - ↳ The docking system switches to Dock source automatically.
 - ↳ The orange LED indicators light up.

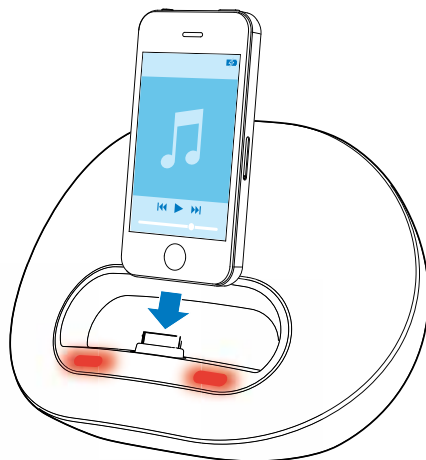

- 2 For first-time use, you will be asked to install **DockStudio** app on your iPod/iPhone.
- 3 Tap **[Yes]** (yes) to accept the installation request.
- 4 Follow the on-screen instructions to complete the installation.



Tip

- You can press  to select Dock source.

Listen to the iPod/iPhone/iPad

Note

- Make sure that you have installed **DockStudio** app on your iPod/iPhone/iPad.

- 1 Insert the iPod/iPhone/iPad into the dock.
- 2 launch **DockStudio** app to display the screen as below.



- 3 Select a track from the playlist, and then press ►.
 - ↳ Music comes through the docking speaker.
 - To pause or resume play, press ►||.
 - To skip to a track, press ◀|/▶.
 - To search during play, press and hold ◀|/▶, then release to resume normal play.

Use more features with "DockStudio" app

Adjust sound settings:

- 1 Launch **DockStudio** app.
- 2 Slide left to display the following screen.



- 3 Turn the dynamic bass boost on or off.
- 4 Select a sound effect: **[Flat]** (flat), **[Pop]** (pop), **[Rock]** (rock), **[Jazz]** (jack), or **[Classic]** (classic).

Set clock, alarm and sleep timer:

- 1 Slide right to find the following screen, and then tap the setting icon ⚙️.
 - ↳ You can set clock, sleep timer, and alarm for your docking speaker.



Use more features:

Slide right to the next screen. You can:

- set the theme;

- share the information;
- Disable Bluetooth connection if Bluetooth function is turned on;
- select a location; and
- choose temperature unit.



- 2 Follow the on-screen instructions to complete the firmware update.



Update firmware

If firmware update is available, the **DockStudio** app will search for it automatically and ask you to download it.

Note

- Make sure that your iPod/iPhone/iPad is inserted in the docking speaker and connected to the Internet.

- 1 If a new firmware update is found, tap **OK**.



Note

- Do not disconnect power or undock the iPod/iPhone/iPad during the updating process.

Charge the iPod/iPhone/iPad

When the docking speaker is connected to power, the docked iPod/iPhone/iPad begins to charge automatically.

Sync iPod/iPhone/iPad with PC

Note

- Make sure that iTunes has been configured properly in your PC.

- 1 Insert the iPod/iPhone/iPad in the dock.
- 2 Connect your docking speaker and PC with a USB cable.
- 3 Launch iTunes to synchronize your docking speaker with PC.
 - ↳ The docked iPod/iPhone/iPad is synchronized with PC successfully through the iTunes.

Play from Bluetooth device

Pair with Bluetooth devices

Note

- Before you connect a Bluetooth device to this docking speaker, familiarize yourself with the Bluetooth capabilities of the device.
- Keep this docking speaker away from other electronic devices that may cause interference.
- Any obstacle between the speaker and the device can reduce the operational range.

- 1 Press **⌘** to select Bluetooth source.
 - ↳ The blue Bluetooth indicator flashes slowly.
- 2 Turn on Bluetooth function on your device.
- 3 Scan Bluetooth devices that can pair with your device.
- 4 When **"PHILIPS DS3600"** displays on your device, select it to start connection.
 - ↳ Double beep tone confirmation is heard and the Bluetooth indicator lights up stably if connection is successful.
- 5 Play music in your device.
 - ↳ Music comes through the docking speaker.

Tip

- If your Bluetooth device has been paired with DS3600 before, you just need to find out **"PHILIPS DS3600"** on your Bluetooth menu, then confirm the connection.

To disconnect Bluetooth

- Press **⌘** on the docking speaker again until the LED indicator turns off.
- Deactivate Bluetooth function on your device or move it beyond the communication range.


Play from an external audio device

- 1 If no iPod/iPhone/iPad is docked, connect an MP3 link cable (3,5mm, not supplied) to:
 - the **MP3-LINK** socket at the back of the docking speaker.
 - the headphone socket on an external device.

↳ The docking speaker switches to MP3 link mode automatically.
- 2 Play music on the device (see the device's user manual).




Tip

- You can select MP3 link source by pressing  on the remote control.

Adjust volume

During play, press + / - to adjust volume.

Mute sound

During play, press  to mute or unmute sound.

5 Specifications

Amplifier

| | |
|-----------------------|--------------|
| Rated Output Power | 2 X 10 W RMS |
| Signal to Noise Ratio | > 62 dBA |
| Aux-in Link | 500mV RMS |

Bluetooth

| | |
|----------------|---------------------------------------|
| Standard | Bluetooth Standard Version 2.1+EDR |
| Output power | 0 dBm (Class 2) |
| Frequency band | 2.402~2.480 GHzISM Band |
| Range | 6m (free space) |

General information

| | |
|---|--|
| AC Power | Model: AS300-120-AA250 (Philips); Input: 100-240 V ~, 50/60Hz, 1.1A; Output: 12 V == 2.5 A |
| Operation Power Consumption | 15 W |
| Standby Power Consumption | <0.5 W |
| Max. load for iPod/iPhone/iPad | 5 V == 2.1 A |
| Dimensions - Main Unit (W x H x D) | 285 x 136 x 143 mm |
| Weight - Main Unit - With Packing | 1.2 kg 2.1 kg |

6 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.

No sound

- Adjust the volume.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.

- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- The system is not in the pairing mode.
- The system is already connected with another Bluetooth-enabled device. Disconnect that device or all other connected devices and then try again.

The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to the system or remove any obstacle between the device and the system.
- For some devices, the Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of the system.

About Bluetooth device

Music playback is unavailable on the system even after successful Bluetooth connection.

- The device cannot be used with the system to play music.

The audio quality is poor after connection with a Bluetooth-enabled device.

- The Bluetooth reception is poor. Move the device closer to the system or remove any obstacle between the device and the system.

Cannot connect with the system.

- The device does not support the profiles required for the system.

7 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc. This Class [B] digital apparatus complies with Canadian ICES-003.

Notice for the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installers must ensure that 20cm separation distance will be maintained between the device (excluding its handset) and users.

RSS

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct

disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



Note

- The type plate is located on the bottom of the apparatus.



Specifications are subject to change without notice
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

Document order number: 000000000000

