

 
 
Always here to help you

Register your product and get support at
www.philips.com/welcome

SCD630, SCD630H
SCD620, SCD620H



PHILIPS
AVENT

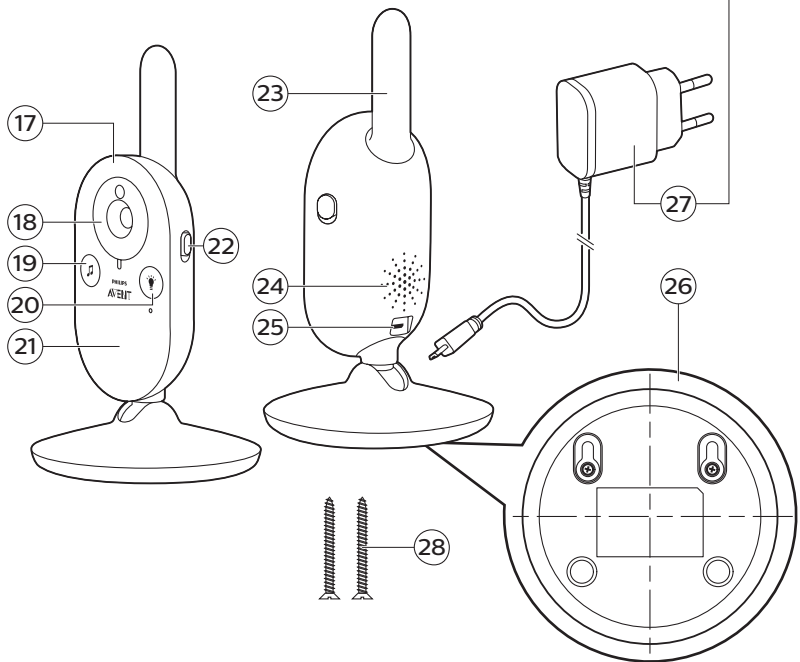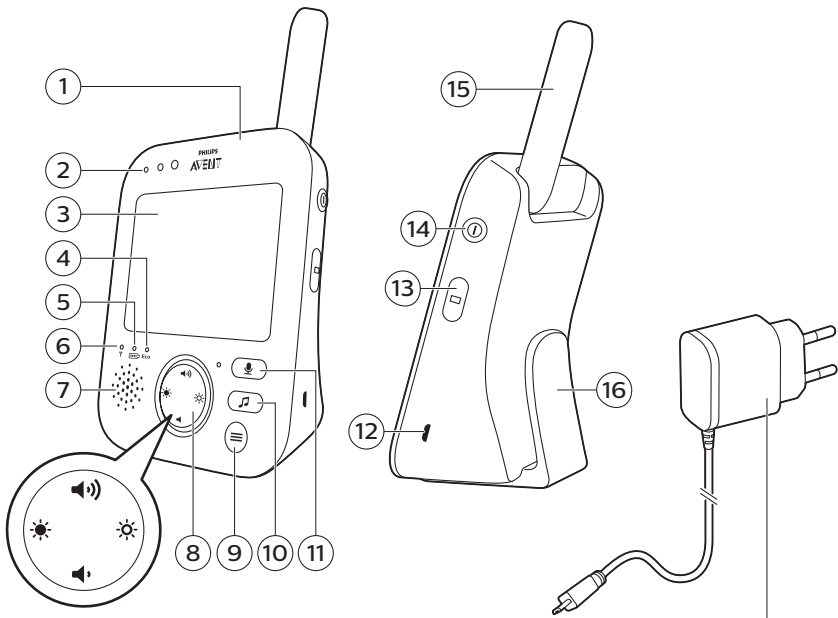


Introduction

Congratulations on your purchase and welcome to Philips Avent! To fully benefit from the support that Philips Avent offers, register your product at www.philips.com/welcome.

The Philips Avent video baby monitor provides you with round-the-clock support and it allows you to see your baby day and night from anywhere in the house. The latest digital technology guarantees clear sound and the clearest image of your baby. This gives you an additional sense of security without entering your baby's room and disturbing its sleep.

 Know these safety symbols

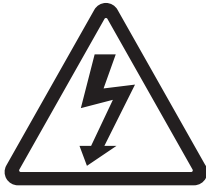

This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The exclamation mark calls attention to features that require you to read the enclosed user information closely to prevent operating and maintenance problems.

Warning: To reduce the risk of fire or electric shock, this appliance should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this appliance.

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this appliance near water.
- 6 Do not use the product while you are in a bathtub, shower or pool. Immersion of the product in water could cause an electrical shock.
- 7 Clean only with dry cloth.
- 8 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 9 Do not install near any heat sources such as radiators, heat registers, stoves or other appliance (including amplifiers) that produce heat.
- 10 Installed batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

- 11 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- 12 Only use attachments/accessories specified by the manufacturer.
- 13 Use this appliance only for its intended use as described in this manual.
- 14 Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
- 15 Unplug this appliance during lightning or when unused for long periods of time.
- 16 Unplug the product immediately and do not use it if the adapter, the cord or the product itself is damaged.
- 17 Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the appliance, the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped. Please check the power cord periodically to prevent potential damages, such as worn or cut cord. For assistance, visit our website www.philips.com/support or contact the Philips Consumer Care Center in your country. You find its contact details in the worldwide guarantee leaflet.
- 18 Keep screws and small items out of the reach of the baby.
- 19 All the required markings are located on the bottom of the appliance and on the adapter.

WARNING: STRANGULATION HAZARD. Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3.5 feet (1 meter) away). Do not remove the tag.



Caution

Caution: Prevent risk of explosion, electric shock, short circuit, or leakage

- The appliance shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the appliance.
- To prevent electric shock, do not open the housing of the product.
- Where the power plug is used as the disconnect appliance, the disconnect appliance shall remain readily operable.
- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- Use the supplied adapter to connect the appliance to the power outlet.

8 English

- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.

Adult supervision

 
- This baby monitor is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
- Never place the baby monitor inside or directly over the baby bed or playpen.
- To prevent overheating, do not cover the baby monitor with a towel, blanket or any other items.
- For their safety, do not allow children to touch and play with the baby monitor, the adapter and the accessories. THIS IS NOT A TOY.

General description

- 1 Parent unit
- 2 Sound level lights
- 3 Display
- 4 ECO light
- 5 Battery status light
- 6 Link light
- 7 Speaker
- 8 Control button (menu navigation/volume/brightness)
- 9 Menu button
- 10 Lullaby button
- 11 Talk-back button
- 12 Socket for small plug
- 13 Mode button
- 14 On/off button
- 15 Antenna
- 16 Belt clip
- 17 Baby unit
- 18 Camera
- 19 Lullaby on/off button
- 20 Nightlight on/off button
- 21 Nightlight
- 22 On/off slide
- 23 Antenna
- 24 Speaker
- 25 Socket for small plug
- 26 Wall mounting holes
- 27 Adapter (2x)
- 28 Screws


Preparing for use

Baby unit

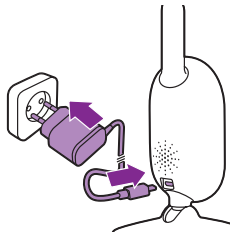

Put the power plug in the baby unit and put the adapter in the wall socket.

 
Parent unit

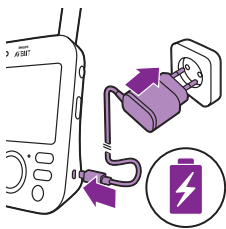


The parent unit runs on a built-in rechargeable Li-ion battery.

Follow the below steps to charge the parent unit:

 - 1 Put the small plug in the parent unit and put the adapter in the wall socket.
 - The battery status indicator turns orange to indicate that the appliance is charging.

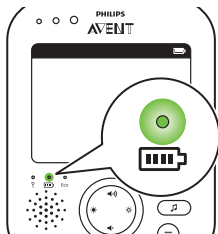


 - When the battery is fully charged, the battery status indicator lights up green continuously.

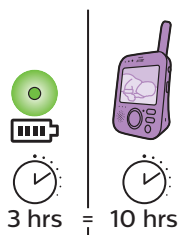

- When you charge the parent unit for 3 hours, it can be used cordlessly for approx. 10 hours.
- If the parent unit is switched on during charging, charging takes twice as long.

 10 English

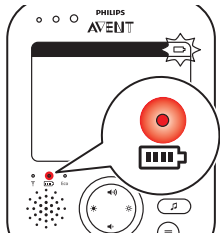

- When the rechargeable battery of the parent unit is almost empty, the battery status light turns red and the parent unit beeps.
- If the battery is completely empty and the parent unit is not connected to the mains, the parent unit automatically switches off and loses contact with the baby unit.

Note: The built-in rechargeable battery cannot be removed from the product.

 
Note: The battery gradually and very slowly discharges, even when the parent unit is switched off.

Tip: To save battery, switch off the parent unit when you do not use it.


Note: We advise you to keep the parent unit connected to the mains during the whole night. If the battery of the parent unit runs low during the night, the parent unit beeps and this may wake you up.

Using the baby monitor

Linking parent unit and baby unit

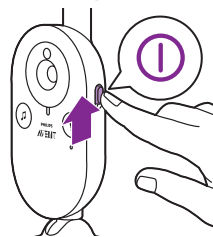


 - 1 Push the on/off slide on the baby unit upwards to the ON position.

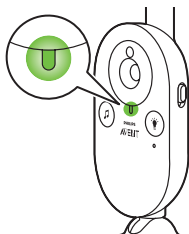


- 2 When the baby unit is on, the power-on light on the baby unit lights up green.

 
Note: The power-on light on the baby unit always lights up green, even when there is no connection with the parent unit.

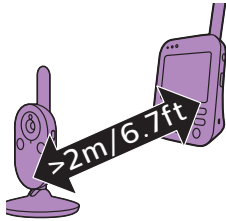

 
- 3 Make sure that the parent unit and the baby unit are at least 2 meters/ 6,7 feet away from each other to avoid acoustic feedback.

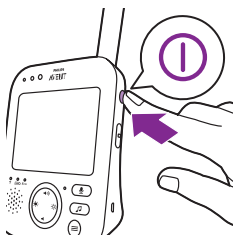

 
- 4 Press the on/off button on the parent unit to switch on the parent unit.

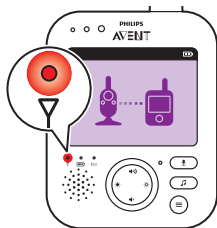

 - The display goes on, the linking image appears on the display and the link light turns red. The parent unit starts to search for the baby unit.

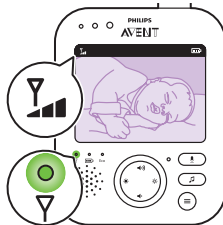

 - When the parent unit and baby unit are linked, the link light turns green on the parent unit and one or more bars appear on the display.

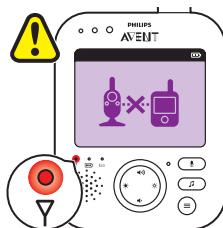


Note: It takes less than 10 seconds to establish the link between the parent unit and the baby unit.


- When the baby unit is turned off, the parent unit will show the out of range image. Make sure that the baby unit is switched on.
- If no connection has been established, the link light lights up red, the parent unit beeps and the out-of-range image appears on the display.

Positioning the baby monitor

 Warning: Because the cord of the baby unit presents a potential strangulation hazard, make sure that the baby unit and its cord are at least 1 meter/3.5 feet away from your baby.

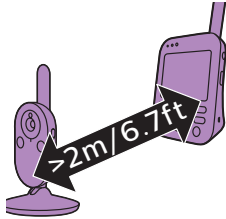


 - 1 Place the parent unit within the operating range of the baby unit. Make sure it is at least 2 meters/ 6.7 feet away from the baby unit to avoid acoustic feedback.

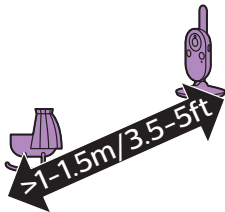


- 2 For optimal sound detection, make sure that the baby unit is no further than 1.5 meter/ 5 feet away. Make sure that the baby unit is at least 1 meter/ 3.5 feet away from the baby because of potential strangulation hazard.

 Note: If you use a cordless phone, wireless video, Wi-Fi network, microwave oven or Bluetooth on 2.4GHz and you experience interference on either the parent unit or baby unit, move the parent unit until there is no more interference.

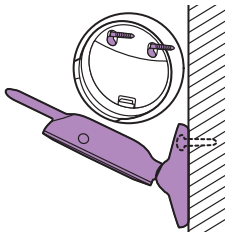

 
- 3 There are two ways to position the baby unit:
 - a Place the baby unit on a stable, level and horizontal surface.
 - b Mount the baby unit to the wall with the screws supplied.

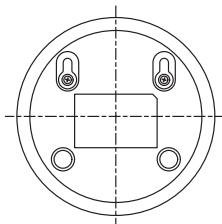

Tip: The wall mount can be found at the end of this user manual.


Tip: Use the provided template to mark the exact location of the screw holes on the wall.

 Tip: Position the baby unit at a higher level to get a good overview of the baby's bed or playpen.

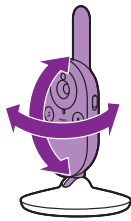

- Adjust the baby unit in a way that ensures the best visibility of your baby. The baby unit can be rotated to position it in the desired way.

 Note: Do not position the baby unit with the microphone pointing too far down, as this may prevent the microphone from picking up sounds properly.

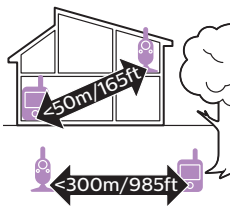


Operating range

The operating range is up to 50 meters / 165 feet indoors and 300 meters / 985 feet outdoors. The operating range of the baby monitor varies depending on the surroundings and factors that cause interference. Wet and moist materials cause so much interference that the range loss is up to 100%.

Dry materials	Material thickness	Loss of range
Wood, plaster, cardboard, glass (without metal, wires or lead)	< 30cm (12in)	0-10%
Brick, plywood	< 30cm (12in)	5-35%
Reinforced concrete	< 30cm (12in)	30-100%
Metal grilles or bars	< 1cm (0.4in)	90-100%
Metal or aluminium sheets	< 1cm (0.4in)	100%

Features

 Volume

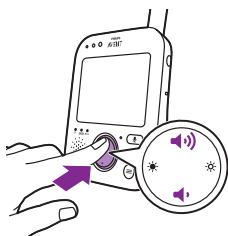

You can adjust the speaker volume of the parent unit to the level you prefer.

- Press the top or bottom part of the control button to adjust the volume.

14 English



 
Tip: Make sure that the volume is adapted to the current conditions. Under noisy conditions, the vibration alert can be turned on as well.

The volume bar appears on the display to show the selected volume.

Note: If the volume is set to a high level, the parent unit consumes more power.


Note: When the volume bar is completely empty, the volume is muted. The parent unit shows a mute icon in the status bar and you will only receive alerts and video from the parent unit.

Brightness

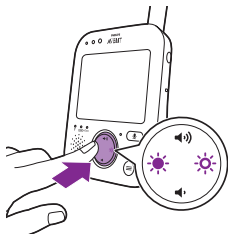

You can adjust the display brightness of the parent unit to the level you prefer.

 
- 1 Press the left or right part of the control button to adjust the brightness of the display of the parent unit.

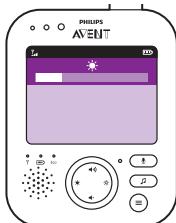

The brightness bar appears on the display to show the selected display brightness.


Note: If the brightness is set to a high level, the parent unit consumes more power.

 Sound level lights

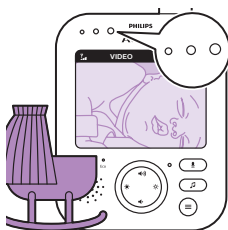


The parent unit continuously monitors the sound level in your baby's room, and the sound level lights on the parent unit let you know if there is any activity.

 As long as no sound is detected, the sound level lights are out.

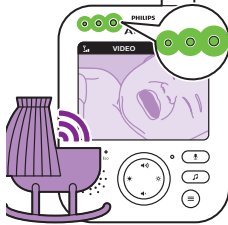

When the baby unit picks up a sound, one or more sound level lights on the parent unit light up green. The number of lights that go on depends on the loudness of the sound picked up by the baby unit. The louder your baby cries, more sound level lights light up green.


 
Modes

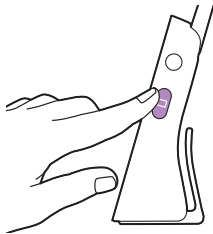

This baby monitor has four different modes that allows you to choose how you want to look after your baby: VIDEO, AUDIO, VOX and ECO. With the baby monitor on, you can switch between these 4 different modes by pressing the mode button on the side of the parent unit. The display shows the selected mode. The selected mode is also indicated in the status bar. When turning on the device, the mode that was last used will be active.

VIDEO mode

  
Press the mode button on the side of the parent unit to select the VIDEO mode.

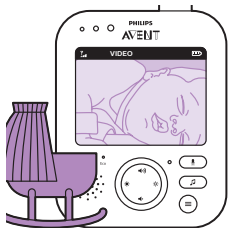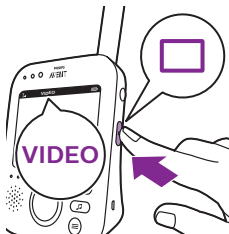

When the VIDEO mode is activated, the screen is always on, so you can see your baby sleeping. All sounds are directly transmitted to the parent unit.

Note: Low sound levels will be muted, depending on the sensitivity setting, except when very high sensitivity has been selected.

 
16 English

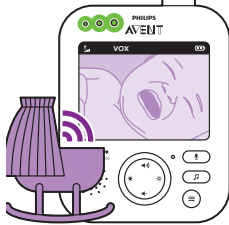

If your baby cries, the sound level lights light up green. As long as no sound is detected, the sound level lights are off.


AUDIO mode

 - 1 Press the mode button on the side of the parent unit to switch to AUDIO mode.

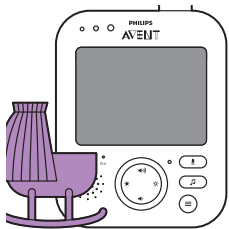

The display of the parent unit switches off, but the AUDIO mode is activated. 3 seconds after the audio mode is selected, the display will turn off.

 Note: The status bar is not visible when the display is off.

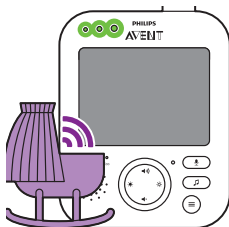

Note: The link light shows that the parent unit is still on and connected to the baby unit.

Note: Low sound levels will be muted, depending on the sensitivity setting, except when very high sensitivity has been selected.

 
All sounds are constantly transmitted to the parent unit. If your baby cries, the display of the parent unit is still off, but the sound level light turns green and the sounds detected by the baby unit are transmitted to the parent unit. As long as no sound is detected, the sound level lights are off.

VOX mode

- 1 Press the mode button on the side of the parent unit to switch to VOX mode.



Note: When the display is on, the selected mode is shown in the status bar. The status bar is not visible when the display is off.

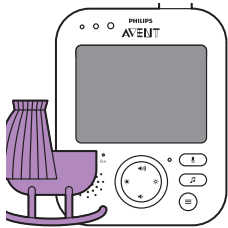

The display and sound of the parent unit switch off if there is no sound detected for 20 seconds, but the VOX mode is activated.



When your baby cries, the display and sound of the parent unit switch on immediately. The sounds are transmitted to the parent unit and the sound level lights turn green. As long as no sound is detected, the sound level lights are off.

 
Note: The minimum sound level to activate sound and display is defined by the sensitivity setting.



ECO mode

- 1 Press the mode button on the side of the parent unit to switch to ECO mode.

Note: When the display is on, the selected mode will be visible in the status bar. The status bar is not visible when the display is off.

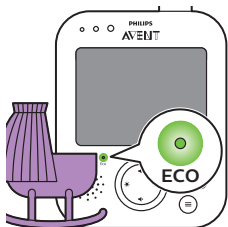


The display and sound of the parent unit switch off when no sound is detected for 20 seconds. The ECO light lights up green to indicate that the ECO mode is activated. During ECO mode the display and sound transmissions are turned off.



When your baby cries, the display and sound of the parent unit switch on immediately. The sounds are transmitted to the parent unit and the sound level lights turn green. As long as no sound is detected, the sound level lights are off.

Note: The minimum sound level to activate sound and display is defined by the sensitivity setting.


 
Nightlight

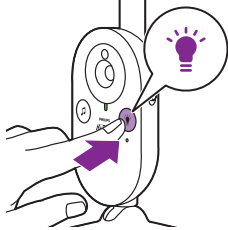

- 1 Press the nightlight on/off button on the baby unit to switch on the nightlight feature.

The nightlight of the baby unit goes on.

  Note: It is not possible to control the nightlight from the parent unit. You can only switch the nightlight on or off on the baby unit.

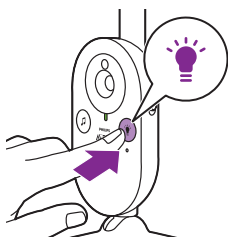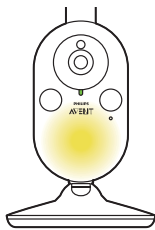

- 2 Press the nightlight on/off button again to switch off the nightlight.

 
Lullabies

 
You can activate the lullaby feature either from the parent unit or from the baby unit.

To activate the lullaby feature from the parent unit, follow the instructions below:

- 1 Press the lullaby button on the parent unit to open the menu for lullabies.

Note: Pressing the lullaby button while the lullaby menu is already open, will close the menu.

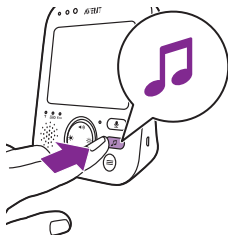

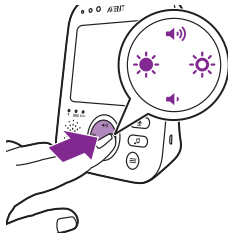

2 Press the right part of the control button to enter the list of lullabies.



3 Press the top or bottom part of the control button to scroll through the list of lullabies.



4 Press the right part of the control button to play a specific lullaby. If you want to pause the lullaby, press the right side of the control button again.

5 The status bar of the parent unit shows the number of lullabies that are being played and repeated.



 
The lullaby starts to play on the baby unit and it is repeated continuously for approximately 15 minutes.

Tip: To repeat all songs that are available, select the last option in the list.




6 To select another lullaby, scroll up or down with the control button to select another song from the list. Press the right part of the control button to start the selected song.


20 English

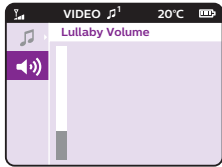

 7 Press the lullaby button and then press the bottom of the control button to select the volume options of the lullaby menu. Press the right part of the control button to access the lullaby volume levels.

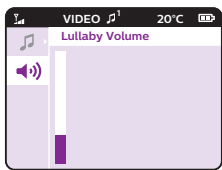

 - 8 Press the top or bottom part of the control button to adjust the volume.
- 9 To stop the lullaby, press the lullaby button on the parent unit and pause the song that is currently playing by pressing the right part of the control button one more time.

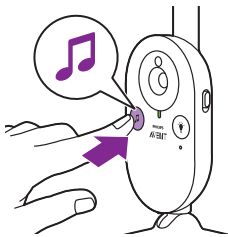

To activate the lullaby feature from the baby unit, press the lullaby on/off button on the baby unit.



The latest lullaby selected on the parent unit starts to play on the baby unit and is repeated continuously for approximately 15 minutes.

To stop the lullaby on the baby unit, press the lullaby on/off button on the baby unit.

Talk-back



You can use the talk-back button on the parent unit to talk to your baby.

- 1 Press and hold the talk-back button on the parent unit.
- 2 Talk clearly into the microphone at the front of the parent unit from a distance between 15-30cm /0.5-1ft.

As long as the talk-back button is pressed, there is an open sound connection to the baby unit. The display of the parent unit shows the talk-back icon, indicating the active connection.



- 3 Release the talk-back button when you have finished talking..

 
Note: As long as the talk-back button is pressed, the parent unit cannot process sounds coming from the baby unit.

Menu features

All features described in the following sections can be operated through the menu of the parent unit.


- 1 Press the menu button to enter the menu.

Note: When pressing the menu button again, you will leave the menu.

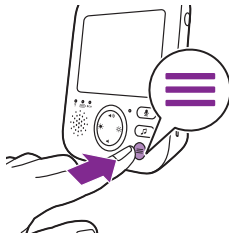

- 2 Use the control button to navigate through the menu. The selected menu item is highlighted purple.

 
Note: If you are already in one of the sub menus and you want to switch between menu features, press the left part of the control button to navigate back to the main menu.

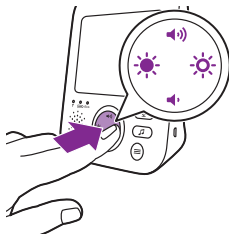

- 3 Press the top or bottom part of the control button to scroll through the different menu items.


When you are navigating through the menu features and do not want to save any change, press the menu button. You will leave the menu without changing any settings.

 Note: If you are in the menu but do not press a button for 5 seconds, the menu will exit without saving changed settings.

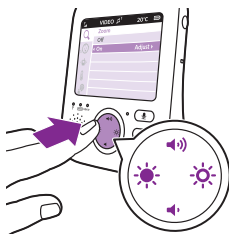


Zoom

 
- 1 Press the right part of the control button to enter the zoom menu.

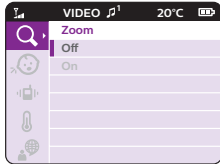

 - 2 Press the bottom part of the control button to switch on the zoom feature.

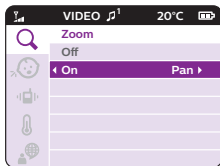

 - 3 To adjust the video image press the right part of the control button. Now you can use the top/bottom/right/left part of the control button to choose what image will be shown on the parent unit.

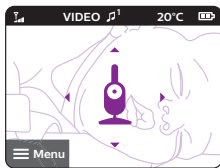


- 4 Press the menu button to save the new setting. The image is automatically saved after 5 seconds.
- 5 Go to the zoom menu and turn off the zoom function, if you want to zoom out the image on the parent unit.


Sensitivity

- 1 Press the right part of the control button to access the sensitivity levels.

 Note: When pressing the control button again, you will leave the menu.

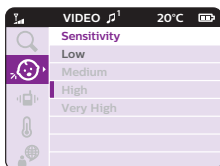

 - 2 Press the top or bottom part of the control button to select the desired sensitivity option.

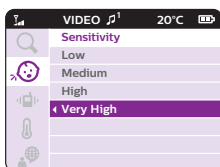



If your baby only makes soft sounds, the sensitivity of the baby unit needs to be set to a high sensitivity level on the parent unit.



 
The louder your baby sounds, the lower the sensitivity can be set on the parent unit.

Note: In AUDIO and VIDEO mode, the audio is muted if the sound is lower than the sensitivity setting, unless very high sensitivity is selected.

Tip: The sensitivity level can be adjusted so you will always hear your baby without the disruption of other sounds. When there is a lot of background noise, turn the sensitivity lower so you will not hear these sounds through the parent unit.

- 3 Press the left part of the control button to save the new setting and to return to the main menu.


Belt clip

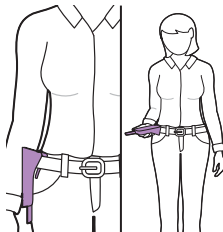

You can take the parent unit with you inside and outside the house by attaching the parent unit to your belt or waistband with the belt clip. This allows you to monitor your baby while you are moving around.


Note: The display is now turned upside down, which allows you to see your baby on the screen by simply lifting up the parent unit.

 Vibration

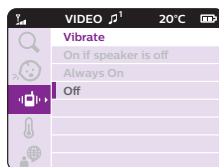

- 1 Press the right part of the control button to access the vibration options.

 24 English

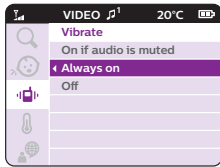

- 2 There are three options for vibration:
 - a Vibration is always on. Vibration is on when audio is muted.
 - b Vibration will now replace any sounds coming from the baby unit.
 - c Vibration is off.

 
When vibration is on, the parent unit will vibrate when your baby cries or makes sounds, according to the sensitivity level you have selected. The parent unit also vibrates when the temperature alert is on and a maximum or minimum temperature is reached or when the parent unit lost connection with the baby unit.

- 3 Press the left part of the control button to save the new setting and to return to the main menu.

Temperature


The temperature sensor enables you to monitor the temperature in your baby's room.

Note: The current temperature in your baby's room is shown in the status bar of the parent unit.

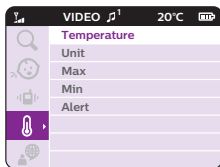


- 1 Press the right part of the control button to access the temperature options.

 
Tip: You can change the temperature unit from C (Celsius) to F (Fahrenheit) by selecting the unit option.

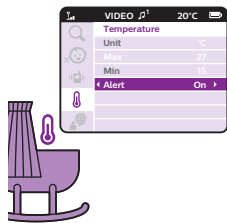

 - 2 In the temperature menu, an alert for temperature can be set on or off.

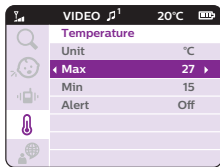

 3 Temperature maximum and minimum values can be set to give a warning when chosen temperatures are measured.

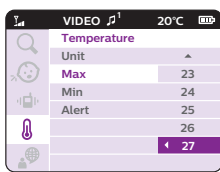


4 You can select the alert option to turn on the alert. To change the maximum and minimum temperatures, select the desired temperatures at 'max' and 'min' in the temperature menu.




5 The parent unit shows this warning when chosen temperatures are measured.

6 Press the left part of the control button to save the new setting and to return to the main menu.

 Language

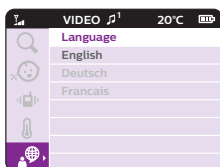


 1 Press the right part of the control button to access the list of languages.
2 Press the top or bottom part of the control button to select the desired language.

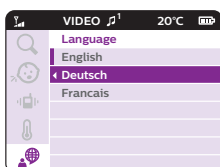

3 Press the left part of the control button to save the new setting and to return to the main menu.

 
Cleaning and maintenance

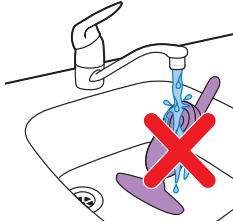


Warning: Do not immerse the parent unit and the baby unit in water and do not clean them under the tap.



 Warning: Do not use cleaning sprays or liquid cleaners.

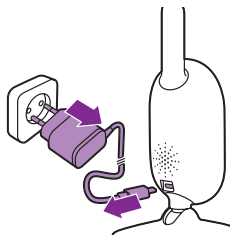


 1 Switch off the baby unit and remove the adapter from the wall socket.

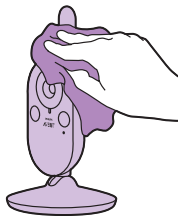


2 Clean the baby unit with a dry cloth.

 
Note: Fingerprints or dirt on the lens of the baby unit may affect the camera's performance. Avoid touching the lens with your fingers.

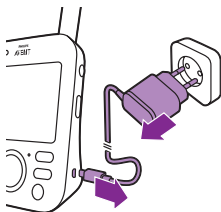

 3 Switch off the parent unit and remove the adapter from the wall socket.

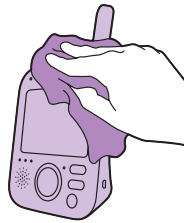

 4 Clean the parent unit with a dry cloth.

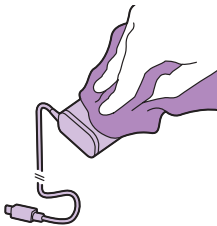

5 Clean the adapters with a dry cloth.

Storage

When you are not going to use the baby monitor for a long time, store the parent unit, the baby unit and the adapters in a cool and dry place.

Storage precautions

- Do not expose the baby unit and parent unit to extreme cold or heat or to direct sunlight.
- Do not put the baby unit and the parent unit close to a heating source.

Disposal

This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or visit www.recycle.philips.com.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

Assistance

For assistance visit our website www.philips.com/avent or contact the Philips Consumer Care Center in your country. You find contact details in the worldwide guarantee leaflet.

Frequently asked questions

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Question	Answer
SWITCHING ON/CONNECTING THE UNITS	
Why does the power-on light of the baby unit not go on when I switch on the unit?	Perhaps the baby unit is not connected to the mains. Connect the baby unit to the mains. Then set the on/off switch of the baby unit to the ON position to establish connection with the parent unit.
Why doesn't the parent unit charge when I plug it in?	Perhaps the adapter is not plugged in properly. Make sure the adapter is plugged into the wall socket properly. The parent unit may already be fully charged. The battery status light will be green when the battery is completely charged.
Why doesn't the baby unit charge when I plug it in?	The baby unit does not have a charging function. The baby unit only works when it is connected to the mains.
Why can't I establish a connection? Why is the connection lost every now and then? Why are there sound interruptions?	The baby unit and the parent unit are probably close to the outer limits of the operating range or there is interference from other 2.4 GHz wireless devices. Try a different location, decrease the distance between the units or switch off other 2.4 GHz wireless devices. It can take up to 10 seconds before the connection between the units is re-established. The baby and parent unit might be too close to each other, keep them at least 1.5 meters/ 5 feet away from each other to prevent interference.
What happens during a power failure?	As the parent unit works on a rechargeable battery, the parent unit continues to work if the battery is sufficiently charged. However, the baby unit stops working because it has no rechargeable battery and only works on a mains power. When the power is 'back', the connection between the parent unit and the baby unit will automatically be established.
Why can the charging time of the parent unit exceed 3 hours?	The parent unit may be switched on during charging. Switch off the parent unit during charging to reduce the charging time. When the display of the parent unit is constantly on, charging of the parent unit may take more time.
Why do I need to keep the baby unit and its cord at least 1 meter/ 3.5 feet away from my baby?	To avoid strangulation with the cord and for optimal sound detection, always place the baby unit and its cord at least 1 meter/ 3.5 feet away from the baby.
INDICATIONS ON THE PARENT UNIT	
Why does the battery status light turn red?	If the battery status light turns red, the rechargeable battery of the parent unit is low. Connect the parent unit to the mains to recharge the battery (see chapter 'Preparing for use').

Question	Answer
Why does the parent unit beep?	If the parent unit beeps while the out-of range image appears on the video display, the connection with the baby unit is lost. Move the parent unit closer to the baby unit.
	If the parent unit beeps while the battery image appears on the video display and the battery status light is red, the rechargeable battery of the parent unit is low. Connect the parent unit to the mains to recharge the battery (see chapter 'Preparing for use').
	The baby unit may be switched off.
NOISE/SOUND	
Why does the parent unit and/or baby unit produce a high-pitched noise?	The parent unit and baby unit may be too close to each other. Make sure the parent unit and the baby unit are at least 2 meters / 6.7 feet away from each other.
	The volume of the parent unit may be set too high. Decrease the volume of the parent unit.
How can I increase the volume of the lullaby?	You can adjust the volume of the lullaby on the parent unit see chapter 'Features', section 'Lullabies'. It is not possible to change the volume of the lullaby on the baby unit.
Why don't I hear a sound? Why can't I hear my baby cry?	The volume of the parent unit may be set too low or may be switched off. Press the top part on the control button to increase the volume level.
	Perhaps you did not remove the protective foil from the microphone. Make sure all protective foil has been removed.
	Perhaps the baby monitor is in auto mute or the parent unit is set on Vibration mode. When the baby unit detects a low sound level, e.g. the sleeping sound of the baby, the parent unit automatically mutes the sound output when the sound level is below the sensitivity setting. Then you will not hear this sound. When the baby starts to cry, the parent unit automatically switches on the volume again when the crying loudness is above the sensitivity setting, so you can hear the crying sound.
	The baby unit may be too far away from your baby. Make sure the baby unit is not further than 1.5 meters/ 5 feet away from your baby, for optimal sound detection. Closer than 1 meter /3.5 feet increases strangulation hazard.
Why does the parent unit react too quickly to other sounds?	The baby unit also picks up other sounds than those of your baby. Move the baby unit closer to the baby (but observe the minimum distance of 1 meter/ 3.5 feet).
	The sensitivity level may be set too high. When your baby makes low sounds, the sensitivity has to be higher. However, the louder you baby sounds, the lower the sensitivity level can be set. You can change the sensitivity of your baby monitor on the parent unit (see chapter 'Menu features', section 'Sensitivity').
Why does the parent unit make a buzzing sound?	Interference may occur when the parent unit is out of range of the baby unit. Interference may also occur if there are too many walls or ceilings between the parent unit and the baby unit or when other 2.4 GHz wireless devices are switched on (e.g. microwave, Wi-Fi router). Put the parent unit in a different place, closer to the baby unit, or switch off other wireless devices.

Question

Answer

The rechargeable battery of the parent unit may need to be charged.

OPERATING TIME/OPERATING RANGE

Why does my baby monitor manage a much smaller distance than specified in this user manual?

The specified operating range of 300 meters /985 feet is only valid outdoors in open air and in the line of sight. Depending on the surroundings and other disturbing factors, the operating range may be smaller.

Inside your house, the operating range is up to 50 meters/165 feet, which is also limited by the number and type of walls and/or ceilings between the parent unit and the baby unit.

The operating time of the parent unit is supposed to be up to 10 hours. Why is the operating time of my parent unit shorter?

The video brightness of the parent unit may be set too high, which causes the parent unit to consume a lot of energy. Decrease the brightness of the parent unit.

The parent unit consumes a lot of energy when the video display is switched on continuously. Activate the AUDIO, VOX or ECO mode to increase the operating time (see chapter 'Features', sections 'AUDIO mode', 'VOX mode' or 'ECO mode').

The volume of the parent unit may be set too high, which causes the parent unit to consume a lot of energy. Decrease the volume of the parent unit.

As any other rechargeable electronic device, the battery capacity decreases after a long period of usage.

OUTPUT VIDEO DISPLAY

Why do I get interference on the parent unit? Why does the video display on the parent unit flicker?

Interference may occur when the parent unit is out of range of the baby unit. Interference may also occur if there are too many walls or ceilings between the parent unit and the baby unit or when other 2.4 GHz wireless devices are switched on (e.g. microwave, Wi-Fi router). Put the parent unit in a different place, closer to the baby unit, or switch off other wireless devices.

The rechargeable battery of the parent unit may need to be charged.

Why isn't there any image on the video display while the link light is on?

The parent unit may be in the AUDIO, VOX or ECO mode. Press the mode button again to switch on the video display (see chapter 'Modes').

Why isn't the image on the video display clear?

The display brightness may be set too low. Increase the display brightness on the parent unit (see chapter 'Features', section 'Brightness').

Perhaps you did not remove the protective foil from the video display on the parent unit. Remove the protective foil on the parent unit. Perhaps the lens of the baby unit is dirty. Clean the lens with a dry cloth.

Why isn't the image on the video display clear in night vision?

The distance between the baby and the baby unit may be too large. Make sure that the baby unit is placed between 1 to 1.5 meters/ 3.5 to 5 feet away from the baby, for optimal image quality.

Compliance information



This device complies with Part 15 of the FCC Rules and Industry Canada License-exempt RSS standard. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Radio interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and ICES-003 of Industry Canada. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 7 3/4 inches / 20 centimeters between the radiator and your body. For handheld/body-worn operation, this equipment has been tested and meets the FCC RF/Industry Canada RF exposure guideline when used with the belt clip supplied with this product. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Use of other accessories may not ensure compliance with FCC RF/Industry Canada RF exposure guidelines. This equipment also complies with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields. Do not attempt to repair or modify this equipment.

 
Any repairs or alterations made by the user to the equipment may void the warranty and compliance of the equipment. Changes or modifications made to this equipment not expressly approved by Philips Avent may void the FCC authorization to operate this equipment.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This Class [B] digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada.

Electromagnetic fields (EMF)

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.
- If handled properly and according to the instructions in this user manual, the appliance is safe to us based on scientific evidence available today.

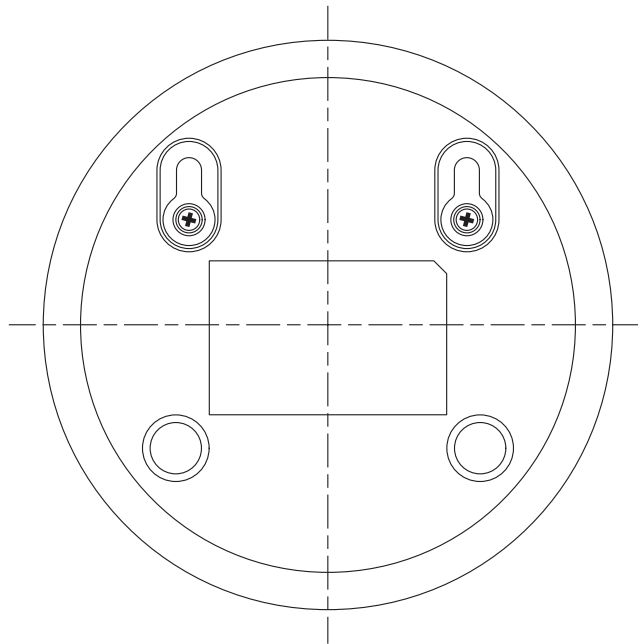



www.philips.com/Avent
Philips Consumer Lifestyle BV
Tussendiepen 4, 9206 AD Drachten, the Netherlands
Trademarks owned by the Philips Group.
©2015 Koninklijke Philips N.V. All rights reserved
Specifications are subject to change without notice.
© 2016 Koninklijke Philips N.V.
All rights reserved 4213,600,0004,1 (1/2016)



>75% recycled paper
>75% papier recyclé



PHILIPS
AVENT

© 2016 Koninklijke Philips N.V.
All rights reserved
Philips Consumer Lifestyle BV
Tussendiepen 4, 9206AD Drachten, Netherlands
4213.355.5062.1 (1/2016)



www.philips.com

>75% recycled paper
>75% papier recyclé

English

Know these safety symbols

- This “bolt of lightning” indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering. (Fig. 1)
- The exclamation mark calls attention to features that require you to read the enclosed user information closely to prevent operating and maintenance problems (Fig. 2).

Warning: To reduce the risk of fire or electric shock, this appliance should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this appliance.

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this appliance near water.
- 6 Do not use the product while you are in a bathtub, shower or pool. Immersion of the product in water could cause an electrical shock.
- 7 Clean only with dry cloth.
- 8 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 9 Do not install near any heat sources such as radiators, heat registers, stoves or other appliance (including amplifiers) that produce heat.
- 10 Installed batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 11 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- 12 Only use attachments/accessories specified by the manufacturer.
- 13 Use this appliance only for its intended use as described in this manual.
- 14 Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
- 15 Unplug this appliance during lightning or when unused for long periods of time.
- 16 Unplug the product immediately and do not use it if the adapter, the cord or the product itself is damaged.
- 17 Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the appliance, the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped. Please check the power cord periodically to prevent potential damages, such as worn or cut cord. For assistance, visit our website www.philips.com/support or contact the Philips Consumer Care Center in your country. You find its contact details in the worldwide guarantee leaflet.
- 18 Keep screws and small items out of the reach of the baby.
- 19 All the required markings are located on the bottom of the appliance and on the adapter.

WARNING: STRANGULATION HAZARD. Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3.5 feet (1 meter) away). Do not remove the tag (Fig. 3).

Caution

Caution: Prevent risk of explosion, electric shock, short circuit, or leakage

- The appliance shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the appliance.
- To prevent electric shock, do not open the housing of the product.
- Where the power plug is used as the disconnecting appliance, the disconnecting appliance shall remain readily operable.
- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- Use the supplied adapter to connect the appliance to the power outlet.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.

Adult supervision

- This baby monitor is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
- Never place the baby monitor inside or directly over the baby bed or playpen.
- To prevent overheating, do not cover the baby monitor with a towel, blanket or any other items.
- For their safety, do not allow children to touch and play with the baby monitor, the adapter and the accessories. THIS IS NOT A TOY.

Disposal

This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or visit www.recycle.philips.com.

Storage precautions

- Do not expose the baby unit and parent unit to extreme cold or heat or to direct sunlight.
- Do not put the baby unit and the parent unit close to a heating source.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the worldwide guarantee leaflet for contact details).

Compliance information

This device complies with Part 15 of the FCC Rules and Industry Canada License-exempt RSS standard. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation (Fig. 4).

Radio interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and ICES-003 of Industry Canada. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 7 3/4 inches / 20 centimeters between the radiator and your body. For handheld/body-worn operation, this equipment has been tested and meets the FCC RF/Industry Canada RF exposure guideline when used with the belt clip supplied with this product.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Use of other accessories may not ensure compliance with FCC RF/Industry Canada RF exposure guidelines. This equipment also complies with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

Do not attempt to repair or modify this equipment.

Any repairs or alterations made by the user to the equipment may void the warranty and compliance of the equipment. Changes or modifications made to this equipment not expressly approved by Philips Avent may void the FCC authorization to operate this equipment.

Assistance

For assistance visit our website www.philips.com/avent or contact the Philips Consumer Care Center in your country. You find contact details in the worldwide guarantee leaflet.

Electromagnetic fields (EMF)

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.
- If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Español

Conozca estos símbolos de seguridad

- Este "rayo" indica que el material no aislante del interior de la unidad puede provocar una descarga eléctrica. Por la seguridad de todas las personas de su hogar, no quite la cubierta del producto. (Fig. 1)
- El signo de exclamación indica características importantes que requieren que lea atentamente la información adjunta para evitar problemas (Fig. 2) de funcionamiento y mantenimiento.

Advertencia: Para reducir el riesgo de incendio o descarga eléctrica, el aparato no debe exponerse a la lluvia ni a la humedad ni se deben colocar sobre estos objetos que contengan líquidos.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

- 1 Lea estas instrucciones.
- 2 Conserve estas instrucciones.
- 3 Preste atención a todas las advertencias.
- 4 Siga todas las instrucciones.
- 5 No utilice este aparato cerca de agua.
- 6 No utilice el producto mientras esté en la bañera, la ducha o la piscina. Sumergir el producto en agua podría provocar una descarga eléctrica.
- 7 Límpielo sólo con un paño seco.
- 8 No bloquee las aberturas de ventilación. Realice la instalación según las instrucciones del fabricante.
- 9 No lo instale cerca de ninguna fuente de calor, como radiadores, rejillas de aire caliente, estufas u otros aparatos (incluidos amplificadores) que generen calor.
- 10 Las pilas colocadas dentro del aparato no deben exponerse a la luz solar excesiva, como la luz solar, fuego o similares.
- 11 Evite que el cable de alimentación se pise o se doble, especialmente en las clavijas, las tomas de corriente y el punto de salida del aparato.
- 12 Utilice únicamente los accesorios especificados por el fabricante.
- 13 Utilice este aparato sólo para el uso al que está destinado tal y como se describe en este manual.
- 14 Desenchufe el producto de la toma de tierra antes de limpiarlo. No utilice limpiadores líquidos ni aerosoles.
- 15 Desenchufe el aparato durante las tormentas eléctricas o cuando no lo utilice durante un periodo largo.
- 16 Desenchufe el producto inmediatamente y no lo utilice si el adaptador, el cable o el propio producto están dañados.
- 17 Consulte todas las reparaciones con el personal cualificado. Se requerirá recurrir a los servicios del personal cualificado cuando el aparato resulte dañado de cualquier modo, por ejemplo, si el cable de alimentación o la clavija sufren daños, si se derrama algún líquido sobre el aparato o si caen elementos dentro de este, si el aparato ha estado expuesto a lluvia o humedad, si no funciona con normalidad o si se ha caído. Compruebe con regularidad el cable de alimentación para evitar posibles daños, como que se desgaste o se rompa. Si necesita ayuda, visite nuestra página web en www.philips.com/support o póngase en contacto con el Servicio de Atención al Cliente de Philips de su país. Encontrará la información de contacto en el folleto de garantía mundial.
- 18 Mantenga los tornillos y objetos pequeños fuera del alcance del bebé.
- 19 Todas las marcas obligatorias se encuentran en la parte inferior del aparato y en el adaptador.

ADVERTENCIA: PELIGRO DE ESTRANGULACIÓN. Los niños se pueden ESTRANGULAR con los cables. Mantenga este

cable fuera del alcance de los niños (a más de 1 metro de distancia). No retire la etiqueta (Fig. 3).

Precaución

Precaución: Evite el riesgo de explosión, descarga eléctrica, cortocircuito o fugas

- El aparato no debe exponerse a líquidos que goteen ni salpiquen. Tampoco se deben colocar sobre estos objetos que contengan líquidos.
- Para evitar descargas eléctricas, no abra la carcasa del producto.
- Cuando el enchufe de alimentación se usa como aparato de desconexión, el aparato de desconexión debe estar siempre disponible.
- El adaptador contiene un transformador. No corte el adaptador para sustituirlo por otra clavija, ya que podría provocar situaciones de peligro.
- Utilice el adaptador suministrado para conectar el aparato a la toma de corriente.
- Si el adaptador está dañado, sustitúyalo siempre por otro del modelo original para evitar situaciones de peligro.

Supervisión de un adulto

- Este vigilabebés está pensado como una ayuda. En ningún caso sustituye la supervisión responsable y adecuada por parte de un adulto y no debe utilizarse como tal.
- Nunca coloque el vigilabebés dentro de la cuna o del parque del bebé ni por encima de estos.
- Para evitar que se sobrecaliente, no cubra el vigilabebés con una toalla, manta o cualquier otro objeto.
- Por su seguridad, no permita que los niños toquen el vigilabebés, el adaptador y los accesorios ni que tampoco jueguen con ellos. NO ES UN JUGUETE:

Cómo deshacerse del aparato

Este producto puede contener plomo y mercurio. El desecho de estos materiales puede estar regulado por consideraciones medioambientales. Para obtener información sobre el proceso de desecho o reciclaje, póngase en contacto con las autoridades locales o visite www.recycle.philips.com.

Precauciones de almacenamiento

- No exponga la unidad de padres ni la unidad del bebé a temperaturas extremadamente bajas o altas ni al contacto directo con la luz del sol.
- No coloque la unidad del bebé y la unidad de padres cerca de una fuente de calor.

Solicitud de accesorios

Para comprar accesorios o piezas de repuesto, visite www.shop.philips.com/service o acuda a su distribuidor de Philips. También puede ponerse en contacto con el Servicio de Atención al Cliente de Philips en su país (consulte los datos de contacto en el folleto de la garantía mundial).

Información sobre cumplimiento de normas

Este dispositivo cumple con la Parte 15 de las reglas de la FCC y con los estándares RSS exentos de licencia del Ministerio de Industria de Canadá. El funcionamiento está sujeto a las dos condiciones siguientes: (1) Este dispositivo no debe causar interferencias nocivas, y (2) este dispositivo debe aceptar cualquier interferencia que reciba, incluso aquellas que puedan causar un funcionamiento inadecuado (Fig. 4).

Interferencias de radio

Este equipo ha sido probado y se encontró que cumple con los límites de un dispositivo digital de clase B, según las especificaciones del apartado 15 de las normas de la FCC (Comisión nacional de comunicaciones de EE.UU.) y con la normativa ICES-003 del Ministerio de Industria de Canadá. Estos límites están diseñados para brindar una protección razonable frente a las interferencias perjudiciales en instalaciones domésticas. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia; si no se instala y se utiliza de acuerdo con las instrucciones, puede causar interferencias perjudiciales para las comunicaciones por radio. Sin embargo, no hay garantía de que no ocurrirá interferencia en una instalación en particular. Si este equipo causa interferencia perjudicial a la recepción de radio o televisión, lo cual puede determinarse encendiendo o apagando el equipo, se le recomienda al usuario tratar de corregir la interferencia tomando una o más de las siguientes medidas:

- Cambie la orientación o la posición de la antena receptora.
- Aumente la separación entre el equipo y el receptor.
- Enchufe el equipo a una toma en un circuito distinto al que esté conectado el receptor.
- Consulte a un distribuidor o a un técnico de radio/televisión con experiencia para recibir ayuda.

Informe de exposición a radiación de radiofrecuencia

Este equipo cumple con los límites de exposición a las radiaciones de radiofrecuencia que establece la FCC para un entorno no controlado. Este equipo se debe instalar y utilizar a una distancia mínima de 20 centímetros entre la fuente de radiación y su cuerpo. Este dispositivo ha sido sometido a pruebas para poder sostenerlo en la mano o llevarlo en el cuerpo y cumple la normativa de exposición a la radiación de la FCC/del Ministerio de Industria de Canadá.

Este transmisor no se debe colocar o utilizar junto con otros transmisores o antenas. El uso de otros accesorios puede que no garantice el cumplimiento de las directrices de exposición a la radiación de la FCC/del Ministerio de Industria de Canadá. Este equipo también cumple con el estándar RSS-102 del Ministerio de Industria de Canadá en relación con el código sanitario canadiense 6 de exposición de personas a campos de radiofrecuencia.

No intente reparar o modificar este equipo.

Las reparaciones o alteraciones que lleve a cabo el usuario pueden anular la garantía y el cumplimiento normativo del equipo. Las modificaciones o cambios que se lleven a cabo en este equipo y que no estén aprobados expresamente por Philips Avent podrían anular la autorización de FCC para utilizar el equipo.

Ayuda

Si necesita ayuda, visite nuestro sitio web www.philips.com/avent o póngase en contacto con el Servicio de Atención al Cliente de Philips de su país. Encontrará los datos de contacto en el folleto de garantía mundial.

Campos electromagnéticos (CEM)

- Este Philips cumple los estándares y las normativas aplicables sobre exposición a campos electromagnéticos.
- Si se utiliza correctamente y de acuerdo con las instrucciones de este manual, el aparato se puede usar de forma segura, según las pruebas científicas disponibles actualmente.

Français (Canada)

Sachez reconnaître ces symboles de sécurité

- Cet « éclair » indique que le matériel non isolé dans votre unité peut causer une électrocution. Pour la sécurité de tous les membres de votre ménage, veuillez ne pas enlever le couvercle (fig. 1) du produit.
- Le point d'exclamation signale des points importants et vous invite à consulter la documentation fournie afin d'éviter tout problème (fig. 2) de fonctionnement et de maintenance.

Avvertimento : Afin de limiter les risques d'incendie ou d'électrocution, cet appareil doit être conservé à l'abri de la pluie ou de l'humidité. Aucun objet rempli de liquide, par exemple un vase, ne doit être placé sur l'appareil.

IMPORTANTES CONSIGNES DE SÉCURITÉ

- 1 Lisez ces instructions.
- 2 Conservez ces instructions.
- 3 Tenez compte de tous les avertissements.
- 4 Suivez toutes les instructions.
- 5 N'utilisez pas cet appareil en présence d'eau.
- 6 N'utilisez pas le produit dans un bain, une douche, ni une piscine. Immerger le produit dans l'eau peut causer une électrocution.
- 7 Nettoyez l'appareil avec un chiffon sec seulement.
- 8 Ne bloquez pas les ouvertures de ventilation. Installez l'appareil conformément aux instructions du fabricant.
- 9 N'installez pas l'appareil à proximité de sources de chaleur telles que des radiateurs, des registres de chaleur, des poêles ou d'autres appareils (y compris des amplificateurs) produisant de la chaleur.
- 10 Les piles installées ne doivent pas être exposées à une source de chaleur excessive telle que les rayons du soleil, le feu ou autre.

- 11 Évitez de marcher sur le cordon d'alimentation ou de le pincer, notamment au niveau des fiches, des prises de courant et de son point de sortie sur l'appareil.
- 12 Utilisez seulement les accessoires spécifiés par le fabricant.
- 13 Cet appareil ne doit être utilisé que pour l'usage décrit dans ce mode d'emploi.
- 14 Débranchez ce produit de la prise murale avant de le nettoyer. N'utilisez pas de nettoyeurs liquides ou en aérosol.
- 15 Débranchez cet appareil en cas d'orage ou pendant les longues périodes d'inutilisation.
- 16 Débranchez immédiatement le produit et ne l'utilisez pas si l'adaptateur, le cordon ou le produit lui-même est endommagé.
- 17 Confiez toute réparation à du personnel qualifié. Une réparation est nécessaire en cas d'endommagement de l'appareil, par exemple l'endommagement du cordon d'alimentation ou de la fiche, le déversement de liquide ou la chute d'objets à l'intérieur de l'appareil, l'exposition de l'appareil à la pluie ou à l'humidité ou encore le dysfonctionnement ou une chute de l'appareil. Contrôlez régulièrement le cordon d'alimentation afin d'éviter tout risque de dommage, comme un cordon usé ou coupé. Pour obtenir de l'aide, visitez notre site Web www.philips.com/support ou communiquez avec le service à la clientèle Philips de votre pays. Vous en trouverez les coordonnées dans le dépliant de garantie internationale.
- 18 Gardez les vis et les petits articles hors de la portée du bébé.
- 19 Tous les renseignements requis se trouvent sous l'appareil et sur l'adaptateur.

AVERTISSEMENT : RISQUE D'ÉTRANGLEMENT. Les enfants peuvent s'ÉTRANGLER avec les cordons. Gardez ce cordon hors de portée des enfants (à plus d'un mètre). N'enlevez pas l'étiquette (fig. 3).

Attention

Attention : Prévenez tout risque d'explosion, d'électrocution, de court-circuit ou de fuite

- Cet appareil doit être conservé à l'abri des gouttes d'eau et des éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être placé sur l'appareil.
- Afin d'éviter tout risque d'électrocution, n'ouvrez pas le boîtier du produit.
- Si la fiche d'alimentation est utilisée comme moyen de mise à fonctionnement ou d'arrêt de l'appareil, celle-ci doit rester facilement accessible.
- L'adaptateur contient un transformateur. Pour éviter tout risque d'accident, ne coupez pas la fiche de l'adaptateur pour la remplacer par une autre.
- Utilisez l'adaptateur fourni pour brancher l'appareil à la prise d'alimentation.
- Si l'adaptateur est endommagé, remplacez-le toujours par un adaptateur de même type pour éviter tout accident.

Supervision par un adulte

- Cet écoute-bébé est destiné à offrir une assistance. Il ne saurait en aucun cas remplacer une surveillance responsable et appropriée de la part d'un adulte.
- Ne placez jamais l'écoute-bébé dans le lit ou le parc du bébé ou directement au-dessus de ceux-ci.
- Pour éviter tout risque de surchauffe, ne recouvrez pas l'écoute-bébé avec une serviette, une couverture, ni aucun autre objet.
- Pour leur sécurité, n'autorisez pas les enfants à toucher et à jouer avec l'écoute-bébé, l'adaptateur et tous les accessoires. CECI N'EST PAS UN JOUET.

Mise aux rebuts

Ce produit peut contenir du plomb et du mercure. La mise au rebut de ces substances peut être réglementée en raison des risques environnementaux. Pour obtenir des informations sur la mise au rebut ou le recyclage, contactez vos autorités locales ou visitez le site www.recycle.philips.com.

Précautions de stockage

- N'exposez pas les unités bébé et parent à des températures extrêmes ni à la lumière directe du soleil.
- Ne placez pas les unités bébé et parent à proximité d'une source de chaleur.

Commande d'accessoires

Pour acheter des accessoires ou des pièces de rechange, visitez le site Web www.shop.philips.com/service ou rendez-vous chez votre revendeur Philips. Vous pouvez également communiquer avec le service à la clientèle Philips de votre pays (consulter le dépliant de garantie internationale pour obtenir les coordonnées).

Conformité aux normes

Cet appareil est conforme à l'article 15 de la réglementation FCC et à la norme RSS-210 pour appareils exempts de licence d'Industrie Canada. Son utilisation est soumise aux deux conditions suivantes : (1) cet appareil ne doit pas provoquer d'interférences nuisibles et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un dysfonctionnement (fig. 4).

Interférence radio

À l'issue des tests dont il a fait l'objet, cet équipement a été déclaré conforme à l'article 15 de la réglementation FCC et à la norme ICES-003 d'Industrie Canada, applicables aux appareils numériques de classe B. Ces limites sont conçues pour fournir une protection suffisante contre les interférences nuisibles dans les installations résidentielles. Cet équipement génère, utilise et peut émettre des ondes radioélectriques. Il est susceptible de créer des interférences nuisibles dans les radiocommunications s'il n'est pas installé ou utilisé conformément aux instructions. Cependant, il n'est pas garanti que des interférences ne se produiront pas dans une installation particulière.

Dans le cas où cet équipement créerait des interférences avec la réception radio ou télévisée, ce qui peut être vérifié en éteignant et en rallumant l'appareil, il est conseillé d'essayer de corriger ces interférences en appliquant une ou plusieurs des mesures suivantes :

- Réorientez ou déplacez l'antenne de réception.
- Augmentez la distance entre l'équipement et le récepteur.
- Branchez l'équipement à une prise d'un circuit autre que celui auquel le récepteur est branché.
- Consultez le détaillant ou un technicien de radiotélévision expérimenté.

Énoncé d'exposition au rayonnement radioélectrique

Cet appareil est conforme aux limites d'exposition au rayonnement radioélectrique stipulées par la FCC pour une utilisation dans un environnement non contrôlé. Cet appareil doit être installé et utilisé en respectant une distance minimale de 20 centimètres entre l'élément rayonnant et votre corps. Pour une utilisation mobile ou portée sur le corps, cet appareil a été testé et certifié conforme aux directives de la FCC relatives à l'exposition au rayonnement radioélectrique lorsqu'il est utilisé avec la pince de ceinture fournie.

Cet émetteur ne doit pas être installé à proximité ou fonctionner en parallèle d'accessoires pourrait ou d'un autre émetteur. L'utilisation d'autres appareils pourrait nuire aux directives de la FCC relatives à l'exposition au rayonnement radioélectrique. Cet appareil est également conforme à la norme RSS-102 d'Industrie Canada relative au code de santé 6 du Canada pour l'exposition humaine aux champs de radiofréquences.

N'essayez jamais de réparer ou de modifier l'appareil vous-même.

Toute réparation ou altération de l'appareil par l'utilisateur peut annuler la garantie et la conformité de l'appareil. Tout changement apporté à cet appareil qui n'a pas été expressément approuvé par Philips Avent peut annuler l'autorisation de la FCC de faire fonctionner cet appareil.

Assistance

Pour obtenir de l'aide, visitez notre site Web www.philips.com/avent ou communiquez avec le service à la clientèle Philips de votre pays. Vous en trouverez les coordonnées dans le dépliant de garantie internationale.

Champs électromagnétiques (CEM)

- Cet Philips appareil est conforme à toutes les normes et à tous les règlements applicables relatifs à l'exposition aux champs électromagnétiques.
- Cette appareil répond aux règles de sécurité établies sur la base des connaissances scientifiques actuelles s'il est manipulé correctement et conformément aux instructions de ce mode d'emploi.

Conheça estes símbolos de segurança

- Este “relâmpago” indica que o material não isolado que se encontra na unidade pode provocar choque elétrico. Para segurança de toda a família, não retire a cobertura do produto. (Fig. 1)
- O ponto de exclamação chama atenção para funcionalidades que requerem a leitura atenta das informações do utilizador fornecidas, para evitar problemas de funcionamento e de manutenção (Fig. 2).

Aviso: Para reduzir o risco de incêndio ou choque elétrico, este aparelho não deve ser exposto a chuva ou humidade e não devem ser colocados objetos com água, como jarras, em cima do mesmo.

INFORMAÇÕES DE SEGURANÇA IMPORTANTES

- 1 Leia estas instruções.
- 2 Guarde estas instruções.
- 3 Respeite todos os avisos.
- 4 Siga todas as instruções.
- 5 Não utilize este aparelho próximo de água.
- 6 Não utilize o produto se estiver na banheira, no duche ou numa piscina. A imersão do produto em água pode provocar choque elétrico.
- 7 Limpe apenas com um pano seco.
- 8 Não obstrua nenhuma das aberturas de ventilação. Instale de acordo com as instruções do fabricante.
- 9 Não instale perto de fontes de calor, como radiadores, condutas de ar quente, fogões ou outros aparelhos (incluindo amplificadores) que emitam calor.
- 10 As pilhas instaladas não devem ser expostas a calor excessivo, como luz solar, fogo ou equivalentes.
- 11 Evite que o cabo de alimentação seja pisado ou comprimido de algum modo, sobretudo nas fichas, tomadas e no ponto de saída do aparelho.
- 12 Utilize apenas peças/acessórios especificados pelo fabricante.
- 13 Utilize este aparelho apenas para o fim a que se destina, conforme descrito neste manual.
- 14 Desligue este produto da tomada elétrica antes de o limpar. Não utilize produtos de limpeza líquidos ou em aerossol.
- 15 Desligue o aparelho durante a ocorrência de trovoadas ou quando não o utilizar por longos períodos de tempo.
- 16 Desligue imediatamente o produto e não o utilize se o adaptador, o cabo ou o próprio produto estiverem danificados.
- 17 Solicite sempre assistência junto de pessoal qualificado. A assistência é necessária quando o aparelho for de alguma forma danificado — exemplo, danos no cabo ou na ficha de alimentação, derrame de líquidos ou introdução de objetos no aparelho, exposição à chuva ou humidade, funcionamento anómalo ou queda. Verifique o cabo de alimentação periodicamente para evitar potenciais danos, como desgaste ou cortes. Para obter assistência, visite o nosso Web site em www.philips.com/support ou contacte o Centro de Apoio ao Cliente da Philips no seu país. Pode encontrar os detalhes de contacto no folheto da garantia mundial.
- 18 Mantenha os parafusos e os itens pequenos fora do alcance do bebé.
- 19 Todas as marcações necessárias estão localizadas na parte inferior do aparelho e no adaptador.

AVISO: PERIGO DE ESTRANGULAMENTO Os cabos já causaram a morte a crianças por ESTRANGULAMENTO. Mantenha este cabo fora do alcance das crianças (a mais de 1 metro de distância). Não retire a etiqueta (Fig. 3).

Cuidado

Atenção: Evite riscos de explosão, choque elétrico, curto-circuito ou fuga

- O aparelho não deve ser exposto a salpicos de água e não devem ser colocados objetos que contenham líquidos, como jarras, em cima do aparelho.
- De forma a evitar choque elétrico, não abra o compartimento do produto.
- Quando a ficha de alimentação é utilizada como dispositivo de desativação, este deve estar pronto para ser utilizado de imediato.
- O adaptador contém um transformador. Não corte o adaptador para o substituir por outra ficha, pois isto representa uma situação de perigo.
- Utilize o adaptador fornecido para ligar o aparelho à tomada elétrica.
- Se o transformador se danificar, só deverá ser substituído por uma peça de origem para evitar situações de perigo.

Supervisão de adultos

- Este intercomunicador para bebé é um equipamento auxiliar. Não substitui a supervisão responsável e adequada de um adulto e não deve ser utilizado como tal.
- Nunca coloque o intercomunicador para bebé dentro ou diretamente sobre a cama ou o parque do bebé.
- Para impedir um sobreaquecimento, não cubra o intercomunicador para bebé com uma toalha, cobertor, nem qualquer outro item.
- Por motivos de segurança, não permita que as crianças toquem e brinquem com o intercomunicador para bebé, o adaptador e os acessórios. ESTE APARELHO NÃO É UM BRINQUEDO.

Eliminação

Este produto pode conter chumbo e mercúrio. A eliminação destes materiais pode estar sujeita a regulamentos, devido a considerações ambientais. Para obter informações sobre eliminação ou reciclagem, contacte as autoridades locais ou visite www.recycle.philips.com.

Precauções de armazenamento

- Não exponha o intercomunicador para bebé a frio ou calor extremo ou a luz solar direta.
- Não coloque a unidade do bebé e a unidade dos pais próximas de uma fonte de calor.

Encomendar acessórios

Para comprar acessórios ou peças sobresselentes, visite www.shop.philips.com/service ou dirija-se ao seu revendedor Philips. Também pode contactar o Centro de Apoio ao Cliente da Philips no seu país (consulte os dados de contacto no folheto de garantia mundial).

Informações de conformidade

Este dispositivo cumpre o Artigo 15.º das normas da FCC e a norma RSS isenta de licença da Industry Canada. O funcionamento está sujeito às duas condições seguintes: (1) este dispositivo não pode causar interferências nocivas e (2) este dispositivo tem de aceitar todas as interferências recebidas, incluindo as que possam provocar um funcionamento indesejado (Fig. 4).

Interferência de transmissão

Este equipamento foi testado e considerado em conformidade com os limites para dispositivos digitais de Classe B, de acordo com o Artigo 15.º das normas da FCC e a norma ICES-003 da Industry Canada. Estes limites são concebidos para fornecer uma proteção razoável contra interferências nocivas numa instalação residencial. Este equipamento gera, utiliza e pode irradiar energia de radiofrequência e, se não for instalado e utilizado de acordo com as instruções, pode provocar interferências nocivas nas comunicações por rádio. No entanto, não há garantias de que as interferências não surgirão numa determinada instalação. Se este equipamento provocar interferências nocivas à receção de rádio ou televisão, o que pode ser verificado desligando e voltando a ligar o equipamento, aconselha-se o utilizador a tentar eliminar as interferências através de uma ou várias das medidas seguintes:

- Reorientar ou mudar a posição da antena de receção.
- Aumentar a distância entre o equipamento e o recetor.
- Ligue o equipamento a uma tomada num circuito diferente do utilizado para ligar o recetor.
- Contacte o revendedor ou um técnico de TV/rádio experiente para obter ajuda.

Declaração de exposição a radiações de RF

Este equipamento cumpre os limites de exposição à radiação RF da FCC especificados para um ambiente não controlado. Este equipamento deve ser instalado e utilizado com uma distância mínima de 20 centímetros entre o emissor de radiações e o seu corpo. Para efeitos de utilização portátil ou junto ao corpo, este equipamento foi testado e cumpre a diretiva de exposição RF da FCC/Industry Canada, quando utilizado com a mola para cinto fornecida com o produto.

Este transmissor não deve ser colocado próximo de outras antenas ou outros transmissores, nem deve funcionar em conjunto com os mesmos. A utilização de outros acessórios pode não assegurar a

conformidade com as diretivas de exposição RF da FCC/Industry Canada. Este equipamento cumpre também a norma RSS-102 da Industry Canada relativa ao Código sanitário 6 do Canadá sobre a exposição humana a campos de RF.

Não tente reparar nem modificar este equipamento.

Quaisquer reparações ou alterações no equipamento efetuadas pelo utilizador podem anular a garantia e a conformidade do equipamento. Alterações ou modificações efetuadas neste equipamento sem aprovação expressa da Philips Avent podem anular a autorização da FCC para a utilização deste equipamento.

Assistência

Para obter assistência, visite o nosso Web site em **www.philips.com/avent** ou contacte o Centro de Apoio ao Cliente da Philips no seu país. Pode encontrar os detalhes de contacto no folheto de garantia mundial.

Campos electromagnéticos (CEM)

- Este aparelho Philips cumpre todas as normas e regulamentos aplicáveis relativos à exposição a campos electromagnéticos.
- Se manuseado corretamente e de acordo com as instruções incluídas neste manual, o aparelho proporciona uma utilização segura, conforme demonstrado pelas provas científicas atualmente disponíveis.