



SJM3152
DSS1005/01

www.philips.com/welcome

EN	Universal remote and docking cradle for iPod™	3	SV	Universalfjärrkontroll och dockningsstation för iPod™	164
DE	Universalfjernbedienung und Dockingstation für iPod™	26	EL	Τηλεχειριστήριο γενικής χρήσης και βάση σύνδεσης για iPod™	187
FR	Télécommande universelle et station d'accueil pour iPod™	49	PL	Pilot uniwersalny i podstawka dokująca do odtwarzacza iPod™	210
NL	Universele afstandsbediening en basisstation voor de iPod™	72	RU	Универсальный пульт дистанционного управления и док-устройство для iPod™	233
ES	Mando a distancia universal y estación base para iPod™	95	CS	Univerzální dálkový ovladač a dokovací kolébka pro zařízení iPod™	256
IT	Telecomando universal e base de supporto para iPod™	118	HU	Univerzális távirányító és dokkoló az iPod™ használatához	279
PT	Universal remote and docking cradle for iPod™	141	TR	iPod™ için evrensel uzaktan kumanda ve bağlantı cihazı	302

PHILIPS

Table of Contents

1. Important	4	6. Warranty and service	22
2. Your universal remote and docking cradle for iPod™	6	7. Technical data	23
2.1 What's in the box	7	8. Frequently asked questions	24
2.2 What you'll also need	7		
2.3 Universal remote and docking cradle for iPod™ overview	8		
2.4 Main menu overview	8		
3. Getting Started	9		
3.1 Prepare	9		
3.2 Connect	9		
3.3 Install	10		
4. Using your universal remote and docking cradle for iPod™	12		
4.1 Using your universal remote for iPod™ as a controller for your iPod™	12		
4.2 Browsing and playing music from your iPod™	12		
4.3 Using your universal remote for iPod™ as a universal remote control	14		
4.4 Starting up an activity	15		
4.5 Replacing the batteries	15		
5. Use more of your universal remote and docking cradle for iPod™	16		
5.1 Adding a device	16		
5.2 Deleting a device	17		
5.3 Fixing a key	17		
5.4 Adding a function	18		
5.5 Adding an activity	18		
5.6 Deleting an activity	19		
5.7 About RF Settings	19		
5.8 Changing language	20		
5.9 Copying volume	20		
5.10 Changing display time out	21		
5.11 Performing a full reset	21		

1 Important

Take time to read this manual before you use your universal remote and docking cradle for iPod™. It contains important information and notes regarding operating your universal remote and docking cradle for iPod™.

© 2008 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

- 1 This device may not cause harmful interference ; and
- 2) This device must accept any interference received, including interference that may cause undesired operation.



Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the

equipment and the receiver.

- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized modification to this equipment could result in the revocation of the authorization to operate the equipment.

Industry Canada Statement

This Class B digital apparatus complies with Canadian ICES-003.

PHILIPS

PHILIPS ELECTRONICS SINGAPORE PTE LTD

08-EC-SJM3152
(Report no.)

EC DECLARATION OF CONFORMITY

We, PHILIPS ELECTRONICS SINGAPORE
PTE LTD

Declare under our responsibility that the
electrical product:

PHILIPS RF remote control and docking station
SJM3152/05
SJM3152/12
SJM3152/17
SJM3152/75

to which this declaration relates is in
conformity with the following standards:

ETSI EN 300 400-2 V1.1.2:2004 &
ETSI EN 301 489-17 V1.2.1:2002 &
EN60950-1:2001+A11:2004 &
EN60950-1:2001 &
EN50371:2000 &
ETSI EN 300 328 V1.6.1:2004

following the provisions of 89/336/EEC and
93/68/EEC directive

The product is manufactured by an
organisation on ISO9000 level.

Singapore, 17th October 2008



Miguel Vidal, Director
Category Peripherals & Control

Disposal of your old product:

Your product is designed and manufactured with
high quality materials and components, which
can be recycled and reused.



When this crossed-out wheeled bin
symbol is attached to a product it
means the product is covered by the
European Directive 2002/96/EC

Please inform yourself about the local separate
collection system for electrical and electronic
products.

**Please act according to your local rules
and do not dispose of your old products
with your normal household waste. The
correct disposal of your old product
will help prevent potential negative
consequences for the environment and
human health.**



Warnings

- Do not expose the product to rain
or water.
- Keep away from sunlight to prevent heat
build-up.
- Do not disassemble or repair.
- Keep away from high voltage devices
- When you replace the batteries, do not
mix different brands of batteries or
place zinc carbon batteries in the
remote. This can trigger unpredictable
behavior.

Take the package to your local recycling center.

Your product contains batteries covered by the
European Directive 2006/66/EC, which cannot
be disposed with normal household waste.
Please inform yourself about the local rules
on separate collection of batteries because
the correct disposal will help prevent negative
consequences for the environmental and human
health.



Important

2 Your universal remote and docking cradle for iPod™

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.


Your universal remote and docking cradle for iPod™ allows you to control your iPod™ remotely while simultaneously charging your iPod™. It also allows you to control up to 6 other AV devices. Philips offers an entire line of products to enhance your iPod™ experience.

Your universal remote and docking cradle for iPod™ works with all iPod™ models that have a dock connector. For the best connection, use the dock adapter that came packaged with your iPod™ or choose the appropriate adapter from the 5 included with your universal remote and docking cradle for iPod™.



Note

Philips SJM3152 is compatible with the following iPod models:

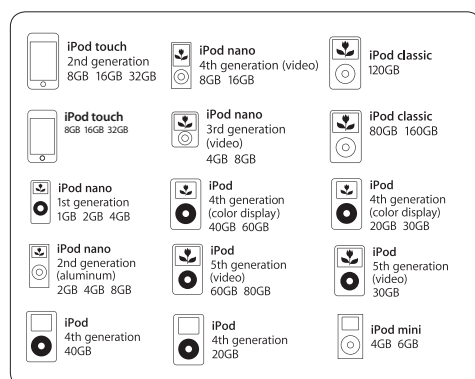

Note


Stereo and A/V equipment can only be controlled via Infra Red, or “line of sight” operation. Distance for controlling these devices is limited to 30 feet and the remote must be in the line of sight of the IR port on your AV equipment. Only devices with an IR sensor can be controlled by the remote.

This section gives you an overview of the controls and functions of this universal remote with docking cradle for iPod™.

Product highlights

- Controls iPod™, TV, VCR, DVD player, cable and satellite system
- Control your iPod™ and home entertainment system.
- Backlit LCD screen
- Provides an easy view of iPod™ menu, playlists and libraries, even under darker lighting conditions.
- Play your iPod™ through your home entertainment system
- Leave your iPod™ in the dock, then connect to home stereo via the AV cable provided.
- Control iPod™ through walls, floors, doors, ceilings and windows with 2-way RF technology.
- Provides control over iPod™ menu, features, playlists and libraries from virtually anywhere at home.
- Docking cradle
- Allows you to play and charge iPod™ simultaneously.
- Share your video library on a larger screen
- S-Video out cable or yellow RCA of AV cable allows you to easily connect to a TV.


2.1 What's in the box.

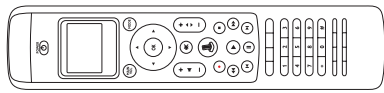

Universal remote control



Docking cradle for iPod™

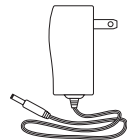

Power adapter



 
- 5 iPod™ dock adapters: *
- type 3 for mini
 - type 4 for 4G 20GB
 - type 5 for 4G 40GB
 - type 6 for iPod™ with color display 20GB/30GB
 - type 7 for iPod™ with color display 60G



S - Video cable



3.5mm-to-RCA AV cable



CD ROM with instruction manual



 
Quick Start guide




(3) AA batteries

*For newer iPod™ versions, please use the adapter that shipped with your iPod™.

2.2 What you'll also need.




iPod™ with dock connector

 


Stereo receiver

or

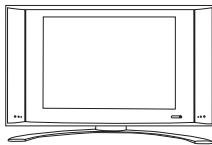


TV

 

Electric outlet

2.3 Universal remote and docking cradle for iPod™ overview

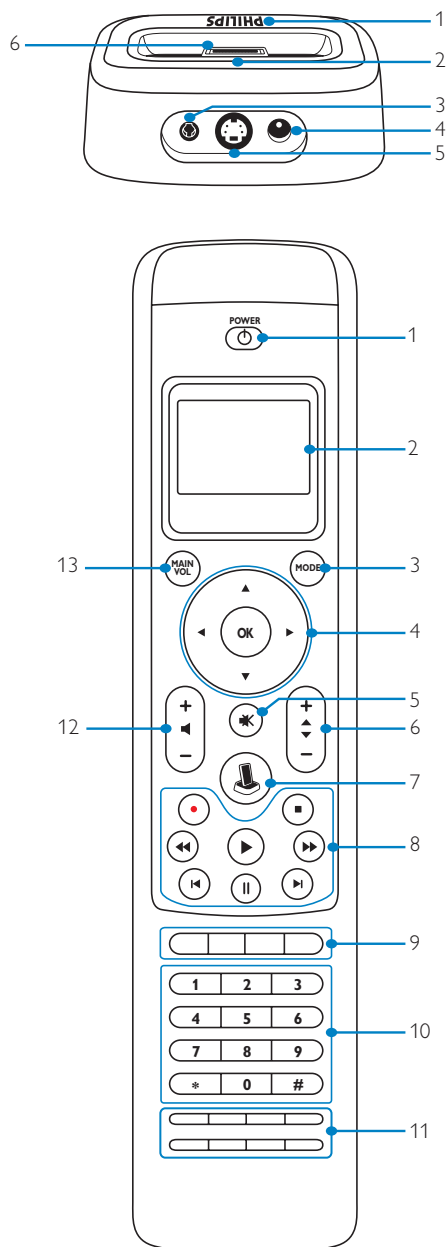


Cradle:

1. LED Indicator
2. Slots for removing dock adapter
3. 3.5mm A/V Out Jack
4. DC Power Jack
5. S-Video Out Jack
6. iPod™ connector

Remote:

1. Power key
2. LCD Screen
3. Mode key
4. Cursor keys (Navigation) and OK key
5. Mute key
6. Volume Up/Down key
7. iPod™ Launch key
8. Playback keys (Play, Rec, Stop, Rew, FF, Pause, Skip, Next)
9. Device specific keys (Guide, Live TV, HDD, Menu)
10. Digit keys
11. Device specific keys (CC/Text, Clear, Enter, Zoom/16:9, Title, Chapter, SUBT, CC & Zoom for /27 Text & 16:9 for /10, Audio)
12. Channel Up/Down key
13. Main Volume Key
14. Battery low icon (See below)
15. No connection icon (See below)
16. IR Transmission icon (See below)

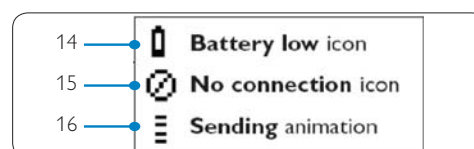

2.4 Main menu overview



3 Getting Started

Warning

Carefully read the safety precautions in section **1.1 Important**, before connecting your universal remote and docking cradle for iPod™.

This section helps you with the first time installation of your universal remote and docking cradle for iPod™.

3.1 Prepare

1. Remove all package contents
2. Position your dock near your home entertainment system, stereo or TV.
3. Turn off power on all your home entertainment components.
4. Locate the nearest electrical wall outlet.
5. Remove the protective screen cover from your universal remote for iPod™.
6. Remove iPod™ connector protective cover on the docking cradle.
7. Select the correct dock adapter for your specific iPod™ model.
8. Insert the correct dock adapter into the universal well on your docking cradle.

3.2 Connect

For stereo playback:

1. Connect the red and white RCA connectors on one end of the supplied AV cable to the Audio In RCA jacks on your home entertainment system or stereo.




Note

If you are not using the device with video, or you plan on connecting to video via the S-Video connection, leave the yellow RCA connector end unplugged.

2. Connect the other end of the supplied AV cable with 3.5mm plug to the jack labeled "AV" on your docking cradle.


3. Connect one end of the power cord to an electrical outlet and the other end to the DC 12V jack on the back of your docking cradle.
4. Install the 3 supplied AA batteries into the battery compartment on the remote. Follow the proper polarity markings in the compartment.

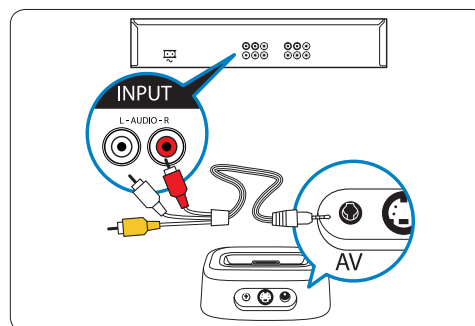


For video playback:

1. Connect one end of the supplied S-Video cable to the Video In jack on your home entertainment system or TV.
2. Connect the other end of the supplied S-Video cable to the jack labeled "S-Video" on your docking cradle. If you are using the composite video jacks, plug the yellow RCA plug into the RCA video jack on your TV.
3. Connect one end of the power cord to an electrical outlet. Connect the other end to the DC 12V jack on the back of your docking cradle.
4. Install the 3 supplied AA batteries into the battery compartment on the remote. Follow the proper polarity markings in the compartment.

RCA Connection

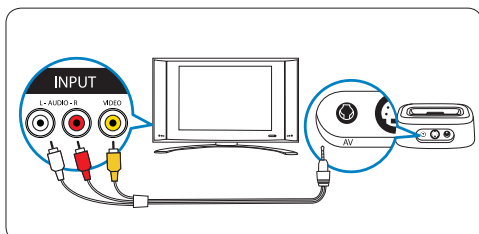

S-Video Connection

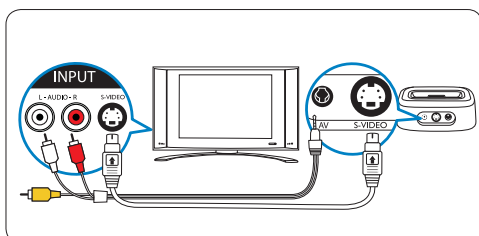

3.3 Install

Once you have installed the batteries in the remote and connected all of the appropriate cables, you will need to do a quick “pairing” of the dock with the remote.

Note

It is recommended to complete the initial set-up, including the “pairing” sequence before docking your iPod™ in the docking cradle.

Pairing the dock with the remote for the first time:

1. Press the **POWER** Button on the remote.
2. Position the remote within 1m of the dock for this duration of this procedure.
3. Follow the easy on-screen set-up wizard screen prompts.

The easy on-screen set up wizard will guide you through the different steps on the initial set-up of your universal remote for iPod™.

Initial set-up of your universal remote for iPod™:


1. Select the language for your instructions on the remote using the cursor keys. Press **OK**.



While pairing the remote to the docking cradle, position the remote within 1m of the dock for the duration of the procedure.

Note

While your iPod™ is docked in the cradle, your iPod™ screen will show the message below. This is normal operation.

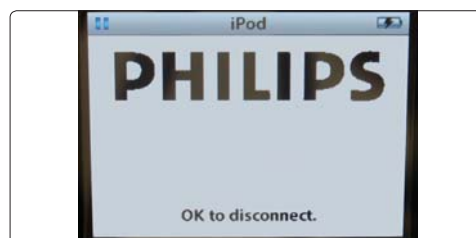

2. Select “Next” and press **OK**.
3. Confirm if you want to add other devices, like your TV or DVD player, by selecting “Yes”. Press **OK**. This replaces the devices’ original remote controls with the universal remote for iPod™.



Note

You can adjust the settings of your universal remote for iPod™ anytime after initial install via the set-up menu. Press the MODE and IPOD™ LAUNCH keys simultaneously for 3 seconds.

4. Select the device and brand of the device you want to add by using the cursor keys. Press OK. The remote will search the database for available code sets.
5. Follow the on-screen instructions to test the codes. When a working code set is found, your device is correctly installed. When the device is correctly installed, the following screen appears:



The screen will ask you to press and hold the 2 keys for 3 seconds to enter set-up mode.



If no working code set is found:

- You can perform a full data base search to find a correct code set. This can take up to 25 minutes.
- You can learn codes from the original remote device.

To add an additional device:

1. Select "Yes", Press OK.
2. Repeat this process for each additional device.
3. When you are finished adding devices, select "No". Press OK. Exit the wizard.

4. Using your universal remote and docking cradle for iPod™

Learn how to operate your universal remote and docking cradle for iPod™.

4.1 Using the universal remote for iPod™ as a controller for iPod™

Control your iPod™ menus, playlists, music and video libraries.

1. Position the correct dock adapter for your specific iPod™ model in the docking cradle.
2. Position your iPod™ in the docking cradle. Charging begins automatically.
3. Press the IPOD™ LAUNCH key.



The remote connects to your docked iPod™ and displays your iPod™ menu playlists.



Note

If the No Connection icon begins blinking in the upper right-hand corner of the screen, the universal remote for iPod™ is not able to connect to the docking cradle for iPod™. See [Section 8 Frequently Asked Questions](#) to solve the problem.

4.2 Browsing and playing music from your iPod™

The menu on the universal remote for iPod™ is similar to the menu on your iPod™.



Navigating in iPod™ mode:



1. Scroll to Music, Settings, Now Playing. Press OK to select.

Note

If the iPod™ is not Video capable, the Video option will not appear on your screen.

Note

“Now Playing” is only viewable when a song is playing.

2. Press > or OK on the navigation dial to go to the next screen.
3. Selecting "Music" presents the following screens:
 Playlists
 Artists
 Albums
 Songs
 Podcasts
 Genres
 Composers
 Audio Books
 - a. To select one of the menu items and go to the next screen, press > or OK on the navigation dial.
 - b. Press < to return to the previous screen or press OK to move to the next screen.
 - c. Repeat until you have made your listening selection.




Note

While in iPod™ Mode, press < cursor key to return to the previous screen / Menu item. Press OK to make a selection and move to the next screen.

4. Selecting settings will present the following screens:
 Shuffle
 Shuffle Options are:
 Off, Songs, and Albums.
 Default for this option is OFF>
 Repeat
 Repeat Options are:
 Off, One, and All.
 Default for this option is OFF>
 - a. To select one of the menu items and go to the next screen, press > or OK on the navigation dial
 - b. Press < to return to the previous screen. Press OK to move to the next screen.

- c. Repeat until you have made the selection you want to use.
5. Selecting "Now Playing" will display the most recently played song:
 - a. Press < to return to the previous screen.

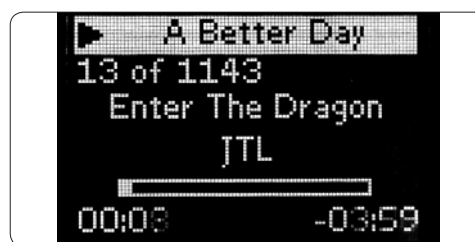

Note

Your universal remote and dock for iPod™ does not allow browsing or control of Photo Library on your iPod™.

Controlling the volume of your docked iPod™ and connected AV devices, such as a home theater system, stereo system or TV:

1. To adjust the audio output level of the iPod™ docking cradle, press the Volume Up or Volume Down keys. A volume bar will be shown on the remote's display screen.
2. If the sound level of playback is still too loud or too soft, press the MAIN VOL key to switch to the AV device and change the master volume.



Note

Controlling AV devices requires that the components have an IR receiver and that your universal remote for iPod™ is within 30 feet of the component in line of sight.

3. To return to iPod™ control, press the IPOD™ LAUNCH key.

Note

The Main Volume works like a short cut key to switch to either TV or AMP or RECEIVER mode. If more than one of these devices is installed, the priority will be: AMP, RECEIVER, TV.

4.3 Using your universal remote for iPod™ as a universal remote control

You can add up to 6 AV devices and your iPod™ docking cradle, if available, to your universal remote for iPod™.

1. Press **MODE** key. The device icon of your last selected device will appear on the screen. Repeat **MODE** press until the device you want to control appears on the display screen.
2. Control the device using the hard keys on your universal remote for iPod™. They will access the same function as the corresponding keys of the original remote of the selected device.

Note

Music that was started while using the remote as an iPod™ controller, will continue to play even when you change Modes.

Note

Some specific keys that are available on the original remote will not be available on your universal remote for iPod™. Check your original remote for the available functions.



Note

When you awaken the remote after a time out, the last device selected before the time out will be active.

Device specific keys

The device specific keys on your universal remote for iPod™ can have different functions, depending on the device you select via the **MODE** key.

Below you can find a complete overview of the functions for all device specific keys listed for the iPod™ docking cradle, TV, cable/satellite and your audio set.

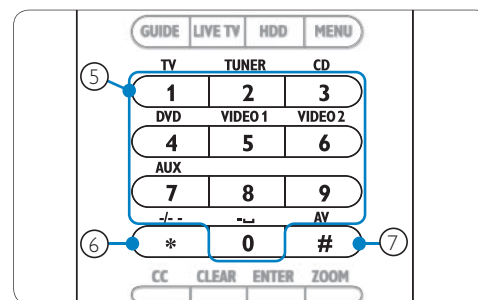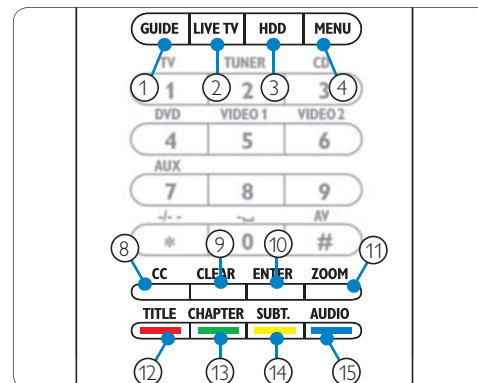

TV	Sat/Cable	Audio set
1. Guide	Guide	Band
2. Exit	Return to Live TV	Scan
3. -	Exit	-
4. Menu	Menu	Menu
5. Digit Keys	Digit keys	Input Sources
6. -/--	-/--	Surround
7. AV Input	TV/SAT input	Surround Mode
8. cc/text	Favorite	RDS
9. -	Help	Clear
10. PIP	Enter	Enter
11. Zoom/16:9	Home	GEQ
12. Color key	Color key	Front
13. Color key	Color key	Center
14. Color key	Color key	Rear
15. Color key	Color key	Test

**Note**

Other installed devices use the functions that are labeled on the remote. Check your original remote when you are not sure.

To switch back to your iPod™ playlist after controlling another device with your universal remote for iPod™, press the IPOD™ LAUNCH key.

4.4 Starting Up an Activity

An activity is a sequence of key presses that you can program. For example, for watching a DVD you normally would have to:

1. Turn on the TV;
2. Turn on the DVD;
3. Turn on the surround sound system;
4. Select the right input on your TV and surround sound system;
5. Press the PLAY key to start the DVD.

By selecting the activity “Watch DVD” on the universal remote for iPod™, all the actions are automatically executed in the predefined sequence.

Starting up an activity:

1. Press MODE key repeatedly until the activity name appears in the header of the display screen.
2. Confirm your selection by pressing OK. The activity will begin immediately.

You can add up to 8 activities to your universal remote for iPod™. For more information about adding and deleting activities, see section

5.5, Adding an activity and section **5.6, Deleting an activity**.

Selecting extra functions

Devices may have extra functions that are not covered by the hard keys on your universal remote for iPod™. You can select these extra functions in the display.

1. While in any device mode, Press MAIN VOL key. Extra functions for the selected

device appear in the display screen.

2. To scroll through all the extra functions, press the cursor up or cursor down key.
3. When you find the selection you want, press OK. The remote sends out an IR signal.

For adding extra functions to your universal remote for iPod™, see section **5.4, Adding a function**.

**Tip**

If you cannot find the extra function you are looking for, you can exit the Extra menu by pressing the MAIN VOL key again.

**Note**

Some devices do not have any extra functions available in the remote's data base. However, you can easily copy additional functions from your original remote by learning keys. See section **5.4, Adding a function**.

4.5 Replacing the batteries

**Warning**

When you replace the batteries, do not mix different brands of batteries or place zinc carbon batteries in the remote. This can trigger unpredictable behavior.

When the batteries are almost empty, the “Battery Low” icon appears. Replace the batteries with new LR6 or AA type alkaline batteries. Follow the local regulations for disposal of the empty batteries.

5 Use more of your universal remote and docking cradle for iPod™

To access the advanced features of your universal remote and dock for iPod™, you must use the Set-up menu.

To open the Set-up menu, press and hold the MODE and IPOD™ LAUNCH keys simultaneously for 3 seconds.

To exit the Set-up menu and go directly to your iPod™ menu, press the IPOD™ LAUNCH key again.

To switch to your last selected device, press the MODE key.

5.1 Adding a device

To be able to operate your devices with your universal remote for iPod™, you first have to add these devices to the remote control. You can add up to 6 devices from the list of devices below. Examples of available devices include (but are not limited to):

- DVD
- Cable
- DSS (Satellite)
- Tuner
- CD
- TV

Please check the Remote menu for the complete listing of device labels that can be added.

You cannot add a device twice. Once you have added a device to your Universal remote for iPod™, it disappears from the list. However, the list of devices includes 'TV-2' or 'VCR-2' for use when you want to program a second TV or second VCR.

To add a device:

1. Select the option "Add a Device" in the Set-up menu by using the cursor keys
Press OK.

Note

If you have already added 6 devices on the remote, besides your iPod™ docking cradle, you will be asked to delete a device.

2. Select the device and brand you want to add. Press OK. The remote will search for available codes for the brand.
3. Follow the on-screen instructions to test the codes. When a working code set is found, your device is correctly installed. When the device is correctly installed, the following screen appears:



If no working code set is found:

- You can perform a full data base search to find a correct code set. This means that the remote will send out all codes available in the database until a working code is found. This can take up to 25 minutes.
- You can learn codes from the original remote device.

When you want to add another device, select "Yes". Press OK and repeat steps 2 and 3.

When you have added all your devices, select "No". Press OK to return to the Set-up menu.

5.2 Deleting a device

You can delete a programmed device from your universal remote for iPod™.

To delete a device:

1. Select the option "Delete a Device" in the set-up MENU by using the cursor keys. Press OK.
2. Select the device you want to delete from the list. Press OK.
3. Confirm you want to delete that device by selecting "Yes". Press OK.
The device is now deleted and becomes available again in the list of devices you can add.
4. To return to the Set-up menu, select "Exit". Press OK.



Note

Keys of the deleted device that are used elsewhere, e.g. in an activity or the volume keys you copied, will be deleted as well. Check the activities you programmed and volume keys for your devices and reprogram them, if necessary.



Note

If your universal remote for iPod™ has already learned 200 keys, a screen will alert you that the memory is full and automatically return you to the Set-up menu. You will have to delete a device with fixed keys to clear memory.

4. Follow the on-screen instructions to fix the key: Point the 2 remotes towards each other at a distance of 0.5 - 2 inches (2-5 cm).



5. Select the hard key or extra function you want to fix on your universal remote for iPod™. To select an extra function press MAINVOL. Select the function with the Cursor Up or Cursor Down key. Press OK.
6. Press the corresponding key on the original remote until you see confirmation on-screen.

After the key is learned and fixed. The following screen appears:



7. When you would like to fix other keys for this device, select "Yes". Press OK. Repeat step 3.

5.3 Fixing a Key

If a hard key is not working properly with your device, you can fix the key by learning it from your original remote control. Your universal remote for iPod™ can store up to 200 learned keys. You can fix all keys on your universal remote for iPod™ except the MODE key, the MAINVOL key and IPOD™ LAUNCH key.

To fix a key:

1. Select the option "Fix a Key" in the Set-up menu by using the cursor keys. Press OK.
2. Select the device for which you want to fix a key. Press OK.
3. Confirm you have a working original remote control available to learn from by selecting "Yes". Press OK.

When all keys are fixed and you want to return to the Set-up menu, select “No”. Press OK.



Note

Fixing a key overwrites the key's data that was stored in your universal remote for iPod™. This means that if this key is used in an activity this will also change.

5.4 Adding a function

You can add extra functions to your universal remote for iPod™.

To add a function:

1. Select the option “Add a Function” in the Set-up menu. Press OK.
2. Select the device you want to add a function to.
3. Select the label you want to use for the extra function.
4. Learn the function from your original remote.

The extra function is added to your universal remote for iPod™.

To access the extra function:

1. Press the MAINVOL key to access the Functions menu.
2. Select the function you want by using the cursor keys. Press OK.



Note

Extra functions are device-specific. They can only be selected when in the desired AV device's specific mode. For example, if you want to access a TV function, the remote must be in the TV mode.

5.5 Adding an Activity

An activity consists of several key presses that will be sent out by your universal remote for

iPod™ when you select the activity. You can add up to 8 activities. One activity can contain a maximum of 25 steps.

By default, your universal remote for iPod™ inserts a delay of 0.6 sec between every key press to make sure your devices are responding correctly to the signals.

You can overwrite this default delay:

- If one of your devices needs a longer delay before receiving the next IR signal, you can insert a delay of 1 or 3 seconds. Replacing the default delay counts as a step in the activity.
- If an activity needs no delay between the different key presses to simulate a long key press, you can add the option “no delay”. For example: When you would like to turn the volume up during an activity by pressing VOL Up key four times, you do not need to insert delays between these 4 key presses. Between each step you add the option “no delay”.

To add an activity:

1. Select the option “Add an Activity” in the Set-up menu by using the cursor keys. Press OK.



Note

If you already have added 8 activities, you will be asked to delete an activity. See section 5.6, Deleting an activity.

2. Select the label from the list of activities. Press OK.
3. Follow the on-screen instructions to create an activity.
 - Use the cursor keys to select the device. Press OK. Press the required key to insert a key press.
 - Decide if you want to add an additional key or key delay, select YES by pressing OK.If you do not wish to add an additional activity, select NO. Press OK.



- Select the delay you want to add. Press **OK**. See instructions at the end of this procedure, "To select the delay you want".

Keep in mind that an activity contains a maximum of 25 steps.

When you have added all key presses and delays, select "No". Press **OK**. The activity is installed on your universal remote for iPod™.

4. To return to the Set-up menu, select "Exit". Press **OK**.

To select the delay you want:

1. Use the cursor keys to scroll through the list of possible delays.
2. Press **OK** on desired delay. You'll see confirmation screen.
3. Press **YES** to add another key or delay. Press **NO** to exit activity set-up.

Tip

Start up the activity by pressing the Mode key repeatedly until the activity name appears in the header of the universal remote for iPod™ display screen. Press **OK**.

5.6 Deleting an activity

To delete an activity from your remote control:

1. Select the option "Delete an Activity" in the Set-up menu by using the cursor keys. Press **OK**.
2. Select the activity you want to delete. Press **OK**.
3. Confirm you want to delete the activity by selecting "Yes". Press **OK**. The activity is deleted and becomes available again in the list of activities you can add.
4. To return to the Set-up menu, select "Exit" and press **OK**.

5.7 About RF Settings

Show details:

You can check the status of the connection between the docking cradle and remote:

1. Select the option "RF Settings" in the Set-up menu by using the cursor keys. Press **OK**.
2. Select "Show details." Press **OK**. The name of the connected docking cradle and the strength of the signal appear.
3. To return to the Set-up menu, select "Next". Press **OK**.

Note

When the details of the RF Settings show "No Connection", the remote is unable to connect to the docking cradle. If this occurs, you must reconnect to the dock.

Reconnect to dock

When you want to use your universal remote for iPod™ with another docking cradle, or in case of technical problems, you will have to pair the remote to the docking cradle again.

1. Press and release reconnect button at the bottom of the iPod™ docking cradle

2. Select the option "RF Settings" in the Set-up menu by using the cursor keys. Press OK.
3. Select "Reconnect to Dock". Press OK. You are now pairing the remote to the docking cradle. Be sure to position the remote within 1m of the dock for the duration of this procedure.
4. To return to the Set-up menu, select "Next" and press.

When the details of the RF Settings show "Cannot connect to dock. Try again", you must reconnect to the dock using the following procedure:

1. Press the RECONNECT button on the bottom of the dock. After 5 seconds, the Philips logo on the dock will begin flashing.
2. Select "Yes" on remote. Press OK.

Remote and dock will reconnect. When the process is completed, the screen below will appear:



3. Select "Next". Press OK.

5.8 Changing language

You can change the language of the instructions on your universal remote for iPod™.

Models purchased in North America offer the following languages:

- English
- Français
- Espanol

Models purchased in Europe offer the following languages:

- English
- Espanol
- Français
- Deutsch
- Nederlands
- Italiano

To change the language:

1. Select the option "Change language" in the Set-up menu by using the cursor keys. Press OK.
2. Select your preferred language. Press OK. The Set-up menu appears on the screen in your preferred language.

5.9 Copying Volume

After adding devices, your universal remote for iPod™ automatically copies the Volume keys and Mute key, as follows:

- Video devices, like DVD, DVDR, VCR and Satellite box, use the Volume keys of the TV (provided that you have programmed a TV).
- Audio devices, like CD, DMR and Tuner, use the Volume keys of the Amplifier or Receiver (provided that you have programmed an Amplifier or Receiver).

When no TV or amplifier is installed, the Volume keys will not send codes. When the source device is added later on, the Volume keys will be automatically updated. You can change which Volume keys are used. For example, when you

want to use the Volume keys of the Amplifier for the DVD.

To change the volume keys:

1. Select the option Copy volume in the Set-up menu by using the cursor Keys. Press OK.
2. Select the device you want to copy the Volume keys from (e.g. TV or AMP or RECEIVER). Press OK.
3. Select the device you want to copy the Volume keys to (e.g. DVD or SAT). Press OK.
4. Confirm you want to copy the Volume keys from one device to the other by selecting "Yes". Press OK. The Volume keys and Mute key are copied.
5. To return to the Set-up menu, select "Exit". Press OK.

5.10 Changing display time out

To save power, your universal remote for iPod™ will switch off when it is not used for a while. This is the display time out. You can change this time out to one of the following:

- Short
- Medium (default)
- Long

To change the display time out:

1. Select the option "Display Time Out" in the Set-up menu by using the cursor keys. Press OK.
2. Select your preferred display time out. Press OK. The time out is changed for your universal remote for iPod™. The Set-up menu appears on the screen.



Note

The display time out has an impact on the life of the batteries. The longer the backlight stays on, the faster the batteries will be drained.

5.11 Performing a full reset

You can reset your universal remote for iPod™ completely, deleting all programmed devices, activities, learned keys and other settings. After the reset, you will have to configure your remote again.

To perform a full reset:

1. Select the option "Full Reset" in the Set-up menu by using the cursor Keys. Press OK.
2. Confirm you want to perform a full reset by selecting "Yes". Press OK.
3. Press OK to reconfirm. The remote control deletes all settings. When the full reset is ended, the remote automatically re-initializes. You now have to configure your remote again. See section 3.3, **Install**, and follow the directions for pairing the dock with the remote to repeat this procedure.

6 Warranty & Service

This universal remote and dock for iPod™ carries a limited one-year warranty.

Philips warrants that this product shall be free from defects in material, workmanship and assembly, under normal use, in accordance with the specifications and warnings, for one year from the date of your purchase of this product. This warranty extends only to the original purchaser of the product, and is not transferable. To exercise your rights under this warranty, you must provide proof of purchase in the form of an original sales receipt that shows the product name and the date of purchase. For customer support or to obtain warranty service, please call **919-573-7863**. THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES. Philips' liability is limited to repair or, at its sole option, replacement of the product. Incidental, special and consequential damages are disclaimed where permitted by law. This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

For customer support or to obtain warranty service, please call **919-573-7854** in North America or visit **www.philips.com/support** for global support.

7 Technical data

Mechanical Specifications

Size

Docking Station:

- Overall Length: 92.3mm
- Overall Width: 94.2mm
- Overall Thickness: 28.5mm

Remote Control :

- Overall Length: 243.5mm
- Overall Width: 52mm
- Overall Thickness: 30mm

Power

- Dock: 12v DC
- Remote: 3AA Alkaline Batteries
- Approximate Battery Life 4 months

Screen

- Type: Dot Matrix
- Size: 96 pixels by 64 pixels
- Lighting: Backlighting
- Colour: black/white

Connectors

- IPod™ Connector
- SVideo Jack
- Audio in jack
- DC Power Jack.

Communication and Interface Transmission Medium

IR AND RF Carrier Frequency

- IR:36kHz +/- 2%,
- RF:2.4GHz

General Operating Voltage

- (min.) typical 3.3V to 4.8V

Ambient Operating Temperature Range

- +5 C to 45 C

Certifications

- FCC
- IC
- UL/CUL
- CE
- Swiss Mark
- C-Tick

8 Frequently asked questions

Here you will find the most frequently asked questions and answers about your universal remote and dock for iPod™. For further help, visit www.philips.com/support or call **919-573-7854** in North America.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when you use your universal remote and dock for iPod™, check the following points before you contact Philips. If the problem remains unsolved, go to the Philips website www.philips.com/support or contact Philips at **919-573-7854** in North America. When you contact Philips, make sure that your universal remote and dock for iPod™ is nearby and the model number and serial number are available.

What should I do if “Cannot connect to iPod™ DOCKING CRADLE” appears on the screen?

This means the docking cradle is not configured to connect to the remote. Reconnect the remote to the docking cradle.

What should I do if “No iPod™ DOCKING CRADLE found” appears on the screen?

This means the docking cradle is not within range of the remote. Move closer, up to 3 feet (1m) of the docking cradle. Press **OK** to try again.

What if I cannot find my brand in the list of the selected devices?

The brands are divided by device and you could be looking in the wrong device.

- STB contains the different set-top boxes for Satellite and DVB-T
- AUDIO SET contains the tuner-amplifier combination and CD or DVD in some cases
- HTS contains the home theater systems
- PVR contain personal video recorders

and hard disc recorders

- DMR contains Digital Media receivers
- TV-VCR, TV-DVD, DVD-VCR DVD-HDD contain combination devices
- GAME contains the DVD playback functions of the game consoles e.g. Xbox and Play Station.

Not all brands are available in the database. If your brand is not in the list, select “Not in list” and perform a full database search. The remote will test all codes that are available. This can take up to 25 minutes.

How do I quit the installation wizard?

To quit the installation wizard, press the IPOD™ LAUNCH key.

What do I do if the “No Connection” icon blinks in the upper right-hand corner of the screen?

This could mean:

- The dock is disconnected. Make sure the power adapter is connected to a live electrical outlet and that the cables are connected properly.
- The remote is too far from the docking cradle to set up a connection. The remote should be no farther than a maximum distance of 130 ft (40m) from the docking cradle. Obstructions in the path from the remote to the docking cradle can reduce this distance. Move the remote closer to the docking cradle. Another radiant device, e.g. a microwave oven, is positioned too close to the docking cradle and is interfering with the signals of the remote. Turn off the devices placed near the docking cradle that could be causing the interference and try connecting again.

What should I do if the universal remote for iPod™ is not powered?

Make sure the power adapter is connected to a live electrical outlet and that the cables are connected properly. Your universal remote for

iPod™ could be in standby mode. It may take some time for start-up after standby mode. Ensure that 3 fresh AA batteries are installed in the remote.

What should I do if one or more keys are not working correctly?

This usually means the specific function is not available on the original remote control. Keep in mind that your universal remote for iPod™ only has hard keys, so only the hard keys on the remote that have a function in the device will work. It may also mean that the code behind the key is defective. You can fix keys from your original remote control. Some keys have device specific functions.

What should I do if the Volume keys are not working properly?

This means the default source device for your device is not installed. After adding devices, the SJM3152 automatically copies the Volume keys and Mute key, as follows:

- Video devices, like DVD, DVDR, VCR and Satellite box, use the Volume keys of the TV.
- Audio devices, like CD, DMR and Tuner, use the Volume keys of the Amplifier or Receiver. If you did not install the source device, the Volume keys and the Mute key will not work. You can choose to install the source device on your remote.

What do I do if I cannot see all the music available on my iTunes on my universal remote for iPod™ screen?

Only music that is available in the library of your iPod™ is shown on the remote. Save the music available on your iTunes library in the library of your selected iPod™.

What do I do if I cannot wake-up the universal remote for iPod™?

This means the battery level is too low. Take out the batteries and insert new batteries.

Inhaltsverzeichnis

1. Wichtig	27	6. Garantie und Kundendienst	45
2. Universalfernbedienung und Dockingstation für iPod™	29	7. Technische Daten	46
2.1 Verpackungsinhalt	30	8. Häufig gestellte Fragen (FAQ)	47
2.2 Zusätzlich benötigt	30		
2.3 Universalfernbedienung und Dockingstation für iPod™ – Übersicht	31		
2.4 Hauptmenü – Übersicht	31		
3. Erste Schritte	32		
3.1 Vorbereiten	32		
3.2 Anschließen	32		
3.3 Installieren	33		
4. Verwenden der Universalfernbedienung und Dockingstation für iPod™	35		
4.1 Verwenden der Universalfernbedienung für iPod™ als Steuerung für Ihren iPod™	35		
4.2 Suchen und Wiedergeben von Musik von Ihrem iPod™	35		
4.3 Verwenden der Universalfernbedienung für iPod™ als Universalfernbedienung	37		
4.4 Starten einer Aktivität	38		
4.5 Wechseln der Batterien	38		
5. Weitere Verwendungen der Universalfernbedienung und Dockingstation für iPod™	39		
5.1 Hinzufügen von Geräten	39		
5.2 Löschen von Geräten	40		
5.3 Lernen von Tastencodes	40		
5.4 Hinzufügen von Funktionen	41		
5.5 Hinzufügen von Aktivitäten	41		
5.6 Löschen von Aktivitäten	42		
5.7 Funkeinstellungen	42		
5.8 Ändern der Sprache	43		
5.9 Kopieren der Lautstärketaste	43		
5.10 Ändern der Displayabschaltzeit	44		
5.11 Vollständiges Zurücksetzen	44		

1 Wichtig

Nehmen Sie sich vor Verwendung der Universalfernbedienung und Dockingstation für iPod™ die Zeit, dieses Benutzerhandbuch zu lesen. Es enthält wichtige Informationen und Hinweise zum Betrieb der Universalfernbedienung und Dockingstation für iPod™.

© 2008 Koninklijke Philips Electronics N.V.
Alle Rechte vorbehalten. Die Vervielfältigung als Ganzes oder in Teilen ohne schriftliche Genehmigung des Urheberrechtsinhabers ist verboten. Die Marken sind Eigentum von Koninklijke Philips Electronics N.V. oder der jeweiligen Inhaber.

FCC-Konformitätserklärung

Dieses Gerät entspricht den FCC-Vorschriften, Abschnitt 15. Der Betrieb unterliegt den folgenden zwei Bedingungen:

- 1 Dieses Gerät darf keine nachteiligen Störungen verursachen, und
- 2 dieses Gerät muss alle empfangenen Störungen annehmen, einschließlich solcher Störungen, die einen unerwünschten Betrieb verursachen.



Hinweis

Dieses Gerät wurde getestet und erfüllt die Bestimmungen für Digitalgeräte der Klasse B gemäß Abschnitt 15 der FCC-Vorschriften. Diese Bestimmungen sehen einen angemessenen Schutz vor Störungen und Interferenzen bei der Installation in Wohnanlagen vor. Dieses Gerät erzeugt und nutzt Hochfrequenzenergie und kann solche abstrahlen. Wenn es nicht vorschriftsmäßig installiert und verwendet wird, kann es Störungen des Radio- und Fernsehempfangs verursachen. Es kann jedoch nicht ausgeschlossen werden, dass bei einer bestimmten Installation Störungen auftreten. Wenn dieses Gerät Störungen beim Radio- oder Fernsehempfang verursacht, was durch Ein- und Ausschalten des Gerätes festgestellt werden kann, können Sie versuchen, diese Störungen durch eine oder mehrere der folgenden Maßnahmen zu beheben:

- Richten Sie die Empfangsantenne neu aus, oder verändern Sie ihre Position.

- Vergrößern Sie den Abstand zwischen dem Gerät und dem Empfänger.
- Schließen Sie das Gerät und den Empfänger an zwei unterschiedliche Stromkreise an.
- Wenden Sie sich an Ihren Händler oder einen erfahrenen Radio- und Fernsteuertechniker.

Jegliche nicht autorisierte Modifikation an diesem Gerät kann den Widerruf der Berechtigung zum Betrieb des Gerätes zur Folge haben.

ICES-Erklärung (Kanada)

This Class B digital apparatus complies with Canadian ICES-003.

PHILIPS

PHILIPS ELECTRONICS SINGAPORE PTE LTD

08-EC-SJM3152
(Report no.)

EC DECLARATION OF CONFORMITY

We, PHILIPS ELECTRONICS SINGAPORE
PTE LTD

Declare under our responsibility that the
electrical product:

PHILIPS RF remote control and docking station

SJM3152/05

SJM3152/12

SJM3152/17

SJM3152/75

to which this declaration relates is in
conformity with the following standards:

ETSI EN 300 400-2 V1.1.2:2004 &
ETSI EN 301 489-17 V1.2.1:2002 &
EN60950-1:2001+A11:2004 &
EN60950-1:2001 &
EN50371:2000 &
ETSI EN 300 328 V1.6.1:2004

following the provisions of 89/336/EEC and
93/68/EEC directive

The product is manufactured by an
organisation on ISO9000 level.

Singapore, 17th October 2008



Miguel Vidal, Director
Category Peripherals & Control

Philips Consumer Electronics, BG HC, erklärt
hiermit, dass diese Universalfernbedienung
SJM3152 den grundlegenden Anforderungen und
anderen relevanten Bestimmungen der Direktive
1999/5/EC entspricht.

Entsorgung Ihres alten Geräts:
Ihr Gerät wurde unter Verwendung
hochwertiger Materialien und Komponenten
entwickelt und hergestellt, die recycelt und
wieder verwendet werden können.



Befindet sich dieses Symbol
(durchgestrichene Abfalltonne auf
Rädern) auf dem Gerät, bedeutet dies,
dass für dieses Gerät die Europäische
Richtlinie 2002/96/EG gilt.

Informieren Sie sich über die geltenden
Bestimmungen zur getrennten Sammlung von
Elektro- und Elektronik-Altgeräten in Ihrem Land.

**Richten Sie sich bitte nach den geltenden
Bestimmungen in Ihrem Land, und
entsorgen Sie Altgeräte nicht über Ihren
Haushaltsabfall. Durch die korrekte
Entsorgung Ihrer Altgeräte werden
Umwelt und Menschen vor möglichen
negativen Folgen geschützt.**



Warnungen

- Setzen Sie das Gerät weder Regen noch Wasser aus.
- Setzen Sie das Gerät keinem direktem Sonnenlicht aus, um einen Wärmestau zu vermeiden.
- Versuchen Sie nicht, das Gerät zu demontieren oder zu reparieren.
- Setzen Sie das Gerät keinen hohen Spannungen aus.
- Achten Sie beim Batteriewechsel darauf, nicht verschiedene Batterietypen zu kombinieren oder Zink-Kohle-Batterien in die Fernbedienung einzusetzen. Dies kann undefinierte Betriebszustände zur Folge haben.

Entsorgen Sie die Verpackung vorschriftgemäß.

Wichtig



2 Universalfernbedienung und Dockingstation für iPod™

Glückwunsch zum Kauf eines Qualitätsprodukts von Philips!

Um den von Philips bereitgestellten Kundendienst in vollem Umfang nutzen zu können, registrieren Sie Ihr Produkt unter www.philips.com/welcome.


Mit der Universalfernbedienung und Dockingstation für iPod™ können Sie Ihren iPod™ fernbedienen und gleichzeitig aufladen. Außerdem können Sie damit bis zu 6 weitere AV-Geräte steuern. Philips bietet eine ganze Produktlinie an, mit der Sie Ihren iPod™ erweitern können.

Die Universalfernbedienung und Dockingstation für iPod™ ist für alle iPod™-Modelle mit Dock-Anschluss geeignet. Um eine optimale Verbindung herzustellen, verwenden Sie den mit Ihrem iPod™ mitgelieferten Dockingadapter, oder wählen Sie aus den 5 mit der Universalfernbedienung und Dockingstation für iPod™ mitgelieferten Adaptern die geeignete Ausführung aus.



Hinweis

Philips SJM3152 ist mit folgenden iPod-Modellen kompatibel:

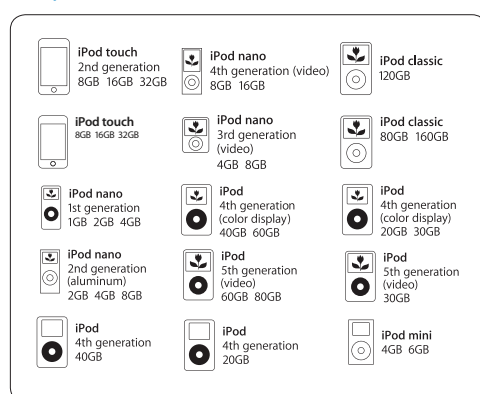

Hinweis


Stereo- und A/V-Geräte können nur über Infrarot, d. h. über eine optische Sichtverbindung gesteuert werden. Die Reichweite zum Steuern dieser Geräte ist auf 10 m begrenzt, und die Fernbedienung muss eine Sichtverbindung zum IR-Anschluss der AV-Geräte haben. Die Fernbedienung kann nur Geräte steuern, die über einen IR-Sensor verfügen.

In diesem Abschnitt finden Sie eine Übersicht der Bedienelemente und Funktionen der Universalfernbedienung und Dockingstation für iPod™.


Wichtige Produktinfos

- Steuerung von iPod™, Fernsehgerät, Videorecorder, DVD-Player, Kabel- und Satellitensystemen
- Steuerung von iPod™ und Home-Entertainment-Systemen.
- LCD-Bildschirm mit Hintergrundbeleuchtung
- Komfortable Anzeige des iPod™-Menüs, der Wiedergabelisten und Bibliotheken, auch bei schlechten Lichtverhältnissen.
- Wiedergabe von Ihrem iPod™ über Ihr Home-Entertainment-System
- Aufladen des iPod™ in der Dockingstation, an die die Stereoanlage über das mitgelieferte AV-Kabel angeschlossen ist.
- Steuern des iPod™ durch Wände, Stockwerke und Türen, Zimmerdecken und Fenster mit der 2-Weg- HF-Technologie.
- Bedienen des Menüs, der Funktionen, der Wiedergabelisten und Bibliotheken des iPod™ an praktisch jedem Ort im Haus.
- Dockingstation
- Gleichzeitiges Aufladen des iPod™ und Wiedergabe.
- Anzeigen der Videobibliothek auf einem größeren Bildschirm
- Einfacher Anschluss am Fernsehgerät mit dem S-Video-Ausgangskabel oder dem Cinch-AV-Kabel (gelber Cinch-Stecker).


2.1 Verpackungsinhalt

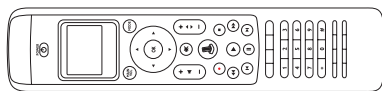

Universalfernbedienung

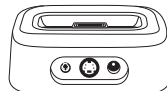

Dockingstation für iPod™

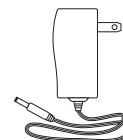

Netzgerät



5 iPod™-Dock-Adapter: *

 
- Typ 3 für mini
- Typ 4 für 4G 20 GB
- Typ 5 für 4G 40 GB
- Typ 6 für iPod™ mit Farbdisplay 20 GB/30 GB
- Typ 7 für iPod™ mit Farbdisplay 60 GB



S-Video-Kabel



3,5-mm/Cinch-AV-Kabel



CD-ROM mit
Bedienungsanleitung



 
Kurzanleitung




(3) AA-Batterien

*Verwenden Sie für neuere iPod™-Modelle den mit dem iPod™ mitgelieferten Adapter.

2.2 Zusätzlich benötigt




iPod™ mit
Dock-Anschluss

 


Stereo-Receiver

oder

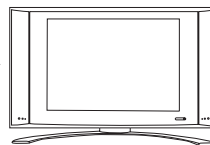


Fernsehgerät

 

Netzsteckdose

2.3 Universalfernbedienung und Dockingstation für iPod™ – Übersicht

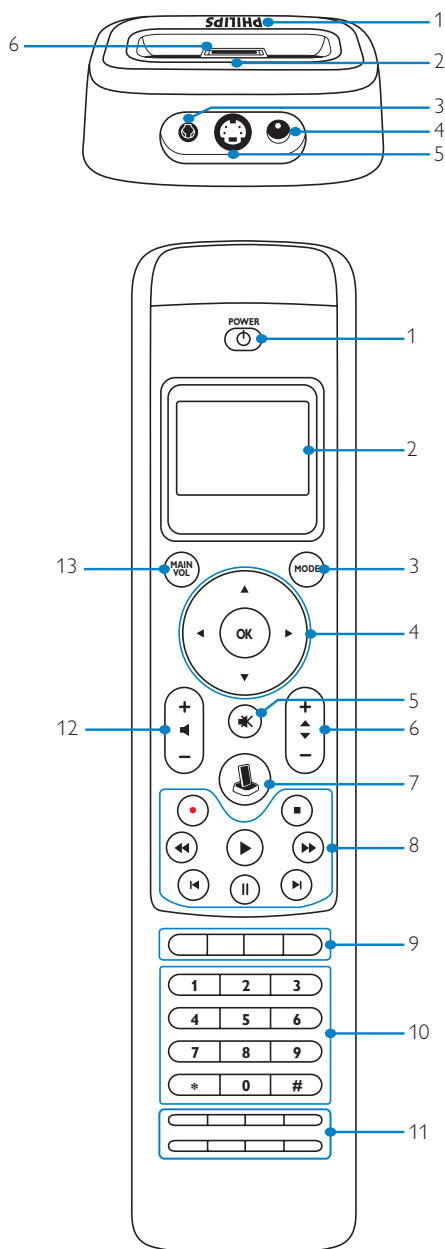


Dockingstation:

1. LED-Signalleuchte
2. Schlitz zum Entfernen des Ladeadapters
3. 3,5-mm-AV-Ausgangsbuchse
4. Gleichspannungsbuchse
5. S-Video-Ausgangsbuchse
6. iPod™-Anschluss

Fernbedienung:

1. Einschalttaste
2. LCD-Bildschirm
3. MODE-Taste
4. Cursortasten (Navigation) und OK-Taste
5. Stummschaltungstaste
6. Lautstärke erhöhen/verringern
7. iPod™-Starttaste
8. Wiedergabetasten (Wiedergabe, Aufnahme, Stopp, Rücklauf, Schnellvorlauf, Pause, Überspringen, Weiter)
9. Gerätespezifische Tasten (Programmübersicht, Live TV, HDD, Menü)
10. Zifferntasten
11. Gerätespezifische Tasten (CC/Text, Löschen, Eingabe, Zoomen/16:9, Titel, Kapitel, Untertitel, CC & Zoomen für / 27 Text & 16:9 für /10, Audio)
12. Kanal +/-
13. Lautstärketaste
14. Symbol für schwache Batterie (siehe unten)
15. Symbol für keine Verbindung (siehe unten)
16. IR-Übertragungssymbol (siehe unten)

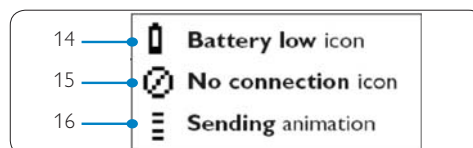

2.4 Hauptmenü – Übersicht



3 Erste Schritte

Warnung

Lesen Sie die Sicherheitshinweise in Abschnitt **1.1, Wichtig** sorgfältig durch, bevor Sie die Universalfernbedienung und Dockingstation für iPod™ anschließen.

In diesem Abschnitt wird die Erstinstallation der Universalfernbedienung und Dockingstation für iPod™ erläutert.

3.1 Vorbereiten

1. Entnehmen Sie den gesamten Verpackungsinhalt.
2. Stellen Sie die Dockingstation in der Nähe des Home-Entertainment-Systems, der Stereoanlage oder des Fernsehgeräts auf.
3. Schalten Sie alle Unterhaltungselektronikgeräte in Ihrem Haus aus.
4. Suchen Sie eine nahe gelegene, freie Netzsteckdose.
5. Entfernen Sie die Bildschirm-Schutzabdeckung von der Universalfernbedienung für iPod™.
6. Entfernen Sie die Schutzabdeckung des iPod™-Anschlusses von der Dockingstation.
7. Wählen Sie den richtigen Dock-Adapter für Ihr spezifisches iPod™-Modell aus.
8. Setzen Sie den richtigen Dock-Adapter in die Dockingstation ein.

3.2 Anschließen


Für Stereo-Wiedergabe:

1. Schließen Sie die roten und weißen Cinch-Stecker des mitgelieferten AV-Kabels an die Cinch-Audioeingangsbuchsen Ihres Home-Entertainment-Systems oder Ihrer Stereoanlage an.

Hinweis

Wenn Sie das Gerät nicht mit einem Videogerät verbinden oder es über den S-Video-Anschluss mit einem Videogerät verbinden möchten, lassen Sie den gelben Cinch-Stecker am Kabelende frei.


2. Verbinden Sie den 3,5-mm-Klinkenstecker des mitgelieferten AV-Kabels mit der mit „AV“ beschrifteten Buchse der Dockingstation.
3. Verbinden Sie ein Ende des Stromversorgungskabels mit einer Netzsteckdose und das andere Ende mit der Buchse „DC 12V“ an der Rückseite der Dockingstation.
4. Legen Sie die 3 mitgelieferten AA-Batterien in das Batteriefach der Fernbedienung ein. Beachten Sie die Polaritätssymbole im Batteriefach.

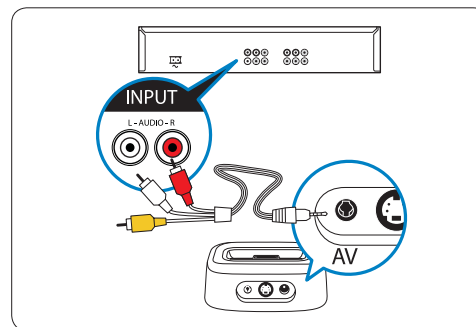


Für Videowiedergabe:

1. Verbinden Sie ein Ende des mitgelieferten S-Video-Kabels an der Videoeingangsbuchse Ihres Home-Entertainment-Systems oder Fernsehgeräts an.
2. Schließen Sie das andere Ende des mitgelieferten S-Video-Kabels an die mit „S-Video“ beschrifteten Buchse der Dockingstation an. Wenn Sie die Composite-Video-Buchsen verwenden (FBAS), verbinden Sie den gelben Cinch-Stecker mit der Cinch-Videobuchse am Fernsehgerät.
3. Verbinden Sie ein Ende des Stromversorgungskabels mit einer Netzsteckdose. Verbinden Sie das andere Ende mit der Buchse „DC 12V“ an der Rückseite der Dockingstation.
4. Legen Sie die 3 mitgelieferten AA-Batterien in das Batteriefach der Fernbedienung ein. Beachten Sie die Polaritätssymbole im Batteriefach.

S-Video-Verbindung

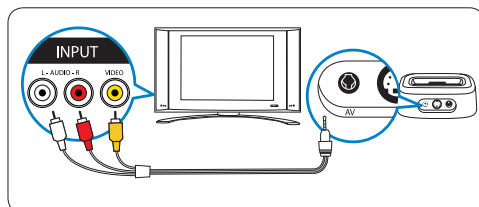

S-Video-Verbindung

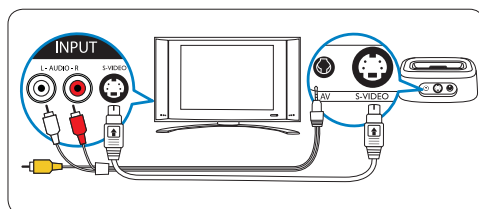

Ersteinrichtung der Universalfernbedienung für iPod™:

1. Wählen Sie mit den Cursortasten die Sprache für die Anweisungen auf der Fernbedienung aus. Drücken Sie auf OK.



Während der Paarung der Fernbedienung mit der Dockingstation muss sich die Fernbedienung in einem Abstand von 1 m zur Dockingstation befinden.

Hinweis

Während sich der iPod™ in der Dockingstation befindet, wird auf dem Bildschirm des iPod™ die nachfolgende Meldung angezeigt. Dies verweist auf eine ordnungsgemäße Funktion.



3.3 Installieren

Nach dem Einlegen der Batterien in die Fernbedienung und dem Anschließen aller entsprechenden Kabel müssen Sie eine „Paarung“ der Dockingstation mit der Fernbedienung vornehmen.

Hinweis

Es wird empfohlen, die Ersteinrichtung einschließlich der „Paarung“ auszuführen, bevor Sie den iPod™ in die Dockingstation einsetzen.

Paarung von Dockingstation und Fernbedienung bei der ersten Inbetriebnahme:

1. Drücken Sie auf der Fernbedienung die Taste **POWER**.
2. Während dieses Vorgangs muss sich die Fernbedienung in einem Abstand von 1 m zur Dockingstation befinden.
3. Befolgen Sie die Eingabeaufforderungen des Einrichtungsassistenten auf dem Bildschirm.

Der Einrichtungsassistent führt Sie durch die einzelnen Schritte der Ersteinrichtung der Universalfernbedienung für iPod™.

2. Wählen Sie „Next“ (Weiter), und drücken Sie auf OK.
3. Bestätigen Sie, dass Sie weitere Geräte hinzufügen möchten, wie z. B. ein Fernsehgerät oder einen DVD-Player, indem Sie die Option „Yes“ (Ja) auswählen. Drücken Sie auf OK. Hierdurch werden die Originalfernbedienungen der Geräte durch die Universalfernbedienung für iPod™ ersetzt.



4. Wählen Sie mit den Cursortasten den Typ und die Marke des Geräts aus, das Sie hinzufügen möchten. Drücken Sie auf OK. Die Fernbedienung durchsucht jetzt die Datenbank nach verfügbaren Codesätzen.
5. Folgen Sie den Anweisungen am Bildschirm, um die Codes zu testen. Wenn ein funktionierender Codesatz gefunden wurde, ist das Gerät korrekt installiert. Wenn das Gerät korrekt installiert ist, wird der folgende Bildschirm angezeigt:



Wenn kein funktionierender Codesatz gefunden wurde:

- Sie können eine vollständige Datenbanksuche durchführen, um einen richtigen Codesatz zu finden. Dieser Vorgang kann bis zu 25 Minuten dauern.
- Sie können Codes von der originalfernbedienung lernen.

So fügen Sie ein zusätzliches Gerät hinzu:

1. Wählen Sie die Option „Yes“ (Ja) aus, und drücken Sie auf OK.
2. Wiederholen Sie diesen Vorgang für jedes zusätzliche Gerät.

3. Wenn Sie das Hinzufügen von Geräten abgeschlossen haben, wählen Sie die Option „No“ (Nein) aus. Drücken Sie auf OK. Beenden Sie den Assistenten.

Hinweis

Anpassen können Sie die Einstellungen der Universalfernbedienung für iPod™ auch nach der Erstinstallation jederzeit über das Einrichtungs Menü. Drücken Sie die **MODE-Taste** und die **IPOD™-STARTTASTE 3 Sekunden lang gleichzeitig**.



Auf dem Bildschirm wird die Aufforderung angezeigt, die beiden Tasten 3 Sekunden lang gedrückt zu halten, um den Einrichtungsmodus aufzurufen.



4. Verwenden der Universalfernbedienung und Dockingstation für iPod™

Lernen Sie die Bedienung der Universalfernbedienung und Dockingstation für iPod™ kennen.

4.1 Verwenden der Universalfernbedienung für iPod™ als Steuerung für Ihren iPod™

Steuern der Menüs, Wiedergabelisten und Musik- und Videobibliotheken des iPod™.

1. Setzen Sie den richtigen Dock-Adapter für Ihr spezifisches iPod™-Modell in die Dockingstation ein.
2. Setzen Sie den iPod™ in die Dockingstation ein. Der Ladevorgang beginnt automatisch.
3. Drücken Sie die IPOD™-STARTTASTE.



Die Fernbedienung stellt eine Verbindung zum iPod™ in der Dockingstation her und zeigt die Wiedergabelisten des iPod™-Menüs an.



Hinweis

Wenn in der oberen rechten Ecke des Bildschirms das Symbol für keine Verbindung zu blinken beginnt, kann die Universalfernbedienung für iPod™ keine Verbindung zur Dockingstation für iPod™ herstellen. Zur Problembeseitigung siehe Abschnitt 8, **Häufig gestellte Fragen (FAQ)**.

4.2 Suchen und Wiedergeben von Musik von Ihrem iPod™

Das Menü der Universalfernbedienung für iPod™ ist dem Menü des iPod™ ähnlich.



Navigieren im iPod™-Modus:



1. Navigieren Sie zu „Music“, „Settings“, „Now Playing“ (Musik, Einstellungen, Sie hören). Drücken Sie auf OK, um die gewünschte Option auszuwählen.

Hinweis

Wenn der iPod™ nicht über Videofunktionen verfügt, wird die Videooption nicht auf dem Bildschirm angezeigt.

Hinweis

„Now Playing“ (Sie hören) wird nur während der Wiedergabe eines Musiktittels angezeigt.