



REMOTE CONTROL REFERENCE CARD



PROGRAMMING YOUR REMOTE TO RUN YOUR TV

Press MENU , select Settings, then Setup, then Remote, and follow the on-screen directions to program your remote to run your TV or other connected equipment. See your User Guide for more details.

DVR Instructions

PAUSING LIVE TV

Press PAUSE . Restart the action by pressing PLAY . See opposite side of this card for other DVR controls.

SEARCHING FOR A SHOW

Press MENU  on your remote. Use the black ARROW buttons to highlight SEARCH in the Quick Menu. Then press SELECT . Once you've selected a search by title, person, keyword or channel, you can highlight a show to display the program's information.

RECORDING A SHOW OR A SERIES

To record the program you're watching, press RECORD  once. To record a show from the Guide, highlight it and press RECORD  once. To record a series automatically, highlight your show in the Guide and press RECORD  twice.

WATCHING A RECORDED SHOW

Press LIST  to access the shows you've already recorded in your Playlist. (Once in your Playlist you can also access shows DIRECTV has automatically recorded for you in Showcases by pressing the GREEN  button.) Use the black ARROW buttons to highlight the show you want to watch, then press PLAY .

DELETING A RECORDED SHOW

Press LIST . Use the black ARROW buttons to find the program, then press the DASH  button twice to delete.

USING COLORED BUTTONS

    are context sensitive and change function depending on which user screen you are in. Pay close attention to the on-screen hints to learn the shortcuts. For example, in live TV, YELLOW  changes audio tracks from English to Spanish, etc., depending on the show, while in LIST , YELLOW  takes you to the To Do List, showing you which shows are set to record in the future.

Please refer to your **Quick Start Guide** or **User Guide** for complete instructions and in-depth information on your new DIRECTV® System or go to directv.com.

Equipment Controls

TV INPUT

Press to see signals from the DVD player or other equipment connected to your TV.

FORMAT

Cycles through HD resolutions and screen format options. This button only works if you have DIRECTV® HD services.

MODE SWITCH

Changes remote to control other equipment. Left position controls DIRECTV® Receiver. (Note: Other equipment must be programmed individually.)

PWR

Use with mode switch to turn DIRECTV Receiver or other equipment on/off. (Note: Turning off receiver before TV may result in gray or black screen.)

RECEIVER & TV ON/OFF

Turns both your DIRECTV Receiver and TV on/off at the same time. (Note: Remote must be programmed for your TV to use this function. Receiver still records when off.)

DVR Controls

STOP

In recorded TV, stops playback.

REPLAY

Jumps back six seconds. Hold down to jump back to the beginning.

REWIND

Press up to four times to rewind at increasing speeds.

PAUSE

Pauses current video.

DASH

Press twice to delete recorded shows from your list.

ADVANCE

Jumps ahead 30 seconds. Hold down to jump forward to the end.

PLAY

Play current video. Press and hold for slow motion.

FFWD

Press up to four times to fast-forward at increasing speeds.

RECORD

Press once to record in live TV or the Guide. Press twice to record a series.

Navigation Controls

GUIDE

Press twice to see On-Screen Program Guide.

ACTIVE

Displays the DIRECTV Active™ Channel—local weather and more.

SELECT

Selects any highlighted item.

BACK

Takes you to the previous menu screen.

MENU

Brings up the Quick Menu.

LIST

Displays recorded programs.

EXIT

Exits any menu and returns to last channel viewed.

ARROWS

To move around a menu.

INFO

Displays info for a program.

CHAN/PAGE

Change channels in live TV. Scroll a full page in the Guide.

PREV

Tunes to last channel viewed.

Interactive Controls

RED

In the Guide, jumps 12 hours back. Other functions vary.

GREEN

In the Guide, jumps 12 hours forward. Other functions vary.

BLUE

In full-screen TV, displays the Mini Guide. Other functions vary.

YELLOW

In full-screen TV, cycles through alternate audio tracks. Other functions vary.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.