



AT&T IR U-verse TV Remote Control User Guide

Installing Batteries

The remote control requires two AA size (1.5V) Alkaline batteries to work.

Tips: replace the batteries every nine months for optimum performance.

- On the back of the remote control, press the battery cover tab forward, lift and remove the battery cover.
- Insert two (2) AA-size batteries, matching the + and – symbols with the battery pictures.
- Put the battery cover back on and test the remote control by pressing the AT&T key. The AT&T key should light up to indicate that batteries are inserted properly.
- Re-pairing to TX Transmitter unit is required upon battery replacement on the remote control and vice versa. Battery placement is simple, remove the battery lid on the TX Transmitter unit and insert the coin cell battery provided in the battery slot. Next, replace battery lid on the TX Transmitter Unit.
- Refer to item 7 – RF Pairing with Transmitter on this user manual for full instruction.

Controlling Other Devices

In order to control other devices with your U-Verse TV Remote Control, you need to tell the remote control what types of devices you have. Section 1 guides you through the steps needed to do this. When you complete Section 1, the volume and channels will always work on the U-verse TV Receiver no matter what mode you are in. If you want to change this or allow the POWER key to affect multiple devices then you can also follow the steps in Section 2. If you'd like to reset any of the settings then you can go to Sections 3 and 4.

1. Programming the remote to control other devices

To use the U-verse TV remote control for your other devices, you will need to program one or more of the TV, DVD or AUX buttons at the top of the remote control. There are two ways to do this. If your device is listed in the Manufacture Code List at the end of this Manual, you can use section A. If your device is not listed, you will need to use section B.

Note: The AUX button may be programmed

to operate a VCR, Home Theater In A Box (HTIB), Receiver or Amplifier.

A. Manually

Use the following steps to program the TV, DVD or AUX mode keys:

- Power on the device you want to program
- Locate the 4-digit set-up code for the device you want to program from the Manufacture Code List in this manual. If your device is not listed you will need to use section B on "Using the Automatic Search". If there are multiple codes listed for your device, you may need to repeat steps 2 through 7 to find the correct one.
- Press and hold the appropriate mode key you want to assign to this device (TV, DVD or AUX) on the remote control
- While holding the mode key, press the OK key
- Release both the mode key and the OK key
 - All the mode keys should flash twice
 - You'll now have 10 seconds to start step 6
- Enter the appropriate 4-digit set-up code for your device (from the Manufacture Code List) by pressing the number keys (0-9) on the remote control
 - If the mode key flashes three times, then a correct code has been entered.
 - If the mode key gives a long flash, then an invalid code has been entered. Start over at step 3.
 - If all the mode keys give a long flash, then the remote control has timed-out. Start over at step 3
- Point the remote control at the programmed device and press the power key once
 - The device should turn off
 - If it does not turn off, repeat steps 2 through 6 trying each code for your brand until you find the correct code
- Repeat steps 1 through 7 to program another device.

Note: If you are interrupted while you are programming, the remote control may time-out before you complete the code set-up and you will need to start over. This is indicated by a red flash of the mode keys.

Now that your devices are programmed, you can press the appropriate mode key on the remote control to work with the selected device. To use the remote control for your U-verse TV Receiver again, press the AT&T mode key.

Combination Devices Note: If you have an integrated or combination unit, such as a TV/DVD unit, each component of the unit needs to be programmed separately. In the Manufacture Code List for these devices there will be codes for all components of the combination unit. They can be distinguished as follows:

- TV codes start with a "1"
- DVD codes start with a "2"
- AUX codes start with a "3"

B. Using the Automatic Search

You can search the remote control memory for your 4 digit manufacture device code. You will need to use this function if the code for your de-

vice is not listed in the Manufacture Code List.

- Turn on the device you wish to program
- Point the remote control at the device
- Press and hold the appropriate mode key you want to assign to this device (TV, DVD or AUX) on the remote control
- While holding the mode key, press the OK key
- Release both the mode key and the OK key
 - All the mode keys should flash twice
 - You'll now have 10 seconds to start step 6
- Enter 922 by pressing the number keys on the remote control
 - The selected mode key will flash twice indicating correct entry
- For TV or DVD modes press and release the PLAY key
 - For AUX searching only, press and release the PLAY key then press
 - 1 for VCR
 - 2 for Receiver/Tuner
 - 3 for Amplifier
 - 4 for Home Theater In A Box (HTIB)
- Check to make sure the code works by pressing the mode key, then the power button, to turn the device back on. If this does not work, start again at step 2.
- Now press the FF button multiple times until the device turns off
- Press the ENTER key (bottom right) to save the code on the remote control
- Check to make sure the code works by pressing the mode key, then the power button, to turn the device back on. If this does not work, start again at step 2.
- Now that your devices are programmed, you can press the appropriate mode key on the remote control to work with the selected device. To use the remote control for your AT&T U-verse TV Receiver again, press the AT&T mode key.

Note: If any other key is pressed except PLAY, ENTER, POWER, EXIT, REW, FF, or number keys 1 to 4, the selected mode key will give a long red flash (error message) and the remote control will return to normal operation and you will need to start over. If you are interrupted while you are programming, the remote control may time-out before you complete the code set-up and you will need to start over. This is indicated by a red flash of the mode keys.

2. Setting up your Volume, Channel and Power Options

The default for your power, volume and channel controls send the codes to the U-verse TV receiver no matter what mode you are in. Thus, in DVD mode, the volume still controls the U-verse TV receiver, etc. If you would like to change this, follow these instructions:

A. Volume Control Set-Up Options

The volume commands are always sent to the U-verse TV receiver until the TV mode key is programmed. Then the volume commands are sent to the TV from all mode keys. If you'd like the volume commands to still be sent to just one device, but that it be a different device (for example a home theater setup) then follow the instructions in Section I. If you'd like the volume commands sent to different devices depending on which mode you are in then go to Section II.

I. Volume Always Controls the same Device

- Press and hold the AT&T key on the remote control
- While holding the AT&T mode key, press the OK key
- Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode
- Enter 955 by pressing the number keys on the remote control
 - The AT&T key will flash twice indicating correct entry
- Press the mode key that you want to always receive the volume commands
 - The selected mode key will flash three times indicating successful assignment and return to normal operations

The volume commands will now go to the selected device no matter what mode you are in.

II. Volume Control Depends on Device Selected

The volume setting can also be re-configured to independently control the volume associated with each device. (e.g. In AUX mode the receiver controls the audio; In TV mode the TV controls the audio)

- Press and hold the AT&T key on the remote control
- While holding the AT&T mode key, press the OK key
- Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode
- Enter 955 by pressing the number keys on the remote control
 - The AT&T key will flash twice indicating correct entry
- Press the ENTER key
 - The AT&T key will flash three times indicating successful assignment and returns to normal operations

B. Channel Selection Set-Up Option

By default the remote control will always send channel commands to the U-verse TV receiver no matter what mode you are in. This will prevent accidental TV channel changes while in TV, DVD or AUX modes.

There are two ways you can change this: I) Have channel commands always go to a single device other than the U-verse TV receiver; II) Have channel commands go to different devices when in different modes (e.g., When in TV mode the channel commands go to the TV, when in DVD mode the channel commands go to the DVD player, etc.). See the appropriate section for each.

I. Channel Always Controls the Same Device

- Press and hold the AT&T key on the remote control
- While holding the AT&T mode key, press the OK key
- Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode
- Enter 966 by pressing the number keys on the remote control
 - The AT&T key will flash twice indicating correct entry
- Press the mode key that you wish the channel commands to always go to
 - The selected mode key will flash three times indicating success and return to normal operations

The channel commands will now go to the selected device no matter what mode you are in.

II. Channel Control Depends on Device Selected

- Press and hold the AT&T key on the remote control
- While holding the AT&T mode key, press the OK key
- Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode
- Enter 966 by pressing the number keys on the remote control
 - The AT&T key will flash twice indicating correct entry
- Press the Enter key
 - The AT&T key will flash three times indicating successful assignment and return to normal operations

If you press any key other than the mode keys or ENTER, the AT&T key will give a long red flash and the remote control will return to normal operation. Should the remote control time-out before you complete the procedure you will need to start over.

C. Power Control Set-Up Options

By default, the POWER key only powers on or places your U-verse TV receiver in stand-by mode. Once you have programmed the TV mode key, the TV and U-verse TV receiver will both be powered on/off simultaneously. You also have the option to turn on/off TV, DVD and AUX mode devices individually by pressing the applicable mode key then the POWER key.

I. To Have Multiple Devices Power Off with the Power Key

If you would like other devices to be powered on/off simultaneously with the POWER key, then follow these instructions for the additional devices (for a total of 4).

- Press and hold the AT&T key on the remote control
- While holding the AT&T mode key, press the OK key
- Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode
- Enter 977 by pressing the number keys on the remote control
 - The AT&T key will flash twice indicating correct entry
- Press the AT&T key on the remote control
 - The AT&T key will flash twice indicating correct entry
- Press the TV key on the remote control
 - The TV key will flash twice indicating correct entry
- Press each additional mode key that you wish to include such as the DVD key or AUX key
 - Each selected mode key will flash twice indicating correct entry
- Press the ENTER key to complete
 - The last mode key selected will flash three times indicating successful assignment and return to normal operations

II. Channel Always Controls the Same Device

- Press and hold the AT&T key on the remote control
- While holding the AT&T mode key, press the OK key
- Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode
- Enter 944 by pressing the number keys on the remote control
 - All the mode keys will flash twice indicating correct entry
- Press the mode key (i.e., TV, DVD or AUX) you would like to copy the codes FROM (See above)
 - The selected mode key will flash once
- Press the mode key you would like to copy the codes TO
 - The selected mode key will flash three times indicating successful reassignment and return to normal operations

If the devices that you have programmed to turn ON/OFF at the same time get out of sync so that some turn ON and others turn OFF, you will need to manually turn OFF the out of sync devices and then press the POWER key to turn them

all back ON. It is important to point the remote directly toward the devices for this to work properly.

To change the number of devices controlled by the POWER key, you must start at Step 1 and continue until all desired devices have been programmed.

3. Changing and Removing Codes

A. Mode Deactivation

To deactivate a mode key, follow these steps:

- Press and hold the mode key (TV, DVD or AUX) that you'd like to deactivate on the remote control
- Without releasing the chosen mode key, press and hold the OK key simultaneously
- Release both the mode key and the OK key
 - All the mode keys should flash twice
- Enter the appropriate 4-digit code from the list below depending on the mode you are deactivating:
 - TV: 1254
 - DVD: 2254
 - AUX: 3254
 - The mode key will flash three times indicating correct entry and return to normal operation
 - When an invalid code is entered, the selected mode key will give a long flash to indicate that you have not entered the code correctly
 - Should the remote control time-out before you complete the set-up, you will need to start over

B. Reassigning Your Mode Keys To Another Device

The TV, DVD and AUX keys are already set up to control specific devices:

TV key: TV & HDTV
DVD key: DVD
AUX key: VCR, Home Theater In A Box (HTIB), Receivers and Amplifiers

You may change these mode keys to operate another type of device. To do this, you must copy an existing mode key to the one you would like to change. For example, you have two DVD players and you'd like to use the AUX key for one of them. You would begin by programming one of the DVD players into the DVD mode key and then copy that to the AUX mode key. Then you reprogram the original DVD mode key to the other DVD player. Before beginning these steps, program the device you'd like to copy by following the steps in Section 1. Then use the steps below to copy the codes.

- Press and hold the AT&T key on the remote control
- Without releasing the AT&T key, press and hold the OK key simultaneously
- Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode
- Enter 944 by pressing the number keys on the remote control
 - All the mode keys will flash twice indicating correct entry
- Press the mode key (i.e., TV, DVD or AUX) where you want the codes TO be learned
 - The selected mode key will flash three times indicating successful reassignment and return to normal operations

Once you copy the mode key, you will have both keys with the same program code. Now reprogram the original mode key with a new code for a second device.

Note: If any other key is pressed except the mode keys the AT&T key will give a long red flash and the remote control will return to normal operation. Should the remote control time-out before you complete the procedure you will need to start over.

4. Resetting to Factory Defaults

A. Resetting the Remote Control to Factory Default Settings:

- Press and hold the AT&T key on the remote control
- Without releasing the AT&T key, press and hold the OK key
- Release both the AT&T key and the OK key
 - All four mode keys will flash twice to indicate programming mode.
- Enter programming code 900 by pressing the number keys on the remote control
 - The AT&T key will flash three times indicating you have successfully entered the code and the remote has been reset to the default settings

Note: If any other key is pressed except the number keys, the AT&T key will give a long red flash and the remote control will return to normal operation. Should the remote control time-out before you complete the procedure you will need to start over.

B. Resetting the Volume, Channel and Power Programming:

- Press and hold the AT&T key on the remote control
- Without releasing the AT&T key, press and hold the OK key
- Release both the AT&T key and the OK key
 - All four mode keys will flash twice to indicate programming mode
- Enter programming code 902 by pressing the number keys on the remote control
 - The AT&T key will flash three times indicating you have successfully entered the code to reset Volume, Channel and Power to the defaults and the remote will return to normal operation

Note: If any other key is pressed except the number keys, the AT&T key will give a long red flash and the remote control will return to normal operation. Should the remote control time-out before you complete the procedure you will need to start over.

5. Learning the remote to control other devices

In cases where devices are not listed in the Manufacture Code List in this manual or certain keys are not available, but you have the original remote control on hand, you can learn the codes from the original remote control into the desired keys of this U-verse remote control.

To learn the desired IR codes from the original remote, follow these steps:

- Get ready the original remote control to be learnt
- Press and hold the mode key (i.e. TV, DVD or AUX) where you want the codes to be learned
- Without releasing the selected mode key, press and hold the MENU key simultaneously
- Release both the mode key and the MENU key

- All the mode keys will flash twice indicating programming mode
- Enter 988 by pressing the number keys on the remote control
 - The selected mode key will flash twice indicating correct entry
- Press the key on this U-verse remote control that you want the codes to be learnt to (TV, DVD and AUX keys are mode keys and so not available for learning)
 - The selected mode key will flash twice indicating correct entry
- Point the original remote control directly opposite to this U-verse remote control
- Press and hold the key on the original remote control where the code is to be learnt
 - The original remote control transmits code to this U-verse remote control. Upon completion this U-verse remote control, selected mode key will flash three times indicating successful learning.
- Release the key on the original remote control
- Repeat steps 6-9 for learning more codes.
- Press any of the mode key (i.e. AT&T, TV, DVD or AUX) to return to normal operations
 - The selected mode key will flash three times and return to normal operations

Note: If no code is received from original remote within the 30 seconds, then all the selected mode keys will give a long red flash (error message) and this U-verse remote control will return to normal operations. You will need to start over.

If codes from original remote are poorly received, or battery is weak, or learns memory is full, then only the single selected mode key will give a long red flash (error message) and this U-verse remote control will return to normal operations. You will need to start over after replacing batteries or erasing some existing learn codes.

6. Resetting of Learning Codes

A. Resetting of Individual Learning Codes

To erase individual learn codes, follow these steps:

- Press and hold the mode key (i.e. TV, DVD or AUX) which you want to erase learn codes
- Without releasing the selected mode key, press and hold the MENU key simultaneously
 - All the mode keys will flash twice indicating programming mode
- Enter 904 by pressing the number keys on the remote control
 - The selected mode key will flash twice indicating correct entry
- Press the key that you want to erase the learn codes
 - The selected mode key will flash three times indicating successful resetting
- Repeat step 5 for erasing other learning codes
- Press any of the mode key (i.e. AT&T, TV, DVD or AUX) to return to normal operations
 - The selected mode key will flash three times and return to normal operations

Note: If the battery power is weak during resetting mode, the selected mode key will give a long flash (error message).

sage), the learn codes will not be erased and you will need to replace new batteries and start over.

B. Resetting of All Learning Codes within TV, DVD or AUX mode

To erase all learn codes in selected mode TV, DVD or AUX, follow these steps:

- Press and hold the mode key (i.e. TV, DVD or AUX) which you want to erase learn codes
- Without releasing the selected mode key, press and hold the MENU key simultaneously
 - All the mode keys will flash twice indicating programming mode
- Release both the mode key and the MENU key
 - All the mode keys will flash twice indicating programming mode
- Enter 905 by pressing the number keys on the remote control
 - The selected mode key will flash three times indicating successful erasing of all learn codes under the selected mode and the remote control will return to normal operations

Note: If the battery power is weak during resetting mode, the selected mode key will give a long flash (error message), the learn codes will not be erased and you will need to replace new batteries and start over

C. Resetting of All Learning Codes in All Modes

To erase all learn codes, follow these steps:

- Press and hold the AT&T mode key on the remote control
- Without releasing the AT&T mode key, press and hold the MENU key simultaneously
 - All the mode keys will flash twice indicating programming mode
- Release both the AT&T mode key and the MENU key
- Enter 906 by pressing the number keys on the remote control
 - The AT&T mode key will flash three times indicating successful erasing of all learn codes and the remote control will return to normal operations

Note: If the battery power is weak during resetting mode, the selected mode key will give a long flash (error message), the learn codes will not be erased and you will need to replace new batteries and start over

7. RF Pairing with Transmitter

By default this remote recognises RF signal from all similar RF transmitters. However you can set this remote control to recognize RF signal only from its dedicated transmitter by performing this function:

- Remove the battery lid from the Transmitter and get ready a sharp object (such as a pencil)
- Place the remote control near the RF transmitter
- Press and hold the AT&T key on the remote control
- Without releasing the AT&T mode key, press and hold the MENU key simultaneously
 - All the mode keys will flash twice indicating programming mode
- Release both the AT&T mode key and the MENU key
 - All the mode keys will flash twice indicating correct entry

- Press and release the OK key on the remote control to start RF pairing
- Use the sharp object to press and release the tiny Pairing key on the RF transmitter
 - The AT&T mode key will flash three times indicating successful RF pairing

Note: If the batteries are removed from the remote control, the pairing with the Transmitter will be lost, and the remote will respond to RF signals from all similar RF transmitters. You will need to pair them again.

If the battery is removed from the Transmitter, the pairing with the remote control will be lost, and the remote will not respond to any transmitter. You will need to pair the Transmitter with the remote again.

8. Backlight Control Set Up Option

By default the Backlight is set to Off. You can turn the Backlight on or off by performing this function.

- Press and hold the AT&T key on the remote control
- Without releasing the AT&T mode key, press and hold the MENU key simultaneously
- Release both the AT&T mode key and the MENU key
 - All the mode keys will flash twice indicating programming mode
- Enter 991 by pressing the number keys on the remote control
 - The AT&T mode key will flash three times indicating successful toggling the Backlight enabling/disabling control.

Note: The Backlight is turned off upon factory default settings and you will need to perform this function to turn the Backlight on again.

FCC ID:RCSTX100001

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Manufacture Code List

TV

Abex	1098
Admiral	1001, 1099
Advent	1005, 1053, 1110, 1113
Adventura	1100
Aiko	1015
Aiwa	1034
Akai	1002, 1427
Alleron	1044
Amtron	1036
Anam National	1003, 1036
AOC	1004, 1005
Apex	1111, 1119, 1163, 1256
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Benq	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383
Brokwood	1004
Candle	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036
	1073, 1097, 1100
Colortyme	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CTX	1257
Curtis Mathes	1000, 1004, 1014, 1045
	1073, 1097, 1385
CXC	1036
Cytron	1456
Daewoo	1004, 1005, 1013, 1015
	1016, 1097, 1106, 1258
	1362, 1368, 1369
	1004, 1097
Daytron	1461
DiamondVision	1000
Dimensia	1000
Dumont	1160
Durabrand	1259
Dynatech	1004
Electroband	1002
Electrohome	1002, 1003, 1004, 1018
	1021
Emerson	1004, 1011, 1013, 1025
	1028, 1031, 1033, 1036
	1044, 1045, 1080, 1097
	1101, 1102, 1107, 1382
	1383
Envision	1004
Fisher	1043, 1045, 1047, 1103
Fujitsu	1029, 1044
Funai	1036, 1044, 1384
Futurerec	1036
Gateway	1038
GE	1000, 1003, 1004, 1008
	1021, 1048, 1049, 1063
	1068, 1094, 1144, 1164
	1224, 1367, 1380, 1381
	1385, 1386
Gibraltar	1160
Goldstar	1004, 1005, 1011, 1018
	1050, 1090, 1091, 1097
	1098, 1400, 1401
	1036, 1044
Grunpy	1004
Hallmark	1384
Harley Davidson	1036
Harvard	1112
Hisense	1004, 1011, 1012, 1051
Hitachi	1052, 1084, 1085, 1086
	1087, 1102, 1225, 1384
HP	1408
Ilo	1457
IMA	1036
Infinity	1053
Janeil	1100
JBL	1053
JC Penney	1000, 1004, 1005, 1007
	1012, 1021, 1048, 1049
	1058, 1063, 1068, 1072
	1073, 1075, 1097, 1098
JCB	1002
Jensen	1004, 1232, 1285, 1314
	1376
JVC	1011, 1012, 1026, 1049
	1052, 1054, 1055, 1080
	1092, 1117, 1131, 1235
	1288, 1299
Kawasho	1002, 1004
Kenwood	1004, 1018
Kloss Novabeam	1036, 1056, 1057, 1100
KTV	1036, 1097, 1101

LG	1005, 1396, 1397, 1398
	1399, 1402, 1403, 1404
	1405
Lloyd's	1384
Loewe	1053
Logik	1001
Luxman	1004
LXI	1000, 1004, 1045, 1053
	1058, 1068, 1075
Maganvox	1260, 1302, 1321
Magnavox	1004, 1007, 1018, 1053
	1056, 1057, 1059, 1060
	1083, 1110, 1147, 1228
	1300, 1301, 1326, 1339
	1365, 1366, 1371, 1384

Magnin	1380
Majestic	1001
Marantz	1004, 1051, 1053
Media Center	1408
Megatron	1004, 1051
Memorex	1001, 1004, 1005, 1022
	1045

MGA	1004, 1005, 1018, 1021
	1047, 1061, 1062, 1380
Midland	1049, 1068, 1097, 1098

Minutz	1048
Mitsubishi	1004, 1005, 1018, 1021
	1047, 1061, 1062, 1081
	1381

Montgomery Ward	1001
Motorola	1003, 1099
MTC	1004, 1005, 1073
Multitech	1036
NAD	1004, 1058, 1075, 1085
NEC	1003, 1004, 1005
Net-Tv	1040
Olevia	1420
Nikko	1004, 1015
Norcent	1217, 1320
NTC	1015
Onwa	1036
Optimus	1085
Optonica	1064, 1099
Orion	1023, 1033, 1107, 1382
	1383

Panasonic	1003, 1010, 1049, 1053
	1096, 1123, 1152, 1231
	1289, 1292, 1295, 1303
	1304, 1305, 1306, 1385
	1380, 1385

Penney	1003, 1004, 1005, 1007
Philco	1011, 1018, 1053, 1056
	1057, 1059

Philips	1003, 1004, 1007, 1011
	1017, 1018, 1053, 1056
	1057, 1059, 1060, 1063
	1110, 1126, 1129, 1148
	1155, 1238, 1263, 1264
	1265, 1290, 1291, 1307
	1308, 1309, 1337, 1389

Philips Magnavox	1260, 1264, 1265, 1266
Pilot	1097
Pioneer	1004, 1085, 1102
Polaroid	1285, 1458
Portland	1004, 1005, 1015, 1097
Price Club	1073
Prima	1143
Prism	1049
Proscan	1000, 1008, 1068, 1108
Proton	1004, 1011
Pulsar	1160
Pulser	1004
Quasar	1003, 1039, 1049, 1096
	1165, 1166, 1385

Radio Shack	1000, 1045, 1098, 1384
Radio Shack/Realistic	1004, 1011, 1036, 1045
	1064, 1097, 1098

RCA	1000, 1003, 1004, 1005
	1008, 1018, 1049, 1065
	1066, 1067, 1068, 1069
	1070, 1071, 1082, 1102
	1104, 1106, 1108, 1115
	1151, 1162, 1167, 1168
	1268, 1269, 1270, 1271
	1310, 1355, 1359, 1361
	1370, 1373, 1379, 1380
	1381, 1385, 1386

Runco	1160
Sampo	1004, 1097, 1098, 1120
Samsung	1004, 1005, 1011, 1014
	1018, 1019, 1072, 1073
	1074, 1097, 1098, 1156
	1161, 1297, 1323, 1360
	1363, 1364

Sansui	1023, 1107, 1122, 1273
	1382, 1383, 1384
Sanyo	1045, 1062, 1095, 1103
	1380

Scotch	1004
Scott	1004, 1011, 1033, 1036
	1044

Sears	1000, 1004, 1012, 1018
	1044, 1045, 1047, 1055

Polaroid	1262, 1391, 1392, 1393
	1396, 1431, 1440
Proscan	1000
Protron	1430
Preview	1407
RCA	1143, 1196, 1241, 1242
Sampo	1038, 1243
Samsung	1019, 1171, 1172, 1173
	1174, 1175, 1197, 1198
	1199, 1200, 1245, 1246
	1325, 1327, 1352, 1354
	1443

Sceptre	1467
Scott	1428
Sharp	1138, 1176, 1177, 1214
	1244, 1247, 1248, 1348
	1350, 1415, 1416

Sony	1037, 1128, 1137, 1178
	1215, 1216, 1218, 1219
	1220, 1221, 1250, 1251
	1316, 1318, 1330, 1347
	1413

SVA	1446
Sylvania	1046, 1465
Syntax	1418
Syntax-Brilliant	1418
Tatung	1426
Toshiba	1127, 1179, 1203, 1204
	1222, 1223, 1332, 1340
	1341, 1345, 1353
	1425

Trutech	1038, 1149, 1180, 1181
Viewsonic	1182, 1183, 1184, 1185
	1186, 1187, 1188, 1189
	1190, 1205, 1206, 1441
	1435

Viore	1429, 1433, 1439
Vizio	1454
Westinghouse	1020, 1139, 1207, 1253
Zenith	1255, 1333, 1342, 1349

TV-DVD COMBO

Akai	1427, 2378
Apex	1163, 2095
Axion	1459, 2379
Bang & Olufsen	1453, 2370
Broksonic	1114, 2053
Coby	1460, 2380
Cytron	1456, 2374
DiamondVision	1461, 2382
Hitachi	1226, 2240
Ilo	1457, 2375
Initial	1457, 2381
JVC	1288, 2206
LG	1255, 2371
Mintek	1457, 2381
Panasonic	1289, 2207
Philips	1290, 1291, 1337, 2208
	2209, 2243

Polaroid	1440, 1458, 2377, 2409
RCA	1115, 1162, 1379, 2063
	2099, 2289
	1122, 2071

Sansui	1150, 1464, 2092, 2408
Sylvania	1116, 1293, 1294, 1345
Toshiba	2054, 2210, 2210, 2231
Westinghouse	1454, 2372

TV-DVD-TUNER COMBO

Audiovox	1455, 2373, 5152
----------	------------------

TV-VCR COMBO

Broksonic	1121, 1382, 1383, 3081
	3202, 3213
Daewoo	1298, 3150
Emerson	1382, 1383, 3202, 3213
GE	1164, 1380, 1381, 3090
	3201, 3203
JVC	1299, 3151
Maganvox	1302, 1321, 3154, 3181
Magnavox	1300, 1301, 3152, 3153
Magnin	1380, 3201
MGA	1380, 3201
Mitsubishi	1381, 3203
Orion	1382, 1383, 3202, 3213
Panasonic	1305, 1306, 3158, 3159
Penney	1380, 3201
Philips	1307, 1308, 3152, 3160
Quasar	1165, 1166, 3091, 3092
RCA	1167, 1168, 1310, 1380
	1381, 3093, 3094, 3162
	3201, 3203

Samsung	1161, 3089
Sansui	1382, 1383, 3202, 3213
Sanyo	1380, 3201
Sharp	1311, 1312, 3163, 3164
Sylvania	1145, 3095
Toshiba	1006, 1006, 1267, 1313
	1315, 1319, 3096, 3165
	3166, 3167, 3168, 3182
	1118, 1382, 1383, 3097
	3202, 3213

TV-DVD-VCR COMBO

Magnavox	1339, 2241, 3183,
Panasonic	1123, 1152, 2075, 2076

RCA	3086, 3087
Samsung	1151, 2077, 3106
Sharp	1297, 2214, 3148
	1153, 1378, 2086, 2292
	3100, 3200
Sylvania	1027, 1124, 1296, 2064
	2078, 2213, 3088, 3105
	3147
Toshiba	1154, 1158, 1338, 2093
	2094, 2094, 3098, 3099
	3149

TV-VCR-TUNER COMBO

Panasonic	1303, 1303, 1304, 3110
	3155, 3156, 3157, 5109
	5111
Philips	1309, 3161, 5112

TV-VCR-DVD-TUNER COMBO

Panasonic	1292, 1295, 2211, 2212
	3145, 3146, 5107, 5108

TV-RECEVIER

Philips	1390, 5138
Polaroid	1393, 5141

DVD

Aiwa	2026, 2131
Akai	2378
Amphon MediaWorks	2342
AMW	2342
Apex	2001, 2056, 2057, 2061
	2095, 2098, 2229, 2250
	2316, 2322, 2330
Apex Digital	2261, 2262, 2263, 2266
	2269, 2291

Apple	2383
Arggo	2325
Astar	2354
Audiovox	2132, 2373, 2388
Axion	2379
Bang & Olufsen	2324, 2370
Blaupunkt	2136, 2322
BOSE	2215
BOSE	2122, 2130, 2215
BOSS	2336
Broksonic	2053, 2072, 2284
CambridgeSoundWorks	2395
Cinevision	2152, 2195
Clarion	2100
Classic	2101, 2391
Coby	2380, 2387
Curtis	2387
CyberHome	2083, 2325
Cytron	2374
Daewoo	2058, 2062, 2137, 2138
	2190

Denon	2040, 2110, 2133, 2216
	2247, 2253, 2317
	2344

Desay	2382
DiamondVision	2321
Disney	2321
Durabrand	2326
Eclipse	2335
Emerson	2002, 2059, 2073, 2321
	2327, 2392
ESA	2327, 2394
Fisher	2112, 2134, 2255
Funai	2002, 2321, 2327
Gateway	2346
GE	2041, 2079, 2118, 2261
	2272, 2319, 2322,

Go Video	2046, 2124, 2127, 2129
	2230, 2239, 2249, 2346
	2114, 2390
GPX	2322
Greenhill	2320
Grundig	2320
Harman Kardon	2125
Hitachi	2000, 2027, 2126, 2173
	2240

Gateway	2346
GE	2041, 2079, 2118, 2261 2272, 2319, 2322,