


















1. What's in the carton
2. 包装内的物品清单

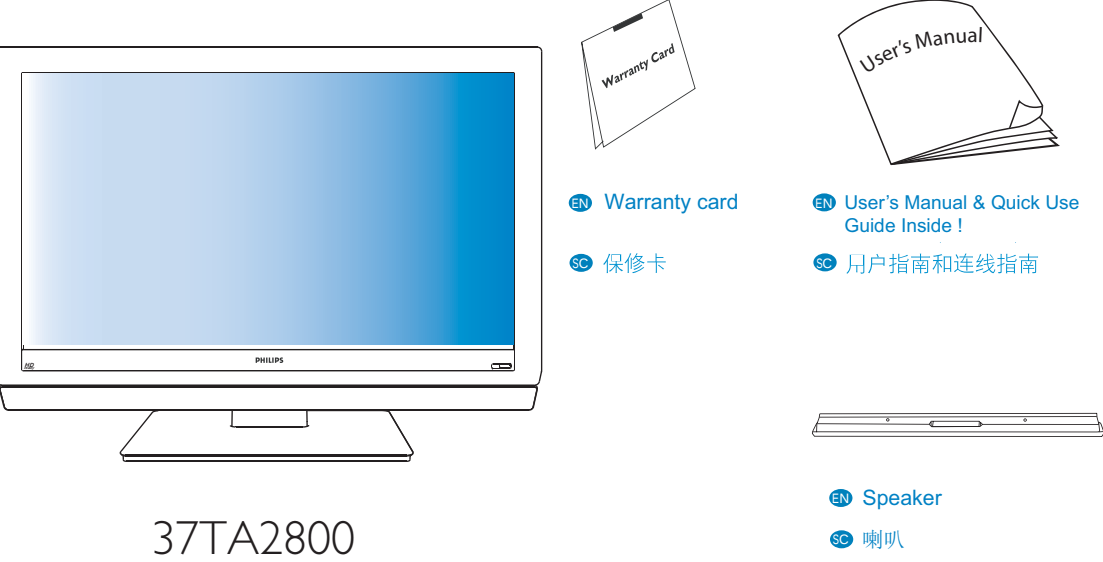

Box 1 / 包装盒1




Box 2 / 包装盒2

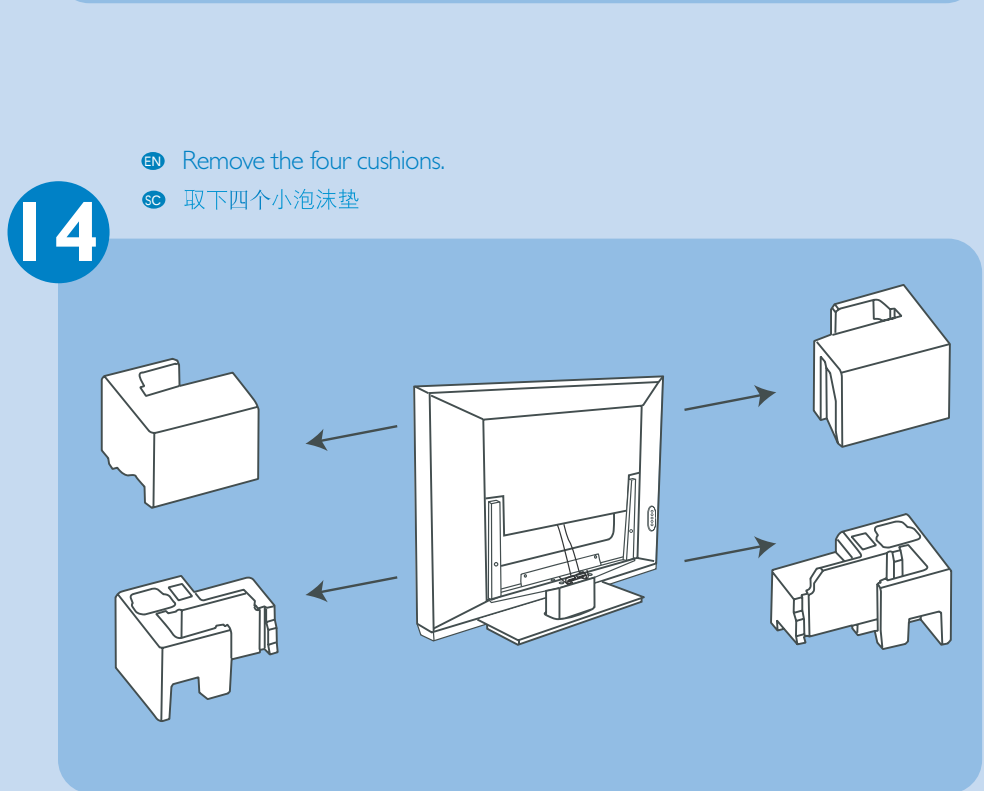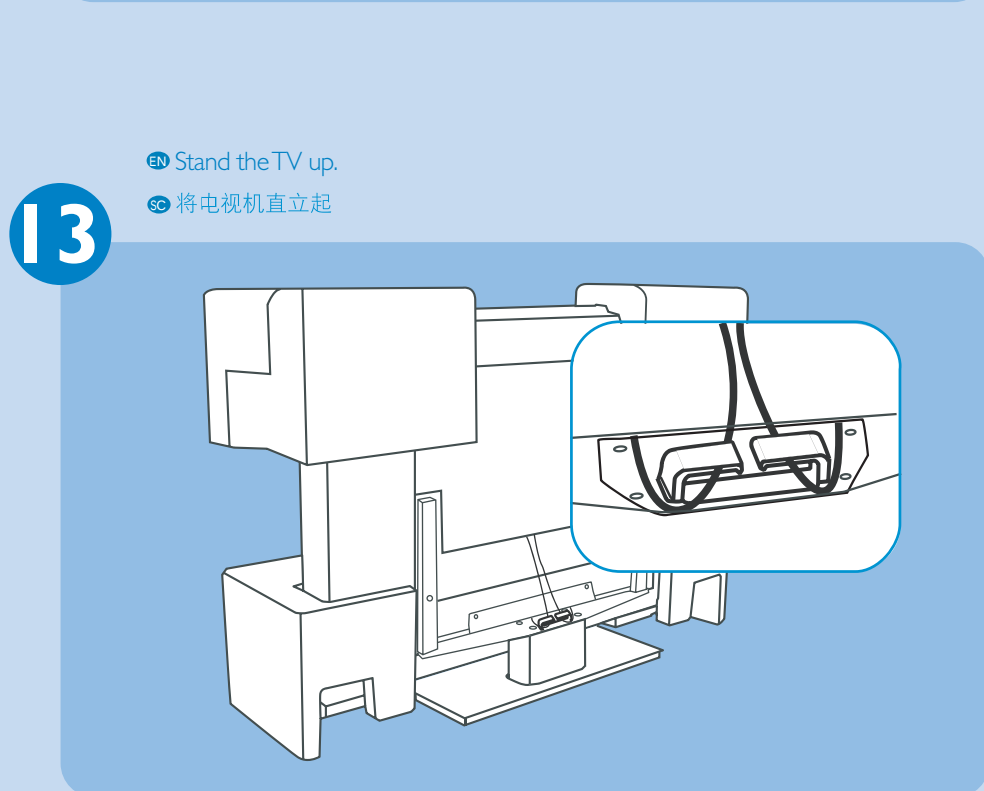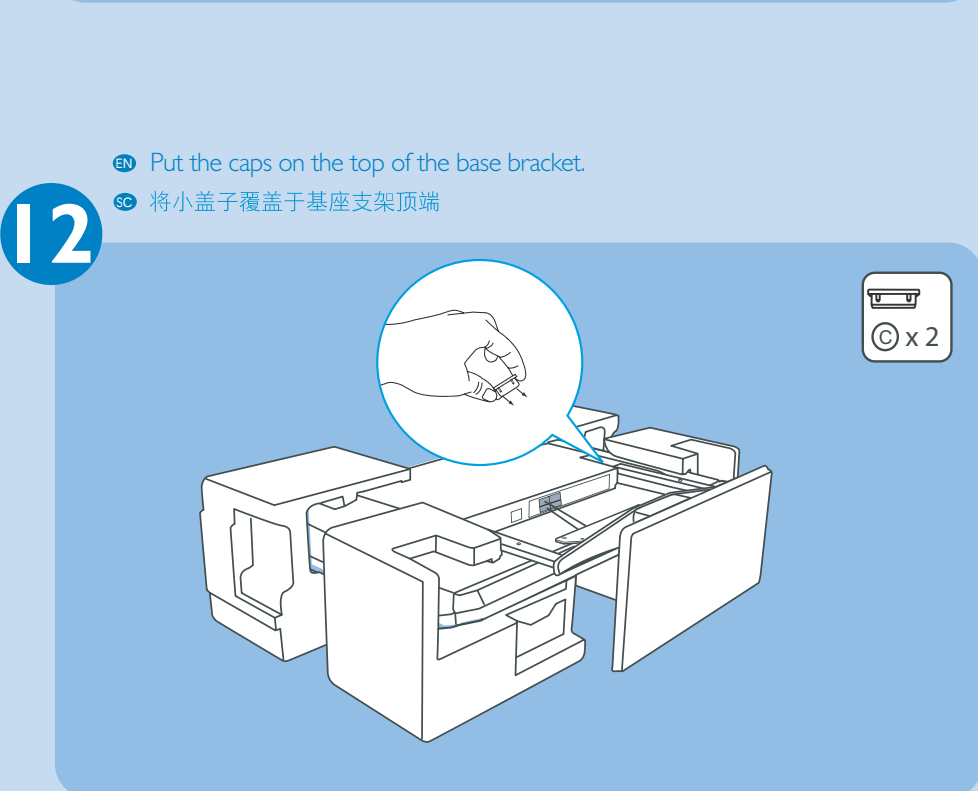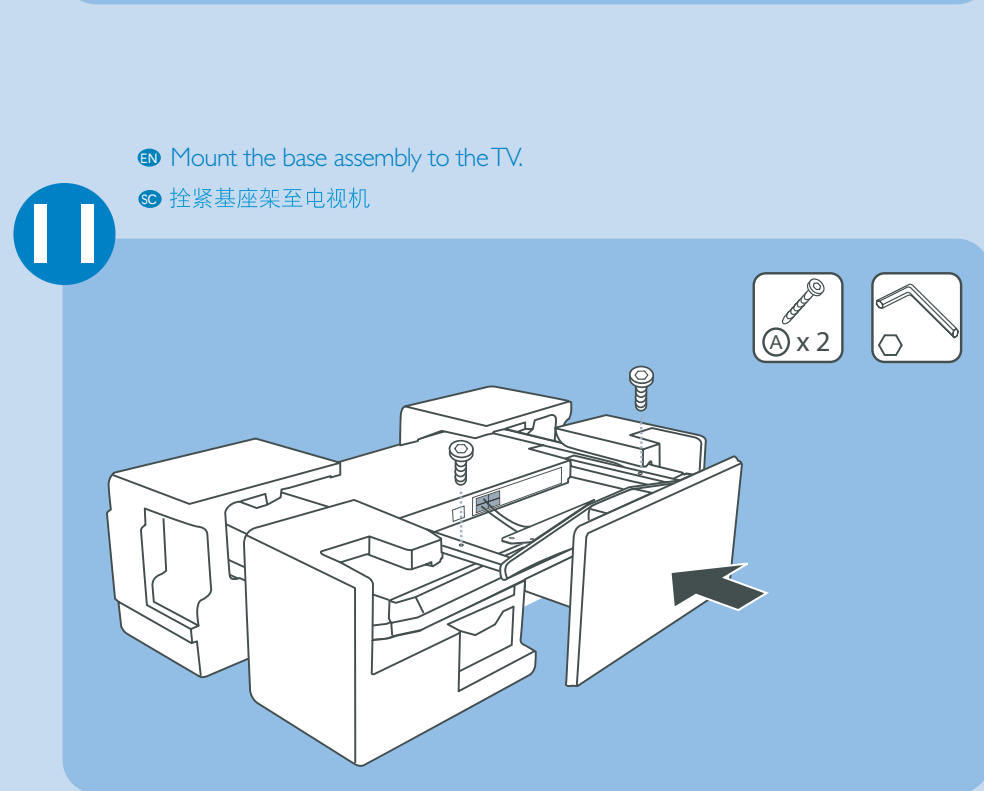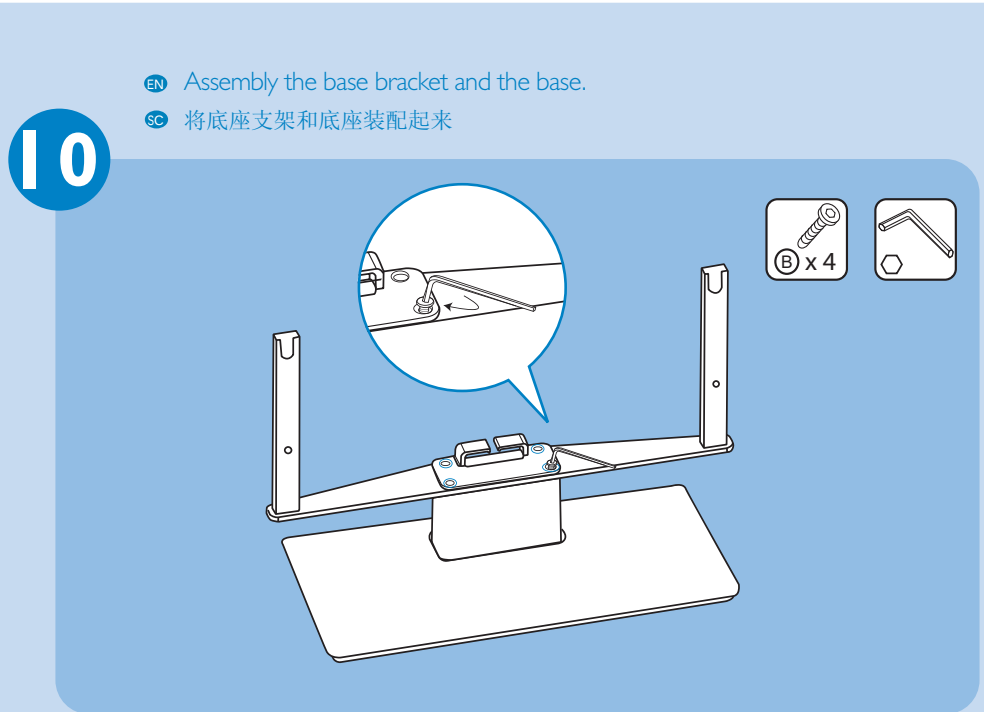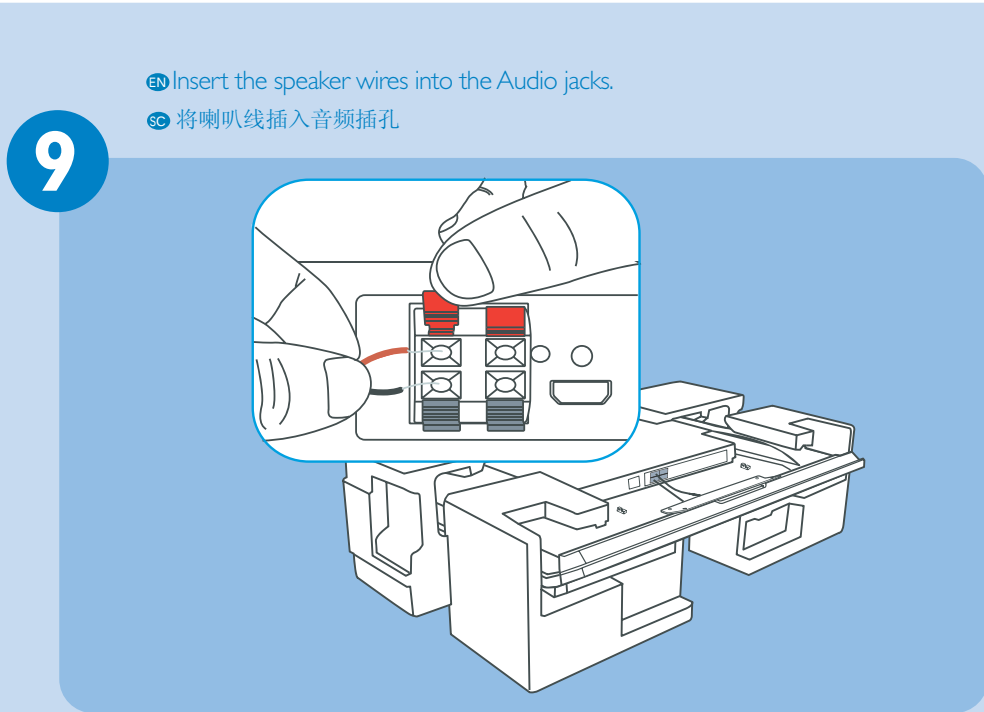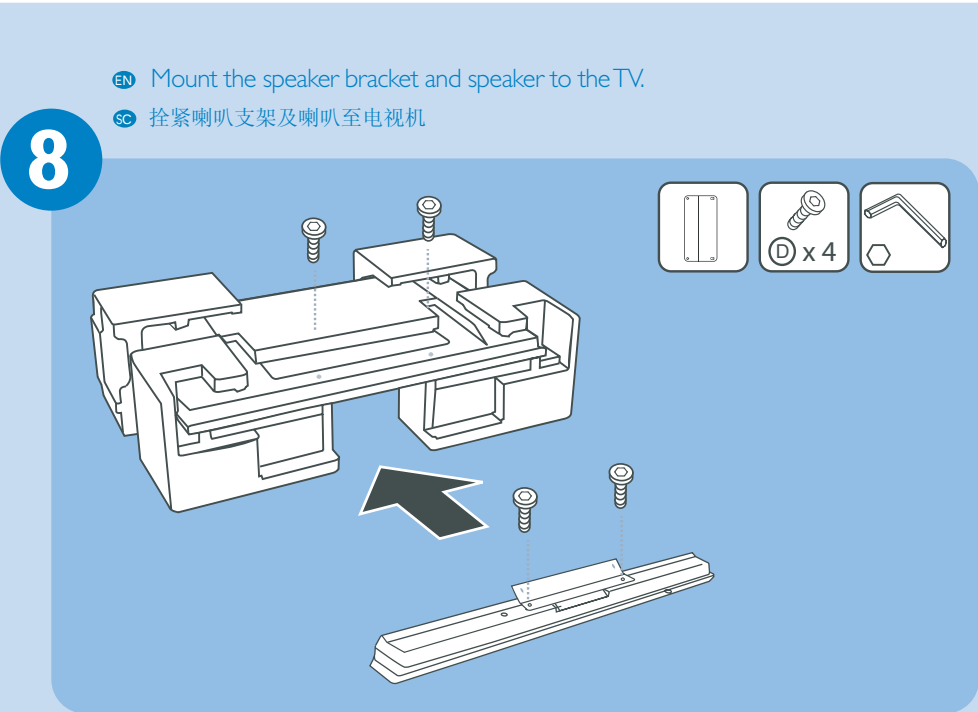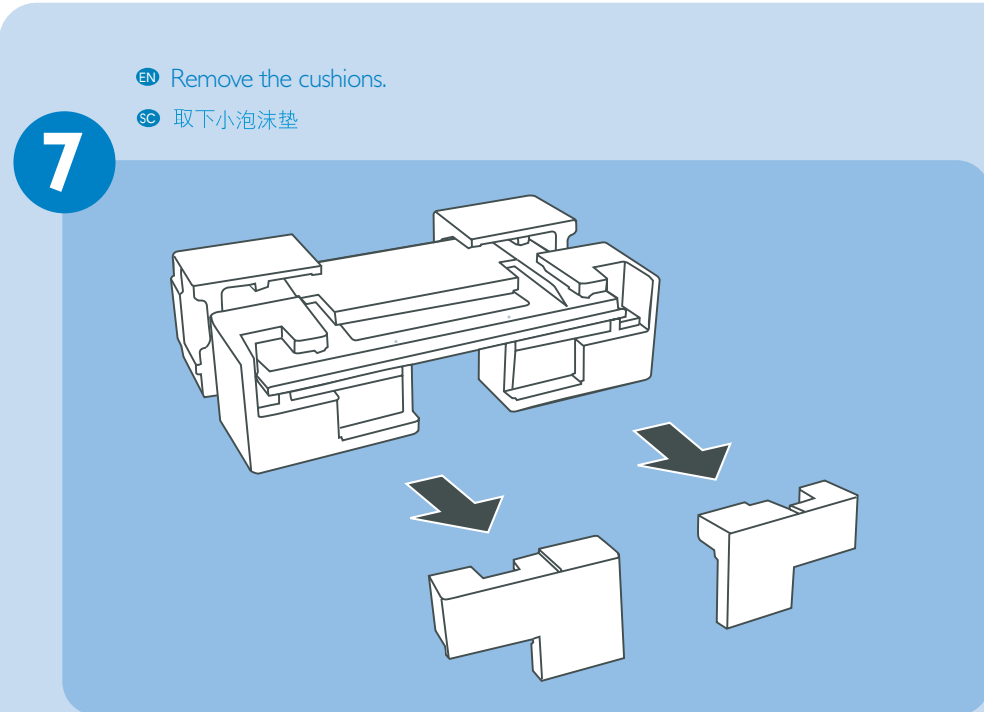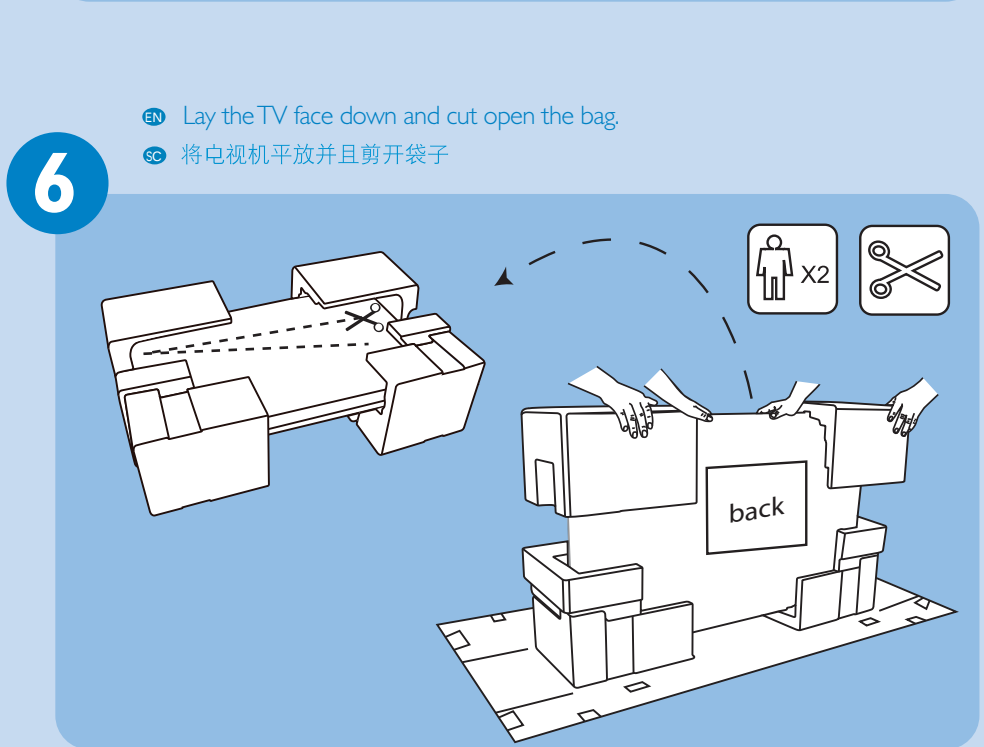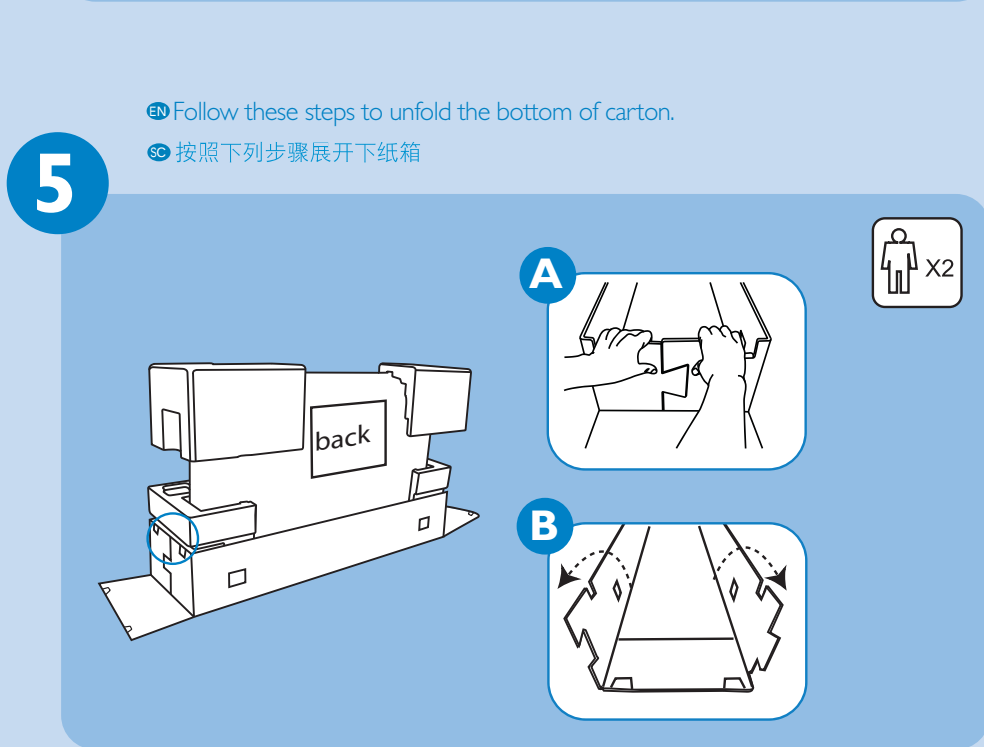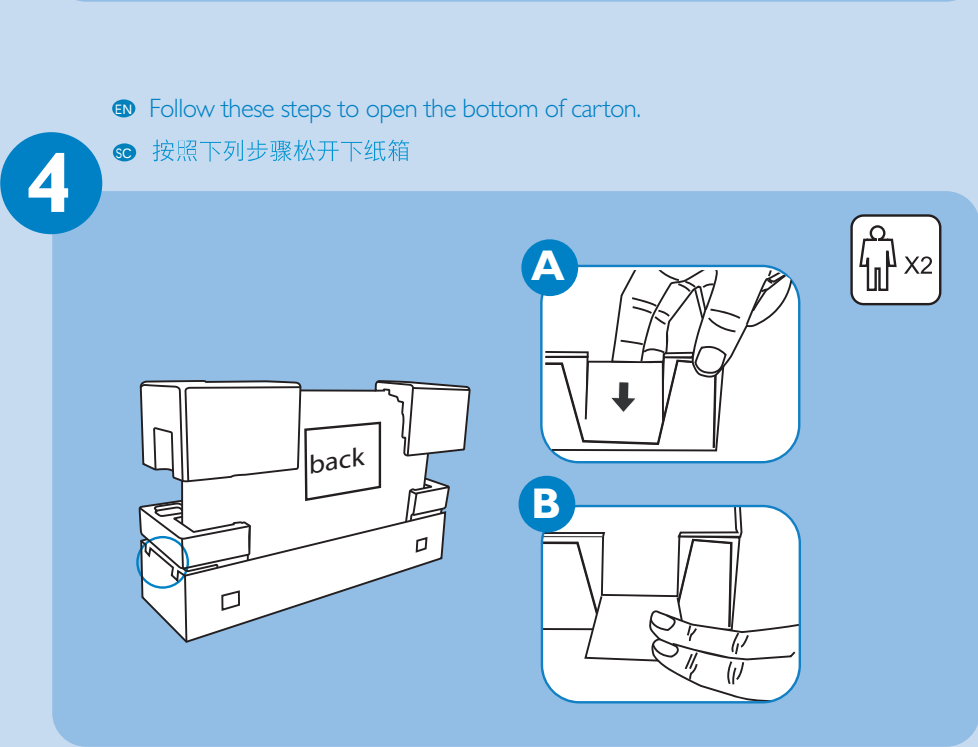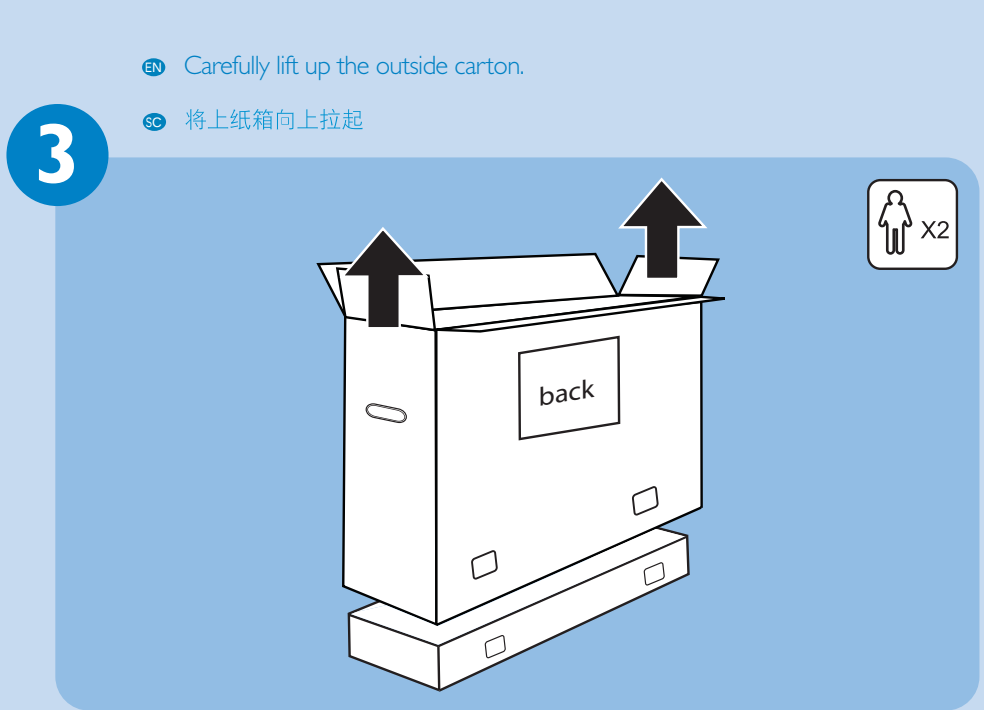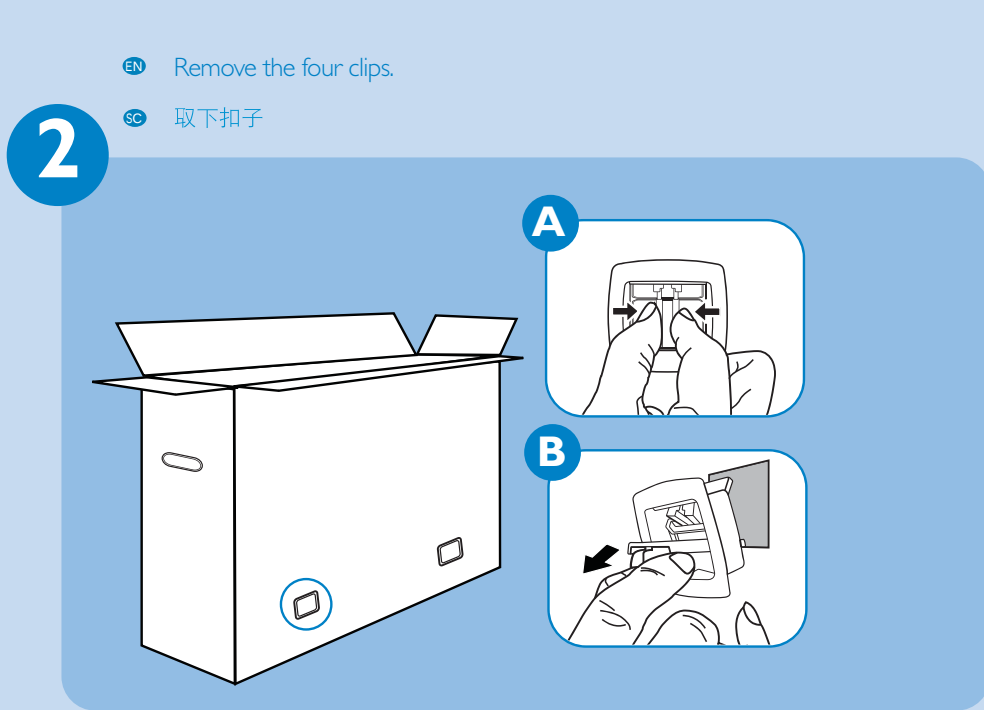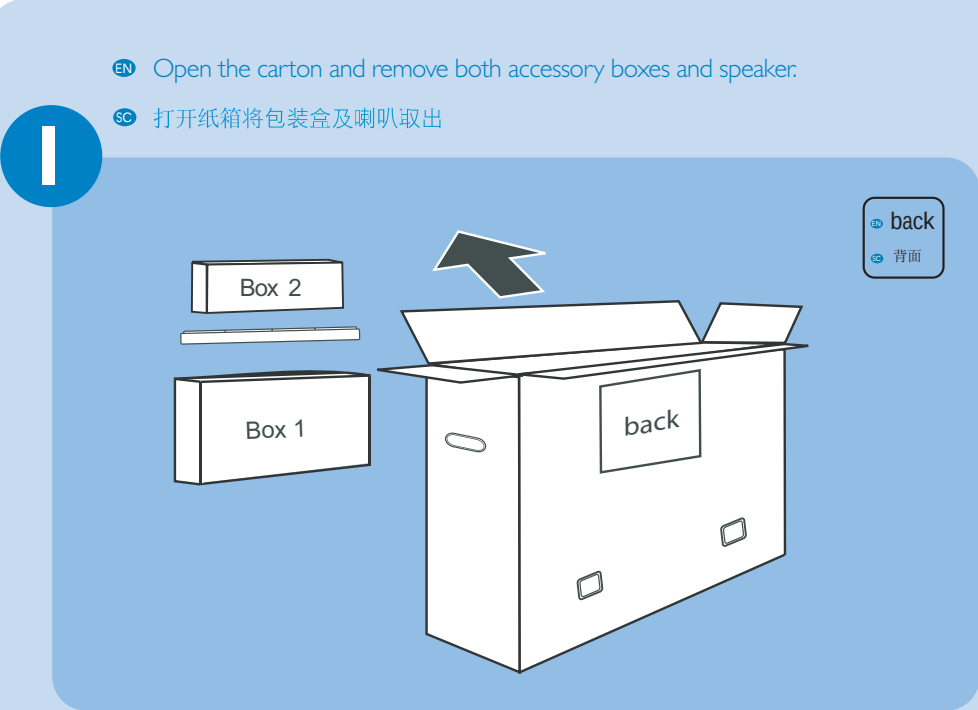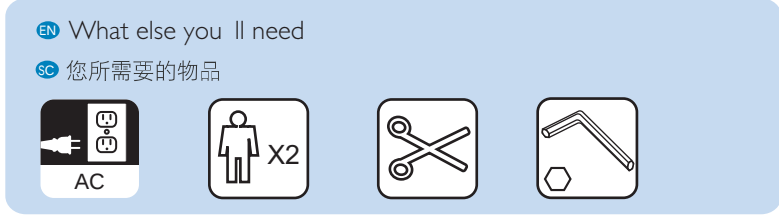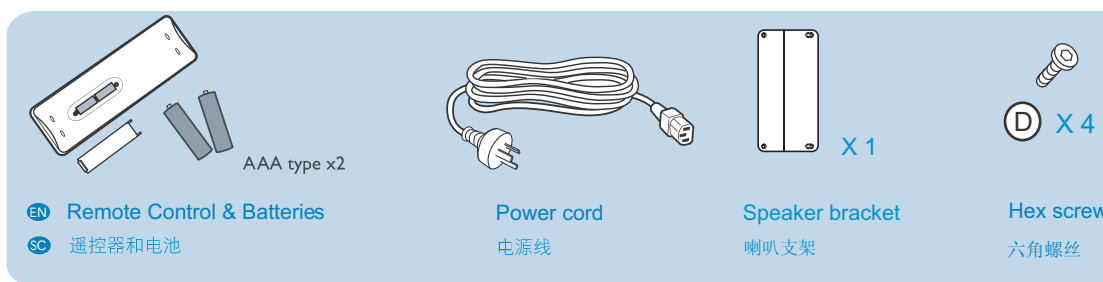


15

- 15 Place the batteries in the remote control
将电池放入遥控器中


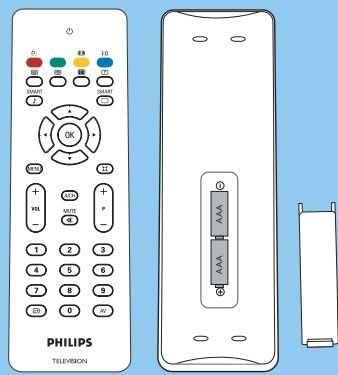


16

- 16 Switch the TV on
打开电视机

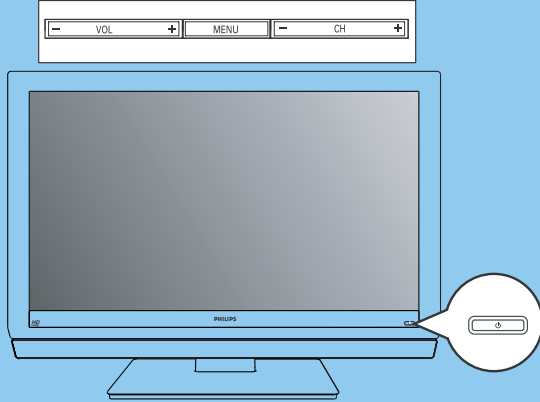

- 16 Rear and side connector
后面和侧面的连接插头

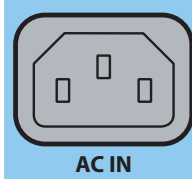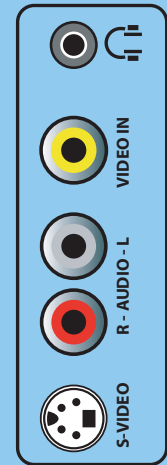


AC IN



SPEAKER




HDMI

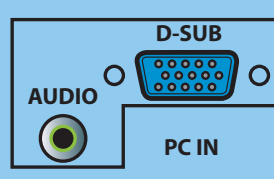


AUDIO

PC IN

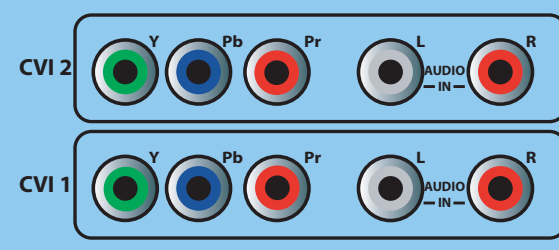

CVI 2

CVI 1

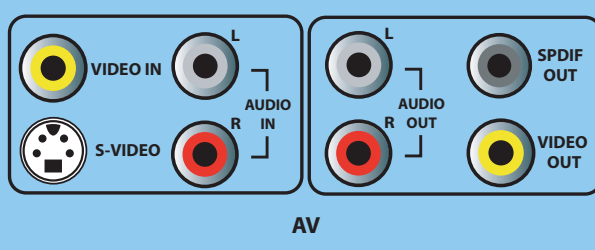


AV



75Ω

Auto Store /自动搜寻

- 16 Immediately after unpacking and plugging in your new television, run the auto store function to set up the TV for the antenna or cable channels available in your area. If you do not run the auto store function to set up the channels, your television may not operate properly. (See user's manual page 7.)
- 16 在打开包装并连通这台新电视的电源后，立即进行自动搜寻功能设置电视，使其记忆您所在的地区可用的天线或有线电视频道。如果不进行自动搜寻功能设置频道，电视可能无法正常工作。（参见用户手册第7页）

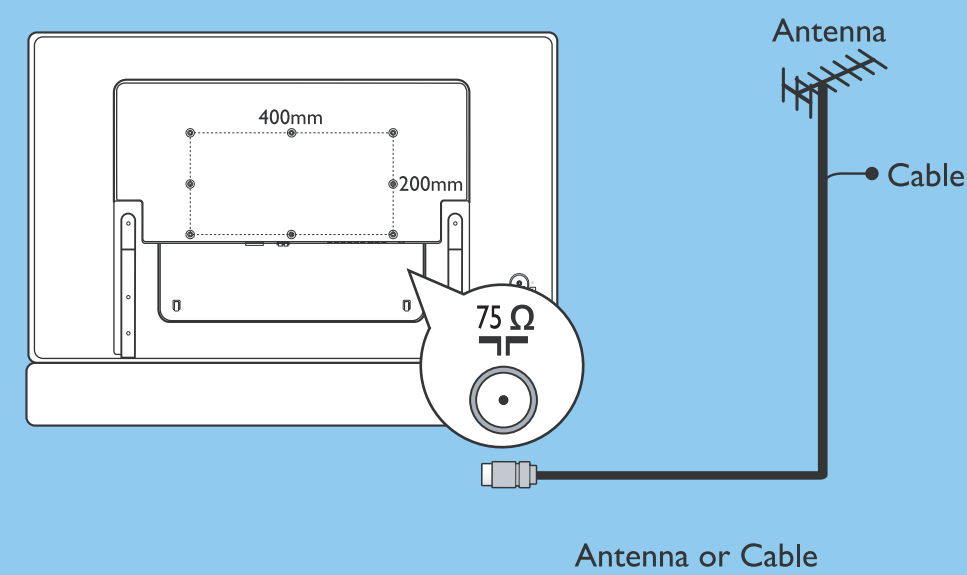

Welcome 欢迎

Read me 阅读我



Printed in China

www.philips.com

Specifications are subject to change without notice

Z41T005B13 1A