



© 2017 Koninklijke Philips N.V.
All rights reserved
HD2178_UM_AUS_v2.0



1 Your electric pressure cooker

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

2 Important

Read this safety leaflet carefully before you use the electric pressure cooker and save it for future reference.

Danger



























The appliance must not be immersed.

Warning

Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.

The appliance is intended to be used in household or similar applications such as:

- staff kitchen areas in shops, offices, and other residential type environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;

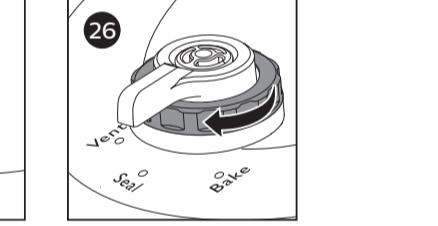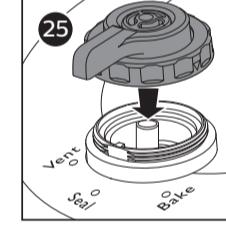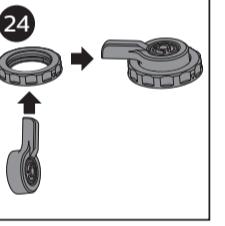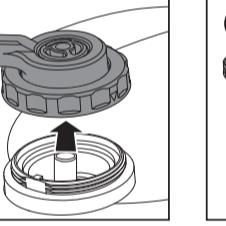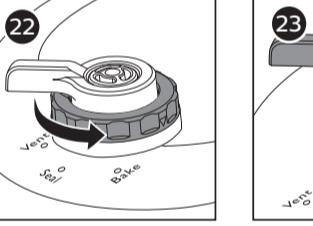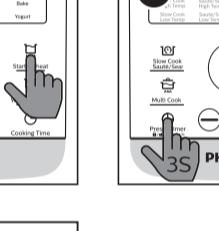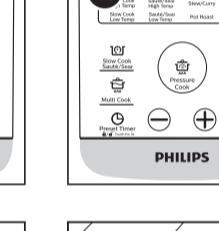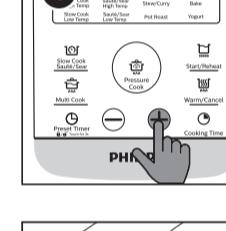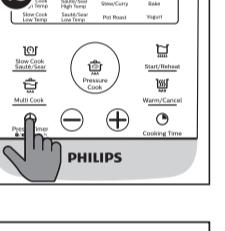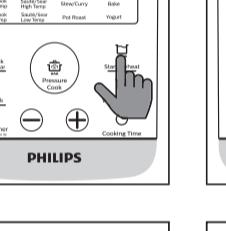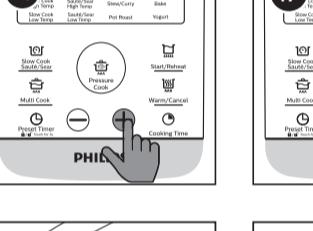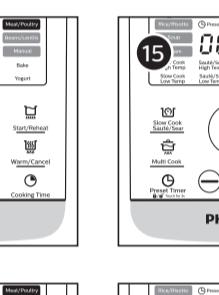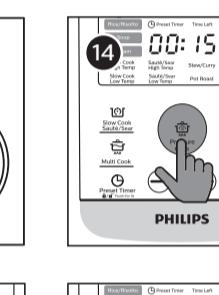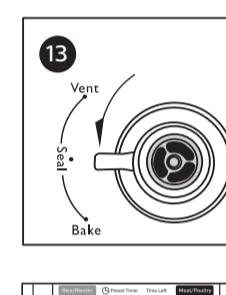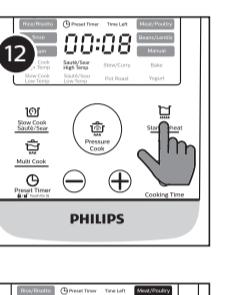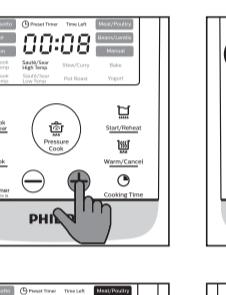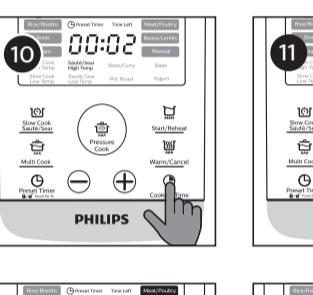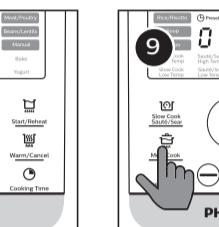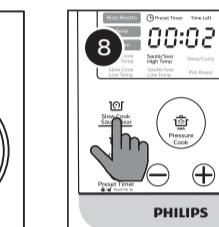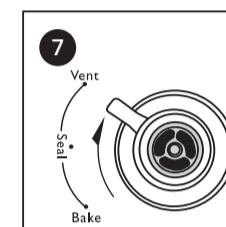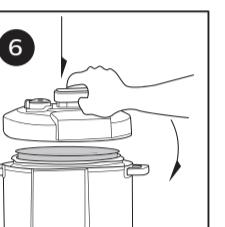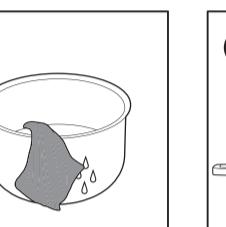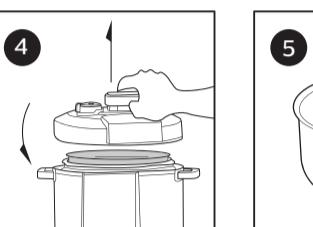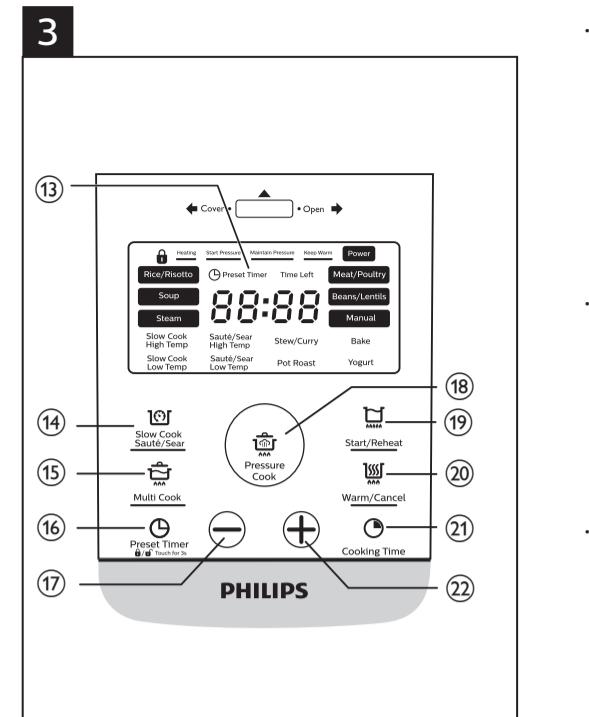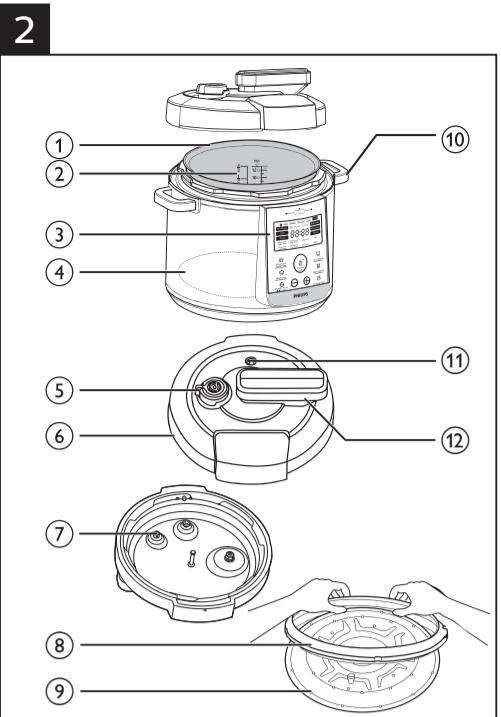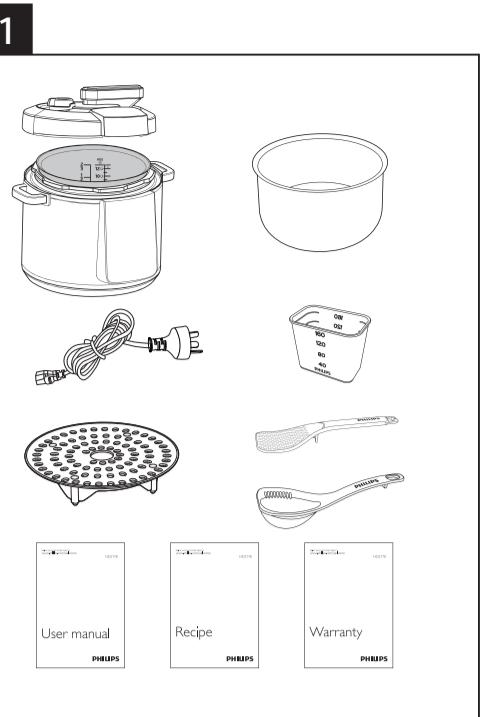

bed and breakfast type environments.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WARNING: Always follow the instructions and use the appliance properly to avoid potential injury.

WARNING: Make sure to avoid spillage on the power connector to avoid a potential hazard.

Surface of the heating element is subject to residual heat after use.

Use clean and soft cloth to clean the surfaces in contact with food.

Only connect the appliance to a grounded power outlet. Always make sure that the plug is inserted firmly into the power outlet.

Do not expose the appliance to direct sunlight.

To avoid scratches, it is not recommended to cook ingredients

persons in order to avoid a hazard.

The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

The ducts in the pressure regulator allowing the escape of steam should be checked regularly to ensure that they are not blocked. Refer to: Assembling and disassembling the pressure regulator.

WARNING RISK OF SCALDING: The container must not be opened until the pressure has decreased sufficiently. Cleaning and user maintenance shall not be made by children.

Do not use the appliance if the plug, the power cord, the inner pot, the sealing ring, or the main body is damaged.

Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.

Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet.

Always put the inner pot in the appliance before you put the plug in the power outlet.

Do not plug in the appliance or turn the control knob with wet hands.

Make sure the power socket is clean and dry before you plug in the appliance.

Do not use the appliance if too much air or steam is leaking from under the top lid.

WARNING RISK OF SCALDING: When cooking soup or viscous liquid, do not release pressure by turning the pressure regulator to the steam vent position, otherwise liquid might spurt from the pressure regulator valve. Wait until the pressure is naturally released and the floating valve has dropped to open the top lid.

Caution

Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

Do not lift and move the appliance while it is operating.

Do not exceed the maximum water level indicated in the inner pot to prevent overflow.

Do not place the cooking utensils inside the pot while cooking.

Only use the cooking utensils provided.

Avoid using sharp utensils.

To avoid scratches, it is not recommended to cook ingredients

with crustaceans and shellfish. Remove the hard shells before cooking.

Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.

Always let the appliance cool down to room temperature before you clean or move it.

Always clean the appliance after use. Do not clean the appliance in dishwasher.

Always unplug the appliance if not used for a longer period.

If the appliance is used improperly or for professional or semi-professional purposes, or if it is not used according to the instructions in this safety leaflet, the guarantee becomes invalid and Philips refuses liability for any damage caused.

Visit www.philips.com/support to download the user manual.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

3 What's in the box (fig. 1)

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Power cord

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Power cord

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure cooker main unit

Rice spoon

Measuring cup

User manual

Electric pressure cooker main unit

Electric pressure

