

Register your product and get support at

[www.philips.com/welcome](http://www.philips.com/welcome)

HTS8141



---

EN User manual

---

FR Mode d'emploi

---

ES Manual del usuario

---

DE Benutzerhandbuch

---

NL Gebruiksaanwijzing

---

**PHILIPS**



# Contents

---

<b>1 Important</b>	<b>4</b>
Safety and important notice	4
Trademark notice	6

---

<b>2 Your product</b>	<b>7</b>
Features highlight	7
Product overview	8

---

<b>3 Connect</b>	<b>11</b>
Place the unit	11
Connect video cables	12
Connect subwoofer	14
Connect audio cables/other devices	15
Mount the DVD Home Theatre unit	17

---

<b>4 Get started</b>	<b>19</b>
Prepare the remote control	19
Find the correct viewing channel	20
Start Ambisound setup	20
Turn on Progressive Scan	22
Activate EasyLink control	23
Select a play source	24

---

<b>5 Play</b>	<b>25</b>
Play from disc	25
Play video	26
Play music	29
Play photo	30
Play from USB device	31
Play from portable media player	32
Play from iPod	32
Play from radio	34

---

<b>6 Adjust sound</b>	<b>36</b>
Control the volume	36
Adjust Bass/Treble	36
Select Ambisound	36
Select a preset sound effect	37

---

<b>7 Adjust settings</b>	<b>38</b>
General setup	38
Audio setup	40
Video setup	41
Preference Setup	44

---

<b>8 Additional information</b>	<b>46</b>
Update software	46
Care	46

---

<b>9 Specifications</b>	<b>47</b>
-------------------------	-----------

---

<b>10 Troubleshooting</b>	<b>48</b>
---------------------------	-----------

---

<b>11 Glossary</b>	<b>50</b>
--------------------	-----------

# 1 Important

---

## Safety and important notice



### Warning!

- Risk of overheating! Never install the Compact Theatre System in a confined space. Always leave a space of at least 4 inches around the Compact Theatre System for ventilation. Ensure curtains or other objects never cover the ventilation slots on the Compact Theatre System.
- Never place the Compact Theatre System, remote control or batteries near naked flames or other heat sources, including direct sunlight.
- Only use this Compact Theatre System indoors. Keep this Compact Theatre System away from water, moisture and liquid-filled objects.
- Never place this Compact Theatre System on other electrical equipment.
- Keep away from this Compact Theatre System during lightning storms.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Visible and invisible laser radiation when open. Avoid exposure to beam.



This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC(Low Voltage), 2004/108/EC(EMC).

### Mains fuse (UK only)

This Compact Theatre System is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

- 1 Remove fuse cover and fuse.
- 2 The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.
- 3 Refit the fuse cover.



### Note

- In order to maintain conformity to the EMC directive, the mains plug on this product must not be detached from the mains cord cable (if applicable).

## Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

## Copyright notice



**Be responsible  
Respect copyrights**

The making of unauthorised copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

## Macrovision copyright

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

### Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performers' Protection Acts 1958 to 1972.

## About Progressive Scan

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artefacts to be displayed on the picture. In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding our TV set compatibility with this model 525p and 625p DVD player, please contact our customer service centre.

## Trademark notice



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.



DivX, DivX Ultra Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

Official DivX® Ultra Certified product.  
Plays all versions of DivX® video (including DivX® 6) with enhanced playback of DivX® media files and the DivX® Media Format.  
Plays DivX® video with menus, subtitles and audio tracks.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.




'DCDi' is a trademark of Faroudja, a division of Genesis Microchip, Inc.



iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

'Made for iPod' means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

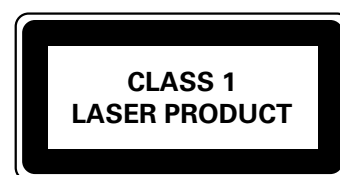

## 2 Your product

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

The all-in-one SoundBar DVD Home Theatre is designed to complement your home perfectly. Enjoy the SoundBar DVD Home Theatre with state-of-the-art Ambisound surround sound and picture quality without the clutter of multiple speakers.

---

### Features highlight

#### Video upscaling to 1080p

You can now watch the DVDs in the highest picture quality available for your HDTV. This DVD Home Theatre offers full high-definition video playback up to 1080p resolution for an amazing viewing experience. A highly detailed picture and increased sharpness delivers a more true-to-life picture.

#### EasyLink

EasyLink uses the HDMI CEC (Consumer Electronics Control) industry standard protocol to share functionality with all HDMI CEC compliant devices over HDMI. It enables the connected devices to control each other with a single remote control.



#### Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.

#### Ambisound

Philips Ambisound technology reproduces multi-channel surround sound with fewer speakers to give an embracing surround experience without the hassle of setting up a full range of speaker systems.

#### USB direct and MP3 link

Simply plug your USB device into the USB socket to play your MP3/WMA/JPEG/DivX files; or plug your portable media player to the MP3 LINK socket to enjoy the music play in superb sound quality.





#### Sync the audio output with the video play

This DVD Home Theatre provides you the feature of delaying the audio output if the video signals that go directly to the TV is slower than the audio streams.

---


### Region codes

DVD movies are usually not released at the same time in all regions of the world, thus all DVD players are programmed to a specific region code.

Countries	DVD region code
Europe	 
Russia	 

# Product overview

## Main unit

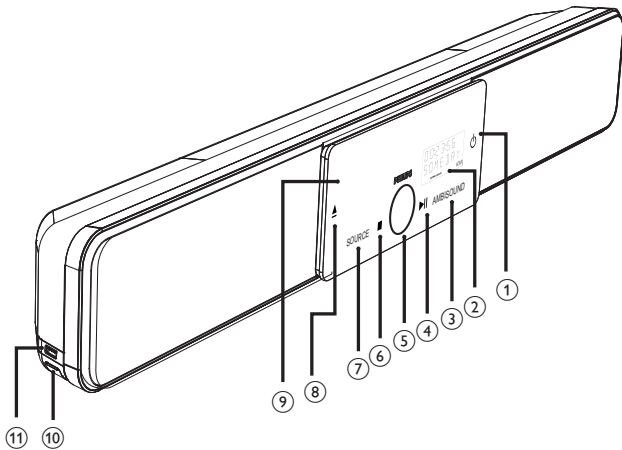

### Note

- Control buttons on this DVD Home Theatre unit (SoundBar) are operated through touch screen display. The control displays will be dimly lit after one seconds of inactivity.




### Tips

- To change the brightness of the touch screen display, see chapter 'Adjust settings' - [ **General Setup** ] > [ **Display Dim** ].

- ①
    - Turn on this unit or turn off to standby mode.
    - Press and hold to turn on this unit from a low power standby mode.
  - ② **Display panel**
  - ③ **AMBISOUND**
    - Select different surround sound output: auto, multi-channel or stereo.
  - ④ (Play/Pause)
    - Start or pause disc play.
    - **RADIO**: start auto radio installation (only available for first time setup).
  - ⑤ **Volume control**
    - Adjust the volume level.
  - ⑥ (Stop)
    - Stop disc play.
    - **RADIO**: erase the current preset radio station.
  - ⑦ **SOURCE**
    - Select a play media: DISC, USB, DOCK, RADIO FM, OPTICAL INPUT, DIGITAL INPUT, AUX SCART, AUX1 INPUT, AUX2 INPUT, AUX3 INPUT or MP3 LINK.
  - ⑧ (Open/Close)
    - Open or close the disc compartment.
  - ⑨ **Disc compartment**
- The following connectors are located at the left side panel:
- ⑩ **MP3 LINK socket**
    - To connect portable audio player.
  - ⑪ **(USB) socket**
    - To connect USB flash drive, USB memory reader or digital camera.



## Remote control

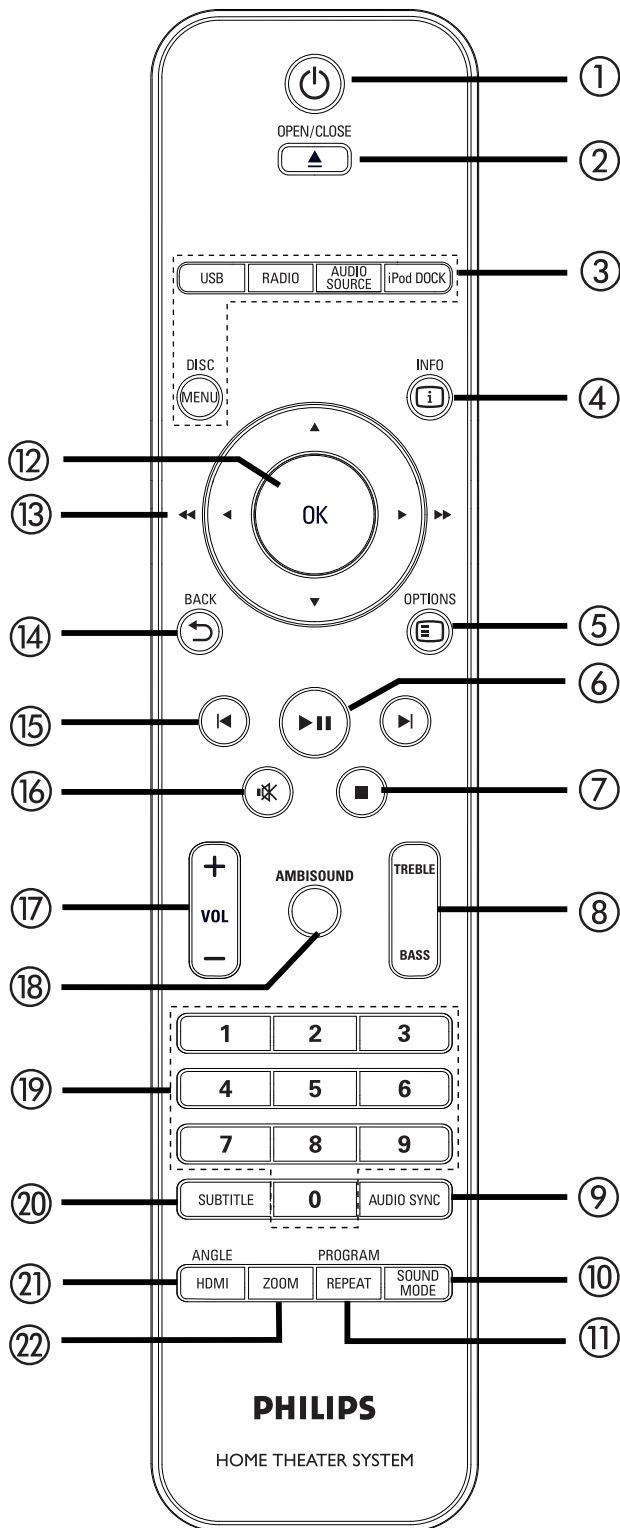

- ①
  - Turn on this unit or turn off to standby mode.
  - Press and hold to turn off this unit and all the HDMI CEC compliant TV/ devices (for EasyLink control only).
- ② **OPEN/CLOSE**
  - Open or close the disc compartment.
- ③ **Source buttons**
  - **DISC MENU**: switch to DISC mode. While in disc mode, access or exit disc menu.
  - **USB**: switch to USB mode.
  - **RADIO**: switch to FM band.
  - **AUDIO SOURCE**: Select an audio input source.
  - **iPod DOCK**: switch to the iPod in the dock.
- ④ **INFO**
  - Display the current status or disc information.
  - Display photo files in 12 thumbnails view.
- ⑤ **OPTIONS**
  - Access or exit Options menu (this menu provides various setting options).
- ⑥ (Play/Pause)
  - Start or pause disc play.
  - **RADIO**: start auto radio installation (only available for first time setup).
- ⑦ (Stop)
  - Stop disc play.
  - **RADIO**: erase the current preset radio station.

## ⑧ TREBLE / BASS

- Switch to treble or bass mode. Then press **VOL + -** to set its level setting.

## ⑨ AUDIO SYNC

- Select an audio language/channel.
- Press and hold to access audio sync setting. Then press **VOL + -** to set the audio delay time.
- **RADIO**: toggle between FM stereo and mono mode.

## ⑩ SOUND MODE

- Select a predefined sound effect.

## ⑪ REPEAT / PROGRAM

- Select various repeat or shuffle modes; turns off repeat or shuffle mode.
- **RADIO**: press this button to start manual radio preset.
- **RADIO**: press and hold this button to start automatic radio preset.

## ⑫ OK

- Confirm an entry or selection.

## ⑬ Cursor buttons (▲▼◀▶)

- Navigate through the on-screen menu.
- Press left or right for fast backward or forward search.
- **RADIO**: press up or down to tune the radio frequency.
- **RADIO**: press left or right to start auto search.

## ⑭ ↶ BACK

- Return to the previous display menu.

## ⑮ ◀ / ▶ (Previous/Next)

- Skip to the previous or next title/ chapter/track.
- **RADIO**: select a preset radio station.

## ⑯ 🔇 (Mute)

- Mute or restore the volume.

## ⑰ VOL + -

- Adjust the volume level.

## ⑱ AMBISOUND

- Select different surround sound output: auto, multi-channel or stereo.

## ⑲ Numeric buttons

- Enter a preset number or item to play.

## ⑳ SUBTITLE

- Select DVD or DivX subtitle language.

## ㉑ HDMI / ANGLE

- Select a video resolution setting for HDMI output.
- Press and hold to select a different viewing angle of a DVD movie.

## ㉒ ZOOM

- Zoom in or out the picture on the TV.

# 3 Connect

This section describes the basic connections required for this DVD Home Theatre unit before it can be used.

### Basic connections:

- Place the unit
- Connect video cables
- Connect subwoofer

### Optional connections:

- Connect audio cables/other devices
  - Connect audio from TV
  - Connect audio from cable box/recorder/game console
  - Connect portable media player
  - Connect USB device
  - Connect iPod docking station
- Mount the DVD Home Theatre unit

### Note


- Refer to the type plate at the rear or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all the devices are disconnected from the power outlet.

### Tip


- Different types of connectors may be used to connect this product to your TV, depending on availability and your needs. A comprehensive interactive guide to help you connect your product is available at [www.connectivityguide.philips.com](http://www.connectivityguide.philips.com).

## Place the unit

- Place this unit on top of a table or mount it on the wall (see chapter 'Mount the DVD Home Theatre unit').
- Never place this unit in an enclosed cabinet.
- Install this unit near the AC outlet where the AC power plug can be easily reached.

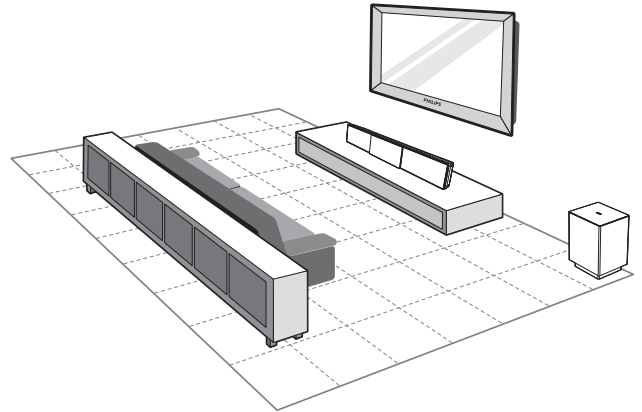

- 1 Place this DVD Home Theatre unit near to the TV.
  - Place it at a height that is closest to the listening ear-level.
- 2 Position this DVD Home Theatre so that it is directly parallel to the listening area.

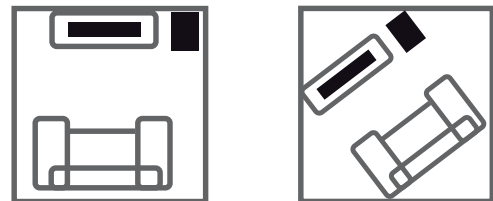

- 3 Place the subwoofer at the corner of the room or at least one metre away from the TV.

### Note

- You may purchase a separate table top stand that can support both your Philips Plasma/LCD TV and this DVD Home Theatre unit from the nearest Philips retailers.

## Connect video cables

This section describes how to connect this DVD Home Theatre unit to your TV so to enable viewing of disc play.

Select the best video connection that your TV can support.


- **Option 1:** Connect to HDMI socket (for a HDMI, DVI or HDCP-compliant TV).
- **Option 2:** Connect to scart socket (for a standard TV).
- **Option 3:** Connect to component video socket (for a standard TV or Progressive Scan TV).

### Note


- You must connect this unit directly to a TV.

## Before you connect

- 1 Pull up the catch to remove the rear cover.

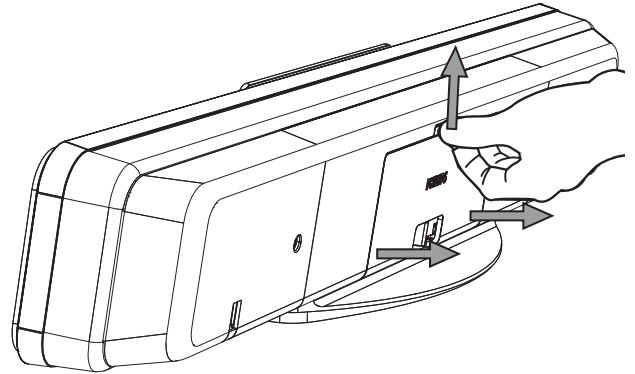

- 2 Connect the cables to the corresponding sockets and direct the cables to the **CABLE OUT** point.

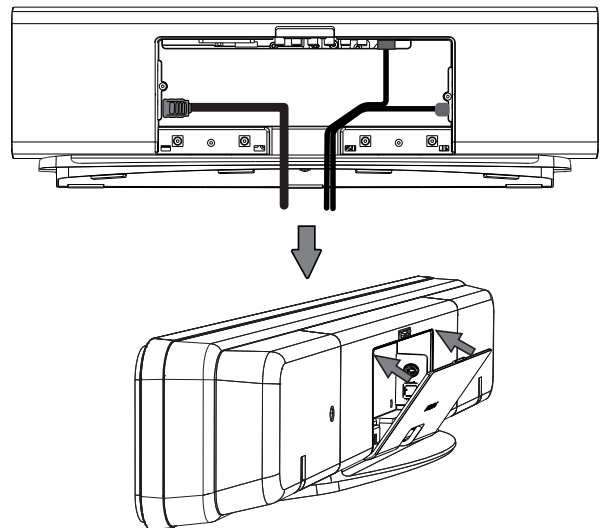


- 3 Once complete, close the rear cover.

### Note

- All the cables must be placed properly inside the rear panel in order for the rear cover to close.

## Option 1: Connect to HDMI socket

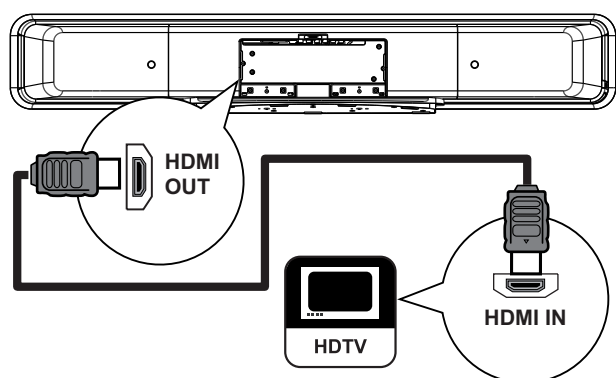

- 1 Connect a HDMI cable (supplied) from the **HDMI OUT** on this unit to the HDMI IN socket on your TV.



### Note


- The HDMI connector is only compatible with HDMI compliant TVs and DVI-TVs.



### Tips

- To optimise the video output, see chapter 'Adjust settings' > [ **Video Setup** ] > [ **Advanced Picture** ] for details.
- This unit is HDMI CEC compatible. It enables connected TV/device to control each other over HDMI, see chapter 'Activate EasyLink control' for details.
- Use a HDMI/DVI adaptor in case your TV has only a DVI connection. An extra audio connection is needed to complete this connection.
- To route the audio from your TV to this DVD Home Theatre unit, connect an audio cable from the audio input on this unit to the audio output on your TV.
- This type of connections provide best picture quality.

## Option 2: Connect to Scart socket

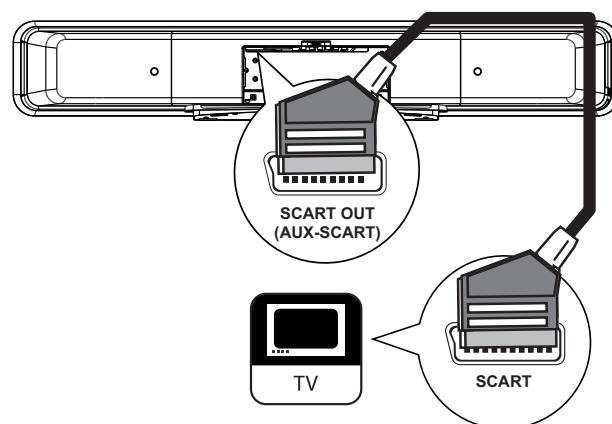


- 1 Connect a scart cable (supplied) from the **SCART OUT (AUX-SCART)** socket on this unit to the scart input socket on your TV.



### Tips

- To listen to the audio output from your TV, press **AUDIO SOURCE** repeatedly until 'AUX SCART' is displayed on the display panel.
- This type of connections provide good picture quality.

## Option 3: Connect to component video socket

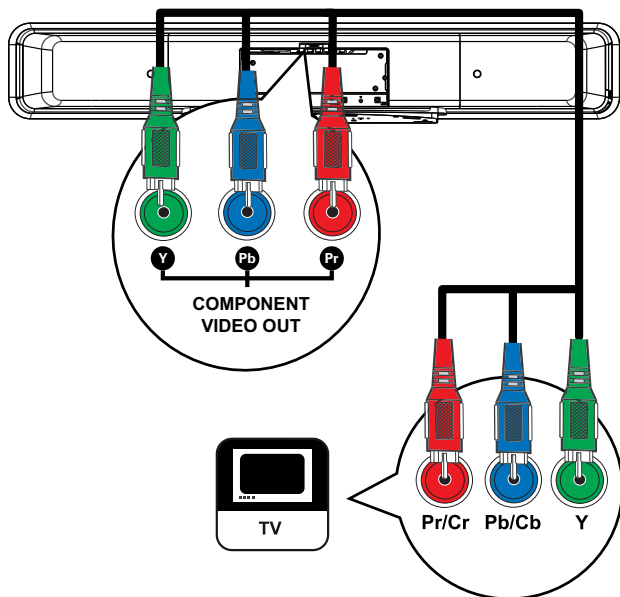

### Note


- Scart connection is required for first time setting in order to change the video output setting for this unit from RGB to YUV. See chapter 'Adjust settings' - [ Video Setup ] > [ Component Video ] for details.

- 1 Connect the component video cables (not supplied) from the **Y Pb Pr** sockets on this unit to the component video input sockets on your TV.
  - If a progressive scan TV is used, you may turn on the progressive scan mode (see chapter 'Turn on Progressive Scan' for details).

### Tips

- The component video input socket on your TV may be labelled as Y Pb/Cb Pr/Cr or YUV.
- This type of connections provide good picture quality.

## Connect subwoofer

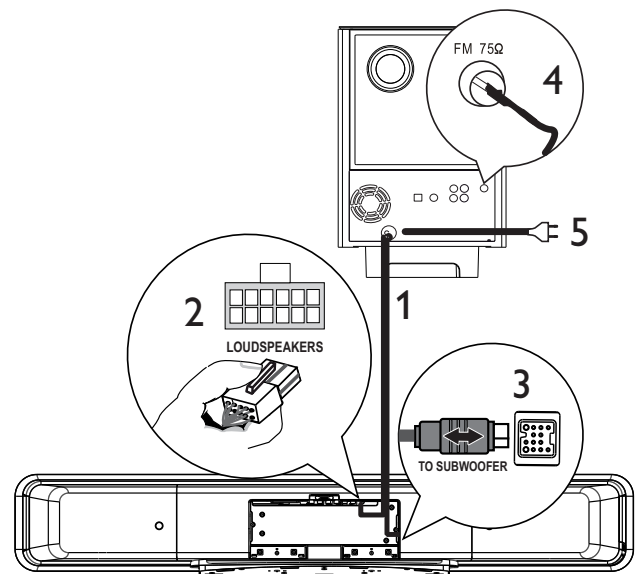


- 1 Unwind the subwoofer's interconnect cable at **TO MAIN UNIT**.
- 2 Connect the white end of the interconnect cable to the **LOUDSPEAKERS** socket on this unit.
- 3 Connect the grey end of the interconnect cable to the **TO SUBWOOFER** socket on this unit.
- 4 Connect the FM antenna (supplied) to the **FM75Ω** socket on the subwoofer (for some models, this cable has been connected). Extend the FM antenna and fix its ends to the wall.
- 5 Connect the power cord when all the required connections are complete and you are ready to enjoy this DVD Home Theatre unit.

## Connect audio cables/other devices

This section describes how you can route the sound from other devices to this DVD Home Theatre unit in order to enjoy sound output or audio play with multi-channel surround capabilities.

### Connect audio from TV (also used for EasyLink control)

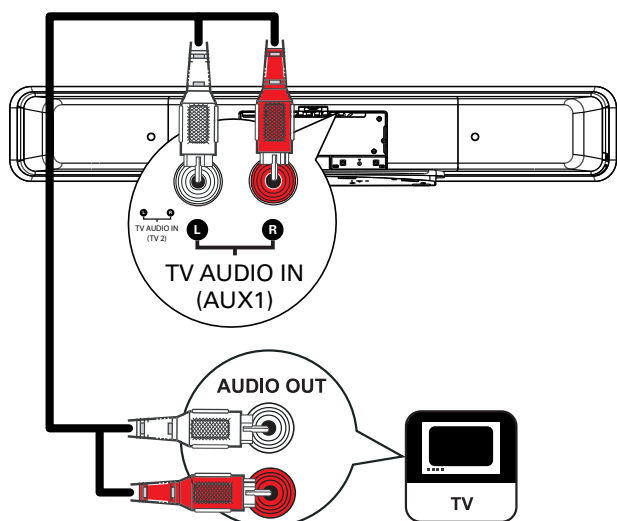

- 1 Connect an audio cable (not supplied) from the **TV AUDIO IN (AUX1)** sockets on this unit to the **AUDIO OUT** sockets on your TV.


#### Note

- To listen to the audio output from this connection, press **AUDIO SOURCE** repeatedly until 'AUX1 INPUT' is displayed on the display panel.

## Connect audio from cable box/ recorder/game console

You can choose to connect to analogue or digital socket depending on the device capabilities.

### Connect to analogue sockets

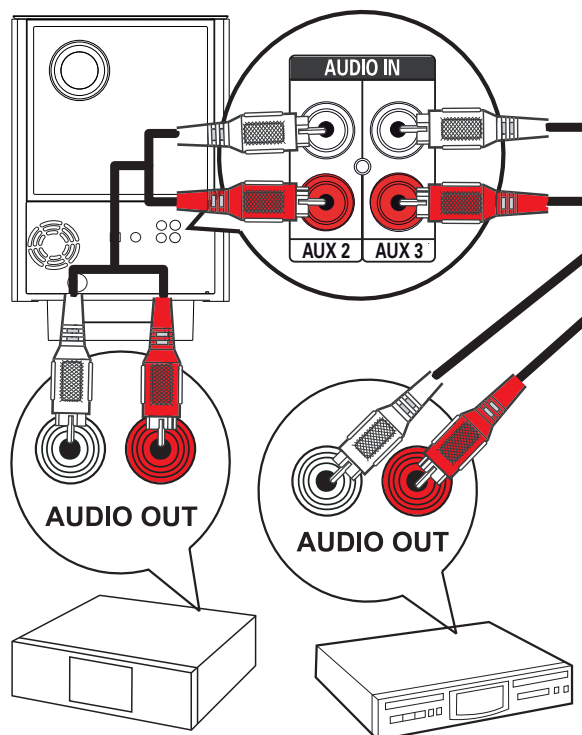


- 1 Connect an audio cable (not supplied) from the **AUDIO IN-AUX2** or **AUX3** sockets on the subwoofer to the **AUDIO OUT** sockets on the device.

#### Note

- To listen to the audio output from this connection, press **AUDIO SOURCE** repeatedly until 'AUX2 INPUT' or 'AUX3 INPUT' is displayed on the display panel.

## Connect to digital/optical socket

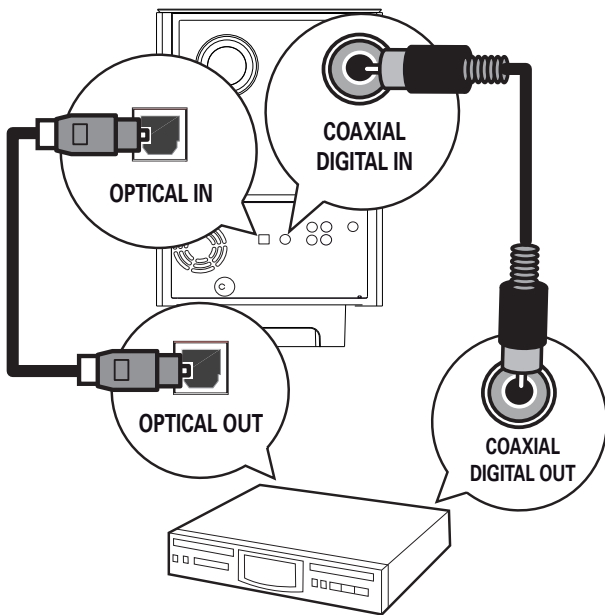

- 1 Connect a coaxial cable (not supplied) from the **DIGITAL IN-COAXIAL** socket on the subwoofer to the **COAXIAL/DIGITAL OUT** socket on the device.

### Note

- To listen to the audio output from this connection, press **AUDIO SOURCE** repeatedly until 'DIGITAL INPUT' is displayed on the display panel.


or

- 1 Connect an optical cable (not supplied) from the **OPTICAL IN** socket on the subwoofer to the **OPTICAL OUT** socket on the device.

### Note

- To listen to the audio output from this connection, press **AUDIO SOURCE** repeatedly until 'OPTICAL INPUT' is displayed on the display panel.

## Connect portable media player

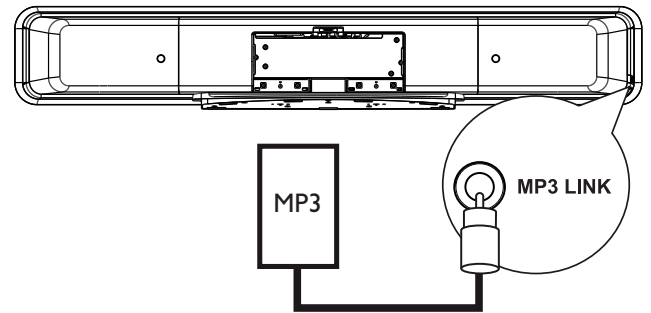


- 1 Connect a 3.5mm stereo audio cable (supplied) from the **MP3 LINK** socket on this unit to the phone socket on your portable media player (such as MP3 player).

### Note

- To listen to the audio output from this connection, press **AUDIO SOURCE** repeatedly until 'MP3 LINK' is displayed on the display panel.

## Connect USB device

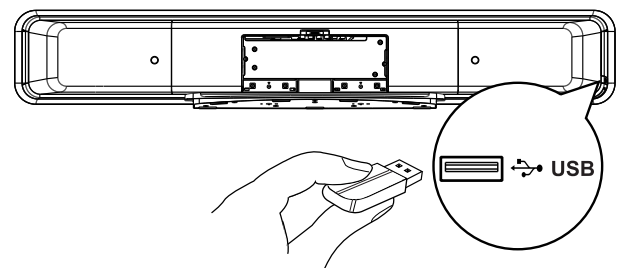


- 1 Connect the USB device to **USB** socket on this unit.

### Note

- This DVD Home Theatre unit can only play/view MP3, WMA/WMV, DivX (Ultra) or JPEG files that are stored on such devices.
- To listen to the audio output from this connection, press **USB**.



## Connect iPod docking station

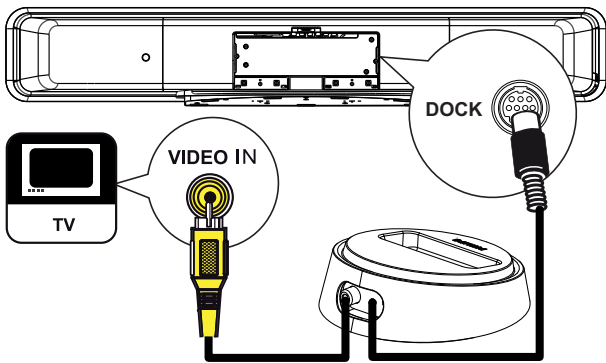

- 1 Connect the iPod docking station to **DOCK** socket on this unit.
- 2 To view videos/photos from iPod, connect the composite video cable from this docking station to your TV and switch to the corresponding channel on your TV.



### Note

- To listen to the audio output from this connection, press **iPod DOCK**.


## Mount the DVD Home Theatre unit




### Caution!

- Risk of personal injury and damage to the unit.


- 1 Ensure all the required cables are connected to this unit.
- 2 Remove the screws and detach the DVD Home Theatre stand, then close the rear cover.

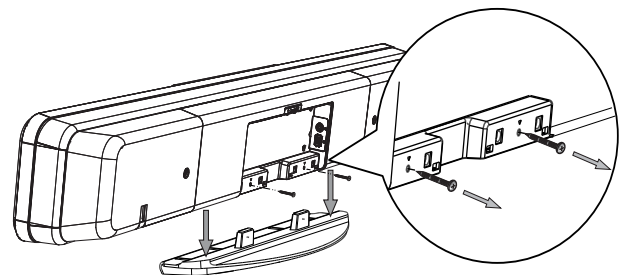

- 3 Attach the supplied knobs to the rear of this unit.

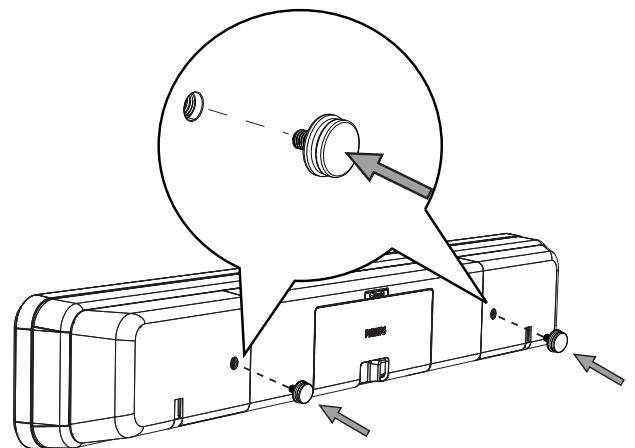


- 4** Position the supplied bracket on the wall, drill the screw holes and insert the rubber wall plugs (not supplied) into the holes.

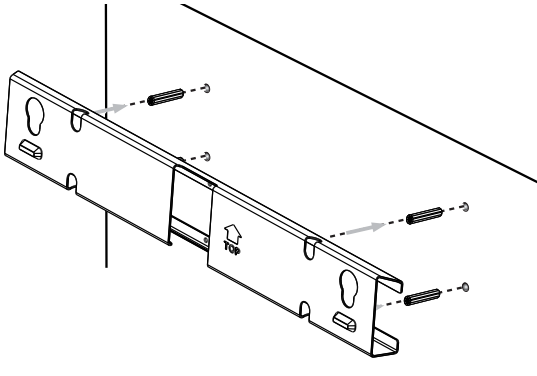


#### Tips

- To mount this DVD Home Theatre unit below your TV, leave at least 10cm (4 inches) of space between the TV and the bracket.

- 5** Secure the bracket onto the wall with the screws (not supplied).

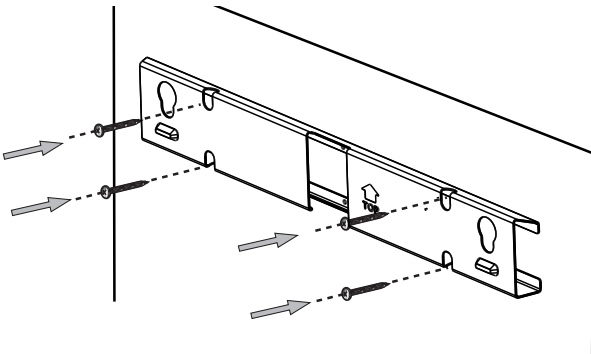


- 6** Hook the DVD Home Theatre unit firmly onto the mounted bracket. Slide the knobs through the key holes and lock into position.

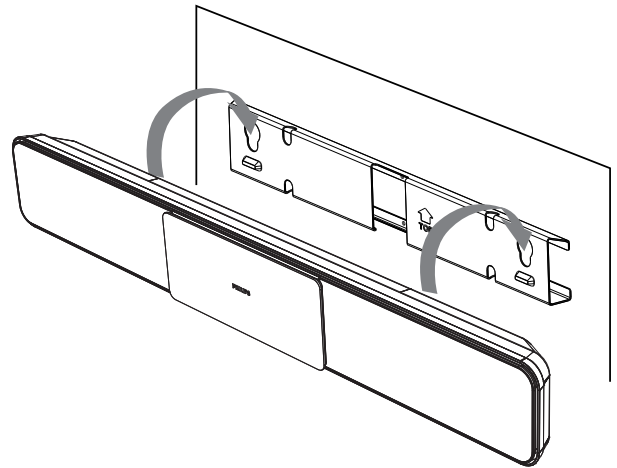

# 4 Get started

## Prepare the remote control

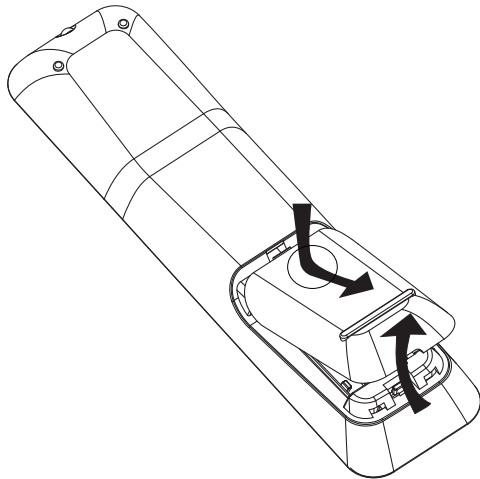

- 1 Push to open the battery compartment cover.
- 2 Insert two batteries type R03 or AAA. Match the indications (+ -) inside the battery compartment.
- 3 Close the cover.

### Note


- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed off properly.

## Control a play source

- 1 Select the source you wish to control by pressing the **DISC MENU**, **USB**, **RADIO** or **AUDIO SOURCE** or **iPod DOCK** button.
- 2 Then select the desired function (for example ◀, ▶).

## Navigate through the menu

- 1 Point the remote control directly at the remote sensor on this unit and select the desired function.

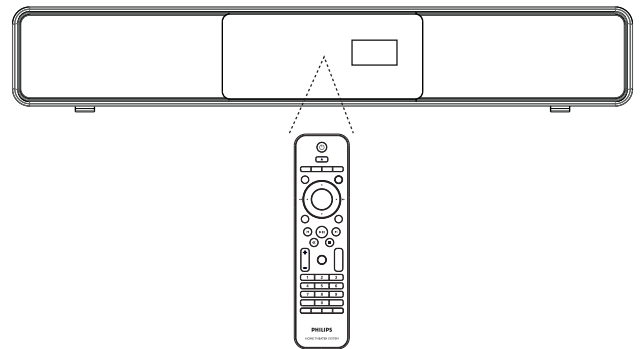



- 2 Use the following buttons on the remote control to navigate through the on-screen menus.

Button	Action
▲ ▼	Move up or down.
◀ ▶	Move left or right.
○ OK	Confirm a selection.
1 2 3 4 5 6 7 8 9 0	Enter numbers.

## Find the correct viewing channel

### Note

- Before you start, remove the door stop tag on top of the disc compartment door.

- 1 Press  to turn on the DVD Home Theatre unit.
- 2 Press **DISC MENU** to switch to disc mode
- 3 Turn on the TV and switch it to the correct video-in channel.
  - You may go to the lowest channel on your TV, then press the Channel Down button on your TV's remote control until you see the Video In channel.
  - You may press  button repeatedly on your TV's remote control.
  - Usually this channel is between the lowest and highest channels and may be called FRONT, A/V IN, VIDEO, etc..

### Tips

- See TV's user manual on how to select the correct input on your TV.


## Start Ambisound setup




When you turn on this unit for the first time, follow the instructions on the TV to complete the Ambisound setup in order to obtain the best possible surround sound effect.

### Note

- Before you start, ensure that you have made all the required connections.
- Complete the Ambisound setup for this unit before you insert a disc to play.

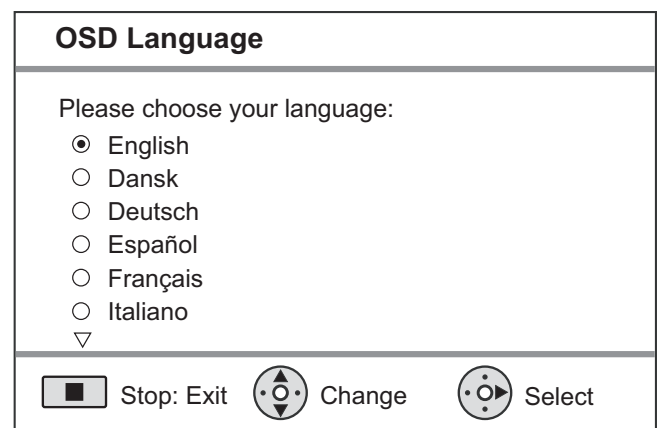- 1 Press **DISC MENU** to switch to disc mode
- 2 Turn on the TV and switch it to the correct video-in channel.
  - ↳ Language menu is displayed.



- 3 Select a language for on-screen display, then press .
  - ↳ A welcome message is displayed.
  - To skip the Ambisound setup, press  to exit.
- 4 Press  to continue.
  - ↳ A message on the unit orientation is displayed.

- 5 Press ► to continue.  
↳ [ **Room Acoustics** ] menu is displayed.

### Room Acoustics

Please select the type of walls that surround your room:

Hard (Concrete, wood)

Soft (Curtains, open space)

Back     Change     Select

- 6 Select the condition of the room, then press ►.  
↳ [ **Room Placement** ] menu is displayed.

### Room Placement


Select the Sound Bar system placement position in your room:

Middle of room

Corner of room

Near the right wall

Near the left wall



Back     Change     Select

- 7 Select the DVD Home Theatre unit (SoundBar) placement in the room, then press ►.  
↳ [ **Height** ] menu is displayed.


### Height

Select the height at which your SoundBar system is placed:

High (> 1.2m / 47in)

Default (0.8-1.2m / 32-47in)

Low (< 0.8m / 32in)

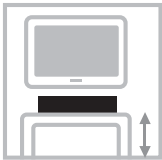

Back     Change     Select

- 8 Select the height of which the DVD Home Theatre unit (SoundBar) is placed, then press ►.  
↳ [ **Listening Position** ] menu is displayed.


### Listening Position

Select the distance between your listening position and the SoundBar system:

Near (> 2m / 78in)

Default (2-3m / 78-118in)

Far (< 3m / 118in)

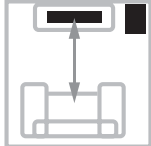

Back     Change     Select

- 9 Select the distance between the listening position and the speakers, then press ►.
- 10 The speaker setting is complete, press ► to exit.

This DVD Home Theatre unit is now ready for use.







#### Tips

- To change the menu display language, see chapter 'Adjusting settings' - [ **General setup** ] > [ **OSD Language** ] for details.
- If you connect this unit to a HDMI CEC compliant TV using a HDMI cable, it switches automatically to the menu display language as per your TV setting.





## Turn on Progressive Scan

If you connect this unit to TV with the component video connection (see chapter 'Connect video cables - Option 3: Connect to component video jack' for details), you can turn on the progressive scan output if your TV supports progressive scan.

- 1 Turn on the TV to the correct viewing channel for this unit.
- 2 Press **DISC MENU**.
- 3 Press **OPTIONS**.
- 4 Press **▼** to select **[ Video Setup ]** in the menu, then press **▶**.

Video Setup		
	TV Type	RGB
	TV Display	YUV
	Picture Settings	
	Advanced Picture	
	Closed Caption	
	Progressive	
	Component Video	

- 5 Select **[ Component Video ] > [ YUV ]**, then press **OK**.

Video Setup		
	TV Type	On
	TV Display	Off
	Picture Settings	
	Advanced Picture	
	Closed Caption	
	Progressive	
	Component Video	

- 6 Select **[ Progressive ] > [ On ]**, then press **OK**.  
↳ A warning message is displayed.
- 7 To proceed, select **[ OK ]** in the menu and press **OK**.  
↳ The progressive setup is complete.

### Note

- If a blank/distorted screen is displayed, wait for 15 seconds for the auto recover.
- If no picture displayed, turn off the progressive scan mode as follows:
  - 1) Press **▲** to open the disc compartment.
  - 2) Press **▶**.
  - 3) Press **SUBTITLE**.

- 8 To exit the menu, press **OPTIONS**.
- 9 You can now turn on the progressive scan mode on your TV (see the TV user manual).

### Note

- There are some progressive scan TVs that are not fully compatible with this unit, resulting in an unnatural picture when playing back a DVD VIDEO disc in the progressive scan mode. In such case, turn off the progressive scan feature on this unit and your TV.

## Activate EasyLink control

This feature is only applicable if this unit is connected to HDMI CEC compliant TV/device. It enables all the linked devices response or react to certain commands simultaneously with one touch control.

- 1 Turn on the HDMI CEC operations on your TV and other connected devices. See TVs/devices manual for details.
- 2 You can now enjoy the EasyLink controls.

### One touch play [ Auto Wake-up TV ]

When you press PLAY button, this unit will wake- up from standby mode and start disc play (if a video disc is found in the disc compartment) and it will also turn on your TV and switch to the correct viewing channel.

### One touch power off [ System Standby ]

When you press and hold STANDBY button for at least three seconds, it will turn off this unit and all the linked devices to standby.

This unit also responses to standby command from other HDMI CEC devices.

### One touch audio input switching [ System Audio Control ]

This unit is able to render the audio signals from the active source. It switches automatically to the corresponding audio input and output the sound from its speaker system.

- Before you can enjoy this function, you have to map the audio inputs to the connected devices.
- You can use any HDMI CEC TV/device remote control to adjust the volume.



#### Note

- To enable one touch play function, a video disc must be placed in the disc compartment before operation.
- Philips does not guarantee 100% interoperability with all HDMI CEC compliant devices.

## Map the audio inputs to the connected devices



#### Note

- Before you start, ensure that an audio connection has been made between this unit and your TV/ devices.


 


- 1 Press **DISC MENU**.
- 2 Press **OPTIONS**.  
↳ [ **General Setup** ] menu is displayed.
- 3 Press **▶**.
- 4 Select [ **EasyLink** ], then press **▶**.

General Setup	
	EasyLink
	Disc Lock
	Display Dim
	OSD Language
	Screen Saver
	Sleep Timer
	Standby Mode
	DivX(R) VOD Code

- [ **Auto Wake-up TV** ] and [ **System Standby** ] functions are turned on by default in the factory.

- 5 Select [ **System Audio Control** ] > [ **On** ], then press **OK**.
- 6 Select [ **Audio Input Mapping** ], then press **OK**.


- 7 Select [ **OK** ] in the menu, then press **OK** to start scanning of devices.  
 ↳ Once complete, audio input mapping menu is displayed.

Audio Input Mapping		
	AUX1 Input	TV
	AUX2 Input	Other (non-HDMI)
	AUX3 Input	
	Digital Input	
		
		

- 8 Select the audio input of this unit that is used to connect to other HDMI device (e.g. AUX1 Input, AUX2 Input), then press **▶**.
- 9 Select the correct connected device, then press **OK**.
- Repeat steps 8~9 to map other connected devices.
- 10 To exit the menu, press **⏏** **OPTIONS**.


## Select a play source

On the main unit

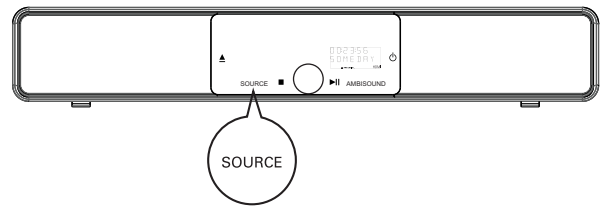

- 1 Press **SOURCE** repeatedly to select:  
**DISC > USB > DOCK > RADIO FM > OPTICAL INPUT > DIGITAL INPUT > AUX SCART > AUX1 INPUT > AUX2 INPUT > AUX3 INPUT > MP3 LINK > DISC ...**

On the remote control

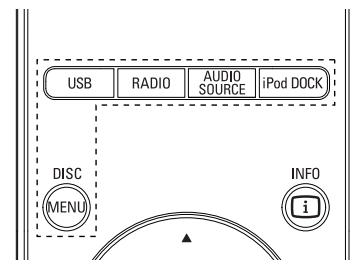

- Press **DISC MENU** to switch to DISC mode.
- Press **USB** to switch to USB mode.
- Press **RADIO** to switch to FM band.
- Press **AUDIO SOURCE** to select an audio input source.
- Press **iPod DOCK** switch to the iPod mode.

Display	Device connected to
AUX SCART	SCART OUT socket.
AUX1 INPUT	TV AUDIO IN sockets.
AUX2 INPUT	AUDIO IN-AUX2 sockets.
AUX3 INPUT	AUDIO IN-AUX3 sockets.
OPTICAL INPUT	OPTICAL IN socket.
DIGITAL INPUT	COAXIAL DIGITAL IN socket.
MP3 LINK	MP3 LINK socket.



# 5 Play

## Play from disc

### Note

- DVDs and DVD players are designed with regional restrictions. Ensure that the DVD video you play is for the same region zone as your player (indicated on its rear).
- This unit can support playback of the following file formats: MP3/WMA/JPEG/DivX/WMV 9.
- About WMV 9 - this unit only supports Main Profile (low level) and Simple Profile. Advanced Profile and DRM-protected video files are not supported.

## Play a disc



### Caution!

- Never place any objects other than discs into the disc compartment.
- Never touch the disc optical lens inside the disc compartment.

- 1 Press to open the disc compartment.
- 2 Insert a disc with its label facing up.
  - For double-sided disc, load the side to play faces up.
- 3 Press to close the disc compartment and start disc play.
  - To view disc play, turn on the TV to the correct viewing channel for this DVD Home Theatre unit.
- 4 To stop disc play, press .




### Tips

- If the password entry menu is displayed, you have to enter the 4-digit password before it can be played.
- Screen saver displays automatically if the disc play is stopped for about 15 minutes. To wake up from screen saver, press **DISC MENU**.
- This unit automatically switches to standby mode if you do not press any buttons within 30 minutes after a disc has stopped playing.

---

## Play video







### Note

- For video disc, playback always resumes from the point where it was last stopped. To start playback from the beginning, press  while the message is displayed.

---

## Control a title







- 1 Play a title.
- 2 Use the remote control to control the title.

Button	Action
	Pause/ resume play.
	Stop play.
	Jump to the next title/chapter.
	Return to the beginning of the current title/chapter or jump to the previous title/chapter.
	Search backward/ forward. <ul style="list-style-type: none"><li>• To change search speed, press this button repeatedly.</li></ul>
	Slow motion reverse/ forward play. <ul style="list-style-type: none"><li>• To change play speed, press this button repeatedly.</li><li>• For VCD, only forward play is possible.</li></ul>

---


## Change video play

- 1 Play a title.
- 2 Use the remote control to change the video play.

Button	Action
	Change audio language. <ul style="list-style-type: none"><li>• Only applicable to discs with multiple audio language or channel.</li></ul>
	Change subtitle language. <ul style="list-style-type: none"><li>• Only applicable to discs with multiple subtitle language.</li></ul>
	Toggle through various repeat/ shuffle play mode; or turn off repeat mode. <ul style="list-style-type: none"><li>• Repeat options vary depending on the disc type.</li><li>• For VCDs, repeat play is only possible when the PBC mode is turned off.</li></ul>
	Zoom in/out. <ul style="list-style-type: none"><li>• To pan through the zoomed image, press the cursor buttons.</li></ul>
	Display current play status. <ul style="list-style-type: none"><li>• You can change the video play options here without interrupting disc play.</li></ul>
	Press and hold to view DVD play from different camera angles. <ul style="list-style-type: none"><li>• Only applicable to DVDs that contain sequences recorded from different camera angles.</li></ul>

---

## Access DVD menu

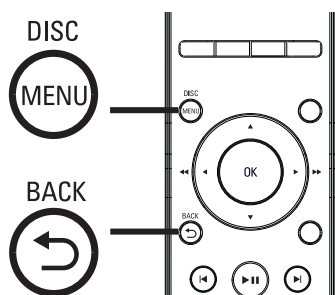

- 1 Press **DISC MENU** to access disc main menu.
- 2 Select a play option, then press **OK**.
  - In some menus, press **number buttons** to input your selection.
  - To return to the title menu during playback, press **↶ BACK**.

## Access VCD menu

The PBC (Playback Control) for VCD is turned on by default in the factory. When you load in a VCD, the contents menu is displayed.

- 1 Press **▲▼** to select a play option, then press **OK** to start play.
  - If PBC is off, it skips the menu and starts play from the first title.
  - During playback, you can press **↶ BACK** to return to the menu (if the PBC mode is on).




### Tips

- The default setting for PBC is on. To change the default setting, see chapter 'Adjust settings' - [ **Preference Setup** ] > [ **PBC** ] for details.

## Sync audio output with video play

If the video play is slower than the audio output (sound does not match with the pictures,) you can delay the audio output to match the video.

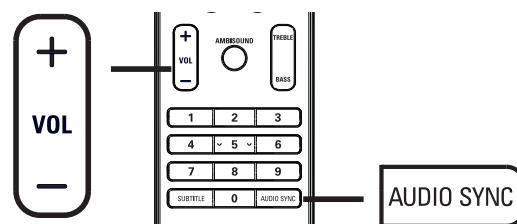


- 1 Press and hold **AUDIO SYNC** until 'AUDIO SYNC XXX' is displayed.
  - 'XXX' denotes the delay time.
- 2 Within five seconds, press **VOL + -** to set the delay time for audio output.



### Note

- If the volume control is not used within 5 seconds, it resumes normal volume control function.

## Quick skip play to a specific time

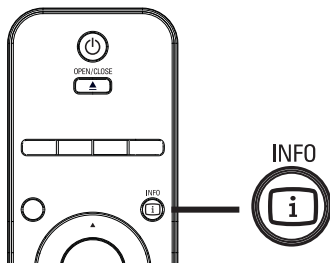





- 1 During playback, press **INFO**.  
↳ The disc status menu is displayed.
- 2 Select the current elapsed playing time in the menu, then press **OK**.
  - [ **TT Time** ] (title time)
  - [ **CH Time** ] (chapter time)
  - [ **Disc Time** ] (disc time)
  - [ **Track Time** ] (track time)
- 3 Press the **number buttons** to change the time where you want to skip to, then press **OK**.

## Play DivX® video

DivX video is a digital media format that retains high quality despite a high rate of compression. This unit is DivX® Certified that allows you to enjoy DivX video.

- 1 Insert a disc or USB that contains the DivX videos.
- 2 Press **DISC MENU** or **USB**.  
↳ A contents menu is displayed.
- 3 Select a title to play, then press **▶||**.
- 4 Use the remote control to control the title.

Button	Action
	Change subtitle language.
	Change audio language/track.
	Stop play. <ul style="list-style-type: none"><li>• For DivX Ultra video, press this button again to display the contents menu.</li></ul>
	Display DivX Ultra video information.

### Note

- Only those DivX videos that were rented or purchased using the DivX registration code of this unit can be played (see chapter 'Adjust settings' > [ **General Setup** ] > [ **DivX(R) VOD Code** ] for details).
- If the subtitle does not appear correctly, change the subtitle language (see chapter 'Adjust settings' - [ **Preference Setup** ] > [ **DivX Subtitle** ] for details).
- The subtitle can only be displayed up to an average of 45 characters.
- This unit can play DivX video files that are up to 4GB in size.

## Play music



### Note

- For some commercial audio disc, playback may resume from the point where it was last stopped. To start playback from first track, press **◀**.

## Control a track

- 1 Play a track.
- 2 Use the remote control to control the track.

Button	Action
	Pause/ resume play.
	Stop play.
	Jump to the next track.
	Return to the beginning of the current track or jump to the previous track.
	Direct enter the track number.
	Search backward/ forward. <ul style="list-style-type: none"> <li>• To change search speed, press this button repeatedly.</li> </ul>
	Toggle through various repeat/ shuffle play mode; or turn off repeat mode. <ul style="list-style-type: none"> <li>• Repeat options vary depending on the disc type.</li> </ul>

## Play MP3/WMA music

MP3/WMA is a type of highly compressed audio file (files with .mp3 or .wma extensions).

- 1 Insert a disc or USB that contains the MP3/WMA music.
- 2 Press **DISC MENU** or **USB**.
  - ↳ A contents menu is displayed.
- 3 Select a folder, then press **OK**.
- 4 Select a track to play, then press **▶||**.
  - To return to the main menu, press **▲** until 'Previous' folder is selected, then press **OK**.



### Note

- For CDs recorded in multiple sessions, only the first session is played.
- This unit does not support MP3PRO audio format.
- If any special characters are present in the MP3 track name (ID3) or album name, it might not be displayed correctly on the screen because these characters are not supported.
- Some WMA is protected by Digital Rights Management (DRM), it cannot be played on this unit.
- Folders/files exceed the supported file limit of this unit will not be displayed or played.



### Tips

- To display the data disc contents without folders, see chapter 'Adjust settings' - [ **Preference Setup** ] > [ **MP3/JPEG Nav** ] for details.

# Play photo

## Play photos as slideshow

This unit can play JPEG photos (files with .jpeg or .jpg extensions).

- 1 Insert a disc or USB that contains the JPEG photos.
- 2 Press **DISC MENU** or **USB**.
  - ↳ For a Kodak disc, the slideshow begins automatically.
  - ↳ For a JPEG disc, the photo menu is displayed.
- 3 Select the folder/album you want to play.
  - To preview the photos in the folder/album, press **INFO**.



- To go to previous or next screen display, press **◀** / **▶**.
  - To select a photo, press the cursor buttons.
  - To display the selected photo only, press **OK**.
- 4 Press **▶||** to start slideshow play.
    - To return to the menu, press **↶ BACK**.

## Note

- It may require longer time to display the disc contents on the TV due to the large number of songs/photos compiled onto one disc.
- If the JPEG photo is not recorded with an 'exif' type file, the actual thumbnail picture will not be shown on the display. It will be replaced with a 'blue mountain' thumbnail picture.
- This unit can only display digital camera pictures according to the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG and pictures in formats other than JPEG, or sound clips associated with pictures.
- Folders/files exceed the supported file limit of this unit will not be displayed or played.

## Control photo play

- 1 Play photo slideshow.
- 2 Use the remote control to control the photo.

Button	Action
◀	Skip to the previous photo.
▶	Skip to the next photo.
▲	Rotate the photo clockwise.
▼	Rotate the photo anti-clockwise.
<b>ZOOM</b>	Zoom in/ out. <ul style="list-style-type: none"><li>• Play will pause while in zoom mode.</li></ul>
◻	Stop play.


## Play musical slideshow

Play MP3/WMA music files and JPEG photo files simultaneously to create musical slideshow. The MP3/WMA and JPEG files must be stored on the same disc or USB device.

- 1 Play MP3/WMA music.
- 2 Navigate to the photo folder/album and press **▶||** to start slideshow play.
  - ↳ Slideshow begins and continues till the end of the photo folder or album.
  - ↳ Audio continues to play till the end of the disc.
    - To return to the menu, press **↶ BACK**.
- 3 To stop slideshow play, press **■**.
- 4 To stop music play, press **■** again.

## Play from USB device

This unit can only play/view MP3, WMA/WMV, DivX (Ultra) or JPEG files that are stored on such devices.

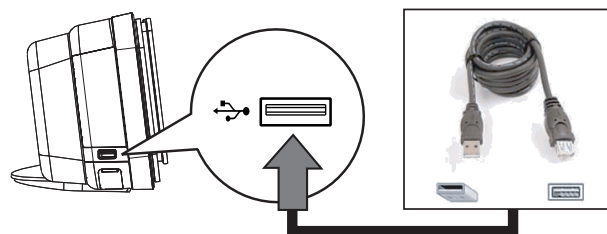

- 1 Connect a USB flash drive or USB memory card reader to the **↶ (USB)** socket on this unit.
- 2 Press **USB**.
  - ↳ A contents menu is displayed.
- 3 Select a file to play, then press **▶||**.
  - For more information, see chapters 'Play music, Play photo, Play video' for details.
- 4 To stop play, press **■** or remove the USB device.




### Tips

- If the device does not fit into the USB socket, connect it through a USB extension cable.
- If a multiple USB card reader is used, only one of the connected USB drive contents can be accessed.
- If a USB HDD is used, ensure that an auxiliary power cord connected to the USB HDD for proper operations.
- Digital cameras that use PTP protocol or require additional programme installation when connected to a PC are not supported.

## Play from portable media player

Simply connect your portable media player (e.g. MP3 player) to this unit to enjoy superb sound quality from your music collections.

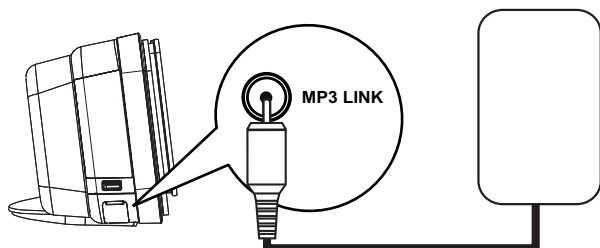

- 1 Connect a 3.5mm stereo audio cable (supplied) from the **MP3 LINK** socket on this unit to the 'headphone' socket on your portable media player.
- 2 Press **AUDIO SOURCE** repeatedly until 'MP3 LINK' is displayed.
- 3 Start play on your portable media player.
  - See chapter 'Adjust Sound' to enhance the audio output.
- 4 To stop play, press **STOP** button on your portable media player.

### Note

- Control playback is only possible on your portable media player.
- Stop play on the portable media player before you switch to other play media/source.

## Play from iPod

Simply connect your iPod to the Philips universal docking station to enjoy your iPod play through this DVD Home Theatre unit.

List of supported iPod range:

iPod mini	iPod nano 1st gen
iPod classic	iPod nano 2nd gen
iPod mini 2nd gen	iPod nano 3rd gen
iPod with colour display	iPod nano 4th gen
iPod 5th gen	iPod Touch 1st gen
iPod 6th gen classic	iPod Touch 2nd gen




### Note

- Refer to Philips website for latest updates on supported iPod range.

## Prepare the docking station

If your iPod cannot be fit into the docking station, adjust the 'support' as below.

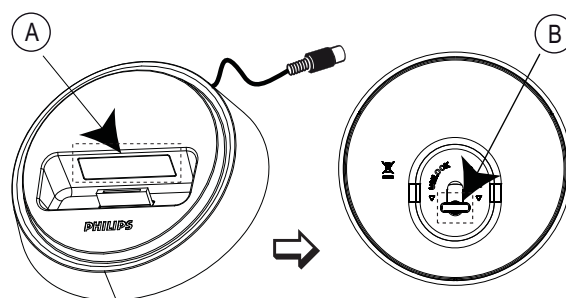


Ⓐ adjustable 'support'

Ⓑ knob

- 1 Turn the knob **Ⓑ** at the bottom of the docking station anti-clockwise to loosen the adjustable 'support'.
- 2 Adjust the 'support' **Ⓐ** until it can fit your iPod.
- 3 Turn the knob clockwise to tighten it.



## Control iPod music

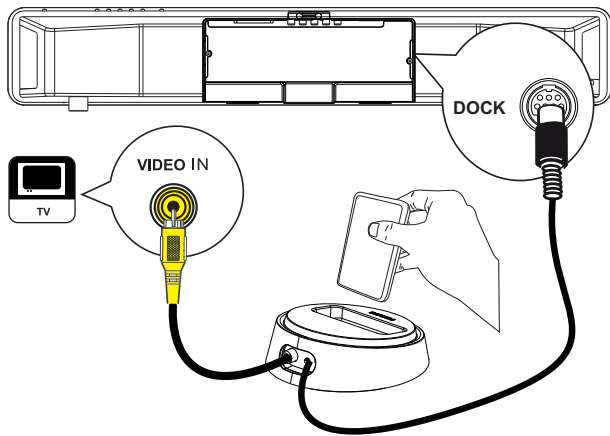

- 1 Connect the docking station to the **DOCK** socket on this unit.
- 2 Dock your iPod to the docking station and turn it on.
- 3 Press **iPod DOCK**.
  - It may require longer time to authenticate the compatibility of certain iPod range.
- 4 Start play on your iPod.
  - To view iPod video play, connect a video cable from the docking station to your TV and turn on 'TV ON' setting in your iPod.
- 5 During playback, you can use the remote control to control the music play.

Button	Action
	Change the volume level.
	Select a predefined sound effect.
	Select an Ambisound effect.
	Go to the previous/ next track.
	Search backward/ forward.
	Pause/resume play.
	Switch to 'Extended Control mode' to enable control of your iPod play through the contents displayed on TV. <ul style="list-style-type: none"> <li>• Control buttons on iPod have no function in this mode.</li> <li>• Press this button again to return to simple play mode.</li> </ul>
	Toggle through various repeat/shuffle play mode; or turn off repeat mode. <ul style="list-style-type: none"> <li>• This option is only available in 'Extended Control mode'.</li> </ul>




### Tips

- While in iPod mode, the battery of your iPod will be charged.
- In extended play mode, control of iPod play is only possible through the contents displayed on your TV using this DVD Home Theatre's remote control.

## Play from radio

Check if the FM antenna has been connected to the subwoofer. If not, connect the supplied FM antenna to the FM 75Ω socket and fix its ends to the wall.

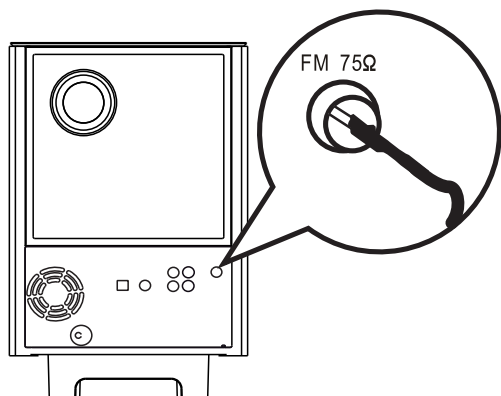

### Tips

- For better FM stereo reception, connect an external FM antenna (not supplied).
- Position the antenna as far away as possible from your TV, VCR or other radiation source to prevent unwanted interference.

## First time tuning

The first time when you access 'RADIO' mode, follow the instructions to install the radio stations.

- 1 Press **RADIO**.
  - ↳ 'AUTO INSTALL ... PRESS PLAY' is displayed.
- 2 Press **▶||**.
  - ↳ All detected radio stations are stored.
  - ↳ Once complete, it tunes to the first preset radio station.
  - To stop auto tuning, press **■**.







### Note

- This unit can store up to a maximum of 40 radio stations.
- If auto installation is not activated or less than 5 radio stations are stored, 'AUTO INSTALL' will be displayed again the next time you turn on to radio mode.
- If the FM radio station transmits RDS (Radio Data System) data, the name of the radio station will be displayed.

## Listen to radio

- 1 Press **RADIO**.
- 2 Use the remote control to control the radio.

Button	Action
	Select a preset radio station.
	Tune the radio frequency backward/ forward.
	Toggle between FM stereo and FM mono mode.
	Press and hold this button to delete the preset station from the preset list. <ul style="list-style-type: none"> <li>• The preset number for other radio stations remain unchanged.</li> </ul>

## Reinstall all the radio stations




- 1 Press **RADIO**.
- 2 Press and hold **PROGRAM** until 'STARTING INSTALL' is displayed.
  - ↳ All previously stored radio stations will be replaced.



### Note



- If no stereo signal is detected or less than 5 stations are detected during radio installation, 'CHECK ANTENNA' is displayed.

## Search and store radio stations individually


- 1 Press **RADIO**.
- 2 Press .
  - ↳ The radio frequency indication starts to change until a radio station is detected.
- 3 Repeat step 2 until you tune to the radio station you wish to store.
  - To finetune the radio frequency, press .
- 4 Press **PROGRAM**.
  - If no action is carried out within 20 seconds after the above step, it exits the preset mode.
- 5 Press  (or the **number buttons**) to select a preset number to store.
- 6 Press **PROGRAM** to confirm.

# 6 Adjust sound

## Control the volume

- 1 Press **VOL + -** to increase or decrease the volume level.
  - To mute the volume, press .
  - To restore the volume, press  again or press the volume button.

## Adjust Bass/Treble

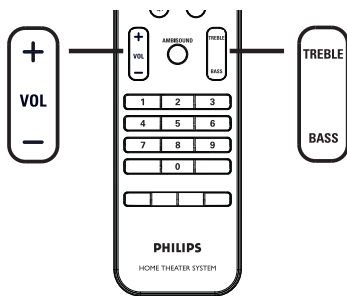


- 1 Press **BASS / TREBLE**.
- 2 Press **VOL + -** repeatedly to set the level for low (BASS) or high (TREBLE) tone.

### Note

- If the volume control is not used within 10 seconds, it resumes normal volume control function.


## Select Ambisound

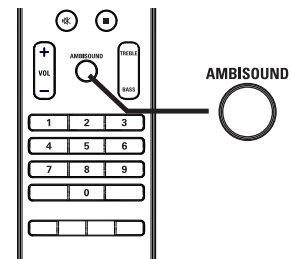

- 1 Press **AMBISOUND** repeatedly to select a best Ambisound output that most suits the video or music you play.

Options	Descriptions
AUTO	The surround output will be selected based on the audio stream of the played content.
MULTI-CHANNEL	Multi-channel surround sound.
STEREO	Stereo sound.

## Select a preset sound effect

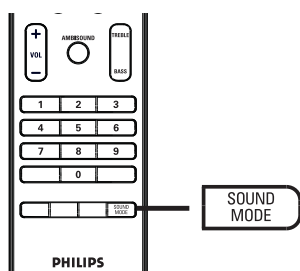





- 1 Press **SOUND MODE** repeatedly to select a sound effect that most suits the video or music you play.

Video / Music /	Descriptions
<b>ACTION / ROCK /</b>	Enhanced low and high range for great sounding movie effects and atmosphere. Great for action movies and rock/pop music.
<b>DRAMA / JAZZ</b>	Clear mid and high range. Recreates the atmosphere of a live club with the artist just in front of you. Good for Jazz music and watching dramas.
<b>CONCERT / CLASSIC</b>	Flat and pure sound mode. Ideal for listening to classical music and watching live concert DVDs.
<b>GAMING / PARTY</b>	Slightly enhanced low range and strong mid range ideal for party music and video gaming.
<b>SPORTS</b>	Moderate mid range and surround effects for clear vocals and the atmosphere of a live sports venue.
<b>NEWS</b>	Enhanced mid range for clear vocals/speech.

# 7 Adjust settings



This section describes the various setting options of this unit.





Symbol	Options
	[ <u>General Setup</u> ]
	[ <u>Audio Setup</u> ]
	[ <u>Video Setup</u> ]
	[ <u>Preference Setup</u> ]

## Note



- Underlined options are the factory default settings

## General setup

- 1 Press  **OPTIONS**.  
↳ [ General Setup ] menu is displayed.
- 2 Press .
- 3 Select an option, then press **OK**.

General Setup	
	EasyLink
	Disc Lock
	Display Dim
	OSD Language
	Screen Saver
	Sleep Timer
	Standby Mode
	DivX(R) VOD Code

- See the explanations of the above options in the following pages.

- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press  **BACK**.
  - To exit the menu, press  **OPTIONS**.


## [ EasyLink Setup ]

This feature is only applicable if this unit is connected to HDMI CEC compliant TV/device. It enables all the linked devices response or react to certain commands simultaneously with one touch control.

Options	Descriptions
[ <u>Auto Wake-up TV</u> ]	It wake-ups your TV automatically when you press <b>PLAY</b> to power up this unit and start disc play (if a video disc is found in the disc compartment). <ul style="list-style-type: none"> <li>• To disable this feature, select [ <b>Off</b> ].</li> </ul>

[ <u>System Standby</u> ]	Respond to standby command from other HDMI CEC compliant TV/devices. <ul style="list-style-type: none"> <li>• To disable this feature, select [ <b>Decline</b> ].</li> </ul>
---------------------------	--

[ <u>System Audio Control</u> ]	It enables this DVD Home Theatre unit to switch automatically to the audio input of the active device. <ul style="list-style-type: none"> <li>• To enable this feature, select [ <b>On</b> ]. Then proceed to [ <b>Audio Input Mapping</b> ] to scan and map all the connected devices.</li> </ul>
---------------------------------	--

[ <u>Audio Input Mapping</u> ]	Map the audio input to the connected TV/devices correctly to enable automatic switching of input source. <ol style="list-style-type: none"> <li>1. Press <b>OK</b> to start scanning of devices.</li> <li>2. Select the audio input to map (e.g. AUX1 Input, AUX2 Input), then press .</li> <li>3. Select the correct device that connected to this audio input, then press <b>OK</b>.</li> </ol>
--------------------------------	--

**Note**

- Your TV and other connected devices must be compliant with HDMI CEC.
- You must turn on the HDMI CEC operations on your TV/devices before you can enjoy the EasyLink controls. See your TVs/devices manual for details.
- Philips does not guarantee 100% interoperability with all HDMI CEC compliant devices.

**[ Disc Lock ]**

Set play restriction for a specific discs. Before you start, place the disc in the disc compartment (maximum 40 discs can be locked).

- **[ Lock ]** – restrict access to the current disc. The next time you want to play this disc or unlock it, you need to enter the password.
- **[ Unlock ]** – all discs can be played.

**Tips**

- To set or change your password, go to **[ Preference Setup ] > [ Password ]**.

**[ Display Dim ]**

Change the brightness level of the display panel to suit the lighting in your room.

- **[ 100% ]** – normal brightness.
- **[ 70% ]** – medium brightness.
- **[ 40% ]** – dimmest display.

**[ OSD Language ]**

Select the default on-screen menu language.

**[ Screen Saver ]**

Turn off or on the screen saver mode. It helps to protect the TV screen from being damage due to over exposure to a static image for too long.

- **[ On ]** – set the screen saver to appear after 15 minutes of inactivity (for example, in pause or stop mode).
- **[ Off ]** – disable screen saver mode.

**[ Sleep Timer ]**

Switch to standby automatically after the preset time.

- **[ Off ]** – disable sleep mode.
- **[ 15, 30, 45, 60 mins ]** – select the count down time before it switches to standby.

**[ Standby Mode ]**

Set the standby mode.

- **[ Normal ]** – normal standby power consumption. Requires shorter time to power up.
- **[ Low Power ]** – low standby power consumption. However, it requires longer time to power up.



 

**[ DivX(R) VOD Code ]**


Display the DivX® registration code.



**Tips**

- Enter this unit's DivX registration code when you rent or purchase video from [www.divx.com/vod](http://www.divx.com/vod). The DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which it is registered.

# Audio setup

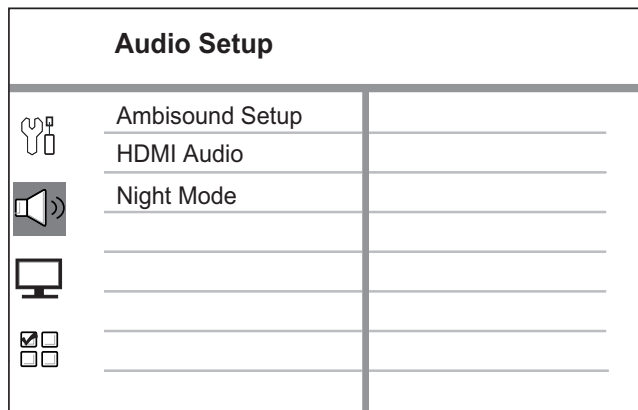- 1 Press  **OPTIONS**.  
↳ [ **General Setup** ] menu is displayed.
- 2 Press  to select  [ **Audio Setup** ], then press .
- 3 Select an option, then press **OK**.



- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press  **BACK**.
  - To exit the menu, press  **OPTIONS**.

## [ Ambisound Setup ]

Change the Ambisound setup.

Options	Descriptions
[ <b>Setup Guide</b> ]	Select this if you want to go through the complete Ambisound settings.
[ <b>Room Acoustics</b> ]	Select the type of walls that surround your room.
[ <b>Room Placement</b> ]	Select this unit placement in the room.
[ <b>Height</b> ]	Select the height at which this unit is placed.
[ <b>Listening Position</b> ]	Select the distance between your listening position and this unit.

## Tips

- See chapter 'Get Started - Start Ambisound setup' for detailed information.

## [ HDMI Audio ]

When you connect this unit and TV with HDMI cable, select the audio output setting for this connection.

- [ **On** ] – the sound is output through both your TV and this speaker system. If the audio format on the disc is not supported, it will be downmixed to two-channel sound (linear-PCM).
- [ **Off** ] – disable audio output from your TV. The sound is only output through this speaker system.

## [ Night Mode ]





Make loud sound level softer and soft sound level louder so that you can watch the DVD movies at a low volume, without disturbing others.

- [ **On** ] – for quiet viewing at night (DVDs only).
- [ **Off** ] – enjoy surround sound with a full dynamic range.



## Video setup

- 1 Press **OPTION**.  
↳ [ **General Setup** ] menu is displayed.
- 2 Press **▼** to select **[ Video Setup ]**, then press **▶**.
- 3 Select an option, then press **OK**.

Video Setup	
	TV Type
	TV Display
	Picture Settings
	Advanced Picture
	Closed Caption
	Progressive
	Component Video

- See the explanations of the above options in the following pages.
- 4 Select a setting, then press **OK**.
    - To return to the previous menu, press **↶ BACK**.
    - To exit the menu, press **OPTION**.


### [ TV Type ]

Change this setting only if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- [ **PAL** ] – for PAL-system TV.
- [ **NTSC** ] – for NTSC-system TV.
- [ **Multi** ] – for TV that is compatible with both PAL and NTSC.

### [ TV Display ]

Select the screen format according to how you want the picture to appear on your TV.

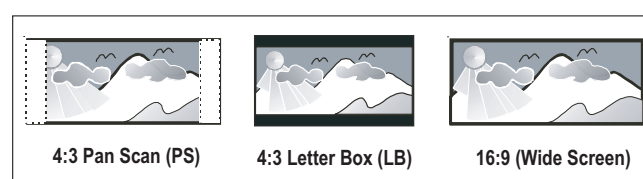

- [ **4:3 Pan Scan** ] – for standard TV, a full-height screen display with the sides trimmed.
- [ **4:3 Letter Box** ] – for standard TV, a 'wide-screen' display with black bars on the top and bottom.
- [ **16:9 Wide Screen** ] – for wide-screen TV (frame ratio 16:9).

### [ Picture Settings ]

Select a predefined set of picture colour settings or customise your personal setting.

- [ **Standard** ] – original colour setting.
- [ **Bright** ] – vibrant colour setting.
- [ **Soft** ] – warm colour setting.
- [ **Personal** ] – customise the colour setting. Set the level of brightness, contrast, tint and colour saturation in the menu, then press **OK**.

## [ Advanced Picture ]

This is an advanced setting to optimise the video output. This option is only applicable for video connection through HDMI or Component Video with Progressive Scan output.

- [ **DCDi** ] – Turn on or off Directional Correlation Deinterlacing feature. It fills the missing lines to optimise video content. It is especially effective during slow motion play.



### Note

- DCDi setting is only available for progressive scan output.

- [ **Gamma** ] – Adjust the colour of an image element (pixel) to produce a perfect and clear picture.
- [ **Chroma Delay** ] – Adjust the advance delay of chroma signals to produce a perfect and clear picture.
- [ **True Life** ] – Increase the contrast and colour intensity to produce a more dynamic picture.



### Note

- To adjust the above settings, select an option and press **OK**. Then press cursor left or right to change the value/level setting and press **OK** to confirm.

- [ **Wide Screen Format** ] – define the wide screen format for disc play.

Options	Descriptions
[ <b>Superwide</b> ]	Centre position of the screen is stretched less than the side. This setting is only applicable if the video resolution is set to 720p or 1080i/p.
[ <b>4:3 Pillar Box</b> ]	No stretching of the picture. Black bars are displayed on both sides of the screen.
[ <b>Off</b> ]	Picture will be displayed according to the format of the disc.



### Note

- This setting is only available if you have set the [ **TV Display** ] setting to [ **16:9 Wide Screen** ].

- [ **HDMI Video** ] – select a video resolution that is compatible with your TV display capability.

Options	Descriptions
[ <b>Auto</b> ]	It detects and selects the best supported video resolution automatically.
[ <b>480p, 576p, 720p, 1080i, 1080p</b> ]	Select a video resolution that best supported by your TV. See your TV's manual for details.



### Note

- If the setting is not compatible with your TV, a blank screen appears. Press **HDMI** repeatedly until the picture appears.

## [ Closed Caption ]

Turn on or off display captions.

- [ **On** ] – show the sound effects in subtitle. Only applicable to disc with Closed Caption information included and your TV supports this feature.
- [ **Off** ] – disable closed caption.

## [ Progressive ]

If your TV can support progressive signals, you can activate the progressive scan mode of this unit.

- [ **On** ] – turn on progressive scan mode.
- [ **Off** ] – disable progressive scan mode.



### Note

- This setting is only available if you have set the [ **Component Video** ] setting to [ **YUV** ].



### Tips





- See chapter 'Get Started - Turn on Progressive Scan' for detailed information.





## [ Component Video ]

Select the video output format that matches the video connection between this unit and your TV.



- [ **RGB** ] – for scart connection.
- [ **YUV** ] – for component video connection.

# Preference Setup

- 1 Press  **OPTIONS**.  
↳ [ **General Setup** ] menu is displayed.
- 2 Press  to select  [ **Preference Setup** ], then press .
- 3 Select an option, then press **OK**.

Preference Setup	
	Audio
	Subtitle
	Disc Menu
	Parental
	PBC
	MP3/JPEG Nav
	Password
	DivX Subtitle ▼

- See the explanations of the above options in the following pages.

- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press  **BACK**.
  - To exit the menu, press  **OPTIONS**.

## [ Audio ]

Select the default audio language for DVDs.

## [ Subtitle ]

Select the default subtitle language for DVDs.

## [ Disc Menu ]

Select the menu language for DVDs.

### Note

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some DVDs, the subtitle/audio language can only be changed from the disc menu.
- To select the languages that are not listed in the menu, select [ **Others** ]. Then check the Language Code list at the back of this user manual and enter the respective 4-digit language code.

## [ Parental ]

Restrict access to DVDs that are unsuitable for your children. These types of DVDs must be recorded with ratings.

1. To start, press **OK**.
2. Select a rating level in the menu, then press **OK**.
3. Press the **number buttons** to enter your 4-digit password.

### Note

- Rated DVDs above the level you set in [ **Parental** ] require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select '8'.
- Some DVDs have ratings printed on them but are not recorded with ratings. This function has no effect on such DVDs.

### Tips

- To set or change your password, go to [ **Preference Setup** ] > [ **Password** ].

**[ PBC ]**

For VCDs/SVCDs recorded with PBC (playback control,) you can access the disc contents through an interactive menu.

- **[ On ]** – an index menu is displayed when you load a disc for play.
- **[ Off ]** – skip the menu and start play from the first title.

**[ MP3/JPEG Nav ]**

Turn off or on MP3/WMA folder display when you play a media that contains MP3/WMA files.

- **[ With Menu ]** – display the folders of MP3/WMA files.
- **[ Without Menu ]** – display all the files.

**[ Password ]**

Follow the instructions on the TV to set or change the password for locked discs and play restricted DVDs.

Change Password	
Old Password	<input type="password"/>
New Password	<input type="password"/>
Confirm PWD	<input type="password"/>
<b>OK</b>	

1. Press the **number buttons** to enter '0000' or your last set 4-digit password at **[ Old Password ]** field.
2. Enter the new password at **[ New Password ]** field.
3. Enter the new password again at **[ Confirm PWD ]** field.
4. Press **OK** to exit the menu.

**Note**

- If you forget your 4-digit password, enter '0000' before you set a new password.

**[ DivX Subtitle ]**

Select a character set that supports the DivX subtitle.

<b>[ Standard ]</b>	English, Irish, Danish, Estonian, Finnish, French, German, Italian, Portuguese, Luxembourgish, Norwegian (Bokmål and Nynorsk), Spanish, Swedish, Turkish
<b>[ Central Europe ]</b>	Polish, Czech, Slovak, Albanian, Hungarian, Slovene, Croatian, Serbian (Latin script), Romanian
<b>[ Cyrillic ]</b>	Belarusian, Bulgarian, Ukrainian, Macedonian, Russian, Serbian

**Note**

- Ensure that the subtitle file has the exact same file name as the movie file. If for example the filename of the movie is 'Movie.avi', then you will need to name the text file 'Movie.sub' or 'Movie.srt'.
- Greek and Hebrew languages can be download from Philips website, see chapter 'Update software'. However, it overrides the Cyrillic language from the list.

**[ Version Info ]**

Display the software version of this unit.

**Tips**

- This information is required when you want to find out if a newest software version is available at the Philips website that you may download and install on this unit.

**[ Default ]**

Reset all the settings of this unit to factory default, except for **[ Disc Lock ]**, **[ Password ]** and **[ Parental ]** settings remain unchanged.


# 8 Additional information


## Update software

Philips provides software updates to ensure that this unit is compatible with the newest formats.

To check the updates, compare the current software version of this unit with the latest software version available at the Philips website.

- 1 Press  **OPTIONS**.

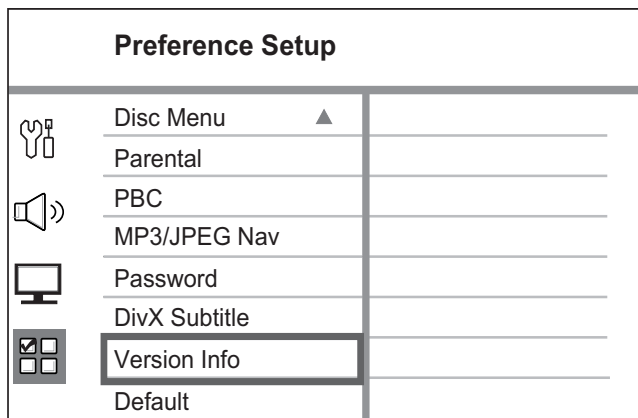

- 2 Select [ **Preference Setup** ] > [ **Version Info** ], then press **OK**.
- 3 Write down the version number, then press  **OPTIONS** to exit the menu.
- 4 Go to [www.philips.com/support](http://www.philips.com/support) to check the latest software version available for this unit.
- 5 If the latest software version is higher than the software version of this unit, download it and store onto a CD-R or USB flash drive

- 6 Insert the CD-R or USB flash drive to this unit.
- 7 Press **DISC MENU** or **USB**, then follow the instruction on the TV to confirm update operation.

### Note

- Do not remove the CD-R or USB when software updating is in progress.

- 8 Once software update is complete, this unit turns off to standby automatically.

### Note

- We recommend that you disconnect the power cord for a few seconds and connect again to reboot the system.

## Care

### Caution!

- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.

### Clean discs

Wipe the disc with a micro fibre cleaning cloth from the centre to the edge in a straight line movement.

### Clean main unit screen

Wipe the screen surface with a micro fibre cleaning cloth.

# 9 Specifications



## Note

- Specification and design are subject to change without notice.

## Playback media

- DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture CD, MP3-CD, WMA-CD, DivX-CD, USB flash drive

## Amplifier

- Total output power (Home Theatre): 500W
- Frequency response: 20 Hz - 20 kHz /  $\pm 3$ dB
- Signal-to-noise ratio: > 65 dB (CCIR)
- Input sensitivity
  - AUX SCART & AUX 1: 500 mV
  - MP3 LINK: 250 mV

## Disc

- Laser Type: Semiconductor
- Disc diameter: 12cm / 8cm
- Video decoding: MPEG1/ MPEG2 / DivX / DivX Ultra / WMV9
- Video DAC: 12 bits, 148 MHz
- Signal system: PAL / NTSC
- Video S/N: 56 dB
- Audio DAC: 24 bits / 192 kHz
- Frequency response: 4 Hz - 20 kHz (44.1 kHz)  
4 Hz - 22 kHz (48 kHz)  
4 Hz - 44 kHz (96 kHz)
- PCM: IEC 60958
- Dolby Digital, DTS: IEC60958, IEC61937

## Radio

- Tuning range: FM 87.5-108 MHz (50 kHz)
- 26dB quieting sensitivity: FM 20 dBf
- IF rejection ratio: FM 60 dB
- Signal-to-noise ratio: FM 60 dB
- Harmonic distortion: FM 3%
- Frequency response: FM 180 Hz - 10 kHz /  $\pm 6$ dB
- Stereo separation: FM 26 dB (1 kHz)
- Stereo Threshold: FM 23.5 dB

## USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)

## iPod docking station

- Dimensions (WxHxD): 34.5 x 104 (mm)
- Weight: 163.5 g

## Power (Subwoofer)

- Power supply: 220~240 V, 50 Hz
- Power consumption: 120 W
- Standby power consumption:
  - Normal: < 3.5 W
  - Low standby: < 0.3 W
- System: Bass Reflex System
- Impedance: 4 ohm
- Speaker drivers: 165 mm (6 1/2") woofer
- Frequency response: 35 Hz - 200 Hz
- Dimensions (WxHxD): 322 x 425 x 322 (mm)
- Weight: 12.7 kg

## Main unit

- Dimensions (WxHxD): 1028 x 167 x 155 (mm)
- Weight: 8.9 kg
- Centre speaker:
  - Speaker impedance: 4 ohm
  - Speaker drivers: 2 x 2.5" woofer + 2 x 1" Soft dome tweeter
  - Frequency response: 200 Hz - 20 kHz
- Left/Right surround speakers:
  - Speaker impedance: 6 ohm
  - Speaker drivers: 4 x 2.5" full range woofer
  - Frequency response: 200 Hz - 20 kHz

## Wall Mount Bracket

- Dimensions (WxHxD): 681.7 x 99 x 35 (mm)
- Weight: 1.5 kg

## Laser specification

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 645 - 660 nm (DVD),  
770 - 800 nm (CD)
- Output power: 6 mW (DVD),  
7 mW (VCD/CD)
- Beam divergence: 60 degrees.

# 10 Troubleshooting



## Warning

- Risk of electric shock. Never remove the casing of the Home Theater System.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the Home Theater System, check the following points before requesting service. If the problem remains unsolved, register your Home Theater System and get support at [www.philips.com/welcome](http://www.philips.com/welcome).

If you contact Philips, you will be asked for the model and serial number of your Home Theater System. The model number and serial number are on the back or bottom of your Home Theater System. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

## Main unit

**The buttons on this Home Theater System do not work.**

- Disconnect this Home Theater System from the power outlet for a few minutes, then connect again.
- Ensure that the interconnect cable from the subwoofer is connected to the Home Theater System.

**It takes a long time for the Home Theater System to power up.**

- This green product has low standby power consumption which requires longer time to power up. For shorter power up time:
  - 1) Press **⏏** **OPTIONS**.
  - 2) Press **▶**, then select [ **Standby Mode** ] in the menu.
  - 3) Select [ **Normal** ].

---

## Picture

**No picture.**

- See TVs manual for correct video input channel selection. Change the TV channel until you see the DVD screen.
- Press **DISC MENU**.
- If you have changed the TV type setting, switch back to default mode:
  - 1) Press **▲** to open the disc compartment.
  - 2) Press **◀**.
  - 3) Press **SUBTITLE**.
- If you have changed the progressive scan setting, switch back to default mode:
  - 1) Press **▲** to open the disc compartment.
  - 2) Press **▶**.
  - 3) Press **SUBTITLE**.

**No picture on HDMI connection.**

- Check if the HDMI cable is faulty. Replace a new HDMI cable.
- If this happens when you change the HDMI video resolution, press **HDMI** repeatedly until the picture appears.



---

## Sound

### Distorted sound or echo.

- Ensure that the TV volume is set to the minimum level if audio is output through the home theater.

### No sound.

- Ensure that the audio cables are connected and press the correct input source (for example, AUDIO SOURCE, USB) to select the device you want to play.

### No sound on HDMI connection.

- Sound cannot transmit through HDMI connection if the connected device is non-HDCP compliant or only DVI-compatible. Make an analog or digital audio connection.
- Ensure that the [HDMI Audio] setting is turned on.

### No sound from TV program.

- Connect an audio cable from the AUDIO input on this Home Theater System to the AUDIO output on your TV. Then press **AUDIO SOURCE** repeatedly to select the corresponding audio input source.

---

## Play

### Audio is not synchronised with the video playback.

- To make adjustment:
  - 1) Press and hold **AUDIO SYNC** until 'AUDIO SYNC XXX' is displayed.
  - 2) Within five seconds, press **VOL + -**.

### DivX video files cannot be played.

- Ensure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Ensure that the DivX video file is complete.

### EasyLink feature does not work.

- Ensure that the home theater is connected to an HDMI CEC compliant TV with a HDMI CEC cable.

### The aspect ratio of the screen is not aligned with the TV display setting.

- The aspect ratio is fixed on the disc.

### DivX subtitle does not display correctly.

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set:
  - 1) Press **[MENU] OPTIONS**.
  - 2) Press **▼** to select [ Preference Setup ], then press **▶**.
  - 3) Press **▶**, then select [ DivX Subtitle ] in the menu.
  - 4) Select the character set that supports the subtitle.

### The contents of the USB flash drive cannot be read.

- The USB flash drive format is not compatible with this Home Theater System.
- Drive is formatted with different file system which is not supported by this unit (e.g. NTFS).
- Maximum size of memory supported is 160GB.

### The video (movies, photos, video clips, etc) contents of the iPod does not display in Extended Control mode.

- Video browsing is not supported in Extended Control mode, you can only browse the video contents on the iPod itself.

# 11 Glossary

---

## A

### Aspect ratio

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

---

## D

### DivX®

The DivX® codec is a patent-pending, MPEG-4 based video compression technology developed by DivX®, Inc. It can shrink the file size of digital video and still maintain the high visual quality.

### Dolby Digital

A surround sound system developed by Dolby Laboratories that contains up to six channels of digital audio (front left and right, surround left and right, centre and subwoofer.)

### DTS

Digital Theatre Systems. A surround sound system for providing 5.1 channels of discrete digital audio in consumer electronics products and software content. It is not developed by Dolby Digital.

---

## H

### HDCP

High-bandwidth Digital Content Protection. This is a specification that provides a secure transmission of digital contents between different devices (to prevent unauthorised copyright.)

### HDMI

High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality, completely free from noise. HDMI is fully backward-compatible with DVI.

As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (High-bandwidth Digital Content Protection) will result in no Video or Audio output.

---

## J

### JPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognised by their file extension '.jpg' or '.jpeg.'

---

## M

### MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

### MPEG

Motion Picture Experts Group. A collection of compression systems for digital audio and video.

---

## P

### PBC

Playback Control. A system where you navigate through a Video CD/Super VCD with on-screen menus that are recorded onto the disc. You can enjoy interactive playback and search.

### PCM

Pulse Code Modulation. A digital audio encoding system.

### Progressive scan

The progressive scan displays twice the number of frames per second than in an ordinary TV system. It offers higher picture resolution and quality.

---

## W

### WMA

Windows Media™ Audio. Refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded with Windows Media player version 9 or Windows Media player for Windows XP. Files are recognised by their file extension '.wma.'

### WMV

Windows Media Video. Refers to a video compression technology developed by Microsoft Corporation. WMV content can be encoded by using Windows Media® Encoder 9 series. Files are recognised by their file extension '.wmv'.