

Register your product  
and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

SRP1103/27



EN User Manual

**PHILIPS**

# Table of contents

<b>1 Your SRP1103 .....</b>	<b>2</b>
<b>2 Getting started .....</b>	<b>3-7</b>
2.1 Inserting the batteries.....	3
2.2 Setting up the universal remote control.....	3-7
<b>3 Using the universal remote control.....</b>	<b>7-11</b>
3.1 Buttons and functions.....	7-10
3.2 Resetting a button to its original function.....	11
<b>4 Service and support .....</b>	<b>12-16</b>
4.1 Frequently asked questions.....	12-14
4.2 Need help? .....	14
FCC Compliancy.....	15
Notice for Canada .....	16
Helpline .....	17
Brand list .....	18-31

## 1 Your SRP1103

Congratulations on your purchase of the Philips SRP1103 universal remote control. After setting up the remote control you can operate up to 3 different devices with it.

### Simple Setup

The universal remote control comes with the innovative Simple Setup technology.

After setup, the SRP1103 can operate TV, DVD player / recorder (including Blu-ray player) and all common Cable, Satellite and other set top boxes, such as DirecTV, Comcast, AT&T, Verizon, Time Warner, Scientific Atlanta, TiVo and many more.


Simply follow the instructions in chapter **2.2** to set up the remote control for your devices.

To fully benefit from the support that Philips offers, register your product at:  
[www.philips.com/welcome](http://www.philips.com/welcome)

## 2 Getting started

### 2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

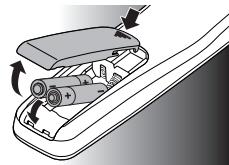

#### Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

### 2.2 Setting up the universal remote control

The example below instructs you how to set up your universal remote control for your TV. You can repeat the same steps for other devices (DVD player / recorder and Cable / Satellite box) which you want to operate, using the SRP1103.

The remote control can be set up to operate any 3 of the following devices:

Device name	Description
TV	Traditional TV, LCD / Plasma TV and projection TV, TV part of TV / DVD combos
DVD	DVD player / recorder (DVDR), DVD / Hard Disk Drive combination (DVDR-HDD), Blu-Ray player, High Definition DVD player (HD-DVD), DVD part of TV / DVD-combos

CBL/SAT	Cable box, satellite receiver; Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV) and TiVo
---------	--

**Example: setting up the universal remote control to operate your TV:**

1 Switch ON the TV manually or use the original remote control for this. Tune to channel 1.

2 Press and hold the  device selection button for 5 seconds until the red Setup light  blinks.  

- The remote control is now in setup mode.

3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.  



A 4-digit code is shown for each brand.

Use the digit buttons to enter the code for your brand.

If the red Setup light  turns off, an invalid code was entered. In this case, try again.

4 Aim the remote control at the TV. Press and hold the  button. Release it immediately as soon as the TV switches off.

This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

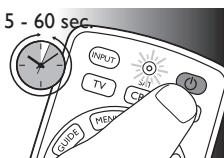

**5 Switch ON the TV.**

Try out the buttons you need for operating it. Try, for example, if the - CH + and digit buttons function properly.

If a button does not work as expected, press and hold that button. Release it immediately as soon as it works. For more information, see chapter 2.2.2.

6 Press the  device selection button twice to finish setup.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.



**Important**

If you made a mistake:

- Press the device selection button twice to exit setup. The red Setup light  turns off.
- Restart from the beginning.
- If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.

**2.2.1 Setting up the remote control for other devices (DVD player / recorder and Cable / Satellite box)**

1 Make sure the device is switched on and operational. E.g. insert a disc in the DVD player / recorder.

2 Then follow steps 2 to 6 of 'Setting up the universal remote control to operate your TV'. Make sure to use the correct device selection button:  or .

## 2.2.2 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected. In this case you can have the remote control search for alternatives.



### Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

#### During initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Press the button that does not function, keep it pressed and *immediately* release it when the device responds. Repeat this for every button that does not function.
- If the button still does not function as expected, try pressing it again for a longer period of time.

#### After initial setup


- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Select the device that you wish to operate (e.g. DVD). Press the **(DVD)** device selection button to select DVD.



## 3 Keep buttons

**①** and **④** pressed simultaneously for 5 seconds.

- The red Setup light lights up. The remote control is now in setup mode.

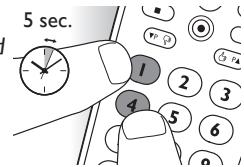

## 4 Press and hold


the button that does not function and *immediately* release it when the device responds.

- If the button still does not function as expected, try pressing it again for a longer period of time.

## 5 Press the **(DVD)**

device selection button *twice* to save your settings and exit setup mode.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

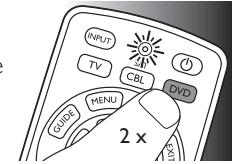

## 3 Using the universal remote control


### 3.1 Buttons and functions

The illustration on page 8 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.



### Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP1103 (e.g. Info / Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP1103.

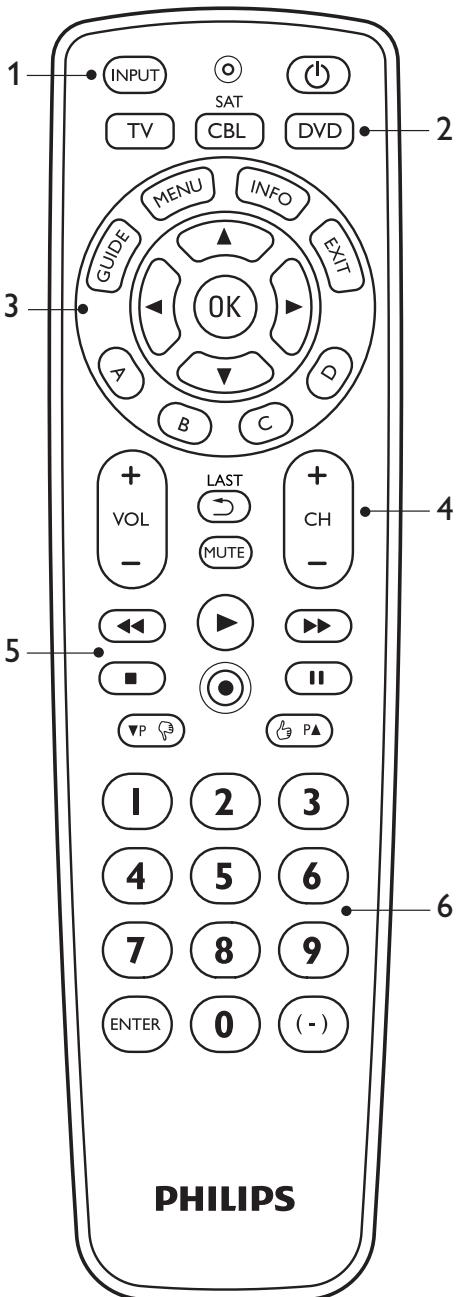


- 1** selects available source inputs (antenna, cable, etc.).  
 setup light. Lights up when a remote control command is being sent, when you just selected a device and when the remote control is in setup mode.  
 switches the selected device on / off.


#### Note

For some TV brands / types, the button will only turn off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.

- 2** device selection buttons. Select the device to be operated.

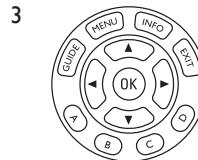

- GUIDE** ..... electronic program guide.  
**MENU** ..... menu on / off.  
**INFO** ..... on-screen channel information.  
**EXIT** ..... exits / clears on-screen menu displays.  
**▲ ▼ ◀ ▶** ..... cursor up, down, left, right in a menu.  
**OK** ..... confirms your selection.  
**A, B, C, D** ..... context sensitivity buttons, ordered following the requirements for cable boxes. A - Yellow, B - Blue, C - Red, D - Green.

 

- + VOL -** ..... adjusts TV volume.  
**LAST** ..... previous program / Last / Back.  
**MUTE** ..... mutes TV sound.  
**+ CH -** ..... next / previous channel.






- ◀** ..... rewind.  
**▶** ..... play.  
**▶▶** ..... fast forward.  
**■** ..... stop.  
**●** ..... record.  
**||** ..... pause.  
**▼P ▲P** ..... previous (▼P) / next (▲P) page / track in various modes.  
**⌚ / 🤗** ..... set your Thumb ratings.  
**1 2 3** ..... digit buttons for direct channel / track selection.  
**4 5 6**  
**7 8 9**  
**0**

- ENTER** ..... used after direct channel selection. Some devices require **ENTER** to be pressed after channel selection.  
**(-)** ..... selects between one and two-figure channel numbers.

## 3.2 Resetting a button to its original function

If an improved button (see chapter 2.2.2) still does not function as expected, you can always reset the button to its original function.

- 1 In the current device mode, keep digit buttons ① and ⑥ pressed **simultaneously for 5 seconds**, until the red Setup light ⑦ lights up.
  - The remote control is now in setup mode.
- 2 Press digit buttons ⑨, ⑨ and ⑥, in that order:
  - After each button press the red Setup light ⑦ blinks once.
- 3 Press the button that you wish to reset **twice**. E.g. the **▶▶** button.
  - After each button press the red Setup light ⑦ blinks once.
  - The red Setup light ⑦ will blink one more time to confirm that the button was successfully reset to its original function.

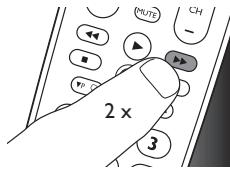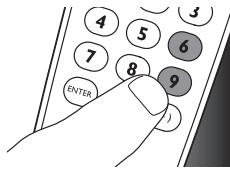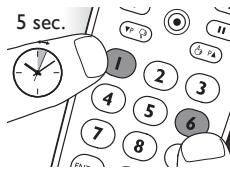

# 4 Service and support

## 4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

### 4.1.1 Setup

#### I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.

After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

**The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.** The 'Shortlist of brands' only mentions the most common TV, DVD and CBL/SAT brands.

- You will find a complete brand list on page 18-31 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

#### My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.2) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

**After setup, not all buttons work as expected.**

- Try improving the button(s). See chapter 2.2.2.

#### How do I set the remote control for my TV / DVD combo?

Some combo devices require you to set up two different source selection buttons to control both parts of the combo device. If you have a TV / DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV / DVD combo.

### 4.1.2 Operation

#### The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.

After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

#### The device I want to operate does not respond at all / does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.2.2.

Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

### 4.1.3 Batteries

**Will my settings be deleted when I replace the batteries?**

No. All user settings will be retained in the remote control memory for 5 minutes.



#### Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

### 4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP1103, you can always contact us.

When calling our helpline, make sure to have the SRP1103 at hand when you call, so that our operators can help you determine whether the SRP1103 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP1103/27.

Date of purchase:

...../...../.....

(day/month/year)

For **online support** go to:

[www.philips.com/welcome](http://www.philips.com/welcome)

- Click 'Support' and follow the on-screen instructions.

### FCC Compliancy

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.



#### Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## Caution

User changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Helpline

Country	Phone number
United States of America / Canada	001-888-744-5477

## Notice for Canada

This class B digital apparatus complies with Canadian ICES-003.

888 .....	0006 (DB1)	Amphion Media Works.....0135
<b>A</b>		Amplivision...0138
A.R. Systems.	0012	Ampro.....0139
ABC.....	0013	Amstrad .....0140
Abex .....	0014	AMTC .....4015 (DB1)
ABS.....	0016	Amtron.....0141
Accele Vision	4194	AMW.....0143
Access HD....	3554	Anam .....0146
Accurian.....	0022	Anam National
Acer.....	0028	.....0147
Acura.....	0036	Anglo .....0151
ADC.....	0040 (DB1)	Anitech .....0154
Addison.....	0043	Ansonic.....0156
Adelphia.....	4195	Antronix.....0159
Admiral.....	0046	AOC.....0165
Advent .....	0054	Aolinpiya.....4089 (DB1)
Adventura....	0055	Apache.....0169
Adyson.....	0058	Apex .....3691
Agashi.....	0063	Apex Digital.0170
Agazi.....	3522 (DB1)	Apple.....0172
AGB.....	0064	Arcam.....0179
Aiko.....	0069	Archer.....0180
Aim .....	0070	Archos.....0181
Aiwa .....	0072	Ardem.....0184
Akai.....	0074	Aristona.....0192
Akiba.....	0078	Arrgo .....0197
Akira.....	0079 (DB1)	Arris.....4931 (DB1)
Akito.....	0082	Artec.....4016
Akura .....	0083	Asberg.....0205
Alaron.....	0085	Asha.....0209
Alba .....	0086	Aspire .....4233
Albatron.....	0087	Astar.....0218
Alco .....	0092	Asuka.....0227
Alienware .....	0099	AT&T .....3453
Allegro.....	0103	Atlantic.....0233
Alleron .....	0104	Atori.....0237
Allorgan.....	0105	Audio Dynamics
Allstar.....	0108	.....0248
Alpha Digital	4014	Audiosonic....0264
AlphaStar.....	0113	Audioton .....0266
Alpine .....	0114	Audiovox .....0268
America Action .....	0123	Autovox .....0280
American High .....	0125	Aventura.....0287
Americast.....	0127	Awa .....0296
		Axon .....0299

<b>B</b>		BskyB.....0436	
Baihua .....	4092	(DB1) BTC .....	0439
Baird .....	0311	Bush.....0445	
Bang & Olufsen .....	0314	By:sign.....0448	
Baohuashi .....	0316 (DB1)	<b>C</b>	
Basic Line.....	0325	Cable Star.....0454	
Bastide.....	0327	Cabletenna ...0456	
Baur .....	0331	Cableview.....0458	
Bazin .....	0335	Cablevision ...4238	
BBT .....	0338	Caihong .....0462	
Beaumark .....	0340	Caixing.....4093 (DB1)	
Beijing .....	0345	California Audio	
Beko .....	0346	Labs.....0467	
Belcor .....	0348	Calix.....0468	
BELL .....	4376 (DB1)	Candle.....0480	
Bell & Howell .....	0350	Canon.....0481	
Bell ExpressVu .....	0352 (DB1)	Capsonic.....0486 (DB1)	
Bell South .....	0353	Captive Works .....	0487
BenQ .....	0359	Carad.....0488	
Beon .....	0361	Carena.....0489	
Best .....	0364	Carnivale.....0491	
Bestar.....	0368	Carrefour.....0492	
Bestar-Daewoo .....	0369	Carver.....0494	
Binatone .....	0378	Cascade.....0496	
Black Star .....	0386	Casio .....0499	
Blacktron .....	3526	Catha .....4094	
Blackway .....	0388	Cathay .....0501	
Blaupunkt.....	0390	CCE .....0504	
Blue Parade..	0394	Celebrity .....	0509
Blue Sky .....	0395	Celera.....0510	
Blue Star.....	0396	Centurion.....0520	
Bondstec .....	0403	Century.....0521	
Boots .....	0405	CGE.....0523	
BOSS .....	4197	Bondstec .....	0403
BPL.....	0413	Changcheng ..0526	
Bradford .....	0414	Changfei .....0527	
Brandt.....	0416	Changfeng.....0528 (DB1)	
Brillian .....	0422	Changhai.....0529	
Brinkmann .....	0423	Changhong ..0530	
Brionvega.....	0424	Channel Master .....	0531
Britannia .....	0425	Chaparral.....0533	
Chun Yun .....	0425	Ching Tai.....0541	
Brockwood..	0430	Chunfeng ..0545	
Broksonic.....	0432	Chung Hsin...0547	

Chunlan .....	4097 (DB1)	Cytron .....	0680	DVD2000 .....	0844	Exquisit .....	0978
Chunsun .....	0549			D-Vision .....	0684		
Cimline .....	0552	<b>D</b>		Dwin .....	0848	<b>F</b>	
CineVision .....	0562	Daeryung .....	0691	Dynatech .....	0854	Fagor Life .....	4102
Citizen .....	0567	Daewoo .....	0692	Dynatron .....	0855	Feilang .....	0990
City .....	0569	Danichi .....	3914	Dynex .....	3476	Feiliu .....	0991
Clarion .....	0575	Dansai .....	0699			Feiyan .....	0992 (DB1)
Clarivox .....	0576	Dantax .....	0702	<b>E</b>		Feiyue .....	0993
Clatronic .....	0581	Davidson .....	4202	Eastern .....	0859	Fenmenti .....	4103
Clearmaster ..	0583	Dawa .....	0707	ECHOSPHERE .....		Fenner .....	0994
ClearMax .....	0584	Daytron .....	0710	.....4396 (DB1)		Ferguson .....	0996
CMS .....	0590	DBX .....	0712	EchoStar .....	0866	Fidelity .....	0998
CMS Hightec ..	0591	Decca .....	0718	Eclipse .....	0867	Filsai .....	1000
Coby .....	0597	Deitron .....	0722	Eiki .....	0874	Finlandia .....	1003
Colortyme .....	0601	Dell .....	0725	Elbe .....	0880	Finlux .....	1004
ColourVoice ..	0602	Denon .....	0731	Elbe-Sharp .....	3529	Firststar .....	1007
Colt .....	0603	Denver .....	0733	Elcit .....	0883	Firstline .....	1008
Comcast .....	3456	Desay .....	0737	Electroband .....	0888	Fisher .....	1009
Commercial Solutions .....	0615	Desmet .....	0738	Electrograph .....	0889	Flint .....	1014
Comtronics ..	0623	Diamant .....	0746	Electrohome .....	0890	FNR .....	1016
Concerto .....	0625	Diamond .....	0747	Electrophonic .....		Focus .....	1017
Concorde .....	0626	Diamond Vision .....		.....0893		Formenti .....	1023
Condor .....	0627	.....0748		Elektra .....	0896	Formenti-Phoenix .....	
Conrowa .....	0634	Digatron .....	0751	Element .....	3477	.....1024	
Contec .....	0635	Digi .....	0754	ELG .....	0900	Fraba .....	1030
Contec/Cony4199 .....		Digiline .....	0759	Elin .....	0902	Friac .....	1040
Coolmax .....	0642	Digital Stream .....		Elite .....	0903	Frontech .....	1042
Coolsat .....	0643	.....3809		Elmak .....	0907 (DB1)	Fuji .....	1047
Coship .....	0646	Dimensia .....	3569	Elta .....	0910	Fujitsu .....	1052
Cosmel .....	0647	Director .....	0793	Emerson .....	0917	Fujitsu General .....	
COX .....	4200	DirecTV .....	0794	Emperor .....	0921	.....1053	
Craig .....	0650	Dish Network .....		Emprex .....	0922	Funai .....	1056
Crosley .....	0655	System .....	0799	Enterprise .....	0931	Furi .....	1057
Crossdigital ..	0656	Dishpro .....	0800	Envision .....	0933	FUTEC .....	3960 (DB1)
Crown .....	0658	Disney .....	0803	Epson .....	0937	Futuretech .....	1064
CS Electronics .....	0663	Dixi .....	0807	Erres .....	0942	<b>G</b>	
CTC .....	0664	Dongda .....	0820	ESA .....	0943	Galaxi .....	1068
CTX .....	0665	Donghai .....	0821	ESC .....	0945	Galaxis .....	1069
Curtis Mathes .....	0667	Drake .....	0825	Ether .....	0948	Garrard .....	1075
CXC .....	0670	Drean .....	0832	Etron .....	0949	Eurofeel .....	0954
CyberHome ..	0672	DSE .....	0833	EuroLine .....	0955 (DB1)	Gateway .....	1076
Cybernex .....	0673	DTS .....	0837	Euroman .....	0956	GBC .....	1078
CyberPower ..	0674	Dual .....	0838	Europa .....	0957	GC Electronics .....	
Cybertron .....	0675	Dual-Tec .....	3528	Europhon .....	0959	.....1080	
		Dumont .....	0840	Everquest .....	0971	GE .....	1081
		Durabrand .....	0842	Expressvu .....	0977	GEC .....	1083
		Dux .....	0843			Gehua .....	1086

Geloso.....	1087	HCM .....	1210
Gemini.....	1089	Headquarter.	1214
General Instrument .....	1093	Hello Kitty .....	1221
General Technic .....	1095	Hema.....	1222
Genexxa .....	1097	Hemmermann .....	1223
GFM.....	3820	Hewlett Packard .....	1229
Giant.....	1113	Higashi.....	1234
Gibralter.....	1114	Highline.....	1236
Go Video.....	1126	Hikona.....	1237
GOL.....	1130	HilLine .....	3533
GoldHand .....	1136	Hinari.....	1243
Goldline.....	1138	Hisawa.....	1247
GoldStar.....	1140	Hisense .....	1249
Goodmans....	1142	Hitachi .....	1251
Goodmind ....	1143	Hitachi Fujian	1252
GPM.....	1149	Hiteker .....	1255
Gradiente .....	1151	Hitsu .....	1257
Graetz .....	1152	Hoehler .....	1262
Granada.....	1154	Hongmei.....	1272
Grandin.....	1156	Hongyan.....	1274 (DB1)
Greenhill .....	1157	Hornyphon.....	1277
Gronic .....	1160	Hoshai.....	1278
Grundig .....	1162	Howard .....	
Grunpy.....	1165	Computers...	1281
		HP.....	1283
<b>H</b>		HTS.....	1285
Haier .....	1175	Huafa.....	1287
Haihong.....	1176	Huanghaiwei.	1288
Haiyan.....	1177 (DB1)	Huanghe.....	1289
Halifax .....	1179	Huanglong.....	1290
Hallmark.....	1180	Huangshan .....	1291
Hamlin.....	1182	Huanyu .....	1292
Hampton .....	1183	Huaqiang.....	1293 (DB1)
Hankook .....	1188	Huari .....	1294
Hanseatic.....	1190	Hughes.....	4205
Hantarex.....	1192	Hughes Network .....	
Hantor.....	1193	Systems.....	1296
Harley Davidson .....	1197	Humax.....	1298
		Hush.....	1304
Harman/Kardon .....	1198	Hygashi .....	1308
Harvard .....	1202	Hyper .....	1309
Harwood .....	1204	Hypson .....	1312
Hauppauge....	1206	Hytex .....	1314
Havermy.....	1208	Hyundai .....	1315

<b>I</b>	
Iberia .....	1320
iBUYPOWER .....	1322
ICE.....	1324
ICeS .....	1325
Illico.....	4206
iLo.....	1341
iLuv.....	4234
Ima.....	1342
Imperial .....	1346
Imperial Crown .....	1347 (DB1)
Indiana .....	1350
Infinity .....	1352
InFocus.....	1353
Ingelen .....	1354
Ingersol .....	1355
Initial .....	1356
Inno Hit .....	1358
Innova.....	1359
Innovation .....	1360
Insignia.....	1368
Instant Replay .....	3580
Integra .....	1370
Inteq .....	1373
Interbuy .....	1376
Interfunk .....	1377
Internal .....	1379
International..	1380
Intervision.....	1386
IR.....	4110
Irradio .....	1396
Isukai .....	1402
iSymphony .....	3755
ITC .....	1404
ITS .....	1405
ITT .....	1406
ITV .....	1408
<b>J</b>	
Janeil .....	1414
Jasco .....	1415
JBL .....	1420
JC Penney .....	4208
JCB.....	1421
JCL.....	4209
Jean .....	1424
Jensen .....	1429
Jerrold.....	1431
Jiahua.....	1435 (DB1)
JiaLiCai.....	1436 (DB1)
Jinque .....	1440 (DB1)
Jinta .....	1441 (DB1)
Jinxing .....	1442
Juhua.....	1461 (DB1)
JVC .....	1464
jWin.....	1465
<b>K</b>	
Kaige .....	1470 (DB1)
Kaisui .....	1471
Kamp .....	1475
Kanghua .....	1477
Kangli .....	1478 (DB1)
Kangyi .....	1479 (DB1)
Karcher .....	1484
Kawa .....	1487
Kawasaki .....	1488
Kawasho .....	1489
Kaypani .....	1490
KEC .....	1496
Kendo .....	1500
Kenwood .....	1507
KIC .....	1512
Kingsley .....	1520
Kioto .....	1523
Kiton .....	1525
KLH .....	1529
Kloss Novabeam .....	
Isukai .....	4210
Kneissel .....	1535
Kodak .....	1540
Kolin .....	1541
Kolster .....	1543
Kongque .....	1545 (DB1)
Konig .....	1547
Konka .....	1548
Korpel .....	1552
Kortting .....	1554
Kosmos .....	1557
Koss .....	1558
KTV .....	1572

Kuaile.....	1573 (DB1)	Magnadyne ....	1702	Minutz.....	1847	Nicamagic.....	1994
Kunlun .....	1578 (DB1)	Magnafon.....	1703	Mitsubishi.....	1855	Nikkai.....	1998
Kyoshu.....	1583	Magnasonic....	1704	Mivar .....	1857	Nikko .....	2000
Kyoto.....	1585	Magnavox .....	1706	MoDeng.....	4120 (DB1)	Niveus Media	
		Magnin.....	1708	Monivision....	1872	.....	2012
<b>L</b>		Magnum .....	1709	Montgomery		Noblex.....	2013
L&S Electronic		Majestic.....	1713	Ward.....	4212	Nobliko.....	2014
.....	1588	Mandor .....	1717 (DB1)	Morgans .....	3970	Nokia .....	2017
Landel.....	1593	Manesth.....	1718	Motorola.....	1878	Norcent.....	2020
Lasonic .....	1600	Manhattan ....	1719	Movie Time....	1880	Nordic.....	2021
Layco.....	4117	Marantz.....	1724	MTC .....	1889	Nordmende..	2022
Lecson.....	1606	Mark.....	1731	MTlogic.....	1892	Nordvision....	3543 (DB1)
Lenco .....	1615	Marta .....	1735	Mudan .....	1896 (DB1)	Normerel .....	2024
Lenoir .....	1617	Masuda.....	1744	Multistandard		Northgate .....	2027
Lenoxx.....	1618	Matsui.....	1750	.....	1904	Noshi .....	2030
Lesa.....	1622	Matsushita....	1751	Multisystem...4121 (DB1)		Nova Vision ...	2032
Lexicon .....	1625	Maxent.....	1757	Multitec.....	1906	Novaplex....	2034
Leyco .....	1627	Media Center PC		Multitech.....	1907	Novatronic....	2035
LG.....	1628	.....	1777	MultiVision....	1909	NSC.....	2042
LG/Goldstar ..3536 (DB1)		Mediator .....	1784	Murphy .....	1911	NTC.....	2045
Liesenker.....	3537 (DB1)	Medion.....	1787	Musikland.....	1915		
Liesenker & Tter		Medison.....	1788			<b>O</b>	
.....	1630	MegaCable....	4211			Oak.....	2059
Liesenkotter ..1631		Megapower...	1791			Okana.....	4122
Life.....	3538 (DB1)	Megatron .....	1795			Okano .....	2065
Lifetec.....	1633	MEI.....	1796			Olevia .....	2067
Linksys.....	1640	Meile.....	1797 (DB1)			Olympus.....	2071
Lindsay .....	1642	MeiShi.....	4118 (DB1)			Nanbao.....	1934 (DB1)
Liquid Video ..1644		Melectronic ..	3654			Onimax.....	2082
LiteOn.....	1645	Memorex.....	1800			Nansheng .....	1935 (DB1)
Lloyd's.....	1648	Memphis .....	1802			Onkyo .....	2085
Local IndiaTV		Mercury.....	1804			National Panasonic	
.....	1653	Metz .....	1810	.....	4661	Onwa.....	2087
Loewe.....	1660	MGA .....	1811			Opera.....	2090
Loewe Opta.3540		MGN Technology				NEC.....	1950
Logik.....	1661	.....	1812			Neckermann.	1951
Longjiang.....	1664 (DB1)	MicroGEM....	4024			NEI .....	1952
Luma .....	1674	Micromaxx....	1822			Nesa .....	1959
Lumatron.....	1676	Microsoft.....	1826			Nesco .....	1960
Lux May.....	1680	Microstar .....	1827 (DB1)			Net Brazil .....	1962
Luxman.....	1682	Midland .....	1831			Netsat.....	1966
Luxor .....	1683	Minato .....	1835			NetTV .....	1967
LXI.....	1686	Mind .....	1837			Neufunk .....	1970
		Minerva .....	1838			New Tech .....	1979
<b>M</b>		Minoka .....	1840			New World...1980	
M & S.....	1687	Minolta .....	1841			Newave .....	1981
Madison.....	1698	Mintek .....	1845			Next Base .....	1983
						Next Level....	1984
						Nexus.....	1989
						NexxTech.....	1990

<b>P</b>	
Pace .....	2134
Pacific .....	2135
Pael .....	2140
Palladium .....	2145
Palsonic .....	2147
Panama .....	2149
Panasonic .....	2153
Panavision .....	2154
Panda .....	2155
Pansat .....	2158
Panther .....	2160
Paragon .....	2161
Pathe Cinema .....	2168
Pausa .....	2171
Paysat .....	2173
PCT .....	4213
Penney .....	2182
Pentax .....	2183
Perdio .....	2185
Perfekt .....	2186
Philco .....	2192
Philharmonic .....	2194
Philips .....	2195
Philips Magnavox .....	3715
Phoenix .....	2199
Phonola .....	2201
Phonotrend .....	2202
Pilot .....	2207
Pioneer .....	2212
Pionier .....	2213
Plantron .....	2219
Plasmsync .....	4230
Playsonic .....	2224
Polaroid .....	2230
Polk Audio .....	2232
Poppy .....	2236
Popular Mechanics .....	2237
Portland .....	2238
Powerpoint .....	2241
Prandoni Prince .....	4125
Precision .....	2244
Prelude .....	2247
Priceclub .....	2252
Prima .....	2253
Primestar .....	2257
Princeton .....	2258
Prinz .....	2260
Prism .....	2261
Proceed .....	2267
Profekt .....	4126
Profex .....	2269
Profilo .....	2272 (DB1)
Profitronic .....	2273
Proline .....	2274
Proscan .....	2279
Prosonic .....	2282
Protech .....	2284
Proton .....	2288
Protron .....	2289
Provieu .....	2290
ProVision .....	2291
Pulsar .....	2296
Pye .....	2302
Pymi .....	2304
<b>Q</b>	
Qingdao .....	2308 (DB1)
Quarter .....	2318
Quartz .....	2319
Quasar .....	2320
Quelle .....	2322
Questa .....	2324
Qwestar .....	2326
<b>R</b>	
Radialva .....	2329
Radio .....	4128
Radio Shack /	
Realistic .....	4214
Radiola .....	2330
Radiomarelli ..	2331
RadioShack ..	2333
Radiotone .....	2334
Radix .....	2335
Randex .....	2343
RCA .....	2351
Realistic .....	2354
Recor .....	2359
Recoton .....	2361
Rectiligne .....	2362
Redstar .....	2366
Reflex .....	2368
Regal .....	2370
Regency .....	2371
Regent .....	2372
Rembrandt .....	2375
Reoc .....	2379
ReplayTV .....	2380
Revox .....	2383
Rex .....	2385
RFT .....	2386
Rhapsody .....	2387
Ricavision .....	2388
Rio .....	2393
R-Line .....	2327
Roadstar .....	2398
Rogers .....	4215
Rotel .....	2414
Rowa .....	2416
Runco .....	2423
<b>S</b>	
Saba .....	2429
SageTV .....	4981 (DB1)
Saisho .....	2437
Savod .....	2439
Salora .....	2443
Sambers .....	2445
Sampo .....	2446
Samsung .....	2448
Sandra .....	2454
Sanjian .....	2455 (DB1)
Sanky .....	2456
Sansui .....	2458
Sanyo .....	2462
Sanyuan .....	2464
SBR .....	2492
Sceptre .....	2498
Schaub Lorenz .....	
Schneider .....	2501
Scientific Atlanta .....	
Scimitsu .....	2505
Scotch .....	2506
Scott .....	2508
Sears .....	2514
SEG .....	2522
SEI .....	2524
Sei-Sinudyne ..	2525
Seleco .....	2528
Sencora .....	2531
Sensory Science .....	
Sentra .....	2534
Serino .....	2539
Shancha .....	2546 (DB1)
Shanghai .....	2547
Shaofeng .....	2549
Sharp .....	2550
Sharper Image .....	
R-Line .....	2551
Shen Ying .....	2552
Shencai .....	2553
Sheng Chai .....	3922
Shenyang .....	2555
Sherwood .....	2557
Shinco .....	2560
Shinsonic .....	2562
Shintoshi .....	2564
Shivaki .....	2567
Shogun .....	2568
Siam .....	2572
Siarem .....	2573
Siemens .....	2574
Siera .....	2576
Sierra .....	3549 (DB1)
Sigma Designs .....	
Sanjian .....	2579
Signal .....	2581
Signature .....	2582
Silva .....	2591
Silva Schneider .....	
SBR .....	2592
Silver .....	2594
Simpson .....	2598
Sindyne .....	4510
Singer .....	2599
Sinudyne .....	2601 (DB1)
SKY .....	2610
Skygiant .....	2618
Skyworth .....	2631 (DB1)

SL Marx .....	2633	Superscan .....	2786	Telegazi .....	2917
Sogera .....	2649	SuperTech .....	2789	Telemeister .....	2924
Solavox .....	2654	Supervision .....	2791	Telesonic .....	2930
Sonawa .....	2663	Supra .....	2792	Telestar .....	2931
Sonic Blue .....	2667	Supre-Macy .....	2794	Teletech .....	2934
Sonicview .....	3954	Supreme .....	2795	Teleton .....	2935
Soniko .....	2669	Sutron .....	2798	Televideon .....	2938
Sonitron .....	2671	SVA .....	2800	Television .....	2939
Sonneclair .....	2673	Sydney .....	2808	Tennessee .....	2952
Sonoko .....	2675	Sylvania .....	2809	Tensai .....	2954
Sontec .....	2677	Symphonic .....	2810	Tenson .....	2955
Sony .....	2679	Synco .....	2811	Terapin .....	2958
Sound & Vision .....	2814	Syntax .....	2814	Tevion .....	2962
.....	2680	Syntax-Brilliant .....	4231	Texet .....	2963
Soundesign .....	2684	.....	.....	Texscan .....	2965
Soundwave .....	2689	Sysline .....	2815	TFC .....	2967
Sowa .....	2691	Systemax .....	2817	Theta Digital .....	2970
Squareview .....	2703	Sytong .....	2820	Thomas .....	2971
Srypton .....	4138			Thomson .....	2972
SSS .....	2708			Thorn .....	2974
Stack .....	4218	Tacico .....	2823	Thorn-Ferguson .....	2976 (DB1)
Standard .....	2713	Tagar Systems .....	2831	Time Warner .....	3518
Standard .....	2831	Tai Wah .....	4139 (DB1)	Timeless .....	2985
Components .....	2714	Taishan .....	2835	Tivax .....	3956
Star Choice .....	2716	Tandy .....	2843	Tivo .....	2991
Starcom .....	2722	Tashiko .....	2850	TMK .....	2994
Stargate .....	2723	Tatung .....	2852	TNCi .....	2996
Starlite .....	2728	TCL .....	2856 (DB1)	Tobo .....	2999 (DB1)
Starquest .....	2732	TCM .....	2857 (DB1)	Tocom .....	3000
StarSight .....	2734	Teac .....	2860	Tokai .....	3001
Stenway .....	2739	Strato .....	2745	Tokyo .....	3004
STS .....	2749	Tec .....	2861	Tomashi .....	3006
STS1 .....	4219	Tech Line .....	2863	Tongguang .....	3008 (DB1)
STS2 .....	4220	Technema .....	2866	Torx .....	3020
STS3 .....	4221	Technica .....	2868	Toshiba .....	3021
STS4 .....	4222	Technics .....	2869	Totevision .....	3024
Studio Experience .....	2750	Technika .....	2870	Touch .....	3025
.....	2752	Techview .....	2883	Towada .....	3028
Stylandia .....	2752	Techwood .....	2884	Toyoda .....	3030
Sungale .....	2761	Teco .....	2886	Trakton .....	3036
Sunkai .....	2762	Tedelex .....	2889	Trans Continens .....	3037
Sunstar .....	2768	Teknika .....	2895	Trans PX .....	3038
Sunwood .....	2772	TeleCaption .....	2902	Transfec .....	4143
Supercable .....	2778	Telecor .....	2910	Transonic .....	3041
Superla .....	2782	Telefunken .....	2914	Transtec .....	3042
Supermax .....	2783	Telefusion .....	2915	Tredex .....	3045
				Trident .....	3054
				Tristar .....	3057
				Triumph .....	3058
				TruTech .....	3467
				TS .....	3063
				Tuntex .....	3069
				Tusa .....	3073
				TV86 .....	3076
				TView .....	3079
				TVS .....	3081
				<b>U</b>	
				Uher .....	3089
				UltimateTV .....	3091
				Ultravox .....	3095
				Unic Line .....	3100
				Uniden .....	3101
				Unika .....	3102
				Unitech .....	3105
				United .....	3106
				United Artists .....	3107
				United Cable .....	3108
				Universal .....	3113
				Universum .....	3115
				Univox .....	3116
				Urban Concepts .....	3121
				US Digital .....	3122
				US Electronics .....	3123
				US Logic .....	3124
				<b>V</b>	
				V2 .....	3128
				Vector .....	3136
				Vector Research .....	3137
				Venturer .....	3143
				Verizon .....	3146
				Vestel .....	3148
				Vexa .....	3149
				Victor .....	3155
				Video Concepts .....	3157
				Videologic .....	3165
				Videologique .....	3166

Videosonic.....	3171
VideoSystem.....	3172
Videotechnic.....	3173
Videotron.....	3175
Vidikron.....	3178
Vidtech.....	3179
Viewmaster .....	3182
ViewSat.....	3185
Viewsonic.....	3186
Viewstar .....	3187
Viking .....	3188
Villain.....	3189
Viore .....	3192
Visco.....	4232
Visiola.....	3197
Vision .....	3198
Vizio.....	3211
Vocopro .....	3213
Voodoo .....	3215
Voom.....	3216
Vortec .....	3217
Vortex View ..	3218
Voxson.....	3220

**Y**

Yamaha .....	3326
Yamishi .....	3328
Yapshe .....	3329
Yokan .....	3335
Yoko.....	3336
Yorx .....	3340
Yuhang.....	3345

**Z**

Zanussi.....	3349
Zenith.....	3356
Zentech.....	4031
Zentek.....	3361
ZhuHai.....	3364
ZT Group .....	3370

**W**

Waltham .....	3230
Wards.....	3231
Watson.....	3233
Watt Radio....	3234
Waycon.....	3237
Wega.....	3238
Wegavox.....	3239
Weitblick.....	3245
Westinghouse .....	3249
Wharfedale....	3255
White Westinghouse .....	3258
Windstar.....	3266
Winegard.....	3268

**X**

Xbox .....	3295
Xiahua .....	3299
Xiangyang.....	3301 (DB1)
Xiangyu.....	3302
Xihu.....	3303 (DB1)

(DB1) Brands only available from version DB1 onwards. You can find the DB version on the sticker inside the battery compartment.





© 2011 Koninklijke Philips Electronics N.V.  
All rights reserved. Reproduction in whole or in part  
is prohibited without the prior written consent of the  
copyright owner.  
The information presented in this document does not  
form part of any quotation or contract, is believed to  
be accurate and reliable and may be changed without  
notice. No liability will be accepted by the publisher  
for any consequence of its use. Publication there of  
does not convey nor imply any license under patent-  
or other industrial or intellectual property rights.

Document order number: 3139 235 5304 3

November 2011

[www.philips.com](http://www.philips.com)

RTP/4811