

Register your product
and get support at
www.philips.com/welcome

SRU5110/86




EN User Manual

PHILIPS

Table of contents

 1	Your SRU5110	3
2	Getting started	3-6
	2.1 Inserting the batteries	3
	2.2 Setting up the universal remote control	4-6
3	Using the universal remote control	6-8
	3.1 Buttons and functions	6-7
	3.2 Resetting a button to its original function	7-8
4	Service and support	8-10
	4.1 Frequently asked questions	8-9
	4.2 Need help?	10
	Helpline	11
	Brand list	12-22
	Information to the consumer	23
	Compliance with EMF	23
	Recycling and disposal	23
	Battery information	23

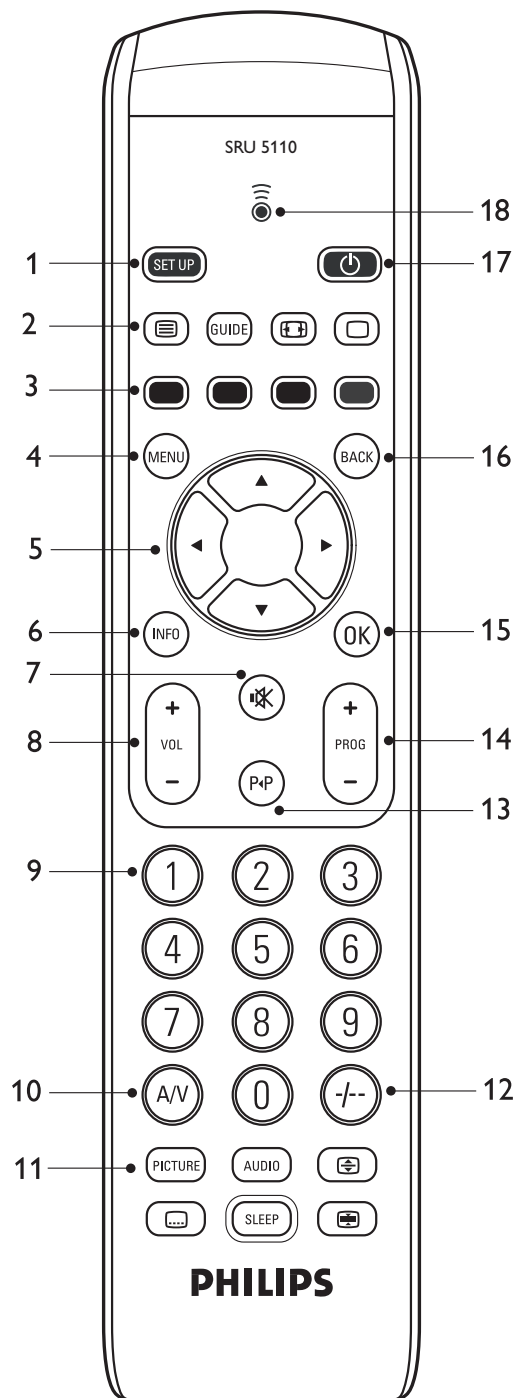

1 Your SRU5110

 
Congratulations on your purchase and welcome to Philips. To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. For quick, clean and easy setup go to: www.philips.com/urc

After installing the remote control it can operate the most-used functions of almost any brand of TV.

2 Getting started

2.1 Inserting the batteries

- 1 Press the cover inwards and slide it in the direction of the arrow.
- 2 Place two AAA type batteries into the battery compartment, as shown.
- 3 Replace the cover and click it firmly into place.

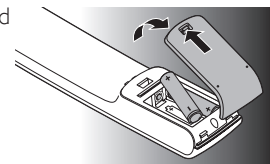

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

2.2 Setting up the universal remote control

This is only necessary if your TV does not respond to the SRU5110.

If that is the case, the SRU5110 does not recognize the brand and/or model of your TV and you need to program the remote control to do so.

1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.


2 **Press and hold** the **SETUP** button **for 5 seconds** until the green Setup light  lights up.

- The remote control is now in setup mode.

3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.

A four-digit code is shown for each brand.

Use the digit buttons to enter the code for your brand.

- If the green Setup light  turns off, an invalid code was entered. In this case, try again.

4 Aim the remote control at the TV. **Press and hold** the **POWER** button. Release it **immediately** as soon as the TV switches off.

- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

5 **Switch ON** the TV. Try out the buttons that you need for operating it. Try, for example, if the **- PROG +** and digit buttons function properly.

- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.1.


6 Press the **SETUP** button **twice** to finish setup.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.



Important

If you made a mistake:

- Press the **SETUP** button **twice** to exit setup. The green Setup light  turns off.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.2.1 Improving buttons

When correctly set up, the remote control should be able to operate your TV. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected.

In this case you can have the remote control search for alternatives.




Note

 
Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup

- 1 Make sure the TV is switched on.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the TV responds. Repeat this for every button that does not function.
 - If the button still does not function as expected, try pressing it again for a longer period of time.

After initial setup



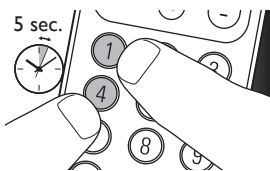




- 1 Make sure the TV is switched on.
- 2 Keep buttons ① and ④ pressed simultaneously for 5 seconds.
 - The green Setup light  lights up. The remote control is now in setup mode.
- 3 Press and hold the button that does not function and immediately release it when the TV responds.
 - If the button still does not function as expected, try pressing it again for a longer period of time.
- 4 Press the **SETUP** button twice to save your settings and exit setup mode.
 - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.



 








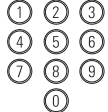

3 Using the universal remote control

3.1 Buttons and functions



The illustration on page 2 gives an overview of all buttons and their functions.

 
- 1 **SETUP** enters setup mode.
- 2  teletext on/off.
 Electronic Program Guide.
 wide screen TV.
 teletext off.
- 3  teletext color buttons. Used in text mode and in some on-screen menus.
- 4 **MENU** turns the menu on and off.
- 5  cursor buttons. Cursor up, down, left, right in a menu.
- 6 **INFO** displays on-screen channel information.
- 7  mutes the TV sound.

- 8  mutes the TV sound.
 adjusts the TV volume.
- 9  digit buttons. Direct choice of channels and other functions.
- 10 **AV** switches between external inputs of your equipment.
- 11 **PICTURE** changes picture / screen settings.
AUDIO changes audio settings.
 enlarges teletext picture.
 shows subtitle text.
 activates/deactivates sleep timer.
 holds current teletext page.
- 12  selects between one- and two-figure channel numbers.
- 13 **PREV** selects previous program/channel.
- 14  selects a previous or following channel.
- 15 **OK** confirms your selection.
- 16 **BACK** jumps back one level in the menu or turns off the menu.
- 17  switches TV on or off.
- 18 
 - blinks in setup mode.
 - lights up when a remote control command is being sent.

3.2 Resetting a button to its original function


If an improved button (see chapter 2.2.1.) still does not function as expected, you can always reset the button to its original function.


- 1 Keep digit buttons ① and ⑥ pressed simultaneously for 5 seconds, until the green Setup light  lights up.
 - The remote control is now in setup mode.
- 2 Press digit buttons ③, ⑨ and ⑥, in that order.
 - After each button press the green Setup light  blinks once.

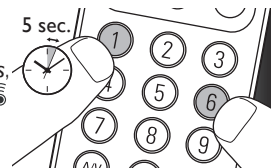

3 Press the button that you wish to reset **twice**.

E.g. the ► button.

 - After each button press the green Setup light  blinks once.
- The green Setup light  will blink one more time to confirm that the button was successfully reset to its original function.

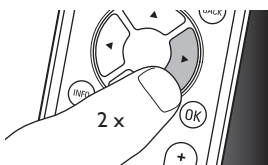

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your TV. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my TV is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV brands.

- You will find a complete brand list on page 12-22 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV turns OFF in step 4 but does not turn ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.1) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.1.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your TV. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The TV does not respond at all/does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control.
- Try improving buttons. See chapter 2.2.1.


Wrong code selected during setup.

- Set up the remote control again. Always test if the TV responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

The Teletext buttons do not work.

- Find out whether your TV is equipped with Teletext.
- Try improving the Teletext buttons. See chapter 2.2.1.
- Check whether you are using the correct button to switch on Teletext. For TV this is the  button.

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory for 5 minutes.



Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRU5110, you can always contact us.

When calling our helpline, make sure to have the SRU5110 at hand when you call, so that our operators can help you determine whether the SRU5110 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRU5110/86.

Date of purchase://
(day/month/year)

For **online support** go to:

www.philips.com/welcome

- Click 'Support' and follow the on-screen instructions.

Helpline

Country	Phone number	Tariff
Ireland	01 601 1158	pstn
United Kingdom	0800 331 6015	free

4Kus.....	0005	Arc En Ciel.....	0178	Black Panther Line.	4196	Changhai.....	0529
A		Arcam.....	0179	Black Star.....	0386	Changhong.....	0530
A.R. Systems.....	0012	Arcam Delta.....	3524	Blacktron.....	3526	Chimei.....	3563
Acme.....	3521	Arcelik.....	4791 (DB1)	Blackway.....	0388	Chuangjia.....	4096
Acoustic Solutions.	0032 (DB1)	Ardem.....	0184	Blaupunkt.....	0390	Chunfeng.....	0546
Acura.....	0036	Aristona.....	0192	Blue Media.....	3378 (DB1)	Chung Hsin.....	0547
ADA.....	0038	Arthur Martin.....	0200	Blue Sky.....	0395	Chunsun.....	0549
ADC.....	0040	ASA.....	0202	Blue Star.....	0396	Cimline.....	0552
Addison.....	0043	Asberg.....	0205	BlueH.....	3793 (DB1)	Cinetec.....	0560
Adelsound.....	0044	Asono.....	0212	Boghe.....	0400	CineVision.....	0562
ADL.....	0045 (DB1)	Astra.....	0221	Bondstec.....	0403	Cinex.....	0563 (DB1)
Admiral.....	0046	Asuka.....	0227	Boots.....	0405	City.....	0569
Advent.....	0054 (DB1)	Atacom.....	0228	BPL.....	0413	Clarivox.....	0576
Adyson.....	0058	Atec.....	0230 (DB1)	Brainwave.....	0415	Classic.....	0580
AEG.....	0059	Atlantic.....	0233	Brandt.....	0416	Clatronic.....	0581
Agashi.....	0063	Atori.....	0237	Brimax.....	3797 (DB1)	Clayton.....	0582 (DB1)
Agazi.....	3522	Auchan.....	0240	Brinkmann.....	0423	CMS.....	0590
AGB.....	0064	Audiosonic.....	0264	Brionvega.....	0424	CMS Hightec.....	0591
Aiko.....	0069	Audioton.....	0266	Britannia.....	0425	Coby.....	0597
Aim.....	0070	Audix.....	0270 (DB1)	Bruns.....	0435	Concorde.....	0626
Airis.....	0071	Ausind.....	0276	BskyB.....	0436	Condor.....	0627
Aiwa.....	0072	Autovox.....	0280	BSR.....	0437	Conia.....	0628
Akai.....	0074	Avious.....	0291	BTC.....	0439	Conrowa.....	0634
Akiba.....	0078	Awa.....	0296	Bush.....	0445	Contec.....	0635
Akito.....	0082	Axxon.....	0303 (DB1)			Continental Edison	0637
Akura.....	0083	Ayomi.....	3525	C		Cosmel.....	0647
Alaron.....	0085			Caihong.....	0462	Crosley.....	0655
Alba.....	0086	B		Cambridge Audio..	0470	Crown.....	0658
Alcyon.....	0093	B&D.....	3609 (DB1)	Cameron.....	4032	CS Electronics.....	0663
Alize.....	0100	Baird.....	0311	Capsonic.....	0486	CTC.....	0664
Alkos.....	3523	Bang & Olufsen.....	0314	Carad.....	0488	CTC Clatronic.....	3527
Allorgan.....	0105	BARON.....	3959	Carena.....	0489	C-Tech.....	0449
Allstar.....	0108	Basic Line.....	0325	Carrefour.....	0492	CVG.....	3996
Ambassador.....	0120	Bastide.....	0327	Cascade.....	0496	Cybercom.....	0671 (DB1)
Amitech.....	0130	Baur.....	0331	Casio.....	0499	CyberHome.....	0672
Amoi.....	0132	Baze.....	0334	Cat.....	0500	Cybermaxx.....	3696 (DB1)
Amplivision.....	0138	Bazin.....	0335	Catha.....	4094	Cybertron.....	0675
Amstrad.....	0140	BBK.....	0337	Cathay.....	0501		
AMW.....	0143	Beijing.....	0345	Catron.....	0502	D	
Anam.....	0146	Beko.....	0346	CCE.....	0504	Daenyx.....	0690
Anam National.....	0147	Bellagio.....	0354	Celestial.....	0511	Daewoo.....	0692
Andersson.....	0148 (DB1)	BenQ.....	0359	Centrex.....	0516	Dainichi.....	0694
Anglo.....	0151	Beon.....	0361	Centrum.....	0519	Dansai.....	0699
Anitech.....	0154	Best.....	0364	Centurion.....	0520	Dantax.....	0702
Ansonic.....	0156	Best Buy.....	0365	Century.....	0521	Datron.....	4201
AOC.....	0165	Bestar.....	0368	CGE.....	0523	Datsura.....	0703
Apex.....	3691	Bestar-Daewoo.....	0369	CGV.....	0524	Dawa.....	0707
Apollo.....	0171	Binatone.....	0378	Changcheng.....	0526	Daytek.....	0708
		Black Diamond.....	0384 (DB1)	Changfei.....	0527	Dayton.....	0709

Daytron.....	0710	E-Dem.....	3624	Firstline.....	1008	GVG.....	1169
DCE.....	0713 (DB1)	Elbe.....	0880	Fisher.....	1009	H	
De Graaf.....	0716	Elbe-Sharp.....	3529	Flint.....	1014	H&B.....	3635
DEC.....	0717	Elcotech.....	0882	FNR.....	1016	Haaz.....	1172
Decca.....	0718	Elcit.....	0883	Formenti.....	1023	Haier.....	1175
Deitron.....	0722	Electa.....	3530	Formenti-Phoenix..	1024	Haihong.....	1176
Denko.....	0730	ELECTRO TECH....	3531	Fortress.....	1027	Halifax.....	1179
Denon.....	0731	Electrohome.....	0890	Fraba.....	1030	Hampton.....	1183
Denver.....	0733	Elektra.....	0896	Friac.....	1040	Hanns.G.....	3478 (DB1)
Denzel.....	0734	Element.....	3477	Frontech.....	1042	Hannspree.....	1189 (DB1)
Desay.....	0737	Elfunk.....	0899 (DB1)	Fujicom.....	1048 (DB1)	Hanseatic.....	1190
Desmet.....	0738	ELG.....	0900	Fujitsu.....	1052	Hantarex.....	1192
DGM.....	3566 (DB1)	Elin.....	0902	Fujitsu General.....	1053	Hantor.....	1193
Diamant.....	0746	Elite.....	0903	Fujitsu Siemens.....	1054 (DB1)	Harman/Kardon.....	1198
Diamond.....	0747	Elmak.....	0907	Funai.....	1056	Harwood.....	1204
DICRA.....	4938 (DB1)	Elonex.....	4019 (DB1)	G		Hauppauge.....	1206
Digatron.....	0751	Elsay.....	0909	Galaxi.....	1068	HCM.....	1210
Digihome.....	0758 (DB1)	Elta.....	0910	Galaxis.....	1069	Hema.....	1222
Digiline.....	0759	Emerson.....	0917	GBC.....	1078	Hemmermann.....	1223
DigiLogic.....	0760 (DB1)	e-motion.....	3496 (DB1)	Geant Casino.....	1082	Henss.....	1224 (DB1)
Digital Device.....	0770 (DB1)	Emperor.....	0921	GEC.....	1083	Hifivox.....	1233
Digitek.....	0779 (DB1)	Enzer.....	0934	Geloso.....	1087	Higashi.....	1234
Digitor.....	0781	Epson.....	0937	General.....	1090	Highline.....	1236
DiK.....	0787 (DB1)	Erres.....	0942	General Technic.....	1095	Hikona.....	1237
Dikom.....	3391 (DB1)	ESC.....	0945	Genexxa.....	1097	HiLine.....	3533
Dixi.....	0807	Etron.....	0949	Gericom.....	1103	HiMAX.....	1241
DK Digital.....	0808	Etzuko.....	4203	GFM.....	3820	Hinari.....	1243
DMTech.....	0813	Eurofeel.....	0954	Giant.....	1113	Hisawa.....	1247
Dongda.....	0820	EuroLine.....	0955	Giec.....	1115	Hisense.....	1249
Donghai.....	0821	Euroman.....	0956	Global Solutions.....	1120	Hitachi.....	1251
Dragon Systems.....	4830 (DB1)	Europa.....	0957	Global Sphere.....	1121	Hitachi Fujian.....	1252
Drean.....	0832	Europhon.....	0959	Go Video.....	1126	Hitsu.....	1257
DSE.....	0833	Evesham.....	0972 (DB1)	Gold.....	3823 (DB1)	Hoeher.....	1262
DTS.....	0837	Expert.....	0976	GoldHand.....	1136	Hoher.....	4504 (DB1)
Dual.....	0838	Exquisit.....	0978	Goldline.....	1138	Home Tech Industries	
Dual-Tec.....	3528	F		GoldStar.....	1140	1266
Dumont.....	0840	Fagor Life.....	4102	Goodmans.....	1142	Hongmei.....	1272
Duongjie.....	4101	Feilang.....	0990	Gorenje.....	1144	Hornlyphon.....	1277
Durabrand.....	0842 (DB1)	Feilu.....	0991	GPM.....	1149	Hoshai.....	1278
Dux.....	0843	Feiyue.....	0993	Gradiente.....	1151	Huafa.....	1287
D-Vision.....	0684	Fenmenti.....	4103	Graetz.....	1152	Huanghaimei.....	1288
DVX.....	0847	Fenner.....	0994	Gran Prix.....	1153 (DB1)	Huanghe.....	1289
Dynatron.....	0855	Ferguson.....	0996	Granada.....	1154	Huanglong.....	1290
Dynex.....	3476	Fidelity.....	0998	Grandin.....	1156	Huangshan.....	1291
E		Filsai.....	1000	Great Wall.....	4105	Huanyu.....	1292
Easy Home.....	3700	Finlandia.....	1003	Gronic.....	1160	Huari.....	1294
Easy Living.....	0860 (DB1)	Finlux.....	1004	Grundig.....	1162	Hugoson.....	1297 (DB1)
Eclipse.....	0867	Fintec.....	1006	Grunkel.....	1164	Huijiban.....	4108

Humax 1298
 Hygashi 1308
 Hyper 1309
 Hypson 1312
 Hyundai 1315

I

Iberia 1320
 ICE 1324
 ICeS 1325
 iDEAL 3641 (DB1)
 Iekei 1332 (DB1)
 IISonic 1334 (DB1)
 Iiyama 1335 (DB1)
 Impego 4207
 Imperial 1346
 Indesit 1349
 Indiana 1350
 Ingelen 1354
 Ingersol 1355
 Inno Hit 1358
 Innovation 1360
 Inspira 4296 (DB1)
 Interactive 3534
 Interbuy 1376
 Interfunk 1377
 Internal 1379
 International 1380
 Intervision 1386
 IR 4110
 Irradio 1396
 Isukai 1402
 ITC 1404
 ITS 1405
 ITT 1406
 ITV 1408

J

JEC 1426
 JGC 1434 (DB1)
 Jiahua 1435
 Jinhai 1439
 Jinxing 1442
 JVC 1464

K

Kaisui 1471
 Kamosonic 3535
 Kamp 1475

Kangchong 1476
 Kanghua 1477
 Kangwei 4115
 Kansai 1480
 Kapsch 1483
 Karcher 1484
 Kawa 1487
 Kawasho 1489
 Kendo 1500
 Kennedy 1504
 Kennex 1505
 Kenwood 1507
 KeyPlug 3646
 KIC 1512
 Kiiro 1513
 Kingavon 1519
 Kingsley 1520
 Kiota 1522
 Kiss 1524
 Kiton 1525
 Kneissel 1535
 Koda 1539
 Kolin 1541
 Kolster 1543
 Konig 1547
 Konka 1548
 Korpel 1552
 Korting 1554
 Kosmos 1557
 Koyoda 1561
 KTV 1572
 Kuro 1579
 KXD 1581
 Kyoshu 1583
 Kyoto 1585

L

L&S Electronic 1588
 Lafayette 1591
 LaSAT 1597
 Lawson 1603
 Layco 4117
 Lecson 1606
 Lenco 1615
 Lenoir 1617
 Lenoxx 1618 (DB1)
 Lesa 1622
 Leyco 1627
 LG 1628

LG/Goldstar 3536
 Liesenk 3537
 Liesenk & Tter 1630
 Liesenkotter 1631
 Life 3538
 Lifotec 1633
 Limit 1637
 LiteOn 1645
 Lloyds 3539
 Lloyd's 1648
 Local India TV 1653
 Lodos 1659 (DB1)
 Loewe 1660
 Loewe Opta 3540
 LogicLab 3650
 Logik 1661
 Luma 1674
 Lumatron 1676
 Lux May 1680
 Luxor 1683

M

M Electronic 1688
 Madison 1698
 Magnadyne 1702
 Magnafon 1703
 Magnavox 1706
 Magnex 1707
 Magnum 1709
 Majestic 1713
 Mandor 1717
 Manesth 1718
 Manhattan 1719
 Maqma 1722 (DB1)
 Marantz 1724
 Marelli 1729
 Mark 1731
 Marquant 1734
 Mascom 1738 (DB1)
 Masuda 1744
 Matsui 1750
 Matsushita 1751
 Maxim 1759 (DB1)
 MBO 1765 (DB1)
 McMichael 1768
 MDS 1772 (DB1)
 Mecotek 1776
 Mediator 1784
 Mediencom 1786

Medion 1787
 Medison 1788
 MegaDrive 4297 (DB1)
 Melectronic 3654
 M-Electronic 3541
 Melvox 1799
 Memorex 1800
 Memphis 1802
 Mercury 1804
 Metz 1810
 MiCO 1813
 Micromaxx 1822
 Micromedia 1823
 Micromega 1824
 Microspot 3849 (DB1)
 Microstar 1827
 Migros 1832
 Mikomi 1833 (DB1)
 Minato 1835
 Minax 1836 (DB1)
 Minerva 1838
 Minoka 1840
 Minowa 1843
 Mirai 1849 (DB1)
 Mitsai 3851 (DB1)
 Mitsubishi 1855
 Mivar 1857
 Mizuda 1860
 Monyka 1873
 Morgans 3970
 Motion 1877
 MTC 1889
 MTEC 1890
 MTLogic 1892
 Mudan 1896
 Multi System 3542
 Multistandard 1904
 Multisystem 4121
 Multitec 1906
 Multitech 1907
 Murphy 1911
 Musikland 1915
 Mustek 1916
 Mx Onda 1919
 Myrica 3946 (DB1)
 Mystral 1925


N	Opera.....2090	Polaroid.....2230	Reflex.....2368
NAD.....1926	Optim.....2094	Poppy.....2236	Relisis.....2374 (DB1)
Naiko.....1930	Orava.....2101	Portland.....2238	Render.....4072 (DB1)
Nakamichi.....1932	Orbit.....2103	Powerpoint.....2241	Reoc.....2379
Nakimura.....1933	Orion.....2111	Prandoni Prince.....4125	Revox.....2383
Naonis.....1936	Oritron.....2112	Precision.....2244	Revoy.....2384
National.....1942	Orline.....2113	Prima.....2253	Rex.....2385
NEC.....1950	Ormond.....2114	PrimeView.....3513 (DB1)	RFT.....2386
Neckermann.....1951	Orson.....2115	Prinz.....2260	Rhapsody.....2387
NEI.....1952	Orsowe.....2116	Pro2.....2265 (DB1)	Rimax.....2391
Nesco.....1960	Osaki.....2118	Profekt.....4126	R-Line.....2327
Netsat.....1966	Osio.....2121	Profex.....2269	Roadstar.....2398
Netway.....3419 (DB1)	Oso.....2122	Profilo.....2272	Robotron.....2401
Network.....1968	Osume.....2123	Profitronic.....2273	Ronin.....2412
Neufunk.....1970	Otto Versand.....2126	Proline.....2274	Rover.....2415 (DB1)
Nevir.....1977	Oulin.....4123	Promax.....2275	Rowa.....2416
New Tech.....1979		Proson.....2281 (DB1)	Rownsonic.....2417
New World.....1980	P	Prosonic.....2282	Royal.....2419
Next Base.....1983	P&B.....2132	Protech.....2284	Royal Lux.....2420
Nicamagic.....1994	Pacific.....2135	ProVision.....2291	RTF.....3548
Nikai.....4566 (DB1)	Pael.....2140	Pye.....2302	
Nikkai.....1998	Palladium.....2145	Pyle.....2303 (DB1)	S
Nikkei.....1999 (DB1)	Palsonic.....2147	Pymi.....2304	Saba.....2429
Nimbro.....4065 (DB1)	Panama.....2149		Sabaki.....2430
Noblex.....2013	Panasonic.....2153	Q	Sagem.....2434
Noblisko.....2014	Panavision.....2154	Quandra Vision.....3546	Saisho.....2437
Nogamatic.....2016	Panda.....2155	Quasar.....2320	Saivod.....2439
Nokia.....2017	PARK.....3951 (DB1)	Quelle.....2322	Salora.....2443
Nordic.....2021	Pathe Cinema.....2168	Questa.....2324	Sambers.....2445
Nordmende.....2022	Pathe Marconi.....2169		Sampo.....2446
Nordvision.....3543	Pausa.....2171	R	Samsung.....2448
Normerel.....2024	peekTon.....2178	Radialva.....2329	Samurai.....2451
Novatronc.....2035	Pensonic.....3778	Radio.....4128	Sandra.....2454
Nu-Tec.....2048	Perdio.....2185	Radio Shack.....3547	Sansui.....2458
	Perfekt.....2186	Radiola.....2330	Sanwa.....2461
O	Philco.....2192	Radiomarelli.....2331	Sanyo.....2462
O.K.Line.....4301 (DB1)	Philharmonic.....2194	Radionette.....2332	Sanyuan.....2464
Oceanic.....2061	Philips.....2195	RadioShack.....2333	Saville.....2491
Okana.....4122	Philips Magnavox.....3715	Radiotone.....2334	SBR.....2492
Okano.....2065	Phocus.....2198 (DB1)	Raite.....2340	ScanMagic.....2496
Omni.....2074	Phoenix.....2199	Rank.....2345	Schaub Lorenz.....2500
ONCEAS.....3544	Phonola.....2201	RBM.....2350	Schneider.....2501
Onida.....2081	Phonotrend.....2202	RCA.....2351	Schoentech.....3504 (DB1)
Onimax.....2082	Pioneer.....2212	REC.....2357	Scientific Labs.....2504
Onkyo.....2085	Pionier.....2213	Recor.....2359	Scott.....2508
Onn.....3663 (DB1)	Plantron.....2219	Rectiligne.....2362	Seeltech.....2519
Onwa.....2087	Playsonic.....2224	Red Star.....3669 (DB1)	SEG.....2522
Onyx.....3864 (DB1)	Plu2.....2225 (DB1)	Rediffusion.....2364	SEI.....2524
Oopla.....2088	Pointer.....2229	Redstar.....2366	Sei-Sinudyne.....2525

Seitech.....	3433 (DB1)	Sontech.....	3435	Tandy.....	2843	Tokyo.....	3004
Seleco.....	2528	Sony.....	2679	Tashiko.....	2850	Tomashi.....	3006
Sencora.....	2531	Sound & Vision.....	2680	Tatung.....	2852	Tom-Tec.....	3005 (DB1)
Sentra.....	2534	Soundmaster.....	2685	TCL.....	2856	Tonsai.....	4223
Sentron.....	4216	Soundmax.....	2687	TCM.....	2857	Top Suxess.....	3013
Serino.....	2539	Soundwave.....	2689	Teac.....	2860	Toshiba.....	3021
Shanghai.....	2547	Soyo.....	2693 (DB1)	Teachimagen.....	4140	Towada.....	3028
Shanshui.....	4133	Spectra.....	2697	Tec.....	2861	Towika.....	4224
Shaofeng.....	2549	Srypton.....	4138	Tech Line.....	2863	Toyoda.....	3030
Sharp.....	2550	Standard.....	2713	Techica.....	2865	Traktron.....	3036
Shencai.....	2553	Star Cluster.....	3724	Technema.....	2866	Trans Continens.....	3037
ShengCai.....	4217	Starlight.....	2727	Technica.....	2868 (DB1)	TRANS-continent.3039	
Shenyang.....	2555	Starlite.....	2728	Technics.....	2869	Transfec.....	4143
Sherwood.....	2557	Starmedia.....	2730	Technika.....	2870	Transonic.....	3041
Shinelco.....	4074 (DB1)	Stenway.....	2739	TechniSat.....	2873	Transtec.....	3042
Shintom.....	2563	Stern.....	2741	Technisson.....	2874 (DB1)	Trident.....	3054
Shintoshi.....	2564	Stevison.....	2742 (DB1)	Techvision.....	4307 (DB1)	Trio.....	3056
Shivaki.....	2567	Strato.....	2745	Techwood.....	2884 (DB1)	Tristar.....	3057
Shorai.....	2569	Strong.....	2748 (DB1)	Teco.....	2886 (DB1)	Triumph.....	3058
Siam.....	2572	Stylandia.....	2752	Tedex.....	2889	TruVision.....	3061
Siarem.....	2573	Sungoo.....	3767 (DB1)	Teleavia.....	2901	TSM.....	3065
Siemens.....	2574	Sunkai.....	2762	Telecor.....	2910	TVA.....	4225
Siera.....	2576	Sunstar.....	2768	Telefunken.....	2914	TVE.....	3897 (DB1)
Sierra.....	3549	Suntronic.....	2770	Telefusion.....	2915		
Siesta.....	2577	Sunwood.....	2772	Telegazi.....	2917	U	
Sigmathek.....	2580	Superla.....	2782	Telemeister.....	2924	Uher.....	3089
Silva.....	2591	Supersonic.....	2787	Telesonic.....	2930	Ultravox.....	3095
Silva Schneider.....	2592	SuperTech.....	2789	Telestar.....	2931	Umax.....	3098
Silver.....	2594	Supervision.....	2791	Telesystem.....	2933 (DB1)	UMC.....	3099 (DB1)
Singer.....	2599	Supra.....	2792	Teletech.....	2934	Unic Line.....	3100
Sinudyne.....	2601	Supratech.....	2793 (DB1)	Teleton.....	2935	Union.....	3781
Skantic.....	2605	Susumu.....	2797	Televideo.....	2938	United.....	3106
SKY.....	2610	Sutron.....	2798	Television.....	2939	United Quick Star..	4226
Skymaster.....	2621	Swedx.....	2803 (DB1)	Televiso.....	2941	Universal.....	3113
Skyworth.....	2631	Swissflex.....	2805 (DB1)	Temco.....	2946	Universum.....	3115
Slim Art.....	2636	Swisstec.....	2806 (DB1)	Tennessee.....	2952	Univox.....	3116
SM Electronic.....	2639	Sydney.....	2808	Tenosal.....	2953		
Smart.....	2642 (DB1)	Sylvania.....	2809	Tensai.....	2954	V	
S-Media.....	3515 (DB1)	Symphonic.....	2810	Tenson.....	2955	V7 Videoseven.....	3130 (DB1)
Sogera.....	2649	Synn.....	2813	Tesla.....	3680 (DB1)	Vestel.....	3148
Solavox.....	2654	Syline.....	2815	Tesmet.....	3550	Vexa.....	3149
Sonawa.....	2663	Sytong.....	2820	Tevion.....	2962	Vibrant.....	3154
Songdian.....	4136			Texet.....	2963	Victor.....	3155
Soniko.....	2669	T		Thes.....	3769 (DB1)	Videologic.....	3165
Sonitron.....	2671	T.D.E. Systems.....	2822	Thomson.....	2972	Videologique.....	3166
Sonneclair.....	2673	Tactus.....	2825	Thorn.....	2974	Videon.....	4227
Sonoko.....	2675	Taishan.....	2835	Tiankeban.....	4142	Videosat.....	3170
Sonolor.....	2676	Taisho.....	2836	Tobo.....	2999	VideoSystem.....	3172
Sontec.....	2677	Tandberg.....	2842	Tokai.....	3001	Videotechnic.....	3173

Videoton.....	3174	X	
Viewmaster.....	3182	Xbox.....	3295
Viewsonic.....	3186	Xiahua.....	3299
Viore.....	3192 (DB1)	Xiangyu.....	3302
Visiola.....	3197	Xingfu.....	3305
Vision.....	3198	Xinghai.....	3306
Vistar.....	3207	Xinrisong.....	3308
Visual Innovations... 4773 (DB1)		XLogic.....	3310
Vivax.....	3601 (DB1)	XMS.....	3312
Vivid.....	3210 (DB1)	Xoro.....	3315
Vortec.....	3217	Xrypton.....	3317
Voxson.....	3220	Xuelian.....	3320

W		Y	
Waitec.....	3227	Yakumo.....	3324
Waltham.....	3230	Yamada.....	3325
Watson.....	3233	Yamaha.....	3326
Watt Radio.....	3234	Yamakawa.....	3327
Wega.....	3238	Yamishi.....	3328
Wegavox.....	3239	Yokan.....	3335
Welkin.....	3242 (DB1)	Yoko.....	3336
Wellington.....	3243 (DB1)	Yorx.....	3340
Welltech.....	3244	Yuhang.....	3345
Weltblick.....	3245	Yukai.....	3346
Weltstar.....	3247 (DB1)	Yüsmart.....	4777 (DB1)
Weston.....	3251		
WestStar.....	3519 (DB1)	Z	
Wharfedale.....	3255	Zanussi.....	3349
White Westinghouse		Zenith.....	3356
.....	3258	ZhuHai.....	3364
Wilson.....	3260 (DB1)		
Windsor.....	3265 (DB1)		
Windstar.....	3266		
Wintel.....	3271 (DB1)		
World-of-Vision.....	3282 (DB1)		
Woxter.....	3286		

 (DB1) Brands only available from version DB1 onwards.
You can find the DB version on the sticker inside the battery compartment.

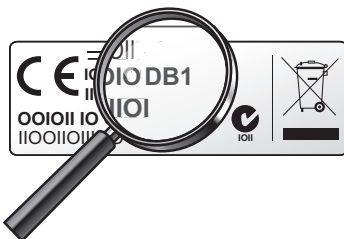

EN Information to the consumer

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Battery information

Your product operates on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.



© 2011 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5255 4

December 2011

www.philips.com

RTP/4911