

Register your product and get support at
www.philips.com/welcome

VOICE TRACER

VTR5100



VTR5100 使用手册 / User Manual

目录

1 欢迎	05
1.1 产品特点	05
2 重要须知	06
2.1 安全	06
2.2 听力保护	06
3 您的数码录音笔	07
3.1 供货范围	07
3.2 概览	07
4 开始使用	08
4.1 电源开 / 关	08
4.2 连接电脑	09
5 录音	10
6 语音、音乐模式	12
6.1 基本操作	12
6.2 删除	12
6.3 A-B 复读	13

6.4 播放模式	13
6.5 音量调节	13
6.6 音效模式（音乐模式）	13
7 系统设置	15
7.1 录音品质	15
7.2 录音灯开关	15
7.3 按键音开关	16
7.4 声控功能	16
7.5 分段录音功能	16
7.6 日期时间设置	17
7.7 定时录音设置	17
7.8 录音长度	18
7.9 语言选择	18
7.10 背光时间	18
7.11 对比度调节	19
7.12 自动关机	19
7.13 剩余时间	19
7.14 格式化磁盘	20
7.15 信息	20

8 常见问题 21

9 技术参数 22

1 欢迎

欢迎来到飞利浦世界！您能选择和购买飞利浦的产品，我们非常高兴。您可在我们的官方网站上获得飞利浦公司的全方位技术支持，如：使用手册、软件下载、保修信息等。

www.philips.com

1.1 产品特点

- 数字降噪：能有效地对录音环境周围的噪声给予滤除，从而可以清晰地记录有效的声音，推荐在嘈杂环境中使用该功能，此功能为 PCM 降噪录音类型。
- 高清扬声器：采用高品质跑道喇叭，无论播放录音文件或音乐文件，都让人身临其境的享受。
- 以常见的 MP3/WAV 格式录音。
- 使用高速 USB 2.0 快速存取录音和数据。
- 声控录音功能。
- 可作为大容量的 USB 存储设备，确保最大的兼容性。
- 锁键功能：录音中具有锁键功能，防止误操作暂停录音或退出录音。

2 重要须知

2.1 安全

- 为了避免短路，切勿将产品放置在触水受潮处。
- 不要将产品放在加热设备附近或阳光直射的地方。
- 请注意，切勿挤压电缆，特别是插头处。
- 特别声明：使用本产品前请仔细阅读本说明书，如因人为操作或不可抗力因素而导致数据丢失，本公司一概不予负责。特别提醒用户小心操作，注意将资料另外备份。

2.2 听力保护

使用耳机时请遵守下列原则：

- 调整至合适的音量，切勿长时间使用耳机。
- 特别需要注意，切勿将音量调至耳朵所能承受的范围之外。
- 切勿将音量调至盖过周边环境的声音。
- 在危险情况下请小心或暂停使用耳机。
- 在驾驶汽车、骑自行车、玩滑板时，切勿使用耳机。否则会导致交通意外，且违反相关法律法规。

所用符号标志



提示

- 此符号标志指明帮助您更加高效简便使用设备的信息。



注意

- 此符号标志指明处理或操作设备时必须遵守的各种注意事项。



小心

- 此符号标志警告可能发生的设备损坏和数据丢失。操作不当，可能导致损坏。




警告


- 此符号标志警告人身伤害危险。操作不当，可能导致人身伤害或设备损坏。

3 您的数码录音笔

3.1 供货范围：

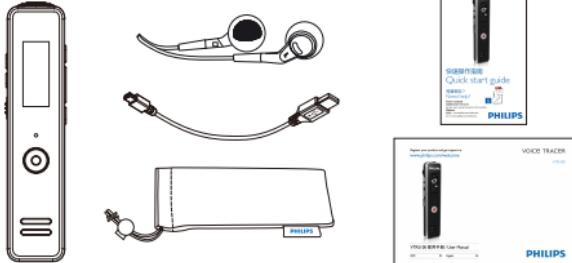

3.2 概览：

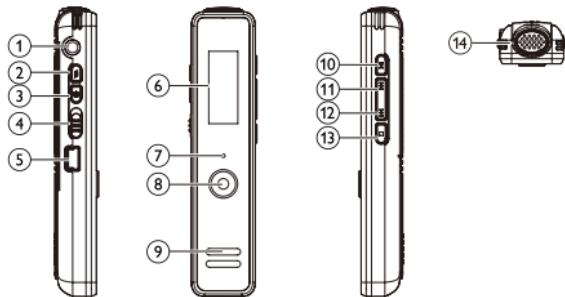

- ① 耳机插孔
- ② 音量键
- ③ 菜单键
- ④ 电源开关键 (ON/OFF)
- ⑤ USB 接口
- ⑥ 显示屏
- ⑦ 指示灯
- ⑧ 录音、录音暂停、(“录音键”○)
- ⑨ 扬声器
- ⑩ 播放、暂停 (‘‘播放键’’▶||)
- ⑪ 音量加、快退、上一曲、更改菜单选项
- ⑫ 音量减、快进、下一曲、更改菜单选项
- ⑬ 停止，语音文件夹切换 (‘‘停止键’’■)
- ⑭ 内置麦克风

4 开始使用

4.1 开 / 关机



注意

- 第一次使用机器时, 请对该机器充电三小时以确保机器有电工作!

- 当电源开关处于“关”位置时, 则本机断开电源, 不能开机。
- 当电源开关由“关”拨到“开”位置后, 本机立即自动开机, 然后显示“PHILIPS”, 如下图所示。



然后直接进入语音模式, 短按“菜单键”可以在语音模式、音乐模式之间进行切换, 长按“菜单键”进入系统设置。

此后, 本机的开机 / 关机由播放键控制, 具体如下:

开机: 在关机状态下, 长按“播放键”(▶)约2到3秒钟开机, 直至屏幕上显示开机画面“PHILIPS”。

关机: 在开机状态(录音状态除外)下, 长按“播放键”(▶)约2到3秒钟关机, 直至屏幕上显示“PHILIPS”字样。



提示

- 本机使用内置锂电池供电, 如果长时间不使用录音笔, 请把电源开关拨到“OFF”位置。
- 如果录音笔无法正常工作, 请确认机器是否已没电。
- 机器工作过程中, 请勿直接把电源切断, 否则会损坏文件或导致机器导常。
- 当电量指示标志为“■”时, 请及时充电; 低电时界面提示如下图:



充电方法



注意

- 当录音笔与电脑连接时，对录音笔的手动操作将无效。

1 使用 USB 数据线将本机与 PC 相连接。

2 使用专用充电器充电。

当采用以上方法连接后，本机进入充电状态。电量指示标志由空到满循环变化，表示本机现正处于充电状态，充电指示灯橙色灯常亮。一般情况下，充满电需要 3 小时左右。充满电时，电池符号显示满格，橙色灯灭。

USB 联机、充电界面如下：



如果电源开关键拨到“OFF”，将不显示电池符号 。

4.2 连接电脑

录音笔可作为大容量的 USB 存储设备，并可方便地对文件进行存储、备份和移动。可使用 USB 数据线将录音笔与电脑相连，且无须安装软件，录音笔会自动显示为可移动设备。



提示

- 在文件移入或移出录音笔时，请不要断开录音笔与电脑的连接。

5 录音

当您初次使用录音笔录音时，请注意本节中的内容说明！

- 1 在语音模式停止状态下，按“停止键”（■），选择要存放的文件夹目录 A、B、C 或者 D。
- 2 短按“录音键”（○）开始录音，红色指示灯常亮，显示屏显示“录音”；录音过程中请将内置麦克风对准音源。
- 3 按“录音键”（○）暂停录音，红色指示灯闪烁，显示屏显示“暂停中”。
- 4 再次按“录音键”（○），继续录音。
- 5 按“停止键”（■）保存录音，红色指示灯熄灭，并返回当前录音文件的停止播放界面。
- 6 在休眠状态下，长按录音键可以启动录音。
- 7 录音中长按菜单键进入锁定，防止误触按键暂停或退出录音，再长按菜单键退出锁定。

录音参考界面如下如所示：



注意

- 电池符号显示空格时，表明低电。低电时系统会自动关机。如果正在录音，系统自动保存录音文件后再关机。电量不足时，请及时充电；低电提示界面如下图：





提示

- 录音前, 请预先设置所需要的录音类型 (请参考第 7 章 系统设置里面“录音品质设置”) 和想要保存的文件夹目录 (参考第 6 章 语音、音乐模式里面的基本操作)。
- 查询剩余录音时间是否足够保存下一段录音 (请参考第 7 章 系统设置里面“剩余时间查询功能”)。
- 录音状态下按 “▼” 键可以保存当前录音并且开始下一段录音。
- 请先测试录音, 以确保录音笔设置正确。
- A、B、C、D 每个文件夹最多可存储 99 个文件, 总共可容纳 396 个文件 (99 文件 x 4)。
- 当录音时间超过录音笔可用容量或达到最大 396 个文件数量的上限时, 录音停止。请删除部分录音或将其移至电脑。
- 录音笔工作在录音模式时, 请勿将电源键拨到 OFF, 否则会损坏当前录音文件。

如果需要长时间录音, 请在录音前预先充满电。

6 语音、音乐模式

语音模式：播放录音文件的模式，屏幕上显示 DVR；

音乐模式：播放音乐文件的模式，屏幕上显示 MUSIC；

语音模式与音乐模式通过短按菜单键切换，在设置界面短按停止键或者长按菜单键返回语音模式；



6.1 基本操作

- 1 在停止状态下，按“停止键”（■），选择语音文件夹，
A → B → C → D → MUSIC → A…
- 2 按▲或▼键，选择要播放的文件。
- 3 按“播放键”（▶||）播放，再按“播放键”（▶||）暂停播放。
- 4 播放时按住▲或▼键进行快进或快退，松开按键自动恢复正常播放。

- 5 按“停止键”（■）结束播放。

6.2 删除



删除单个文件



删除整个文件夹里的文件

- 1 在停止状态下，长按“停止键”约2到3秒钟进入删除界面；
- 2 按“播放键”（▶||）选择“删除单个”或“删除全部”；
- 3 按▲或▼键选择“YES”或“NO”；
- 4 按“菜单键”确认。

6.3 A-B 复读

A-B



图1

A-B



图2

- 1 在播放过程中，短按“音量键”进入A-B复读模式，并且确定复读起点A，此时屏幕显示A-B，并且B闪烁，如图1；
- 2 再按一下“音量键”确定复读终点B，屏幕显示A-B，开始复读，如图2；
- 3 再次按下“音量键”取消复读，A-B显示消失，回到正常播放(如果不按“音量键”取消复读，复读完5次后自动退出复读模式)。

6.4 播放模式

支持三种播放模式的切换，包括顺序播放、单曲循环和全部循环。在播放过程中，按“菜单键”在这三种播放模式之间切换。

：顺序播放，从当前文件播放到最后一个文件自动停止。

：单曲循环，只对当前播放的文件进行重复播放。

：全部循环，表示当前文件夹内，全部文件重复播放。

6.5 音量调节



- 1 长按“音量键”进入音量调节，此时屏幕显示喇叭符号并且闪烁，如上图；
- 2 再按▲或▼键增加或减小音量，同时屏幕上的音量条也会相应的增减。

6.6 音效模式（音乐模式）

支持七种音效模式，包括自然、摇滚、流行、古典、柔和、爵士、重低音。

- 1 在播放过程中长按“停止键”约2到3秒钟进行切换。

图标表示	音效
 NOR	自然
 ROCK	摇滚
 POP	流行
 CLAS	古典
 SOFT	柔和
 JAZZ	爵士
 DBB	重低音

7 系统设置

1 在音乐模式或者语音模式的停止状态下，长按“菜单键”进入系统设置。

2 在任何一个系统菜单界面按“停止键”（■）或长按菜单键都可以返回到语音模式。

菜单列表如下：

父菜单	子菜单				
录音品质	高品质	长时间	降噪录音		
录音灯	开	关			
按键音	开	关			
声控	开	关			
分段录音	关	30m	60m		
日期时间	12h	24h			
定时录音					
录音长度	0m	30m	60m	120m	
语言选择	简体	繁体	英文		
背光时间	0s	15s	30s	45s	60s
对比调节	1-9				
自动关机	5m	15m			
剩余时间					
格式化磁盘	yes	no			
信息					

7.1 录音品质

在音乐模式或者语音模式停止界面，长按“菜单键”进入录音类型设置界面，如下图：



有三种录音类型可供选择：高品质录音、长时录音和降噪录音，按▲或▼键选择，按“菜单键”确认并进入下一个菜单。

高品质录音：MP3 格式，高品质，比特率为 128kbps。

长时间录音：MP3 格式，长时间，比特率为 8kbps。

降噪录音：WAV 格式，高品质，比特率为 384kbps。

7.2 录音灯开关

短按“菜单键”进入录音灯开关设置界面，如下图：



按▲或▼键选择“开”或者“关”，按“菜单键”确认并进入下一个菜单。

7.4 声控录音设置

声控功能一旦被启用，录音过程中，当机器检测到有声音时，录音笔会自动开始录音；当未检测到声音时，录音笔在3秒后将自动暂停录音；再次检测到声音时，录音笔又会自动开始录音。短按“菜单键”进入声控录音设置界面，如下图：



7.3 按键音开关

短按“菜单键”进入按键音设置界面，如下图：



按▲或▼键选择“开”或者“关”，按“菜单键”确认并进入下一个菜单。

按▲或▼键选择“开”或者“关”，按“菜单键”确认并进入下一个菜单。

7.5 分段录音功能

分段录音功能打开时，录音过程中到预设的分段时间会自动保存并且开始下一段录音。短按“菜单键”进入分段录音功能设置界面，如下图：



按▲或▼键选择预设的分段时间“关”、“30m(分钟)”、“60m(分钟)”，按“菜单键”确认并进入下一个菜单。

7.6 日期设置

短按“菜单键”进入时间格式设置，如下图：



按▲或▼键选择“12H”(12小时制)或者“24H”(24小时制)，按“菜单键”确认并进入系统时间界面如下图：



12 小时制



24 小时制

在此状态下，按“音量键”在年、月、日、时、分、秒之间切换，设置状态下数字闪烁，再按▲或▼键加减数值。按“菜单键”保存当前设置的时间 / 日期并且进入下一个菜单。

7.7 定时录音设置

定时录音功能：先预设一个时间，当系统时间到达预设时间时，系统将会自动录音。

短按“菜单键”进入定时录音设置，如下图：



按▲或▼键选择“0m”（关闭自动保存）、“30m”（30分钟自动保存）、“60m”（60分钟自动保存）、“120m”（120分钟自动保存），按“菜单键”确认并进入下一个菜单。

7.9 语言选择

用于设置系统语言。

短按“菜单键”进入语言设置，如下图：



按▲或▼键选择“简体”、“繁体”或者“EN”，“菜单键”确认并进入下一个菜单。

7.10 背光时间

背光时间有五种时长可供选择：关，15秒，30秒，45秒，60秒。如果在设定的时间内没对机器做任何操作，背光将会自动关闭。如果选择“关”，背光常亮。

短按“菜单键”进入背光时间设置，如下图：





按▲或▼键选择“关”、“15s”、“30s”“45s”“60s”，按“菜单键”确认并进入下一个菜单。

7.11 对比调节

用于设置屏幕对比度，可调范围 1-9，对比度值越大，背景显示越白；对比度值越小，背景越黑。

短按“菜单键”进入对比度设置，如下图：



按▲或▼键增减数值，按“菜单键”确认并进入下一个菜单。

7.12 自动关机

如果在设定的时间内没对机器做任何操作，系统将会自动关机，有两个时间可以设置：5分钟或者15分钟。

短按“菜单键”进入自动关机设置，如下图：

 


按▲或▼键选择“5m”或者“15m”，按“菜单键”确认并进入下一个菜单。

7.13 剩余时间

用于查询剩余可录音的时间。

短按“菜单键”进入剩余时间查询界面，如下图：



注意

- 不同的录音类型，剩余时间是不一样的。

7.14 格式化磁盘

用于格式化本机内存。



注意

- 格式化前请将存储在本机里的重要资料或者文件备份。

短按“菜单键”进入格式化磁盘界面，如下图：

按▲或▼键选择“是”或者“否”，当选择“是”时，再按“菜单键”确定格式化，如果选择“否”，再按“菜单键”，取消格式化并且进入下一菜单。

7.15 信息

用于查看当前固件的版本、日期。

短按“菜单键”进入查看固件版本界面，如下图：



按“菜单键”返回到语音模式。

8 常见问题

此处列举了常见问题的解答，可帮助解决录音笔出现的简单问题。如果故障仍无法排除，请咨询经销商或访问我们的官方网站。

www.philips.com

无法启动录音笔

电池电量已耗尽请及时充电。

录音笔无法录音

超出录音笔允许的最大文件数量或录音笔存储空间已满，请删除部分录音或将其移至外部存储设备。

录音笔无法播放录音

电池电量已耗尽，请充电。

无法用扬声器收听录音

- 1 耳机已插入，请取下耳机。
- 2 音量已设置为最低值，调整扬声器音量。

9 技术参数

存储器

参考录音时间 (8GB)：降噪录音模式约 48 小时，高音质录音模式约 136 小时，长时间录音模式约 2160 小时。

内置存储器类型：NAND Flash 闪存

移动存储器 (PC)：是

电池满电状态下，录音笔最长可以录音 12 个小时。

尺寸和重量

宽 × 高 × 深：22.7×97.6×14.8 mm

重量 (含电池)：40 g

系统要求

操作系统：Windows 7/Vista/XP/2000, Mac OS X, Linux

接口：USB 接口

录音

录音格式：MP3 / WAV

(高品质) HQ：比特率为 128kbps，格式为 MP3

(长时间) LP：比特率为 8kbps，格式为 MP3

(降噪) NR：比特率为 384kbps，格式为 WAV

运行条件

温度：5° - 45° C

空气湿度：10% - 90%，不凝结

Content

1	Welcome	24
1.1	Product features	24
2	Important	25
2.1	Safety	25
2.2	Hearing protection	25
3	Your recorder	26
3.1	What's in the box?	26
3.2	Overview	26
4	Start to use	27
4.1	Power on/off	27
4.2	Battery charging	28
5	Recording	29
6	Voice & music mode	31
6.1	Basic operations	31
6.2	Delete	32
6.3	A-B Replay	32
6.4	Play mode	33
6.3	Volume adjustment	33
6.4	Equalizer Mode (for music mode)	33

7	System settings	34
7.1	Quality settings	34
7.2	Record light	35
7.3	Key tone	35
7.4	Voice-activated recording	35
7.5	Auto divide recording	36
7.6	Set date & time	36
7.7	Record timer	37
7.8	Duration	37
7.9	Language	38
7.10	Display backlight	38
7.11	Display contrast	39
7.12	Auto power-off	39
7.13	Remaining recording time	39
7.14	Format memory	40
7.15	Information	40
8	Frequently asked questions	42
9	Technical parameters	43

1 Welcome

Welcome to the world of Philips! We are honored by your choice and purchase of Philips' products. You can have Philips' comprehensive technical supports from our website, e.g. user's manuals, software downloading and warranty information etc.

www.philips.com

1.1 Product features

Digital noise reduction: Effectively filter the ambient noise in the recording environment and record clear sound, which is recommended to use in noisy environment. It's recording type is PCM Noise Reduction.

- HD loudspeaker: The adoption of high quality speaker allows you to experience natural sound during playback of recordings or music files as well.
- Record in MP3 format.
- Quick access to recordings and data by using high speed USB 2.0.
- Voice-activated recording.
- USB mass storage, ensuring maximum compatibility.
- Keylock function: Keylock function can prevent accidentally touch pause or exit button during recording.

2 Safety information

2.1 Safety

- To avoid a short circuit, do not expose the product to rain or water.
- Do not expose the device to excessive heat caused by heating equipment or direct sunlight.
- Protect the cables from being pinched, particularly at plugs.
- Attention! Before using the device please read this user's manual carefully. The company shall not be liable for any data loss due to erroneous operation or causes of a force majeure nature. Special attention should be given to careful operations and prepare backup of files.

- When in dangerous conditions, please carefully use the earphones or stop using.
- Do not use the earphones when driving, cycling and skateboarding to avoid traffic accident and violating laws and regulations.


2.2 Hearing protection

Observe the following guidelines when using your headphones:

- Adjust to suitable volume; do not use the earphone for a long time.
- Please do not turn the volume up beyond your tolerance.
- Do not turn up the volume so high that you can't hear what's around you.


3 Your recorder

3.1 What's in the box?

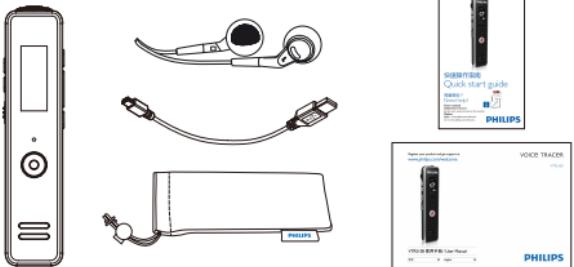

- ① Headset jack
- ② Volume (VOL)
- ③ Menu key (MENU)
- ④ Power on/off (ON/OFF)
- ⑤ USB port
- ⑥ Display
- ⑦ Record, Play, Charging indicator
- ⑧ Record, Pause 
- ⑨ Speaker
- ⑩ Play, Pause 
- ⑪ Volume up, Fast reverse, File selection previous, Menu item selection 
- ⑫ Volume down, Fast forward, File selection next, Menu item selection 
- ⑬ Stop, Folder selection 
- ⑭ Microphone jack (MIC)

3.2 Overview:

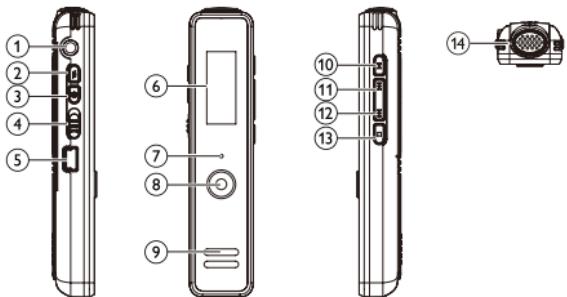

4 Start to use

4.1 Power on/off



Note

- Please recharge the device for three hours before using it for the first time! (See also chapter 4.2 Charging battery, page 28.)

To power on/off,

1 Slide the on/off switch on the side of the device in the ON position,

- The device turns on and the start-up screen is displayed; the device starts automatically and then displays “PHILIPS”, as shown below.

 


2 Press the ON/OFF switch to power the device on/off.



Note

- If the device shall be idle for a long time, please slide the power switch to OFF position.
- If the device cannot work normally, please make sure the device is not out of electricity.
- When the device is recording, please do not cut off the power, otherwise damaged file or malfunction may be resulted.
- When the battery indicator “” is displayed, please charge the device promptly.
- Please charge battery in advance if you need to record for a long time. A fully charged battery will allow you to record for approx 6.5 hours.



4.2 Battery charging

- 1 Prior to charging, please slide power switch to ON position.
- 2 Connect the device to PC through USB cable or use special charger to recharge.
 - The battery indicator shows a battery icon turning from empty to full repeatedly, indicating that the device is recharging, with orange charging indicator being lit.
 - The device can be fully charged in around 3 hours.
 - The orange charging indicator is not displayed when the device is fully charged.

USB connection and charging interface:



When the power switch is slide to the OFF position, the battery symbol  will not be displayed.



Note

- During charging, the device cannot be used to record or playback.

Connect to computer

The device can be used as a USB mass storage to conveniently store, back up and move files. Link the device to a computer with a USB cable, the voice recorder can automatically be recognized as a portable device without the need to install any software.



Note

- When moving files into or out of the device, please do not disconnect the device from the computer.

5 Recording

1 In the stop state of voice mode, press STOP button  to select the folder you prefer. You can select folder A, B, C, D.

2 Press REC button  to start recording,

- the red indicator light will be on and the display will show "REC"; please point the top of the device towards the source of sound.

3 Press REC button  to pause recording,

- the red indicator light will flicker, and the display will show "Pause".

4 Press REC button  again to resume recording.

5 Press STOP button  to save recording,

- red indicator light is turned off, and the device will return to the Stop interface of current recorded file.


6 Long-press menu button to realize lock screen which can avoid hitting pause or exit button. Long-press menu button to release the lock.



Note

- When the device is in a dormant state, long press REC button to start recording.

Illustration of recording interface:

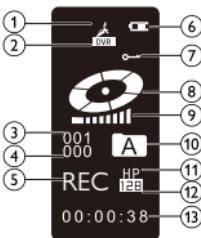

- ① Record icon
- ② Voice mode
- ③ Current file
- ④ The total files of the current directory
- ⑤ Record status
- ⑥ Battery
- ⑦ Lock status
- ⑧ Status indicator
- ⑨ Volume
- ⑩ Voice folder

- ⑪ Record type
- ⑫ Bit rate
- ⑬ Current duration of recording



Note

- When the low battery icon occurs, it means the battery is nearly empty and the system will automatically shut down. If the device is recording, the system will automatically save the recorded file then shut down. If the device has low battery, please recharge promptly. When the device is to shut down due to low battery, the following icon will display.



Note

- Prior to recording, please preset the recording format you need (See “Quality settings” in [System settings, chapter 7.1, page 34](#).) and the folder where you want to save recorded files (See “Voice folder selection” in the [Voice & music mode, chapter 6, page 31](#)).
- Check if the remaining recording time is sufficient for the next recording (See “Remaining recording time” in [The System setting, chapter 7.13, page 39](#)).
- When recording, press ▼ button to save the current recording and start the next recording.
- Please test recording to ensure that the Voice Tracer setting is right.
- A/B/C and D folder can store 99 files at most, with 396 files in total (99 x 4).
- If the recording time exceeds the usable capacity of the device or the number of files reaches the limit of 396, the recording stops. Please delete part of recording or move it to a computer.
- When the device is in the recording mode, please do not slide power switch to OFF, otherwise the current recording files will be damaged.


6 Voice & music mode

Voice mode: the device will display DVR when it's playing recorded documents;

Music mode: the device will display MUSIC when it's playing music documents;

The two modes can be switched through short-pressing menu button.

Return to voice mode by short pressing stop button or long pressing menu button in the settings interface.

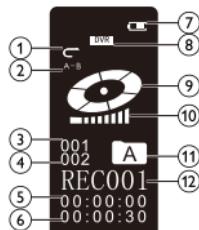

Interface of playing files

- ① Play mode
- ② Replay mode
- ③ Current file
- ④ The total files of the current directory
- ⑤ Current time
- ⑥ Total time

- ⑦ Battery
- ⑧ Voice mode
- ⑨ Status indicator
- ⑩ Volume
- ⑪ Voice folder
- ⑫ Current file

6.1 Basic operations

- 1 In stop state, press STOP button (■) to select voice folder, A-B-C-D-MUSIC-A...
- 2 Press ▲ or ▼ to select the file you want to play.
- 3 Press "PLAY"(▶||) to play and press "PLAY"(▶||) to stop the playing.
- 4 When playing, press ▲ or ▼ to fast forward or backward, release the button to resume playing.
- 5 Press "STOP"(■) to end the playing.

6.2 Delete



Delete current file



Delete all files in the folder

- 1 In stop state, long press "STOP"button for 2 to 3 seconds to enter delete interface;
- 2 Press "PLAY"(▶||) to choose "Delete one" or "Delete all";
- 3 Press ▲ or ▼ to choose "YES" or "NO";
- 4 Press "MENU" to confirm.

6.3 A-B Replay

A-B



Figure 1

A-B



Figure 2

- 1 When playing, short press VOL button to enter A-B replay mode, and set the start mark A, then the screen displays A-B, and B flashes as shown in Figure 1;
- 2 Short press VOL button to set the finish mark B, screen displays A-B, and start to replay as shown in Figure 2;
- 3 Repress the VOL button again to cancel replay, display A-B disappears and return to normal playing (if not press VOL button to cancel replay, device will automatically exit replay mode after replay for five times).

6.4 Play mode

The device supports three play modes, including Sequence, Repeat one and Repeat all. It is able to switch among those three play modes by pressing MENU button when playing.

Sequence, it means to play in the order that from the current file to the last one, and then it automatically stops playing.

Repeat one, it means to repeatedly play the current file only.

Repeat all, it means to play all files in the current folder repeatedly.

6.5 Volume adjustment



1 Long press VOL button to enter volume adjustment, with screen displaying a speaker icon flashing, as shown in the

following figure.

2 Press button ▲ or ▼ to turn up or turn down the volume, then the volume bar on the screen will correspondingly increase or reduce.

6.6 Equalizer Mode (for music mode)

The device supports seven sound effect modes, including normal, rock, popular, classic, soft, and jazz and DBB. Long press STOP key for 2-3 seconds to switch among them when playing.

Icon	Sound Effect
	Normal
	Rock
	Popular
	Classic
	Soft
	Jazz
	DBB

7 System settings

- 1 In the stop state of music mode, long press “MENU” to enter system settings.
- 2 Return to voice mode interface by pressing “STOP” button from any system menu interface.

Menu	Submenu				
Quality settings	HQ	LP	NR		
Record light	On	Off			
Key tone	On	Off			
Voice-activation	On	Off			
Auto divide feature recording	Off	30m	60m		
Set date & time	12h	24h			
Recorder timer					
Duration	0m	30m	60m	120m	
Language	S-C	T-C	EN		
Backlight time	Off	15s	30s	45s	60s
Display contrast	1-9				
Auto power-off	5m	15m			
Remaining recording time					
Format memory	yes	no			
Information					

7.1 Quality settings

- 1 In the stop interface of music mode or voice mode, long press MENU button to enter quality settings Interface as shown in the following figure:



- 2 Three types of recording are available: high-quality recording, long-time recording and noise reduction recording. Press ▼ or ▲ to select the one you prefer.

HQ: MP3 format, high quality, with bit rate of 128kbps.

LP: MP3 format, long time, with bit rate of 8kbps.

NR: WAV format, high quality, with bit rate of 384kbps.

- 3 Press MENU to confirm and enter the next menu.

7.2 Record light

- 1 Short press MENU button to enter record light setting interface, as below:



- 2 Press ▲ or ▼ to select "On" or "Off".
- 3 Press MENU to confirm and enter the next menu.



- 2 Press ▲ or ▼ to select "On" or "Off".
- 3 Press MENU to confirm and enter the next menu.

7.4 Voice-activated recording

- 1 Short press the MENU to enter voice-activated settings interface, as shown in the following figure:



7.3 Key tone

- 1 Short press MENU button to enter device sounds setting interface, as shown in the following figure:

- 2 Press **▲** or **▼** to select “On” or “Off”,
 - if voice-activated recording is enabled, recording session will start when you begin speaking.
 - when you stop speaking, the device will automatically pause recording after three seconds of silence, and resume only when you begin speaking again.



- 3 Press MENU to confirm and enter the next menu.

7.5 Auto divide recording

You can automatically divide large recordings, such as a multi-hour meeting recording. Once the set time has been reached, the device stops the current recording and automatically starts a new one.

- 1 Short press on the MENU to enter the auto divide feature recording setting interface, as shown in the following figure:

- 2 Press **▲** or **▼** to select preset auto divide time : “Off”, “30min” and “60min”.

- 3 Press MENU to confirm and enter the next menu.

7.6 Set date & time

- 1 Short press on the MENU to enter the time format setting interface, as shown in the following figure:



- 2 Press **▲** or **▼** to select “12H” or “24H” format.
- 3 Press **MENU** to confirm and enter the system time setting interface, as shown in the following figures:



12h



24h

- 4 In this state, press **VOL** to switch among the year, month, date, hour, minute and second. The number will flash in the state of setting, press **▲** or **▼** to adjust the numerical value.
- 5 Press **MENU** to save the current time/date settings and enter the next menu.

figures:



12h



24h

The setting method refers to “Set date & time”.

7.8 Duration

It is used to set time duration of auto recording. Device will automatically save recording when reaches the preset time.

- 1 Short press on the **MENU** to enter the duration setting, as shown in the following figures:

7.7 Record timer

You can use this function to start a recording at a specified date and time.

Short press the **MENU** button as shown in the following



- 2 Press **▲** or **▼** button to select “0 m”(to disable auto save), “30 m”(to auto save at a 30 min interval), “60 m”(to auto save at a 60 min interval), “120 m”(to auto save at a 120 min interval), press MENU to confirm and enter the next menu.



- 2 Press **▲** or **▼** to select “Simplified Chinese” (S-C), “Traditional Chinese” (T-C) or “English” (EN).
- 3 Press MENU to confirm and enter the next menu.

 
7.9 Language

It is used for setting the system language.

- 1 Short press on the MENU to enter the language setting interface, as shown in the following figures:

7.10 Display backlight

- 1 Short press on the MENU to enter the backlight time setting, as shown in the following figures:



- 2 Press **▲** or **▼** to select “Off”, “15s”, “30s”, “45s” and “60s”.
- 3 Press MENU to confirm and enter the next menu.

7.11 Display contrast

- 1 Short press on the MENU to enter the contrast setting interface, as shown in the following figures:



- 2 Press **▲** or **▼** to adjust numerical value.
- 3 Press MENU to confirm and enter the next menu.

7.12 Auto power-off

The device switches off automatically if no key is pressed within a preset period of time. This saves power.

- 1 Short press on the MENU to enter the auto power-off setting, as shown in the following figures:



- 2 Press **▲** or **▼** to select “5m” or “15m”.
- 3 Press MENU to confirm and enter the next menu.

7.13 Remaining recording time

- 1 It is used for check remaining time for recording.
- 2 To enter the remaining time checking interface,
 - short press the MENU, as shown in the following figures:



Note

- Different record types vary in remaining time.

7.14 Format memory

It is used for formatting the internal storage of the device.



Note

- Prior to formatting, please backup important data or files in advance.

- 1 Short press on the MENU to enter the clear memory interface, as shown in the following figures:

- 2 Press **▲** or **▼** to select “Yes” or “No”.
- 3 Press MENU to confirm the formatting,
 - when you selecting “YES”;
 - if press MENU with “No”, it will cancel the formatting and enter the next menu.

7.15 Information

It is used for checking the version of firmware and the date.

- 1 To enter the firmware version checking interface,
 - on the stop interface of music mode, consecutively short press on the MENU as shown in the following figures:



2 Press MENU to return to the voice mode.

8 Frequently asked questions (FAQ)

Answers to the frequently asked questions are listed here to solve simple problems that may occur. If the problem cannot be solved, please contact the dealer or visit our official website: www.philips.com/support

Cannot switch on the device

The battery is empty, please recharge promptly.

Cannot record with the device

Exceed the maximum file number or the device's storage is full, Please delete some recordings or move them to other storage devices.

Voice Tracer fails to play

Please recharge the battery as it has run out power.

Unable to listen to recording via speaker

- 1 Please unplug the headset.
- 2 Adjust the volume of speaker as the volume may have been set at the minimum value.

9 Technical parameter

Memory

Reference recording time (8GB): About 48 hours for digital noise reduction recording mode , 136 hours for high quality recording mode and 2160 hours for long time recording mode.

Type of internal memory: NAND Flash (flash memory)

Mobile storage device (PC): Yes

Recording time with fully charged battery: approx 12 hours

Dimensions

Product dimensions (W × D × H): 22.7×97.6×14.8 mm

Weight (including battery): 40 g

System requirements

Operating System: Windows 7/Vista/XP/2000, Mac OS X,

Linux

Port: USB port

Recording

Recording format:

(High quality) HQ: Bit rate 128kbps, MP3 format

(Long time) LP: Bit rate 8kbps, MP3 format

(Digital noise reduction) NR: Bit rate 384kbps, WAV format

Operational condition

Temperature: 5° – 45°C

Air humidity: 10% – 90%, non-condensing

Warranty card

质保书

1

year warranty

一年质保

Type: VTR5100

Serial nr:

Date of purchase

购买日期

Dealer's name, address and signature 销售商名称、地址及签字

www.philips.com/welcome

This document is printed on chlorine free produced paper
Data subject to change without notice

This product was brought to the market by Speech Processing Solutions GmbH or one of its affiliates, further referred to in this document as SPS, which is the manufacturer of the product. SPS is the warrantor in relation to the product with which this booklet was packaged.

For China only
只限中国地区

Printed in China



