

# Quick Start Guide





Step A *Connect*

Step B *Setup*



Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

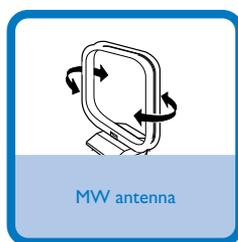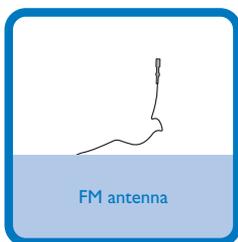

Pull out the plastic protective sheet before use.

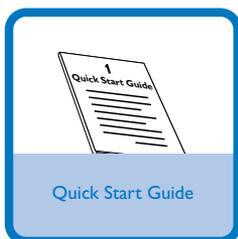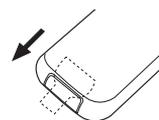

**PHILIPS**

# Step A *Connect*

1


Connect the speaker cables.

2

Connect the MW and FM antennas.

## *Tip*

*See the User Manual for how to connect other equipment to this system.*

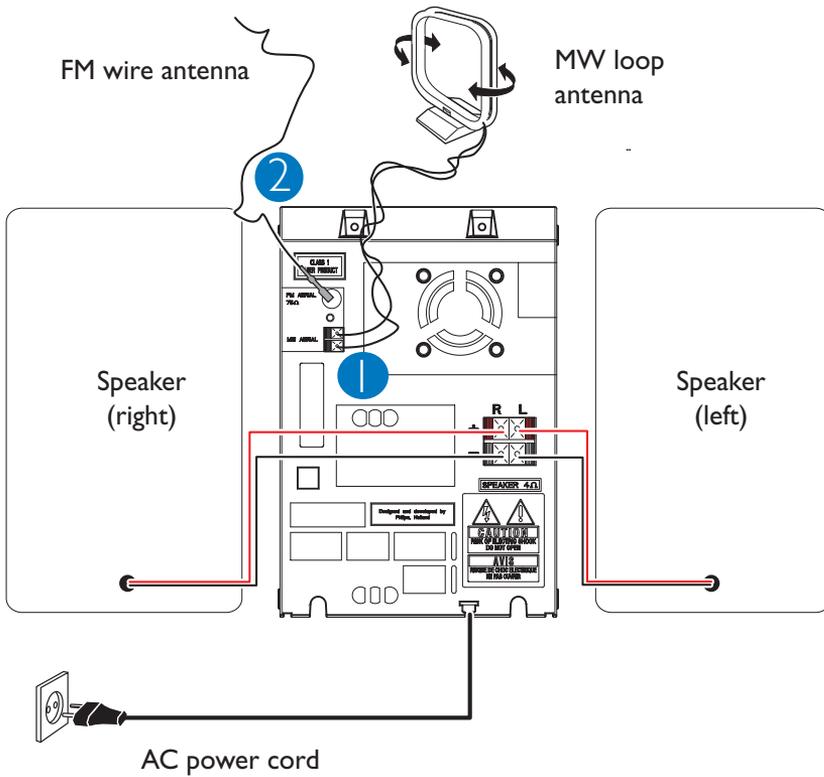




## Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

## Programming and tuning to radio stations

- 1 Press **SOURCE** on the front panel repeatedly (or **TUNER** on the remote control) to select the tuner source.
- 2 Press **PROG** for more than two seconds to program all available stations in order of waveband.
- 3 Press **ALBUM/PRESET**  or  until the desired preset station is displayed.

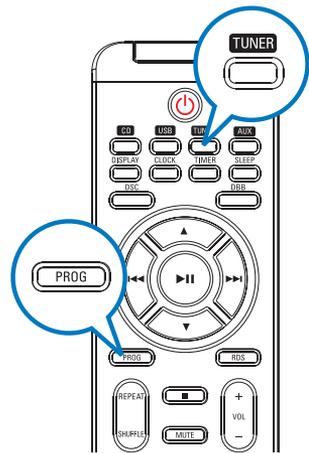

**Tip**  
Detailed playback features and additional functions are described in the accompany owner's manual.

