

Device	Brand	Codes
AUDIO	AIWA	0585,0885,0786,0687
AUDIO	APEX	0245
AUDIO	APPLE IPOD	0190
AUDIO	BOSE	0868,0079,0179
AUDIO	CARVER	0184
AUDIO	CENTRIOS	1107,0087
AUDIO	CITIZEN	0284
AUDIO	CRITERION	0446
AUDIO	DELPHI	0472
AUDIO	DENON	0981,0383,0886
AUDIO	FISHER	0083,0783
AUDIO	GOLDSTAR	0278
AUDIO	HARMAN KARDON	0082,0483
AUDIO	IPOD	0090
AUDIO	JVC	0680,0982,0583
AUDIO	KENWOOD	0969,0482,0283,0484,0884,0588
AUDIO	KOSS	0143
AUDIO	MAGNAVOX	0281,0083,0193,0277
AUDIO	MARANTZ	0470,0084
AUDIO	MITSUBISHI	0389
AUDIO	NAD	0773,0575,0975
AUDIO	NEO	0174
AUDIO	NEXXTECH	1107,0679,0879,0480,0580,0584,0087,0787
AUDIO	NORCENT	0494
AUDIO	ONKYO	0182,0782,0882,0199
AUDIO	OPTIMUS	0368,0376,0476,0576,0776,0876,0077,0980
AUDIO	PANASONIC	0780,0682,0183,0983,0987,0088,0099,0696
AUDIO	PHILIPS	0177,0083,0983,0084,0184,0277,0377
AUDIO	PIONEER	0385,0288,0388,0489,0299
AUDIO	RADIO SHACK	0272,0077,0980,0282,0188,0288,0388,0488,0189,0489,0589
AUDIO	RCA	0373,0274,0878,0779,0181,0384,0186,0288,0388,0688,0788,0888,0189,0489,0589,0546,0693
AUDIO	REALISTIC	0883
AUDIO	RIO	0142,0380
AUDIO	SABA	0593
AUDIO	SAMSUNG	0047
AUDIO	SANYO	0172
AUDIO	SCOTT	0478
AUDIO	SHARP	0768,0070,0582
AUDIO	SHERWOOD	0272,0282,0487,0587
AUDIO	SIRIUS	0276,0070
AUDIO	SKYFI	0174
AUDIO	SONY	0933,0479,0579,0180,0381,0481,0581,0984,0085,0185,0285,0985,0200
AUDIO	TAO	0174
AUDIO	TEAC	0672,0382,0187,0287,0387
AUDIO	TECHNICS	0780,0682,0183,0983,0987,0088
AUDIO	TEVION	0446
AUDIO	VENTURER	0176
AUDIO	XM RADIO	0472,0174
AUDIO	YAMAHA	0781,0881,0485,0685,0785,0286,0386,0486,0586,0378
AUDIO	ZENITH	0269,0674,0576,0577,0178,0278,0080,0083,0380,0686,0142
CABLE	ABC	0747,0947,0048,0148,0248
CABLE	ADELPHIA	0852,0752
CABLE	ALLEGRO	0054,0154
CABLE	AMERICAST	0354
CABLE	ANTRONIX	0448,0548
CABLE	ARCHER	0448,0548,0648,0748
CABLE	AT&T	0752
CABLE	BELL SOUTH	0354
CABLE	CABLETENNA	0448
CABLE	CABLEVIEW	0448
CABLE	CABLEVISION	0252
CABLE	CENTURY	0748
CABLE	CITIZEN	0748
CABLE	COGECO	0752
CABLE	COLOR VOICE	0848,0948
CABLE	COMCAST	0752
CABLE	COMTRONICS	0049,0149
CABLE	CONTEC	0249
CABLE	DIGITAL MUSIC EXPRESS	0053
CABLE	EASTERN	0349
CABLE	EVERQUEST	0049
CABLE	GARRARD	0748
CABLE	GC ELECTRONICS	0548
CABLE	GE	0556
CABLE	GEMINI	0255,0549
CABLE	GENERAL INSTRUMENT (GI)	0552,0747,0148,0752,0952,0453,0654,0754,0053,0048,0947
CABLE	HAMLIN	0747,0649,0749,0849
CABLE	HITACHI	0947
CABLE	ILLICO	0252
CABLE	JASCO	0748
CABLE	JERROLD	0552,0747,0148,0453,0947,0048,0653,0254
CABLE	MAGNAVOX	0150
CABLE	MEMOREX	0250
CABLE	MOTOROLA	0552,0148,0952,0453,0654,0754,0048,0752,0254,0947
CABLE	MOVIE TIME	0350
CABLE	NOWTV	1106
CABLE	NSC	0350
CABLE	OAK	0249,0550
CABLE	PACE	0854
CABLE	PANASONIC	0647,0452
CABLE	PARAGON	0250,0450
CABLE	PHILIPS	0748,0549,0150,0650,0750,0850
CABLE	PHILIPS-MAGNAVOX	0152,0055
CABLE	PIONEER	0449,0252,0950,0051

CABLE	PULSAR	0250
CABLE	RADIO SHACK	0152,0055,0154
CABLE	RCA	0647,0748,0352
CABLE	RCN	0954
CABLE	REALISTIC	0548
CABLE	REGAL	0849
CABLE	REGENCY	0349
CABLE	REMBRANDT	0947
CABLE	ROGERS	0252
CABLE	RUNCO	0250
CABLE	SAMSUNG	0049,0051
CABLE	SCIENTIFIC ATLANTA	0451,0351,0252,0155,0852,0248,0251
CABLE	SHAW	0752
CABLE	SIGNAL	0049
CABLE	SIGNATURE	0947
CABLE	SL MARX	0049
CABLE	SPRUCER	0647
CABLE	STANDARD	0551
CABLE	STAR SIGHT	0352
CABLE	STAR TRAK	0253
CABLE	STARCOM	0747,0453
CABLE	STARGATE	0049
CABLE	TANDY	0651
CABLE	TELEVIEW	0049
CABLE	TEXSCAN	0551
CABLE	TIME WARNER	0252
CABLE	TOCOM	0048,0751,0952,0653
CABLE	TOSHIBA	0250
CABLE	TV86	0350
CABLE	UNIKA	0448,0548,0748
CABLE	UNITED CABLE	0747
CABLE	UNIVERSAL	0448,0548,0648,0748,0851,0054
CABLE	VIDEO TECH	0656
CABLE	VIDEOTRON	0252
CABLE	VIDEOWAY	0052
CABLE	VIEWSTAR	0149,0150,0350,0651
CABLE	VISIONETICS	1206
CABLE	ZENITH	0951,0154,0748,0250,0753,0853,0953
CABLE	ZENITH NETWORK	0354
CD	ADC	0490
CD	ADCOM	0767,0073
CD	AIWA	0967,0372,0885
CD	AKAI	0173,0375,0684
CD	AUDIO TECHNICA	0168
CD	CALIFORNIA AUDIO LABS	0273
CD	CAPETRONIC	0568
CD	CARVER	0268,0368,0468,0184
CD	CASIO	0379
CD	CENTRIOS	0979
CD	CITIZEN	0284
CD	CURTIS MATHES	0379
CD	DENON	0668
CD	EMERSON	0767,0968
CD	FISHER	0368,0169,0269,0369,0473
CD	GENEXXA	0968,0469,0573
CD	GOLDSTAR	0673
CD	HARMAN KARDON	0669,0770
CD	HITACHI	0469
CD	INKEL	0769
CD	INSIGNIA	0578
CD	JC PENNEY	0670,0379
CD	JVC	0869,0982
CD	KENWOOD	0569,0969,0170,0374,0474,0484
CD	KRELL	0268
CD	KYOCERA	0490
CD	LUXMAN	0270,0370,0574,0475
CD	LXI	0379
CD	MAGNAVOX	0268,0774,0681
CD	MARANTZ	0268,0470,0570,0874
CD	MCS	0670,0379
CD	MGA	0770
CD	MISSION	0268
CD	MITSUBISHI	0770,0870
CD	NAD	0773,0975
CD	NAKAMICHI	0970,0071,0784
CD	NEC	0670
CD	NEXXTECH	0679,0879,0480,0580,0584,0087,0787
CD	NIKKO	0168,0968,0269
CD	NSM	0268
CD	ONKYO	0171,0271,0873,0782
CD	OPTIMUS	0368,0468,0469,0569,0371,0471,0571,0671,0076,0376,0776
CD	PANASONIC	0273,0974,0675,0683,0887
CD	PHILIPS	0268,0774,0184
CD	PIONEER	0469,0771,0871,0573,0676,0385,0289
CD	PROTON	0268
CD	QUASAR	0273
CD	RADIO SHACK	0468,0571,0272,0676,0280,0488,0089,0289
CD	RCA	0767,0368,0971,0973,0676,0181,0086,0988,0089,0289
CD	REALISTIC	0767,0368,0568,0968,0469,0570,0371,0571
CD	ROTEL	0268
CD	SAE	0268
CD	SAMSUNG	0775
CD	SANSUI	0268,0072,0973,0075
CD	SANYO	0368,0172,0473,0175,0875
CD	SCOTT	0767,0968

CD	SEARS	0569,0570,0379
CD	SHARP	0569,0570
CD	SHERWOOD	0769,0570,0471,0272,0587
CD	SHURE	0670
CD	SONY	0372,0880,0081,0681
CD	STS	0490
CD	SYLVANIA	0268
CD	SYMPHONIC	0572
CD	TEAC	0269,0570,0571,0572,0672,0772,0287
CD	TECHNICS	0273,0974,0683,0887
CD	THETA DIGITAL	0774
CD	TOSHIBA	0773
CD	VICTOR	0869
CD	YAMAHA	0168,0872,0972,0074,0286
CD	ZENITH	0269,0674,0577,0080,0686
DVD	A-TREND	0940
DVD	ACESONIC	1513
DVD	ADVENT	0893
DVD	AFREEY	0343
DVD	AIWA	0043
DVD	AKAI	0141,0145,1112,1912
DVD	ALLEGRO	0126,0142
DVD	AMES	0744
DVD	AMW	0393,0493
DVD	ANABA	0797
DVD	APEX	0240,0640,0740,0840,0044,0644,0245,0545,0146,0347,0547,0495,0992,0741,0596
DVD	ASPIRE	0994
DVD	ASTAR	1910
DVD	AUDIOVOX	0793,1313
DVD	AXION	0793
DVD	B & K	0499
DVD	BLAUPUNKT	0644
DVD	BLUESKY	0143,0146,1114
DVD	BODYSONIC	0343
DVD	BOSE	0868
DVD	BOSS	0792
DVD	BOSTON ACOUSTIC	1411
DVD	BRITANIA	0833
DVD	BROKSONIC	0894,0398,0041
DVD	CAVS	1113
DVD	CENTRIOS	0796,1308,1408,0793,1007,1107,1507,1607,1707,1008,1108,1807,0546
DVD	CHANGHONG	0741
DVD	CINEVISION	0142
DVD	CITECH	1908
DVD	CITIZEN	1908
DVD	CLASSIC	0744,1706,0741
DVD	COBY	0294,0296,0396,0293,0146,0494,0091,1710,1711,1712,1812,1014
DVD	CONCEPT	0644
DVD	CONIA	0146
DVD	CRITERION	0446
DVD	CURTIS INTERNATIONAL	0594,0494
DVD	CYBERHOME	0940,0100,0595
DVD	CYBERVISION	0433
DVD	CYTRON	0246,0440
DVD	DAEWOO	0645,0745,0046,0798,0198
DVD	DENON	0641,0743
DVD	DENZEL	0444
DVD	DESAY	0497
DVD	DIAMOND VISION	0496,0890,0291
DVD	DIGITREX	0146
DVD	DIGIX	0095
DVD	DISNEY	0447
DVD	DRIVE	1011
DVD	DUAL	0346,0000,0297,0444,0246,1810
DVD	DURABRAND	0546,0142,0246,1210,1310,1410,1510,1610
DVD	DVD 2000	0841
DVD	EIGERVISION	1213
DVD	ELTA	0045,0145
DVD	EMERSON	0142,0695,0591,0247,0447
DVD	ESA	0297
DVD	FARENHEIT	0697
DVD	FISHER	0243
DVD	FUNAI	0247,0447,0591
DVD	GE	0542,0644
DVD	GO-VIDEO	0744,0395,0798,0047,0891,0791,0342,0244,0147
DVD	GOLDSTAR	0142
DVD	GPX	0295,0096
DVD	GRADIENTE	0143,0633,0733
DVD	GREENHILL	0644
DVD	HAAZ	0746,0846
DVD	HAIER	0195
DVD	HARMAN KARDON	0344
DVD	HITACHI	0042,0342,0444,0543,0340
DVD	HITEKER	0146
DVD	HUMAX	0892
DVD	ILO	0597,1608
DVD	INFINITY	0343
DVD	INITIAL	0644,1608,1110,1512
DVD	INSIGNIA	0142,0247,0793,0644,0192,0392
DVD	INTEGRA	0843
DVD	JBL	0344
DVD	JVC	0441,0242,0442,0098,0691,1808,0443,0993
DVD	JWIN	0640,0990,0191,1412
DVD	KAWASAKI	0196,0546
DVD	KENWOOD	0641,0544

DVD	KISS	0444
DVD	KLH	0644,0292,0240
DVD	KONKA	0642,0742,0842,0942,0192
DVD	KOSS	0143,0440
DVD	KXD	0091
DVD	LASONIC	0746,0496
DVD	LENOXX	0794,0145,1310,1410
DVD	LG	0142,0898,0392
DVD	LINN	0945
DVD	LIQUIDVIDEO	0793
DVD	LITEON	0899,0891,0491,0597,1508
DVD	MAGNAVOX	0441,0442,0447,0599,0799,0699,0247,0193,0093,0598
DVD	MARANTZ	0441,0142,0442,0943,0799
DVD	MAXENT	0993,0991
DVD	MEDION	0792,0246,0991,0291,0597
DVD	MEMOREX	0246,1606,1413,1913
DVD	MERIDIAN	0441
DVD	MICROSOFT	0542
DVD	MICROVISION	0792
DVD	MINTEK	0644
DVD	MITSUBISHI	0841
DVD	MUSTEK	0744
DVD	MYRON & DAVIS	0897
DVD	NAD	0142,0944
DVD	NAKAMICHI	0844
DVD	NEC	0142
DVD	NESA	0644,0897
DVD	NEXXTECH	0896,0097,0197,0297,0095,1806,1007,1107,1207,1307,1907,1008,0546,0596
DVD	NORCENT	0294,0899,0394,0194,0494
DVD	ONKYO	0441,0843,0199
DVD	OPTIMUS	0042,0941
DVD	ORION	0041
DVD	ORITRON	0143,1607
DVD	PACIFIC	0246
DVD	PANASONIC	0241,0641,0099,0698,0345,0696,0340
DVD	PHILCO	0533
DVD	PHILIPS	0441,0442,0943,0177,0599,0799,0699,0247,0447,0598,1211,1214
DVD	PHILIPS-MAGNAVOX	0441,0442,0943,0599,0699
DVD	PIONEER	0941,0042,0299,0399,0498,0592,1010
DVD	PIVA	1109
DVD	POLAROID	0140,0397,0596,1813
DVD	POLK AUDIO	0441,0442,0799
DVD	PORTLAND	0145,0896
DVD	POWER ACOUSTIK	1312
DVD	PROLINE	0143
DVD	PROSCAN	0542,0690
DVD	PROSONIC	0294
DVD	PROTRON	0194
DVD	PYLE	0692
DVD	RADIO SHACK	0546,0946,0593,0693
DVD	RCA	0542,0143,0644,0546,0946,0693,0690,1913
DVD	REGENT	0794,1210
DVD	REOC	0746
DVD	RIO	0142
DVD	RJ TECHNOLOGY	1209,1311
DVD	ROSEN	0694
DVD	ROTEL	0242
DVD	SABA	0593
DVD	SAMPO	0343
DVD	SAMSUNG	0342,0047,0895,0997,0790,1511,0147
DVD	SANSUI	0041,0398
DVD	SANYO	0092,0546,0243
DVD	SEARS	0041,0247
DVD	SEG	0444
DVD	SELECTRON	1309,1409,1509,1609,1709,1809,1909
DVD	SEMP	0440
DVD	SHARP	0341,0391,0492
DVD	SHERWOOD	0144
DVD	SHINCO	0644
DVD	SHINSONIC	0644
DVD	SONIC BLUE	0395
DVD	SONY	0300,0400,0500,0541,0200,0540
DVD	SOUNDSTORM	0692,0792
DVD	SOVA	1111
DVD	SUNGALE	0996,0396
DVD	SUPERSCAN	0247
DVD	SUPERSONIC	0096
DVD	SV2000	0247
DVD	SVA	0146,0492
DVD	SYLVANIA	0247,0447,1212,0591
DVD	SYMPHONIC	0247,0447,0591
DVD	TASCAM	0242
DVD	TEAC	0042,0546,0142
DVD	TECHNICS	0641
DVD	TECHWOOD	0944,1708,0442
DVD	TERAPIN	0995
DVD	TEVION	0440,0246,0346,0446,0646,0746,0846
DVD	THETA DIGITAL	0042
DVD	TIVO	0892,0592
DVD	TOSHIBA	1612,1013,1613,0441,0998,0094,0999
DVD	TREDEX	0795
DVD	TRUTECH	1906,0798,1713
DVD	UNITED	0546
DVD	VENTURER	0546
DVD	WESTINGHOUSE	0300

DVD	WHARFEDALE	0845,0343
DVD	WHITE WESTINGHOUSE	0447
DVD	X-BOX	0542
DVD	XENIUS	0440
DVD	YAMAHA	0641,0643,0599,0699,0442
DVD	YAMAKAWA	0445,0444,1407
DVD	ZENITH	0441,0142,0392
DVD-RECORDERS + RW	APEX	0495
DVD-RECORDERS + RW	ASPIRE	0994
DVD-RECORDERS + RW	BROKSONIC	0398
DVD-RECORDERS + RW	CENTRIOS	0796,1607,1707
DVD-RECORDERS + RW	COBY	0091
DVD-RECORDERS + RW	CYBERHOME	0595
DVD-RECORDERS + RW	EMERSON	0591
DVD-RECORDERS + RW	GO-VIDEO	0744,0891,0791
DVD-RECORDERS + RW	HITACHI	0543,0340
DVD-RECORDERS + RW	HUMAX	0892
DVD-RECORDERS + RW	ILO	0597
DVD-RECORDERS + RW	INSIGNIA	0392
DVD-RECORDERS + RW	JVC	0691,1808
DVD-RECORDERS + RW	KXD	0091
DVD-RECORDERS + RW	LG	0392
DVD-RECORDERS + RW	LITEON	0891,0491,0597
DVD-RECORDERS + RW	MAGNAVOX	0599,0699
DVD-RECORDERS + RW	MEDION	0991,0597
DVD-RECORDERS + RW	MEMOREX	1606,1413
DVD-RECORDERS + RW	MUSTEK	0744
DVD-RECORDERS + RW	ORITRON	1607
DVD-RECORDERS + RW	PANASONIC	0340
DVD-RECORDERS + RW	PHILIPS	0599,0699,1211
DVD-RECORDERS + RW	PHILIPS-MAGNAVOX	0599,0699
DVD-RECORDERS + RW	PIONEER	0399,0592,1010
DVD-RECORDERS + RW	POLAROID	0140
DVD-RECORDERS + RW	RCA	0542
DVD-RECORDERS + RW	SAMSUNG	0790
DVD-RECORDERS + RW	SANYO	0092
DVD-RECORDERS + RW	SELECTRON	1609
DVD-RECORDERS + RW	SHARP	0391
DVD-RECORDERS + RW	SONY	0300,0400,0500
DVD-RECORDERS + RW	SYLVANIA	1212,0591
DVD-RECORDERS + RW	SYMPHONIC	0591
DVD-RECORDERS + RW	TOSHIBA	0998,0441,1013
DVD-RECORDERS + RW	TRUTECH	1906
DVD-RECORDERS + RW	YAMAHA	0599,0699
DVD-RECORDERS + RW	ZENITH	0392
DVR	AT&T	0938
DVR	HUGHES	0659
DVR	HUMAX	0892
DVR	PANASONIC	0938,0340
DVR	PHILIPS	0738,0036,0136
DVR	PIONEER	0592,0399
DVR	POLAROID	1813
DVR	RCA	0542
DVR	REPLAYTV	0938
DVR	SONIC BLUE	0938
DVR	SONY	0838,0367,0537,0300,0400,0500
DVR	TiVo	0738,0838,0036,0136,0367,0999,0892,0592
DVR	TOSHIBA	0999
DVR-CAB	CABLEVISION	0252
DVR-CAB	ILLICO	0252
DVR-CAB	PIONEER	0252
DVR-CAB	RCN	0954
DVR-CAB	ROGERS	0252
DVR-CAB	SCIENTIFIC ATLANTA	0252
DVR-CAB	TIME WARNER	0252
DVR-CAB	VIDEOTRON	0252
DVR-DVD	HUMAX	0892
DVR-DVD	ILO	0597
DVR-DVD	JVC	1808
DVR-DVD	LITEON	0597
DVR-DVD	MEDION	0597
DVR-DVD	PANASONIC	0340
DVR-DVD	PIONEER	0592,0399
DVR-DVD	POLAROID	1813
DVR-DVD	SONY	0300,0400,0500
DVR-DVD	TIVO	0892,0592
DVR-DVD	TOSHIBA	0999,0998,1013
DVR-SAT	BELL EXPRESSVU	0366,0167
DVR-SAT	DIRECTV	1506
DVR-SAT	DISH NETWORK	0167,0366
DVR-SAT	DREAMBOX	0663
DVR-SAT	EHOSTAR	0167,0366
DVR-SAT	EXPRESSVU	0366,0167
DVR-SAT	FORTEC STAR	0558,0157,0257
DVR-SAT	HUGHES NETWORK	0763,0659
DVR-SAT	PHILIPS	0763
DVR-SAT	PROSCAN	0966
DVR-SAT	RCA	0966
DVR-SAT	SAMSUNG	0959
DVR-SAT	SONY	0367,0567
DVR-SAT	ULTIMATE TV	0966,0567
DVR-SAT	ZENITH	0267
HDTV	GO VIDEO	0662
HDTV	HITACHI	0864
HDTV	HUGHES	0362,0864,0765

HDTV	LG	0362,0864,0765
HDTV	MITSUBISHI	0864
HDTV	MOTOROLA	0463
HDTV	PHILIPS	0864
HDTV	PIONEER	0062
HDTV	PROSCAN	0265
HDTV	RCA	0467
HDTV	SAMSUNG	0959
HDTV	SONY	0963
HDTV	SYLVANIA	0759
HDTV	TOSHIBA	0362,0765
HDTV	ZENITH	0065
HOME AUTOMATION	GE HOMEMINDER	0201
HOME AUTOMATION	HOME AUTOMATION	0401
HOME AUTOMATION	LUTRON	0390
HOME AUTOMATION	X-10 (NEC)	0501
LD	DENON	0132
LD	PIONEER	0132
LD	PROSCAN	0432
LD	RCA	0432
LD	SANYO	0824
LD	SONY	0933
LD	ZENITH	0824
SAT	AMPLICA	0159
SAT	BELL EXPRESSVU	0067,0366,0167,0464
SAT	CENTURY	0356
SAT	CHANNEL MASTER	0359,0459,0559
SAT	CHAPPARAL	0657,0757
SAT	CHEYENNE	0757
SAT	DIRECTV	0863,0864,0564,0564,0963,0259,0260,0263,0962,0664,0065,0265,0465,0765,0866,0966,0367,0567,0362,0563,1506,0355,0455,0555
SAT	DISH NETWORK	0464,0167,0366,0862,0067,0460,0560,0660
SAT	DISHPRO	0460,0560,0660,0067
SAT	DRAKE	0857,0059,0360
SAT	DX ANTENNA	0458,0859
SAT	ECHOSPHERE	0464
SAT	EHOSTAR	0464,0167,0366,0862,0067,0460,0560,0660
SAT	EXPRESSVU	0067,0366,0167,0464
SAT	FORTEC STAR	0558,0157,0257,0357,0457,0557
SAT	FUJITSU	0760,0860
SAT	GE	0265,0566,0365,0863,0966,0666,0766,0866
SAT	GEMINI	0161
SAT	GENERAL INSTRUMENT (GI)	0364,0865,0965,0466,0665,0166,0058,0158,0258,0960
SAT	GLOBECAST	0956,1306
SAT	GO VIDEO	0662
SAT	HITACHI	0465,0564,0664,0864,0765,0362
SAT	HUGHES NETWORK	0864,0763,0765,0465,0564,0362,0659
SAT	JVC	0464,0862
SAT	KENWOOD	0461
SAT	LG	0362,0864,0765
SAT	LUXOR	0561
SAT	MACOM	0661
SAT	MAGNAVOX	0259,0862,0565
SAT	MITSUBISHI	0765,0864,0465,0564,0664,0362
SAT	MOTOROLA	0466,0463
SAT	NET	0456,0262
SAT	NORSTAT	0761
SAT	NOVAPLEX	0155
SAT	PACE	0063,0163,0266
SAT	PANASONIC	0264,0260,0261
SAT	PANSAT	0060,1406
SAT	PHILIPS	0259,0862,0763,0564,0664,0864,0465,0765,0565,0362,0162
SAT	PHILIPS-MAGNAVOX	0259,0862,0565
SAT	PIONEER	0062
SAT	PRIMESTAR	0364,0665
SAT	PROSAT	0957
SAT	PROSCAN	0265,0365,0666,0966,0766,0866
SAT	RCA	0265,0566,0365,0863,0467,0966,0666,0766,0866,0411
SAT	REALISTIC	0961,0358
SAT	SAMSUNG	0061,0959,0962,0263,0563,0655
SAT	SHARP	0062
SAT	SIERRA I, II, III	0757
SAT	SKY NETWORK	0063,0163,0266,0355,0455,0555
SAT	SONY	0963,0367,0567,0160,0861
SAT	STAR SIGHT	0964
SAT	STAR TRAK	0462
SAT	STARCHOICE	0665,0166,0364
SAT	STS	0458,0658,0758
SAT	SUPER GUIDE	0562
SAT	SYLVANIA	0759
SAT	TELSAT	0356
SAT	TOSHIBA	0765,0864,0465,0564,0664,0362,0858,0064,0164,0764
SAT	TVA	0756
SAT	ULTIMATE TV	0966,0567
SAT	UNIDEN	0964,0958,0762
SAT	UNITED	0361
SAT	VIDEO CIPHER II	0059
SAT	VISIONTEC	0856
SAT	WEB TV	0862,0160
SAT	ZENITH	0363,0065,0267,0161,0266,0857,0059,0360,0165
TV	ABEX	0120
TV	ADMIRAL	0603,0224,0701
TV	ADVENT	0213,0219,0893
TV	ADVENTURA	0019
TV	AIKO	0407
TV	AIWA	0121,0221,0324,0528

TV	AKAI	0112,0801,0309,1315,1415,0027,1112,1912,1515
TV	ALLERON	0706
TV	AMARK	0603
TV	AMTRON	0906
TV	ANAM NATIONAL	0906,0901,0104,0805,0920
TV	AOC	0002,0102,0502,1502,0003,0217,0119,0320
TV	APEX	0023,0223,0123,1814,0741
TV	ARCHER	0603
TV	ASPECT	0507
TV	AUDIOVOX	0906,1503,1313
TV	AXION	0319,0793
TV	BANG & OLUFSEN	0620
TV	BELCOR	0002
TV	BELL & HOWELL	0704,0506,0601,0701
TV	BENQ	0709,0909,0711,1616
TV	BLUESKY	1117,0016
TV	BRADFORD	0906
TV	BROKSONIC	0316,0115,0626,0327,0632,0041
TV	BROKWOOD	0002
TV	CANDLE	0002,0502,0019,0402
TV	CAPEHART	0119
TV	CCE	1916
TV	CELEBRITY	0801
TV	CELERA	0023
TV	CENTRIOS	0518
TV	CENTURION	0502
TV	CETRONIC	0805
TV	CHANGHONG	0023,0741
TV	CINERAL	0407,0016
TV	CITIZEN	0002,0502,0906,0112,0512,0520,0115,0701,0402,0805,0407
TV	CLAIRTONE	0003
TV	CLASSIC	0023,0741,0805
TV	CLP	0010
TV	CLP CLASSIC	0022,0005,0007
TV	COBY	1710,1014
TV	COLOR VOICE	0602
TV	COLORTYME	0002,0502,0602
TV	CONCERTO	0002,0502
TV	CONCIERGE	0713
TV	CONTEC	0906,0802,0003,0805
TV	CORNEA	0606
TV	CRAIG	0906,0805
TV	CROSLEY	0807
TV	CROWN	0906,0805
TV	CTX	0603
TV	CURTIS MATHES	0704,0112,0614,0002,0502,0601,0506,0512,0437,0701,0103
TV	CXC	0906,0805
TV	CYBERVISION	0016
TV	DAEWOO	0614,0002,0502,0611,0102,0415,0905,0615,0505,0826,0529,0046,0609,0805,0407,0303,0602,0214,0403,0314,0503
TV	DAYTRON	0002,0502
TV	DELL	0522,0404,0814
TV	DIAMOND VISION	0622,0496,0810
TV	DIGIMATE	1303
TV	DIGISTAR	1503,0118,0413,0213,0318,0814,1603,1716,1816
TV	DIMENSIA	0704,0601
TV	DISNEY	0417,0115
TV	DUKANE	0507,0808
TV	DUMONT	0713,0002
TV	DURABRAND	0520,0115,0916,0126,0447,0323,0317,1115
TV	DYNASTY	0805
TV	ELECTROBAND	0801,0003
TV	ELECTROHOME	0002,0502,0027,0901,0803
TV	ELEKTRA	0701
TV	ELITE VIDEO	0321
TV	EMERSON	0002,0502,0006,0115,0506,0706,0520,0906,0316,0505,0614,0622,0324,0924,0626,0826,0027,0327,0128,0228,0632,0134,0247,0605,0705,0805,0703,0903,0004,0519,0106,0104,0304,0604,0804,0005,0105,0305
TV	ENVISION	0002,0502,0009,1502
TV	ESA	0520
TV	FISHER	0506,0612,0428,0619,0802
TV	FUJITSU	0321,0706,1202
TV	FUNAI	0706,0520,0906,0324,0247,0805
TV	FUTURETEC	0906,0805
TV	GATEWAY	0206
TV	GE	0704,0312,0018,0002,0502,0006,0007,0601,0835,0901,0114,0103,0803,0806,0310
TV	GIBRALTER	0713,0002
TV	GOLDSTAR	0002,0502,0102,0324,0435,0802,0307,0609,0217
TV	GRADIENTE	1902,0002,0916,1617,1517
TV	GRUNDY	0706,0906
TV	GUESTVISION	0721
TV	GVISION	1102
TV	HAIER	0709,0223,0323,0317,1316
TV	HALLMARK	0002,0502
TV	HARVARD	0906
TV	HEWLETT PACKARD	1103,1002
TV	HISENSE	0908,0819,0223,1203
TV	HITACHI	0410,0507,0815,0607,0808,0002,0502,0710,1801,0701,0802,0707,0315,0515,0715,0519,0324
TV	HYUNDAI	1015
TV	ILO	0421,1608,1004,1903,0216,0520
TV	IMA	0906
TV	IN FOCUS	0601
TV	INFINITY	0807,0430
TV	INITIAL	1608,0216,1110,1512
TV	INSIGNIA	0911,0520,0323,0115,0914,0213,0318,1416,0247,0504
TV	INTEGRA	0719
TV	INTEQ	0713

TV	JANEIL	0019
TV	JBL	0807
TV	JC PENNEY	0704,0002,0102,0502,0112,0312,0512,0007,0601,0310,0402,0802,0103,0803,0604,0806
TV	JCB	0801
TV	JENSEN	0002,0502,0914
TV	JVC	0607,0204,0321,0508,0617,0326,0993,0802,0108,0308,0715
TV	KAWASHO	0002,0502,0801
TV	KAYPANI	0119
TV	KEC	0805,0906
TV	KENWOOD	0002,0502
TV	KLH	0023
TV	KLOSS NOVABEAM	0408,0019
TV	KOGI	1102
TV	KONKA	0906,0702,0203,0306,0208,0911,0842,0942,0504
TV	KTV	0906,0003,0703,0805,0608
TV	KURAZAI	0701
TV	LASONIC	0622,0496
TV	LEGEND	0213
TV	LG	0002,0606,0502,0102,0117,0814,0324,0435,0802,0307,0609,0217
TV	LIQUIDVIDEO	0319,0418,0793
TV	LODGENET	0704,0821,0601,0701
TV	LOEWE	0722,0807
TV	LOGIK	0704,0601,0701
TV	LUCE	0107
TV	LUXMAN	0002,0502
TV	LXI	0704,0002,0502,0506,0807,0312,0512,0601,0324,0103
TV	MAGNASONIC	0706
TV	MAGNAVOX	0807,0002,0502,0919,1914,0224,0430,0247,0402,0408,0109,0715
TV	MAJESTIC	0704,0601,0701
TV	MARANTZ	0807,0719,0002,0502
TV	MAXENT	0206
TV	MEDION	0922,0421,0417
TV	MEGATRON	0002,0502,0507
TV	MEI	0003
TV	MEMOREX	0002,0502,0506,0706,0115,0704,0601,1302,0428,0632,0701
TV	MGA	0002,0102,0502,0706,0802,0803,0715,0619
TV	MIDLAND	0704,0713,0007,0312,0103
TV	MINTEK	0216
TV	MINUTZ	0806
TV	MITSUBISHI	0102,0716,0706,0002,0502,0027,0803,0715,0619
TV	MONIVISION	0205
TV	MONTGOMERY WARD	0704,0701,0601
TV	MOTEVA	0506,1902
TV	MOTOROLA	0603,0901
TV	MTC	0002,0102,0502,0112,0512,0003
TV	MULTITECH	0906
TV	MULTIVISION	0010
TV	MYRON & DAVIS	0822
TV	NAD	0002,0502,0512,0120
TV	NEC	0719,0002,0102,0502,0901,0602,0111,0715
TV	NET TV	0206,0014
TV	NEXXTECH	1806,0318
TV	NIKEI	0805
TV	NIKKO	0002,0502,0407
TV	NIKO	1915
TV	NORCENT	0223,0905,0207
TV	NTC	0407
TV	OLEVIA	1304,1802,1615,1815,1217
TV	ONCOMMAND	0721
TV	ONKING	0805
TV	ONWA	0906,0805
TV	OPTIMUS	0618,0120,0039,0739
TV	OPTOMA	1404
TV	OPTONICA	0603,0111
TV	ORION	0713,0115,0105
TV	PANASONIC	0718,0416,0007,0618,0807,0039,0739,0345,0696,0901,0608
TV	PHILCO	0807,0002,0102,0502,0919,0702,1417,0408,0109,0715,0901,0402
TV	PHILIPS	0807,0022,0020,0422,0122,0222,0322,0002,0520,0919,0521,0621,0709,1516,1017,0430,0247,0901,0402,0408,0109,0210,0310,0715
TV	PHILIPS-MAGNAVOX	0807,0022,0322,0919,0224,0430
TV	PILOT	0002
TV	PIONEER	0120,0719,0808,0002,0502,0610,0519
TV	PIVA	1109
TV	PLANAR	1302
TV	POLAROID	0819,0918,0914,1503,1215,0504
TV	PORTLAND	0002,0102,0502,0415,0614
TV	PRECISION	0218
TV	PRICE CLUB	0112
TV	PRIMA	1503,0118,0213,0318,0219
TV	PRINCETON GRAPHICS	0603,0511
TV	PRISM	0007
TV	PROSCAN	0704,0312,0103,0601,0817,0917
TV	PROTON	0820,0002,0502,1602,0910,0119,0220
TV	PROTRON	1303,1317
TV	PROVIEW	1104,1204,1304
TV	PULSAR	0713,0002
TV	QUASAR	0718,0416,0007,0618,0807,0039,0739,0901,0608
TV	RADIO SHACK	0704,0002,0406,0506,0906,0618,0502,0324,0835,0601,0802,0705,0805,0111
TV	RCA	0704,0002,0406,0007,0011,0611,0811,0312,0514,0720,0102,0502,0601,0817,0917,0835,0901,0103,0803,0211,0912,0114,0519,0320,0420
TV	REALISTIC	0704,0002,0406,0506,0906,0618,0502,0601,0324,0802,0705,0805,0111
TV	RHAPSODY	0003
TV	RUNCO	0713,0719,0712
TV	SAMPO	0014,0206,0002,0502,0119,0802
TV	SAMSUNG	0112,0309,0209,0512,0302,0502,0002,0102,0110,0818,0895,0437,0802,0103,0609,0012,0212
TV	SAMSUX	0502
TV	SAMTRON	0112



TV	SANSUI	0115,0632
TV	SANTECA	0021
TV	SANYO	0506,0311,0612,0002,0428,0802,0412,0619
TV	SCEPTRE	0516,1814
TV	SCOTCH	0002,0502
TV	SCOTT	0002,0502,0706,0906,0004,0105,0805
TV	SEARS	0704,0807,0506,0706,0112,0002,0502,0312,0512,0612,0520,0601,0812,0509,0041,0247,0802,0103,0619
TV	SELECTRON	1803,1603,1703
TV	SEMP	1701
TV	SHARP	0509,0913,0907,0603,0002,0502,0224,0228,0202,0111,0813
TV	SHOGUN	0002
TV	SIGNATURE	0704,0601,0701,0903
TV	SIMPSON	0402
TV	SONIC	0003
TV	SONY	0414,0902,0801,0708,0639,0816
TV	SOUNDESIGN	0002,0502,0706,0906,0402,0805
TV	SOVA	1901,1111
TV	SOYO	1614,1714
TV	SPECTRA	0622
TV	SPECTRAVISION	0921
TV	SQUAREVIEW	0520
TV	SSS	0002,0906,0805
TV	STAR SIGHT	0008
TV	STARLITE	0906
TV	SUPERSCAN	0812,0509,0247
TV	SUPERSONIC	0096
TV	SUPRA	0002,0809
TV	SUPREMACY	0019
TV	SUPREME	0801
TV	SVA	0223,0822
TV	SYLVANIA	0807,0002,0502,0115,0520,0919,1715,0324,0247,0447,0402,0408,0109,0715,0717
TV	SYMPHONIC	0906,0520,0324,0247,0004
TV	SYNTAX	1304,1615,1815
TV	TANDY	0603
TV	TATUNG	0709,0421,0901
TV	TECHNICS	0007
TV	TECHWOOD	0002,0502,0007
TV	TEKNIKA	0704,0002,0102,0502,0706,0906,0112,0512,0618,0601,0019,0701,0402,0802,0805
TV	TELECATION	0313
TV	TELERENT	0704,0601,0701
TV	TERA	0002,0220
TV	TEVION	0421
TV	TMK	0002,0502
TV	TOSHIBA	0517,0419,0512,0613,0719,0112,0506,0111,0618,0627,0437,0041,0094,0802,0111,0313,0715
TV	TRUTECH	1504,1116,1713
TV	UNIVERSAL	0806,0310
TV	VICTOR	0607
TV	VIDTECH	0002,0102,0502
TV	VIEWSONIC	0206,0808,1003,1016
TV	VIKING	0019
TV	VIORE	1403
TV	VIZIO	0709,1702
TV	WARDS	0704,0807,0002,0102,0502,0706,0601,0408,0109,0310,0111,0513,0806,0701,0402,0004
TV	WESTINGHOUSE	0915,0013,1216,0300
TV	WHITE WESTINGHOUSE	0611,0614,0415,0215,1402,0324,0529,0609
TV	YAMAHA	0618,0002,0102,0502
TV	ZENITH	0713,0502,0606,0409,0710,0415,0507,0714,0405,0712,0015,0916,0008,0002,0115,0224,0324,0126,0326,0826,0228,0430,0632,0435,0437,0903,0505,0701,0407
VCR	ACCELE	0037
VCR	ADMIRAL	0224
VCR	ADVENTURA	0726
VCR	AIKO	0826
VCR	AIWA	0126,0324,0528,0726
VCR	AKAI	0324,0524,0424,0624,0724,0027,0931,0335
VCR	ALLEGRO	0326,0534,0925
VCR	AMERICAN HIGH	0830
VCR	APEX	0596
VCR	ASHA	0037
VCR	AT&T	0938
VCR	AUDIO DYNAMICS	0239,0339,0025
VCR	AUDIOVOX	0126
VCR	BEAUMARK	0037
VCR	BELL & HOWELL	0428
VCR	BROKSONIC	0227,0626,0327,0632,0041,0398,0325,0530
VCR	CALIX	0126
VCR	CANDLE	0625,0126,0037,0025,0825,0026
VCR	CANNON	0124,0830,0535
VCR	CAPEHART	0534
VCR	CARVER	0330
VCR	CCE	0826,0237
VCR	CINEVISION	0126
VCR	CITIZEN	0625,0126,0826,0037,0025,0825,0026
VCR	COLORTYME	0025
VCR	COLT	0237
VCR	CRAIG	0126,0037,0237,0426
VCR	CURTIS MATHES	0124,0330,0324,0035,0037,0437,0025,0526,0830
VCR	CYBERNEX	0037
VCR	DAEWOO	0529,0625,0626,0826,0035,0825,0026,0726,0798
VCR	DBX	0239,0339,0025
VCR	DENON	0132
VCR	DIAMOND VISION	0291
VCR	DIMENSIA	0124
VCR	DURABRAND	0126
VCR	DYNATECH	0324,0726
VCR	ELECTROHOME	0126,0027

VCR	ELECTROPHONIC	0126
VCR	EMERSON	0626,0126,0826,0227,0327,0630,0632,0134,0037,0625,0924,0324,0128,0228,0428,0528,0447,0247,0724,0325,0526,0726,0027,0527,0827,0927,0628,0530,0830,0731,0634,0735
VCR	FISHER	0032,0428,0328,0330,0025,0426,0928,0029
VCR	FUJI	0524,0830
VCR	FUNAI	0324,0247,0447,0726
VCR	GARRARD	0726
VCR	GE	0124,0732,0135,0835,0037,0429,0830
VCR	GO-VIDEO	0037,0139,0342,0244,0147,0798,0438
VCR	GOLDSTAR	0324,0126,0435,0534,0236,0025
VCR	GRADIENTE	0726,0126
VCR	HARLEY DAVIDSON	0726
VCR	HARMAN KARDON	0025,0027
VCR	HARWOOD	0237
VCR	HEADQUARTER	0428
VCR	HI-Q	0426
VCR	HITACHI	0538,0324,0336,0931,0834
VCR	INFINITY	0430
VCR	INSIGNIA	0126,0392
VCR	INSTANT REPLAY	0324,0830
VCR	INTEQ	0126
VCR	JC PENNEY	0124,0126,0428,0037,0538,0239,0339,0830,0931,0834,0935,0025
VCR	JCL	0830
VCR	JENSEN	0538,0931
VCR	JVC	0239,0339,0428,0326,0443,0691,0025,0931
VCR	KENWOOD	0428,0239,0339,0025,0931
VCR	KLH	0237
VCR	KODAK	0126,0830
VCR	LG	0324,0534,0435,0392
VCR	LITEON	1508
VCR	LLOYD	0324,0726
VCR	LOGIK	0237
VCR	LXI	0324,0126
VCR	MAGNAVOX	0330,0430,0534,0324,0224,0124,0230,0125,0247,0093,0598,0830
VCR	MAGNIN	0037
VCR	MARANTZ	0330,0428,0239,0339,0530,0830,0535,0025
VCR	MARTA	0126
VCR	MATSUSHITA	0830
VCR	MEDION	0291
VCR	MEI	0830
VCR	MEMOREX	0330,0126,0428,0032,0632,0534,0037,0224,0324,0335,0426,0726,0830
VCR	MGA	0630,0027
VCR	MGN TECHNOLOGY	0037
VCR	MIDLAND	0429
VCR	MINOLTA	0538,0834
VCR	mitsubishi	0630,0431,0538,0239,0339,0131,0027
VCR	MONTGOMERY WARD	0224,0631
VCR	MOTOROLA	0224,0830
VCR	MTC	0324,0037,0726
VCR	MULTITECH	0324,0037,0726,0429,0237
VCR	NEC	0428,0239,0339,0530,0731,0831,0931,0025,0526
VCR	NEXXTECH	0334,0546,0596
VCR	NIKKO	0126
VCR	NOBLEX	0037
VCR	OLYMPUS	0830
VCR	OPTIMUS	0525,0037,0937,0126,0737,0039,0739,0224
VCR	OPTONICA	0037,0631
VCR	ORION	0227,0632
VCR	PANASONIC	0937,0739,0039,0938,0124,0345,0830
VCR	PENTAX	0538,0025,0834
VCR	PHILCO	0330,0124,0125,0830
VCR	PHILIPS	0330,0430,0036,0136,0738,0439,0939,0247,0230,0830
VCR	PHILIPS-MAGNAVOX	0330,0430,0224
VCR	PILOT	0126
VCR	PIONEER	0132,0538,0239,0339,1010,0935
VCR	POLAROID	0596
VCR	PORTLAND	0825,0026
VCR	PROSCAN	0124,0432
VCR	PROTEC	0237
VCR	PULSAR	0534
VCR	QUARTER	0428
VCR	QUARTZ	0428
VCR	QUASAR	0937,0039,0124,0739,0830
VCR	RADIO SHACK	0124,0224,0324,0525,0126,0428,0835,0037,0737,0937,0426,0726,0027,0029,0830,0631,0335
VCR	RADIX	0126
VCR	RANDEX	0126
VCR	RCA	0124,0126,0432,0532,0732,0832,0932,0033,0133,0233,0135,0835,0037,0538,0424,0429,0830,0834
VCR	REALISTIC	0124,0224,0324,0126,0428,0037,0737,0937,0426,0726,0027,0029,0830,0631,0335
VCR	REPLAYTV	0938
VCR	RICOH	0936
VCR	RIO	0126,0142
VCR	RUNCO	0534
VCR	SAMSUNG	0037,0437,0625,0538,0147,0895,0997,0624,0335
VCR	SAMTRON	0139
VCR	SANKY	0224,0534
VCR	SANSUI	0632,0239,0339,0041,0227,0398,0931
VCR	SANYO	0824,0032,0328,0428,0037,0426
VCR	SCOTT	0625,0626,0327,0630,0735,0325,0927
VCR	SEARS	0937,0126,0428,0330,0538,0041,0247,0426,0928,0029,0830,0834,0935
VCR	SHARP	0637,0737,0224,0324,0228,0825,0027,0631
VCR	SHINTOM	0524,0936,0538,0237,0337
VCR	SHOGUN	0037
VCR	SIGNATURE	0324
VCR	SINGER	0830,0237
VCR	SONIC BLUE	0938

VCR	SONY	0539,0034,0524,0933,0936,0540,0838,0038,0138,0238,0639
VCR	STS	0538,0830,0834
VCR	SUPERSCAN	0247
VCR	SYLVANIA	0324,0330,0630,0124,0247,0726,0830,0225,0447,1212
VCR	SYMPHONIC	0324,0225,0247,0726
VCR	TANDY	0324,0428
VCR	TASHIKO	0126
VCR	TATUNG	0931
VCR	TEAC	0324,0726,0931
VCR	TECHNICS	0830
VCR	TECHWOOD	1708
VCR	TEKNIKA	0324,0126,0134,0726,0830
VCR	TiVo	0738,0838
VCR	TMK	0037,0526,0731
VCR	TOSHIBA	0625,0727,0627,0330,0630,0437,0538,0094,0441,0029,0735
VCR	TOTEVISION	0126,0037
VCR	TRUTECH	0798
VCR	UNITECH	0037
VCR	VECTOR RESEARCH	0625,0239,0339,0025
VCR	VICTOR	0239,0339
VCR	VIDEO CONCEPTS	0625,0239,0339,0025,0027
VCR	VIDEOSONIC	0037
VCR	WARDS	0124,0224,0324,0625,0126,0037,0538,0426,0726,0027,0830,0631,0234,0834,0735,0237
VCR	WHITE WESTINGHOUSE	0324,0529
VCR	XR-1000	0726,0830,0237
VCR	YAMAHA	0025,0931,0239,0339
VCR	ZENITH	0534,0326,0826,0228,0430,0224,0324,0435,0336,0936,0437,0126,0524,0632,0824,0239,0339,0529,0438,0925