


sprite
BTE-FM

PE 800R behind-the-ear FM system

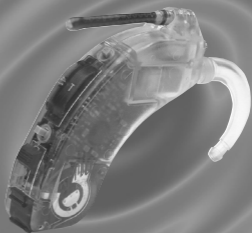

user guide

PE 800R receiver

PE 300TS transmitter

)))))) **Phonic Ear**[®]

specs available on-line at www.phonicear.com

table of contents

Receiver: PE 800R.	1-2
Transmitter: PE 300TS	3-4



sprite user instructions

Wearing Transmitter/Microphone	5
Hearing Instrument Battery	6
Wearing Hearing Instrument/ Switch Functions	7
Cartridge Removal/ Transmitter Batteries.	8
Using Sprite in Quiet Environment/ Using Sprite in Noisy Environment.	9
Using Sprite in Group Conversations/ Using Sprite with TV or Stereo	10
Using Sprite with Telephone/ Using Sprite in Public Facilities	11

sprite fitter instructions

Locking Battery Door.	12
Setting FM Gain Control	13
Installing/Removing Antenna	14
Accessories	15-16
Caring for Your System.	17
Code of Federal Regulations.	18-19
Warranty	20
Troubleshooting	21-22
Other Important Information	23

receiver: PE 800R

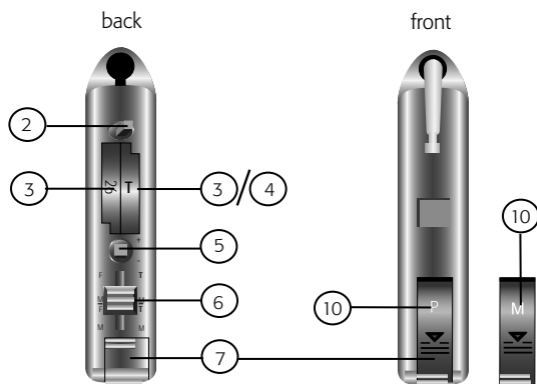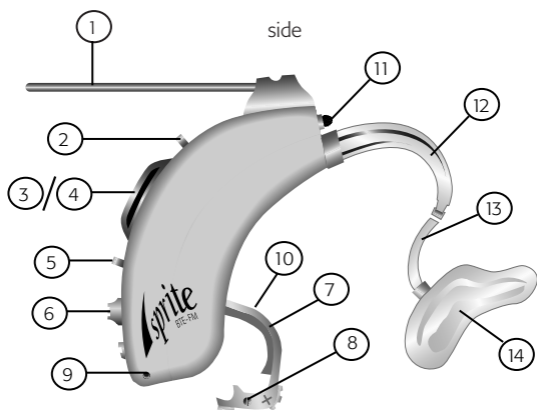

receiver: PE 800R (cont'd)


- ① antenna
Removeable
- ② cartridge selector switch
Activates left or right cartridge
(see ③ and ④)
- ③ FM channel cartridge
Insert in left or right slot.
Make sure channel matches
that of transmitter(s). A
second FM channel allows easy
switching to hear a different
speaker or avoid interference.
- ④ telecoil cartridge
Insert in right slot only (for
telephone and loop use)
- ⑤ volume control
User-adjustable $\pm 15\text{dB}$
(in 2dB increments) from
prescribed gain level. "+"
to increase; "-" to decrease.
Can be locked with pro-
gramming software. Unit
always powers up at pre-
scribed gain.
- ⑥ mode switch
(three-position)
FM: F = FM only
 $\frac{M}{F}$ = Mic + FM
M = Mic only
t-coil: T = t-coil only
 $\frac{M}{T}$ = Mic + t-coil
T
M = Mic only
- ⑦ on/off switch/
battery door
Closed = on; Open = off
- ⑧ locking screw
Locks battery door
- ⑨ locking screw
access hole
Provides access to
locking screw
- ⑩ model indicia
"P" indicates Power model,
"M" indicates Moderate
- ⑪ microphone
- ⑫ earhook
Various types are available
- ⑬ plastic tubing
Replace when yellow
or stiff (not included
with system)
- ⑭ earmold
(not included with system)

transmitter: PE 300TS


front



back

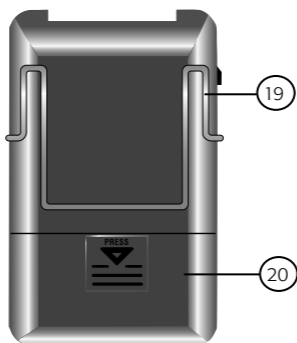

top

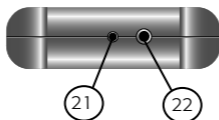

transmitter: PE 300TS (cont'd)

- 15 on/off switch
On/Off (72MHz and 173MHz)
On/Mute/Off (216MHz)
- 16 charging indicator
Glow red when charging
NiCad batteries (never
recharge alkaline batteries!)
- 17 transmitter band label
Indicates operating band
of transmitter
- 18 channel number
Make sure the channel
matches your receiver
- 19 belt clip
- 20 battery compartment
Use AA rechargeable NiCad or
disposable alkaline batteries
(never recharge alkaline batteries!)
- 21 microphone jack
Plug in a microphone or an antenna
(if using auxiliary input alone)
- 22 auxiliary/charge jack
Connect to a CD player or
other sound source with the
AT0532 cord; connect to
personal charger to recharge
NiCad batteries (never recharge
alkaline batteries!)

To comply with FCC radio-frequency exposure requirements, this device must be worn with the belt clip provided with the device. Use of accessories/configurations not approved by Phonic Ear may result in non-compliance with FCC RF exposure limit, and therefore should be avoided.

Sprite user instructions


user

wearing transmitter/microphone


- ① Plug in microphone



- ② Clip to belt or wear around neck

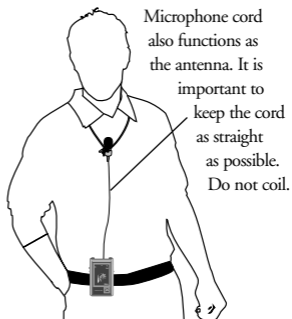

- ③ Clip microphone to clothing or to lavalier cord

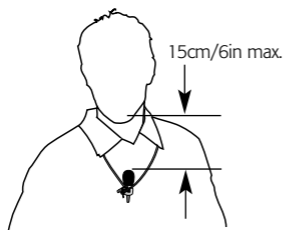

then




ON
OFF

power

Sprite user instructions (cont'd)


user

hearing instrument battery

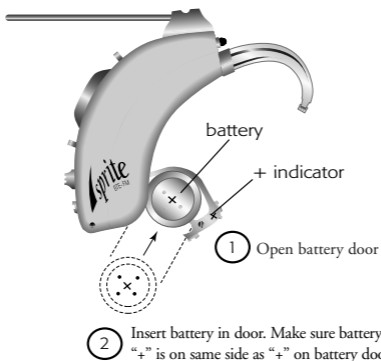

user

on/off The battery door is the on/off switch

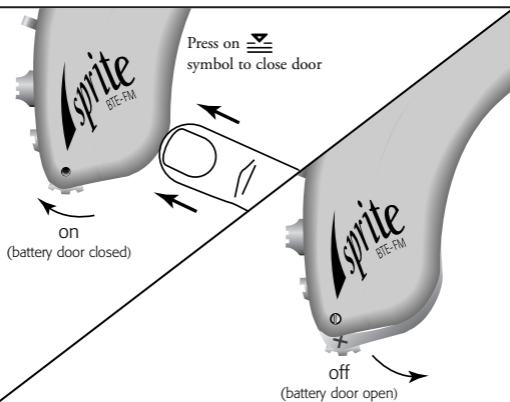

Sprite user instructions (cont'd)

user

wearing your hearing instrument

1 Turn off



2 Insert top of earmold under fold



3 Pull down lobe and press earmold into canal



4 Place SPRITE behind ear



5 Turn on



user

switch functions

Switch left to activate left cartridge; right to activate right cartridge

FM channel cartridge

FM channel or t-coil cartridge (t-coil must be on right side)

+ = Increase volume by one 2dB step

- = Decrease volume by one 2dB step

FM only (when using FM)

Mic + FM

Mic only

T-coil only (when using T-coil)

Mic + T-coil

Mic only



Sprite user instructions (cont'd)


fitter/user cartridge removal



FM channel
cartridge (2 pins)
Insert in left or right slot



telecoil cartridge
(3 pins)
Insert in right slot only

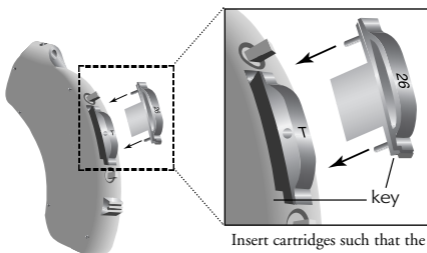

Insert cartridges such that the
keys and pins align

user

transmitter batteries

Charge every night for 12 hours

NEVER CHARGE ALKALINE BATTERIES!

charging 300TS

Charge only rechargeable
NiCad batteries

AT0534

2

Plug in
second

1
Plug in
first




PE 300TS



AUX/
CHG

Be sure to
insert batteries
correctly

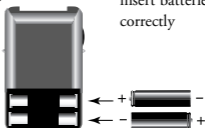

Push to slide off




replacing batteries

Sprite user instructions (cont'd)


user

using your SPRITE in a quiet environment

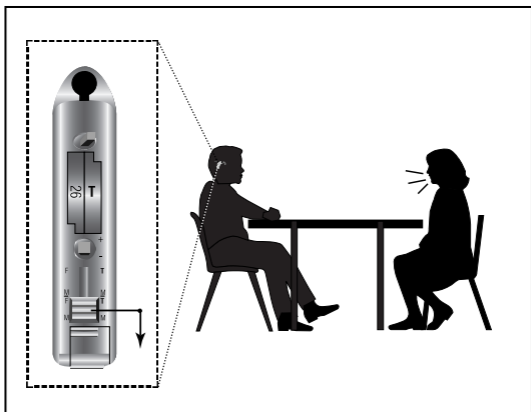

user


using your SPRITE in a noisy environment

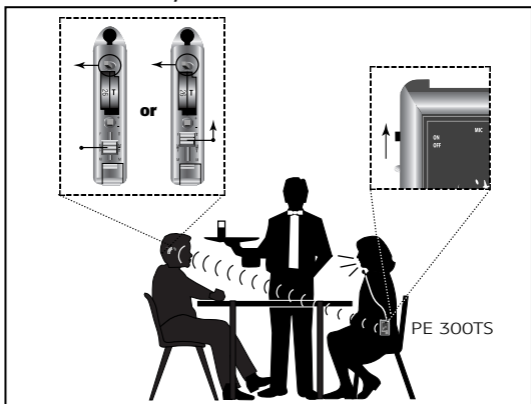

Sprite user instructions (cont'd)


user

using your SPRITE in group conversations

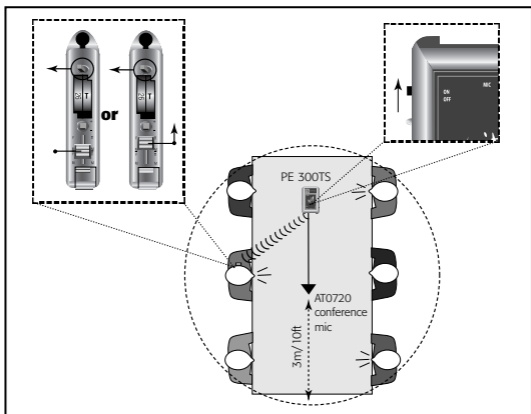

user


using your SPRITE with TV or stereo

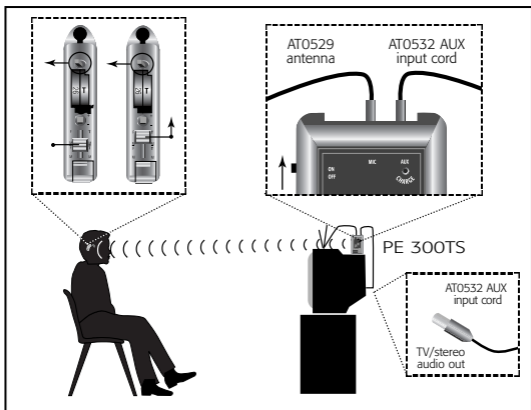

Sprite user instructions (cont'd)

user

using your SPRITE with the telephone

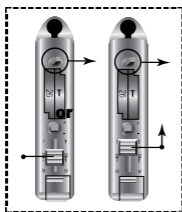


(Telecoil cartridge required)



user

using your SPRITE in accessible public facilities

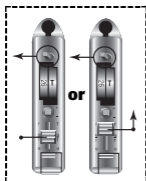


Use built-in receiver



NOTE: Channels must match!

or

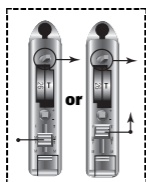

Use body-worn receiver with teleloop/or in looped room

