

UTX1KW-A INSTRUCTION MANUAL


SN: _____

PINEAPPLE TECHNOLOGY, INC.

READ THIS SECTION BEFORE INSTALLATION	2
Section II — UTX1KW-A TRANSMITTER SPECIFICATION	NS3
Section III — TRANSMITTER INSTALLATION	5
Section IV — TRANSMITTER TURN-ON	6
Section V — THEORY OF OPERATION A. Introduction	8
B. ACDIS1	
C. RR6000 Power Supply	
D. ADP1000 Performance Monitor	10
E. Remote Monitor and Control W/ABS	
F. Modulator/Driver	
G. DRV100DC-1 Driver	
H. US200 Splitter	12
I. MFA1KW Power Combiner	
J. U600LDV2 Power Amplifier	
K. UC1KW Power Combiner L. DC40-1KW Dual Directional Coupler	
M. BPU1KW UHF	
Section VI — SCHEMATIC AND PARTS LISTS A. UTX1KW-A B. ACDIS1 C. DRV100DC-1 D. MFA1KW 1. 1A0035 Status Board. E. U600LDV2 1. U250LD 2. 1A0025 Power Distribution Monitor 3. 1A0018 Gain and Phase Matching. F. SPLITTER US200. G. COMBINER UC1KW H. ADP1000 Monitor 1. 1A0027 2. 1A0029 3. 1A0030	
Section VII — RECOMMENDED ROUTINE MAINTENANC	E50
Section VIII — ADJUSTMENTS AND TUNING	51
Section IX — PROBLEM SOLVING / TROUBLE SHOOTIN	G53
Section X — WARRANTY	55
Section XI — EXTENDED WARRANTY	56

I — SAFETY NOTICES

READ THIS SECTION BEFORE INSTALLATION

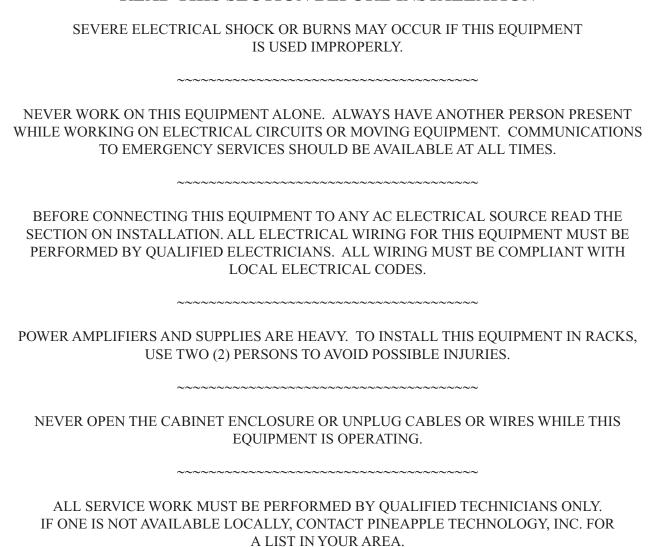

II — UTX1KW-A SPECIFICATIONS

OPERATING

Power Output	.1 KW Peak Sync
Aural Power	. 100 Watts
RF Output Impedance	. 50 Ohms
Frequency Range	.470-806 MHz
Frequency Stability	. 1 PPM or better
Harmonic and Spurious	60 dB or better ref to P-sync
Power Consumption	.5.5 KW Maximum
AC Line Voltage	. 208-240 V AC single phase
VIDEO PERFORMANCE	
Visual Frequency Response	.+/- 1 dB across the TV Channel -1.25 MHz to 4.75 MHz relative to visual carrier.
Differential Gain	. <7 %
Differential Dlage	<10 dagmag

Differential Phase<10 degrees

ICPM<5 degrees

Low Frequency Linearity<15 %

Group Delay Meets FCC Part 73 rule

Video Input Level 1 volt p-p

Variation of Output Power.....<5 % Typical

Regulation of Output Power.....<5 %

Video Signal to Noise Ratio<45 dB un-weighted

These specifications are subject to change without notice.

AUDIO PERFORMANCE

. Meets FCC preemphasis curve
.<1 % THD
.50 dB or better
.40 dB or better
. 40 dB typical
10 to +35 degrees Celsius Ambient
. 5000 feet without additional cooling
. Unobstructed airflow, 1000 CFM minimum
. 7/8 EIA Flange 7/16 DIN optional
. 375 lbs
.72" X 22" X 24 "(H x W x L)

These specifications are subject to change without notice.

III — TRANSMITTER INSTALLATION

To ensure long and reliable trouble free service from the UTX1KW-A transmitter, the following steps for installation are recommended.

1. **MECHANICAL INSTALLATION:** The UTX1KW-A was designed to be installed in a building protected from the weather. The building should have a hard surface floor such as concrete with a moisture barrier. This barrier could be pressure-treated wood sub-flooring which could be anchored to the concrete and to the transmitter to make the installation earth quake resistant.

Allow a minimum of three feet around the transmitter cabinet for service access. The top of the transmitter should be clear for three feet to allow the air to exhaust from the transmitter.

Air flow through the transmitter is approximately 1000 CFM. Provisions for air inlet and exhaust from the room must allow air flow with minimal obstruction. In the event that the room temperature exceeds 35 degrees Celsius, cooling air must be provided so that the room temperature will not exceed 35 degrees Celsius under worse case conditions.

Notice: This equipment is <u>HEAVY</u> and must be handled by professional movers with proper equipment. Any damage caused by the installers is not covered under warranty. Check to ensure that installing crews have proper insurance coverage.

2. **GROUNDING:** Transmitter grounding is <u>VERY IMPORTANT</u> and must be done correctly for safety and operational reasons. A typical installation may be done as follows:

Use a heavy gauge wire such as #2 AWG strained copper or solid copper buss one inch wide by 1/8 inch thick for connections. The bonding between the transmitter and the ground rods must be good quality and protected from corrosion. The ground wires should run over the floor and connected to the ground rods located outside the building. The wire should not go through the concrete floor but over and around it.

3. **AC WIRING:** A ten foot cable has been provided with the transmitter to facilitate the connection to the AC Main power source.

Connections to the AC Main should be made as follows:

RED AND BLACK WIRES are connected to the 220 VAC terminals WHITE WIRE is connected to the NEUTRAL terminal GREEN WIRE is connected to the SAFETY GROUND

NOTICE: All wiring of this type must be done by A QUALIFIED ELECTRICIAN and must conform to LOCAL and NATIONAL Wiring CODES.

Consult with your electrician to ensure that the proper breaker size is selected for the main circuit.

4. **ANTENNA CONNECTION:** The transmitter is equipped with a 7/8 EIA Flange connector located at the top of the rack. Conditions vary from site to site so some engineering may be required to ensure that the antenna is receiving the correct amount of power to comply with FCC licenses and to ensure safety from lightning etc.

IV — TRANSMITTER TURN-ON PROCEDURE

Before applying AC Power to the transmitter for initial turn on and check out, the installation should be approved by a qualified broadcast engineer. The turn-on procedure that follows is recommended by Pineapple Technology Inc. engineering staff:

- 1. Check transmitter load or antenna for proper installation and connection to the transmitter.
- 2. Open the transmitter and inspect all cables and wires for lose connections or broken wires in the rack assembly
- 3. Check for damage to the equipment mounted in the rack.
- 4. Check all AC breakers and on/off switches to ensure that all are OFF.
- 5. TURN ON THE MAIN AC BREAKER LOCATED IN THE SUB-PANEL WHERE THE AC POWER CORD WAS CONNECTED.
- 6. TURN ON THE MAIN AC BREAKER LOCATED ON THE ACDIS1 POWER DISTRIBUTION PANEL LOCATED ON THE FRONT OF THE TRANSMITTER. A GREEN LIGHT SHOULD COME ONE INDICATING POWER IS ON.
- 7. TURN ON THE AC SWITCH LOCATED ON THE FRONT OF THE ADP1000. THE INDICATING LIGHTS SHOULD BE ON AND READY FOR OPERATION
- 8. TURN ON THE AUX BREAKER LOCATED ON THE ACDIS1 FRONT PANEL. THE PA FANS AND THE RACK EXHAUST FANS SHOULD COME ON.
- 9. TURN ON THE POWER SUPPLY BREAKERS LOCATED ON THE FRONT OF THE ACDIS1. CHECK THE RR6000 POWER MODULES (2) EACH TO SEE IF THE GREEN LIGHTS ARE INDICATING NORMAL OPERATION.
- 10. USING THE ADP1000, CHECK THE IDLING CURRENTS ON EACH PA TO ENSURE THAT THE CURRENTS ARE IN THE CORRECT RANGE. TYPICAL RANGE IS 1.5 TO 2.5 AMPS. SEE ADP1000 OPERATING SECTION FOR DETAILS
- 11. TURN ON THE DRV100 DRIVER AMPLIFIER. THE GREEN LIGHT SHOULD COME ON.
 - NOTICE: The Modulator/Upconverter has been set at the factory so that the output power indication on the ADP100 will show 100% or 1 KW p-sync power level. It is important to read the instruction manual supplied with the modulator to locate key adjustment devices on the front panel. The output level adjustment will be necessary for the next step in the turn on procedure.
- 12. Locate the level adjustment on the modulator/upconverter and turn the level down to minimum or CCW.
- 13. Turn on the power switch located on the modulator rear panel.
- 14. Apply a video signal (1 volt P-P) to the video input terminal

- 15. Slowly increase the output level adjustment while watching the RF Output level on the ADP1000. When the output gets up to 50% indicated power stop the adjustments.
- 16. Using the ADP1000 reflected power indication check the LOAD reflected power. This should be less that 5% reflected.
- 17. Return to the PA current readings on the ADP1000 to verify that all the currents are approximately the same.
- 18. With successful performance through step 17, the transmitter output power can be increased using the output level adjustment on the modulator to achieve 100%. The aural power can be added at this time not exceeding 10% of output p-sync power as indicated on the ADP1000.

V — THEORY OF OPERATION

A. INTRODUCTION


The UTX1KW-A transmitter was designed to meet or exceed all FCC applicable specifications for TV Broadcast Equipment. Special attention was given to the selection of sub-assemblies and components to achieve maximum reliability and minimum down time. The construction of the UTX1KW-A is BASIC and MODULAR with most components field replaceable. Special emphasis was placed on <u>KEEPING IT SIMPLE</u> and returning to more traditional transmitter layouts and instrumentation.

This transmitter was designed for Analog (NTSC) transmission with provisions and options available to convert to Digital Service when necessary.

Refer to the UTX1KW-A block diagram — figure 1 (page 9) — for an overview of the transmitter architecture. This will give the technician basic information needed to understand the operations of the transmitter and the function of each subassembly.

SEE SECTION VI.A (Page 15) FOR PARTS LIST

UTX1KW Block Diagram (figure 1)

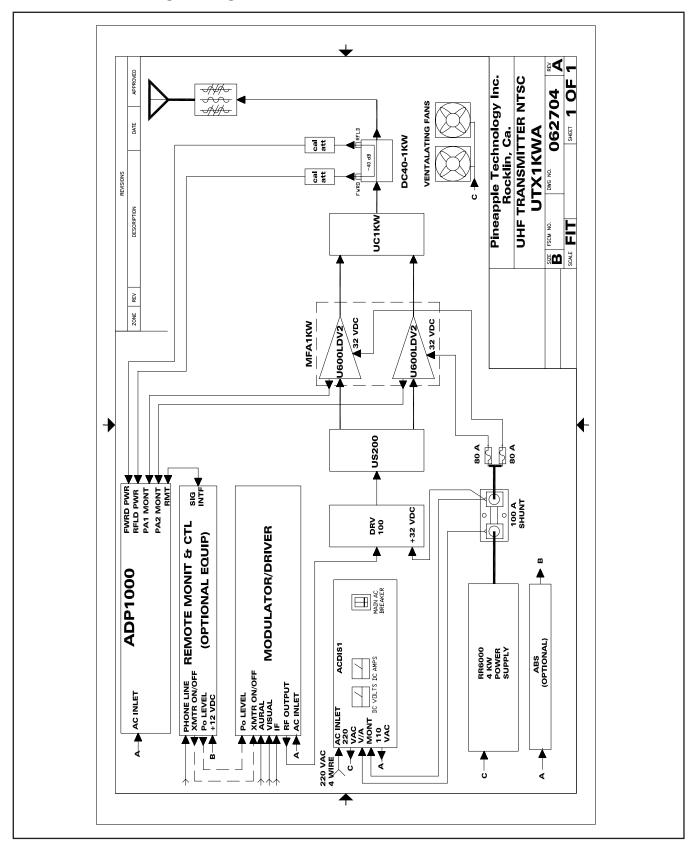

B. ACDIS1 AC & DC DISTRIBUTION

The ACDIS1 is the primary AC power inlet module. The UTX1KW-A transmitter was designed to accept 208 to 240 V AC using a four (4) wire connection. The four wires are:

- 2 wires for 208-240 V AC
- 1 wire for neutral connection
- 1 wire for safety ground connection

<u>CAUTION:</u> Connection to the AC Primary Source must be made using all four wires listed above. Follow the wiring instruction given in the AC WIRING section III.3 (Page 5). If not followed, severe damage to the transmitter and or electrical shock is possible.

The ACDIS1 performs the following functions:

- 1. Provides a primary AC power breaker point to shutdown the transmitter.
- 2. Provides 220 VAC power to the each of the 2 KW DC power supplies with individual breaker points for added safety.
- 3. Provides 110 VAC circuits for Modulator, ADP1000, ABS (auxiliary power source for remote control), and AUX Power where needed.
- 4. Analog metering is provided to monitor the Power Supply voltage and current being applied to the RF Amplifier stages
- 5. Power supply current sharing test points are provided for checking current sharing between Power Supply modules.

SEE SECTION VI.B (Page 16) FOR SCHEMATIC AND PARTS LIST

C. RR6000 POWER SUPPLY

The UTX1KW-A transmitter is designed with over 4 KW of DC power available to the transmitter. To achieve this level, the power supply is made up of two RR6000 power modules mounted into a main frame assembly which is capable of managing three 2 KW modules. This transmitter can be ordered with a spare supply module included in the unused port for a backup.

The power modules are "HOT PLUGGABLE" or can be removed and installed without turning off the transmitter. If the third module is installed, removing a module will not affect the performance of the transmitter.

Each power supply modules has OVER VOLTAGE, OVER CURRENT, AND OVER TEMPERATURE protection as well as a fault signal in the event of a failure.

REFER TO MANUFACTURER'S MANUAL PROVIDED WITH THE UTX1KW-A.

D. ADP1000 PERFORMANCE MONITOR

The ADP1000 (PERFORMANCE MONITOR) provides the following functions:

1. Monitors FORWARD AND REFLECTED POWER to the antenna and presents it as a percentage of power rating. The transmitter comes set to 100% P-Sync power based on the ratings of the transmitter.

- 2. Monitors Aural Power as a percentage of P-Sync rating (5-10 % typical).
- 3. Provides a HIGH ANTENNA VSWR MONITOR in the event of an antenna or coax failure where the reflected power exceeds 25% the transmitter will shutdown. Front panel LED will change from green to red in case of a fault.
- 4. Provides current monitoring of all the pallets used in the two U600LDV2 power amplifier assemblies. The current levels can be read directly from the multi-meter on the front panel. Individual pallets are selectable. In normal operations, a PA FAULT is indicated by going from green to red. RED indicates that the current level is below 500 ma and a transistor could have failed. To read the actual current, select the appropriate PA Bank A1 or A2 where the fault is located and select the PA with the selector switch. The multi-meter will read the actual current.
- 5. A PA INHIBIT switch is provided for failure diagnostic purposes. When activated, this switch allows the technician to monitor the bias currents for each pallet. These readings should be recorded when the transmitter is first installed and used as a reference. This is the best way to trouble shoot possible transistor failures. When in the PA INHIBIT mode, the RF PWR OFF LED will change from green to red indicating that the "SHUTDOWN LINE" is at a TTL 0 state and the output power has been reduced to near zero.
- 6. An RF MONITOR port (BNC) is available to connect a spectrum analyzer for monitoring the output signal.

THE METER SELECTOR SWITCHES

A1 and A2 switches will select one of the two U600LDV2 amplifiers located in the MFA1KW. A1 is the amplifier located in the left slot and A2 is located in the right slot when viewed from the front panel.

The Rotor Switch is the detail selector for the multi-meter. The various positions are defined as follows:

PA1 THROUGH PA5 Reads PA pallet currents as selected

Typical reading in INHIBIT MODE 1.5 TO 2 A

Typical reading SMPTE BARS 5-7 A for PA1 through PA4

Typical reading SMPTE BARS 2-3 A for PA5

PA6 NO CONNECTION

PS VOLTS Reads DC Voltage applied to PA Stages

Typical reading would be +29 to 32 VDC

P FWRD Reads PA output power in P-Sync percentage of rating.

Full power reading would be 100%

P RFLD Reads PA output power being returned from the load and

displayed as a percentage of forward power. Typical reading

would be < 5% indicated.

P AURAL Reads the AURAL POWER component as a percentage of

forward power. Typical reading would be 10%

AUX 1 & AUX 2 Not used in this configuration

REFER TO SECTION VI.H (Page 39) FOR SCHEMATICS AND PARTS LIST

E. REMOTE MONITOR AND CONTROL WITH ABS

This equipment is OPTIONAL and can be used to satisfy FCC remote control requirements.

The Remote Monitor is used to monitor the operational status of the transmitter. The following items are monitored or controlled:

- 1. Transmitter on/off function
- 2. Power output level monitor and adjust.
- 3. AC Line voltage status. With ABS you can be notified if there is a power failure at the side.
- 4. Various other custom options are available. Specify these at the time the transmitter is purchased and they will be included if possible.

Remote monitoring requires a Phone line connection. Information can be accessed via a PC Terminal or via a 'VOICE COMMAND LINE'. Either option is standard with this system.

The Auxiliary power unit requires a battery connection. A common car battery (12 VDC) can be used with a charger as an ABS. This will run the Monitor and provide access to transmitter status for several hours.

A manual for this equipment is provided by the Manufacture and is included in the UTX1KW-A package shipped with the transmitter. This manual is only included if this option was purchased for delivery with the transmitter.

REFER TO INSTRUCTION MANUAL PROVIDED WITH THIS PACKAGE

F. MODULATOR

The heart of any TV Transmitter is the "MODULATOR". This equipment receives the video and audio signals as well as any control signals needed. The base band signals are converted to RF with an output on the desired operating channel.

Detail operation of the Modulator with schematics and P/L is provided by the equipment manufacture.

REFER TO INSTRUCTION MANUAL PROVIDED WITH THIS PACKAGE

G. DRV100DC-1 DRIVER

The output power of the modulator is applied to the input of the DRV100DC-1 driver. This amplifier increases the drive level to that required for the MFA1KW to make rated power. The driver amplifier requires 31 VDC to operate, and does not require any tuning or adjustment to change channels.

REFER TO SECTION VI.C (Page 20) FOR SCHEMATIC AND PARTS LIST

H. US200 SPLITTER

The US200 is a 2-way in-phase broadband splitter. This splitter provides an equal split of drive power to each U600LDV2 power amplifier.

SEE SECTION VI.F (Page 37) FOR PARTS LIST

I. MFA1KW PA HOUSING

The MFA1KW is the main RF Power Amplifier housing which accommodates two (2) U600LDV2 Amplifiers. The housing includes the following:

- 2 ea. 330 CFM cooling fans
- 2 ea. Air filter assemblies
- 2 ea. Front panel status PC Boards
- 1 ea. Main chassis
- 2 ea. Mechanical slide assemblies
- 1 ea. AC Filtered inlet for cooling fans

SEE SECTION VI.D (Page 21) FOR SCHEMATICS AND PARTS LIST

J. U600LDV2 POWER AMPLIFIER

The U600LDV2 is the main RF Power Amplifier Assembly used in the UTX1KW-A. Each Amplifier assembly is made up of five (5) U250LD power pallets. Each power pallet uses two (2) Phillips BLF861A power LDMOS FETs. These amplifiers are operated in Class A/AB or sometimes referred to as "HARD AB". This refers to the bias levels to achieve best linearity.

Each U600LDV2 amplifier assembly includes the following:

- 5 ea. U250LD power pallets
- 1 ea. 4-way splitter
- 1 ea. 4-way combiner
- 1 ea. phase & gain matching circuit (1A0018)
- 1 ea. Pwr distribution module (1A0025)
- 1 ea. high power isolator
- 3 ea. thermal sensors
- 1 ea. remote monitor port (DB9)
- 1 ea. front panel status port (molex)
- 1 ea. filtered DC input port
- 1 ea. Type N panel mounted RF Input port
- 1 ea. Type N Panel mounted RF Output port

SEE SECTION VI.E (Page 25) FOR SCHEMATICS AND PARTS LIST.

K. UC1KW COMBINER

The UC1KW is a 2-way in phase broadband combiner. This is a closed unit and cannot be reserviced.

SEE SECTION VI.G (Page 38) FOR PARTS LIST

L. DC40-1KW DUAL DIRECTIONAL COUPLER

The DC40-1KW is a dual directional coupler used to sample output forward and reflected power. This signal is applied to the ADP1000 and is used to indicate forward and reflected power levels. This is a closed unit and cannot be serviced. In the event of a failure, call the factory and request a replacement using P/N DC40-1KW.

Note: Some of the UTX series transmitters have an integrated combiner and directional coupler. For the UTX1KW-A the P/N for the combiner is UC1KW-DC40.

M. BPU1KW UHF BAND PASS FILTER

This Band Pass filter was designed to meet FCC Certification requirements with minimum loss of RF Power. The BPU1KW comes tuned and tested to the operating frequency of the transmitter and should not be adjusted without proper equipment. Replacement filters are available as P/N BP1KW UHF (+CHANNEL NUMBER).




A. UTX1KW-A — Parts List

Assy Tr	ee for: U	TX1KW	/A		Printed 8/16/20
JTX1k HF TV >		OG		Type CAT User1 Revision A User2 Status U User3 Date 5/21/2004 User4 By RA User5	
Item	Qty	Type	P/N	Title Detail	
— Тор		CAT	UTX1KWA	UHF TV XMTR 470 MHz TO 810 MHz ANALOG	
_ <u>1</u>	1	PS	MF9328A	UTX1KW FILTER MTG 0.125 THK 26X26 PLATE INCHES	
_ 2	1	PS	AC8100	AC WIREMOLD 19 1 X 4 OUTLETS 6 FT CORD	
3	1	PL	ACDIS1	AC & DC UTX1KW XMTR DISTRIBUTION	
⊢ 4	1	CAT	MODULATOR CAV5	MODULATOR/DRIVER UHF ELECTRONICA 5 W ITALY	
⊩ 5	1	CAT	ADP1000	DISPLAY PANEL, METER & SELECTOR ANALOG SW	
⊢ 6	1	CAT	DRV100DC	DRIVER ASSEMBLY DC VERSION	
8	1	PL	MFA1KW	1 KW MAIN FRAME UHF/VHF ASSEMBLIES	
- 9 	2	PS	AC2008	2 KW 31 VDC PWR UNI-PWR SUPPLY TRS6000-406	
⊩ 10	1	PL	AC2009	6KW 3EA PWR UNIPOWER RRS2U SUPPLY MAIN FRAME	
⊩ 11 	1	CAT	US200N	COMB/SPLT 470-860 200W TYPE-N MHz	
⊩ 12	1	CAT	UC1KW	COMB/SPLT 470-630 1.5 KW 2-WAY COMB HMz W/DC	
⊢ 13	1	PL	R40RU-HAM	XMTR RACK 40 RU HAMMOND MFG	
— 14	1	PS	BPIV1KW_CT	BP FILTER 1KW BAND COM-TECH 7/16 DIN I/O W TAP	
— 15	2	PS	851040	FAN, AC 220 V CARAVEL CLE 3T2 W/O FG	
- 16	4	PS	851045	FINGER GUARD 254MM METAL	
— 17	12	PS	AC6301	AC PWR INLET SO MCMASTER 7081K82 10/4	
— 18	1	PS	AC4301	AC INLET CORD GRIP 0.72 OD 1 INCH MTG HOLE	

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

UTX1KWA Page 1 of 1

B. ACDIS1 — Schematic

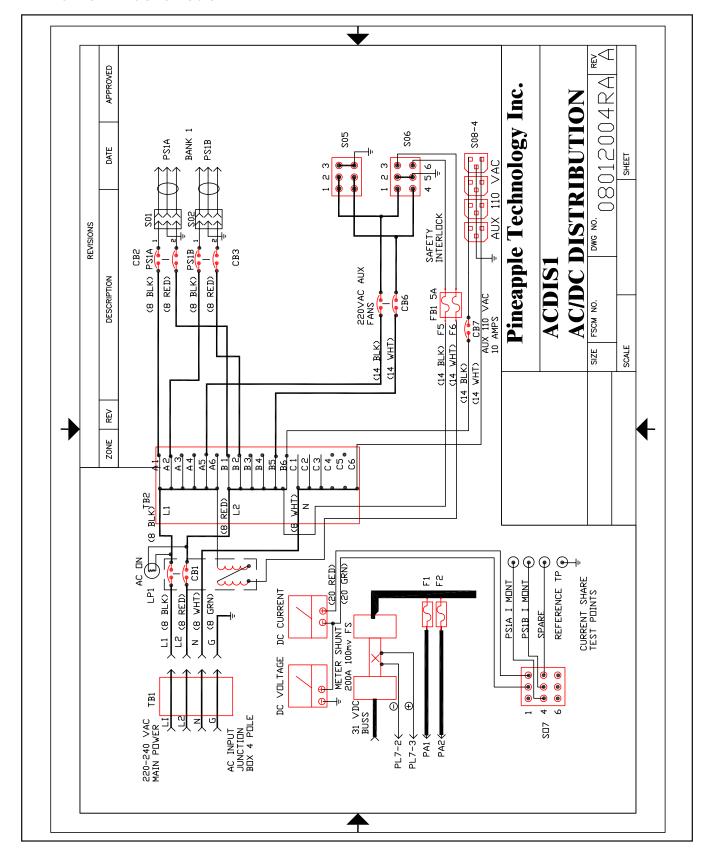

B. ACDIS1 — Parts List

	DISTRIBUT XMTR	TION		Type PL Revision A Status U Date 12/12/200 By RA	User1 User2 User3 3 User4 User5	
Item	Qty	Туре	P/N	Title	Detail	Ref(m)
Тор		PL	ACDIS1	AC & DC DISTRIBUTION	UTX1KW XMTR	
1	1	PS	670300	SHUNT, METER 100 mv FS	Lightweight shunt, 100 Millivolt, 300 amp.	
2	1	PS	660110	DC PANEL METER 50 V FS	HOYT MODEL 3115 1-1/2 ANA PANEL	
3	1	PS	660113	DC AMP METER 300 A FS	HOYT 3115 100mv FS	
4	1	PS	AC3110	AC CKT BREAKER	115 VAC 10 AMPS RS TYPE	
5	1	PS	AC8000	AC POWER DISTRIBUTION BLOCK	3 POLE 840 A 600 VAC	TB1
6	2	PS	AC5104	AC PANEL MTG OUTLET	220VAC 16 AMP 3 PIN	SO1, S02
7	2	PS	AC4111	AC POWER PLUG 220AC 16A	POWER INLET SCHURTER 4300.0922	
8	2	PS	480460	MOLEX CRIMP TERM (POLE	CAP HOUSING PANEL MTG	S05, S06
9	2	PS	480461	MOLEX CRIMP TERM PLUG	PLUG HOUSING 6 POLE	PL05, PL06
10	4	PS	480462	MOLEX CAP STRAIN RELIEF	ACDIS SUBASSEMBLIES	
11	12	PS	480463	MOLEX PIN CONTACTS LRG	CONN PIN 14-20 AWG TIN CRIMP	
12	12	PS	480464	MOLEX SOCKET CONTACTS	CONN SOCKET 14-20 AWG TIN CRIMP	
13	1	PS	480465	MOLEX PLUG HOUSING	9 POLE MATE-LOC	S07
14	1	PS	480466	MOLEX CAP HOUSING	9 POLE	
15	2	PS	480467	MOLEX STRAIN RELIEFS	9 POLE	
16	2	PS	471380	FUSE FAST ACTING 80 AMP	USE WITH LFFB0001 HOLDER	
17	2	PS	460190	FUSE HOLDER 400A	LITTELFUSE LFFB0001	
18	1	PS	AC3230	AC CKT BREAKER	30 AMP 2-POLE 220V	
19	3	PS	AC3315	AC CKT BKR ELUMINATED	U600LPA 220 15 A 2 POLE	
20	1	PS	AC5105	AC PANEL MTG OUTLET	4 POSITION "GANGED" 15A 115VAC	
21	1	PS	MF9312	ACDIS MAIN CHASSIS	AL 090 MATERIAL ALODYNE/W SILK	
I ALVIS	E TECHNOL S COURT, #6 38 Fax 916	6, ROCKL	.IN, CA 95677			ACDIS1 Page 1 of 2

B. ACDIS1 — Parts List (Cont.)

 Assy Tree for: ACDIS1
 ACDIS1

 AC & DC DISTRIBUTION
 Rev A


 UTX1KW XMTR
 Printed 8/16/2004

Item	Qty	Type	P/N	Title	Detail	Ref(m)
22	1	PS	MF9313	ACDIS MAIN COVER	1 & 2 KW 090 AL ALODYNE	
23	1	PS	MF9314A	ACDIS 115 AC MTG PLATE	063 AL ALODYNE	
24	1	PS	MF9315A	ACDIS CHASSIS DIVIDER	063 AL ALODYNE	
25	1	PS	MF9316	ACDIS1 FRONT PANEL	AL 0125 PAINTED WITH SILK	

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

ACDIS1 Page 2 of 2

C. DRV100DC-1 — Schematic

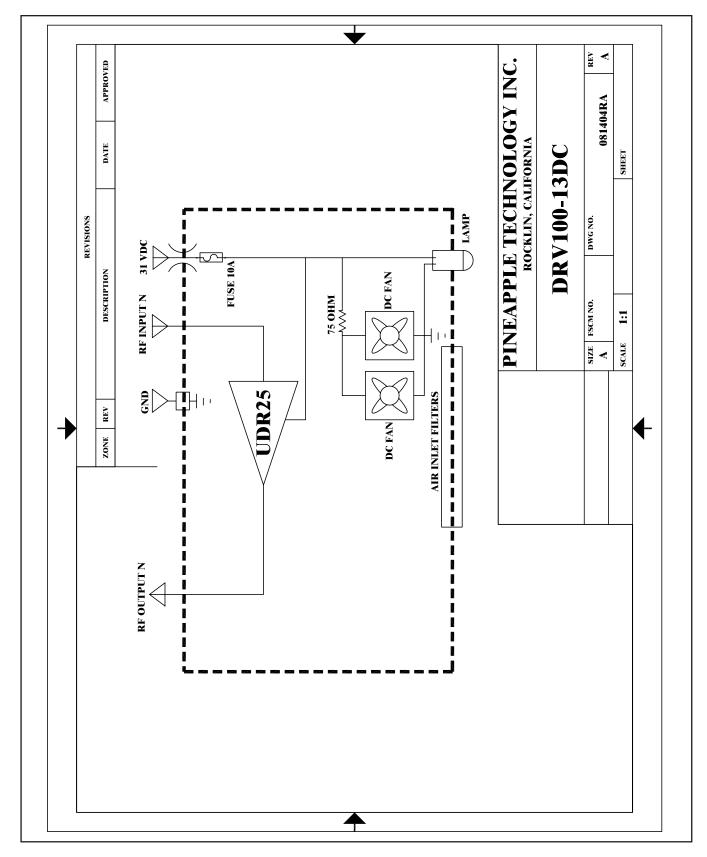



C. DRV100DC-1 — Parts List


Assy Tree for: DRV100DC-1 Printed 8/18/2004 Type CAT User1 **DRV100DC-1** Revision Α User2 **DRIVER ASSEMBLY** Status U User3 31 VDC WITH UDR25 AMP Date 8/18/2004 User4 Ву RA User5

	Item	Qty	Туре	P/N	Title	Detail	Ref(m)
—	Тор		CAT	DRV100DC-1	DRIVER ASSEMBLY	31 VDC WITH UDR25 AMP	
	1	1	PS	140010	RES AXIAL 2 W	10 OHM	
	2	1	PS	140012	RES AXIAL TH 2 WATT	75 OHM METAL OXIDE	
\vdash	3	1	PS	27047N	FT CAP 47NF DC	1/4-20 HW MTG THRU PANEL	
\vdash	4	1	PS	631001	INDICATOR LAMP LED	GREEN 24 VDC 1/2 IN MTG HOLE	
	5	2	PS	851005	FAN DC 24 V 80X25mm	COMAIR-ROTRON	
	6	2	PS	990201	FILTER & FINGER GUARD	80X25mm FAN 30 PPI	
_	7	1	PS	MF9337	PANEL, FRONT	DRV100DC	
-	8	1	PS	MF9338A	CHASSIS	DRV100DC	
_	9	1	PS	MF9339A	DIVIDER AIR FLOW	DRV100DC	
	10	1	PS	MF9340A	TOP COVER DRV100DC		
ļ	12	1	CAT	UDR25	DRIVER, 25W LINEAR 470-815 MHz	LDMOS DUAL PACKS PALLET MTG	

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

DRV100DC-1 Page 1 of 1

D. MFA1KW

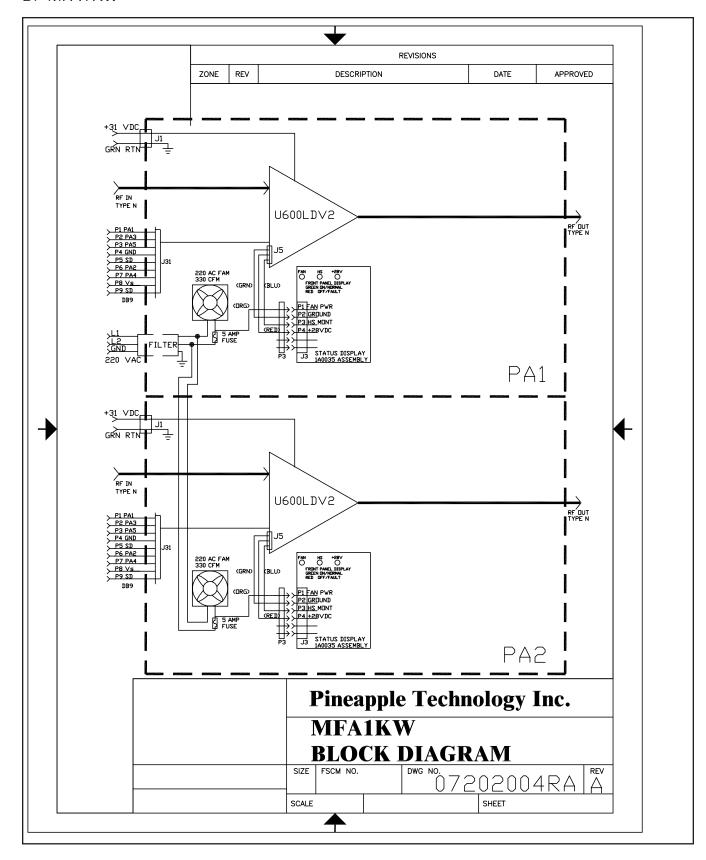



D. MFA1KW — Parts List

Assy Tree for: MFA1KW				Printed 8/16/2004
MFA1KW 1 KW MAIN FRAME UHF/VHF ASSEMBLIES	Type Revision Status Date By	PL A U 1/24/2000 RA	User1 User2 User3 User4 User5	
Item Qty Type P/N	Title		Detail	Ref(m)
■— Top PL MFA1KW	1 KW MAIN	FRAME	UHF/VHF	


	Item	Qty	Туре	P/N	Title	Detail	Ref(m)
_	Тор		PL	MFA1KW	1 KW MAIN FRAME	UHF/VHF ASSEMBLIES	
_	1	1	PS	MF9100E	MAIN CHASSIS	MFA1KW	
_	2	1	PS	MF9101	DIVIDER, PLENUM	MFA1KW	
_	3	1	PS	MF9102C	DIVIDER, FAN	MFA1KW	
_	5	1	PS	MF9104	COVER, TOP	MFA1KW	
_	10	4	PS	MF9139	SLED GUIDE	U600LP & MFA1KW	
_	11	1	PS	MF9123D	FRONT PANEL, PAINTED	MFA1KW	
_	14	2	PS	990199	FILTER, AIR DRY	FF-5 MFA/PS FP	
_	16	2	PS	MF9127	MTG BRACKET, MOLEX FMALE	MFA1KW	
	17	6	PS	480472	MOLEX CRIMP TERM MFA1KW	MOLEX MFG 39-00-0041	
_	18	2	PS	480400	MOLEX PLUG 6 TERM MFA1KW	MOLEX 15-06-0065 MINI-FIT BMI	
_	19	2	PS	460150	FUSE HOLDER PANEL MTG	3AG TYPE QC CON	
-	20	2	PL	1A0035	PA STATUS BOARD	PC9061A	
_	22	4	PS	INHOUSE_LABOR	PTI LABOR		
-	23	2	PL	U600LDV2	600W UHF AMPLIFIER MODULE	USED WITH MFA1KW ASSEMBLY	
_	24	2	PS	MF9308	FAN FINGER GUARD	MFA1KW & U600LPA	
_	25	2	PS	MF9310	AC FAN INLET HOLDER	MFA1KW	
_	27	2	PS	MF9258	BRACKET FILTER MTG PAINTED	U600LPA & MFA1KW	
_	28	1	PS	MF9197B	DIVIDER PA	MFA1KW	
	29	2	PS	851025	FAN, AC 220 V	COMAIR ROTRON TN3A2	
	30	2	PS	AC5110	AC FAN PLUG & CORD	FMALE PLUG 24 IN CORD	

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

MFA1KW Page 1 of 1

D. MFA1KW

1. 1A0035 STATUS BOARD

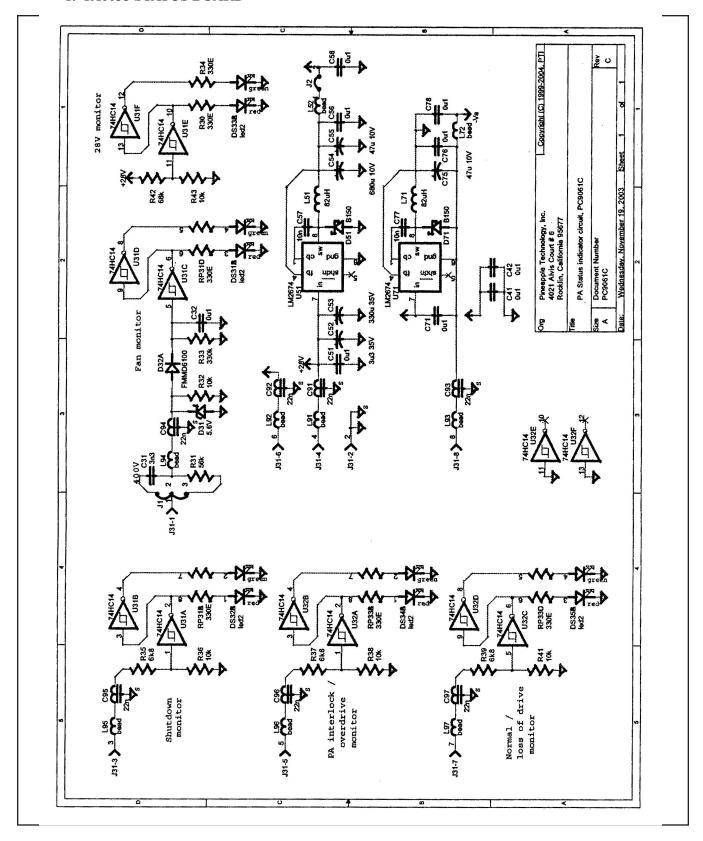




D. MFA1KW

1. 1A0035 PARTS LIST

A00	ATUS BOARD	A0035		Type PL Revision B Status U Date 8/1/2002	User1 User2 User3 User4	Printed 8/16/2004
				By RA	User5	
Item	n Qty	Туре	P/N	Title	Detail	Ref(m)
- Top	1	PL	1A0035	PA STATUS BOARD	PC9061A	
⊦ 1	2	CAT	114330	RES ARRAY, SMT	330 OHMS	RP31, RP32
- 2	5	PS	115103	RES CHIP 0805	10K OHM SMT 0805	R32,36,38,4 1,43
- 3	1	PS	115334	RES CHIP 0805	330 K OHM SMT	R33
- 4	1	PS	115563	RES CHIP 0805	56K OHM 0805 SM	R31
- 5	3	PS	115682	RES CHIP 0805	6.8 K OHM SMT	R35,37,39
- 6	6	PS	21X005	CAP CHIP 0805	100NF 10% XTR 0805 CASE	C32,41,42,5 1,56,58,71,
7	1	PS	21X008	CHIP CAP 0805	10NF 50 V 0805 SM	C57,
- 8 	1	PS	240109	CAP TH POLYPROPYLENE	3N3 600 WVDC .033UF	C31
9	1	PS	240110	CAP TAN SMD	3.3 UFD 35 V	C52
- 10	1	PS	240111	CAP TAN SMD	47 UF 10 V TAN	C55,
- 11	1	PS	241300	CAP RADIAL TH	330 UF 35 VDC	C53
- 12 	1	PS	241301	CAP RADIAL TH	680 UF 10 V ELECTROLYTIC	C54
– 13 —	6	PS	27022N	FT CAP 22N SM	AVX OR MURRATA PART	C91, 92, 94, 95, 96, 97,93
- 14 	1	PS	480500	CON MICRO-FIT HEADER 3.0	8 PIN PC MTG	J31
– 15 ——	1	PS	520230	SEMI DIODE SHOTTKEY	1.5 A 60 VDC D-64	D51
- <u>16</u>	1	PS	520275	SEMI, DIODE DUAL	FMMD6100	D32
- <u>17</u>	2	PS	530350	HEX SCHMITH TRIG	74HD14	U31, U32
- 18	1	PS	538150	IC SWITCHER SIMPLE		U51,
- 19 ——	5	PS	630200	IND LED DUAL COLOR	RED/GREEN T1-3/4 CLR	DS31,32,33, 34.35
- 20 	8	PS	750001	FERRITE BEAD SMT	0805 EMI FERRITE BEAD	L52 ,91,92,94,95 ,96,97,72
- 21	1	PS	830510	IND, W/W	82 UH .58A PWR SMD	L51,
22	2	PS	PC9061	PA STAUS BRD	FR4 060 1/1 CBR	
23	2	PS	115331	RES CHIP 0805	330 OHM SMT	R30,34
24	1	PS	520120	SEMI ZENER	5.6 V MELF	D31
- 25	1	PS	115683	RES CHIP 0805	68K SM	R42
021 AL	PLE TECHNOL VIS COURT, #6 -8338 Fax 916	6, ROCKLI	N, CA 95677			1A0035 Page 1 of 1

VI — SCHEMATICS AND PARTS LIST E. U600LDV2 — Block Diagram

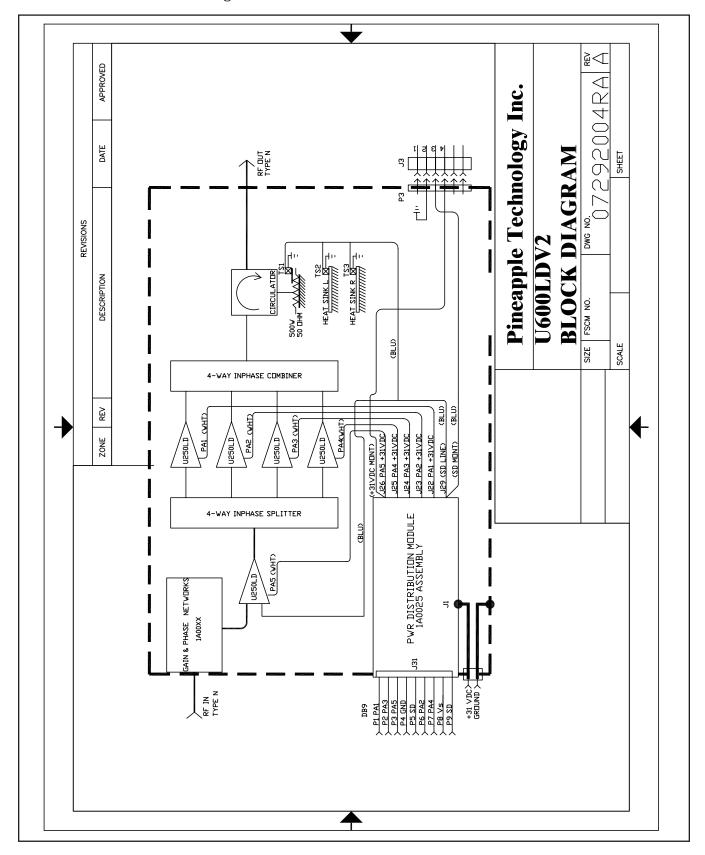

${\sf VI-SCHEMATICS}$ AND PARTS LIST

E. U600LDV2 — Parts List

SSY Tree for: U600LDV2 J600LDV2 DOW UHF AMPLIFIER MODULE SED WITH MFA1KW ASSEMBLY				Type PL Revision A Status U Date 1/21/2004 By RA	User1 User2 User3 User4 User5	Printed 8/16/2004
tem	Qty	Туре	P/N	Title	Detail Ro	ef(m
Тор		PL	U600LDV2	600W UHF AMPLIFIER MODULE	USED WITH MFA1KW ASSEMBLY	
1	1	PS	U4002-1T	UHF CIR 3T DITOM	DF4002 470-540 MHz	
2	1	PS	MF9126C	MOLEX BRACKET MTG PLATE	U600LD ALL	
3	3	PS	310010	SW THERMAL	140 DEG F N/C	
4	1	PS	MF9160C	HEAR SINK U600LD	RIGHT SIDE	
5	1	PS	MF9159G	HEAT SINK U600LD	LEFT SIDE	
6	1	PL	1A0018	PHASE & GAIN MATCHING UHF	U500/U600LD ASS'Y	
7	1	PS	MF9118A	BASE PLATE, US200	AI 1/2 IN	
8	1	PS	MF9137	SLED	U500L AL	
9	1	PS	454001	HANDLE, REAR	BLK NYLON	
10	1	PS	PC9033_34	PC BRD JUMPER	U600LD RGR 4003 060	
11	2	PS	PC9023B	PCB COMB/SPLTR	R-4003 060 1/1	
12	4	PS	180040-100R	RES PWR 40 W	100 OHM RES	
13	2	PS	180150-100R	RES PWR 150 W	100 OHM RES	
14	1	PS	180250-50T	RES PWR 250 W	50 OHM TERM	
15	2	PS	440101	HW CS STANDOFF	1.0 x .375; Male/Female; 1032	
16	1	PS	MF9203 B1	PLATE, ISO/MONT BRD	SM 09 AL W/MTG	
17	1	PS	MF9202B1	COVER, REAR U600LD	SM 09 AL	
18	1	PS	MF9206AMU	Shield, PC9050A	PCB SHIELD MONITOR/ISO BRD	
19	1	PL	1A0025	DC ISO/MONITOR CKT	REPLACED CB99	
20	3	PS	MF9075A	CIR MOUNTING PLT	O.O9 ALUM	
21	1	PS	452001	HWRD TERM FEED THRU BLK	5 PIN; #10 STUD; 10-16 AWG	
22	1	PS	452050	HWR TERM BLK COVER	5 PIN COVER W/MTG HWRD	
23	1	PS	480401	MOLEX RECEPTACLE U600LD		
24	3	PS	480473	MOLEX CRIMP TERMINAL U600LD	MOLEX 39-00-0039 FEMALE	
25	1	PL	CA5001	COAX CABLE ASSEMBLY	RG142 TO N PM FM 4 HOLE FLG	
1 ALVIS	TECHNOL COURT, #6 8 Fax 916	, ROCKL	IN, CA 95677			U600LDV2 Page 1 of 2

E. U600LDV2 — Parts List (Cont.)

Assy Tree for: U600LDV2	U600LDV2
600W UHF AMPLIFIER MODULE	Rev A
USED WITH MFA1KW ASSEMBLY	Printed 8/16/2004


	Item	Qty	Type	P/N	Title	Detail	Ref(m
-	26	1	PL	CA5030	COAX CABLE ASSEMBLY	ANDREWS ETS1 TO N PANEL FLG MT	
	27	1	PS	491600	N FEMALE BULK CRIMP	REAR MNT W/ "O" RING	
-	28	5	CAT	U250LD	UHF TV 300 W P	470-810 MHz	
_	29	6	PS	INHOUSE_LABOR	PTI LABOR		
L	30	1	PS	MF9309	REAR PANEL WITH	090 AL ALODYNE	

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

U600LDV2 Page 2 of 2


E. U600LDV2

1. U250LD — Schematic

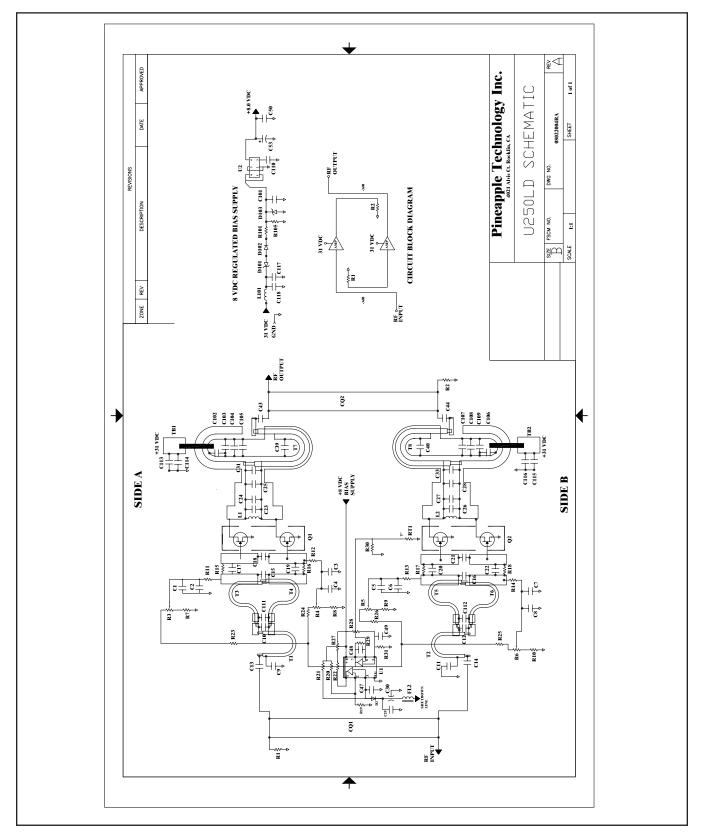

E. U600LDV2

1. U250LD — Layout Drawing

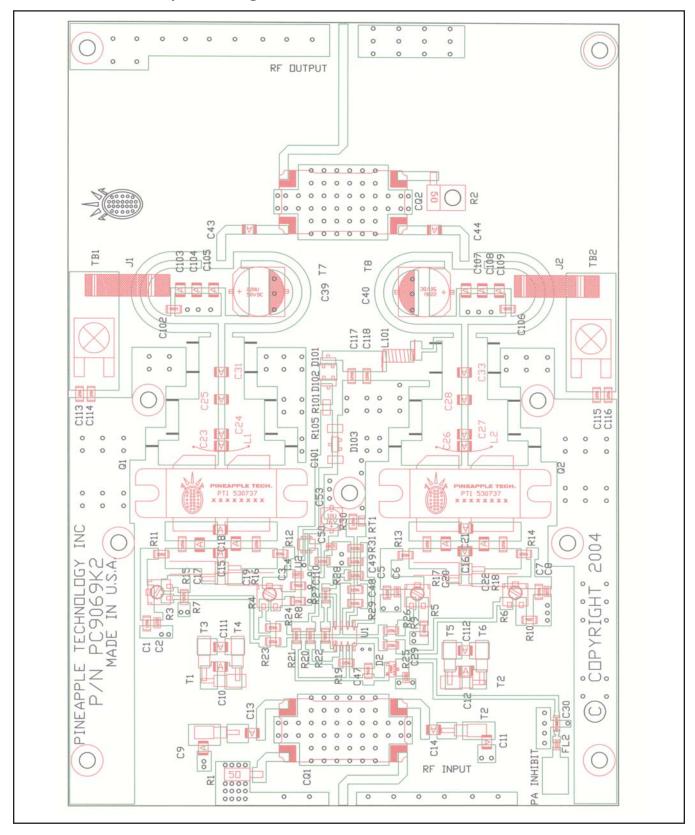



E. U600LDV2

1. U250LD — Parts List

250LC 1 F TV 30 0-810 Mi	0 W P	250LD		Type CAT Revision A Status U Date 11/5/2003 By RA	User1 User2 User3 User4 User5	Printed 8/16/2004	
Item Qty Type P/N		Title	Detail Ref(m)				
Тор		CAT	U250LD	UHF TV 300 W P	470-810 MHz		
1	1	PS	PC9069C	U300LD 470-860 MHz TV	FR4 060 1/1		
2	2	PS	530737	LDMOS PWR FET UHF TV	BLF861A PHILIPS	Q1,2	
4	1	PS	560107	DUAL OP AMP 8-SOIC	TLV272IDR	U1	
6	1	PS	117444	THERMISTOR	33K OHM	RT1	
7	1	PS	180030-50T	RES PWR 30 W SMT	RFP-30-50T RFPC	R1	
8	1	PS	180010-50T	RES PWR 10 W	50 OHM TERM	R2 ((NO LOAD))	
9	9 4 PS 17L202		RES VAR SMT	2K OHM POT	R3,4,5,6		
10	4	PS	116202	RES CHIP 1206	2K OHM SMT	R7,8,9,10	
11	10	PS	116103	RES CHIP 1/8 W	10 K OHM SM 1206	R11,12,13, 14,19,20,22 ,30,31,105	
12	4	PS	116010	RES CHIP 1206	10 OHM SM	R15,16,17, 18	
13	1	PS	116102	RES CHIP 1/8	1 K OHM SM 1206	R21,	
14	2	PS	116000	RES CHIP 1206	0.0 OHMS SM	R27,28,	
15	1	PS	116822	RES CHIP 1206	8.2K OHM 1/8 W SMT	R29	
19	14	PS	21Y042	CAP CHIP	0.1 UF 50 V 1206	C1,3,5,7,47 ,48,49,101, 105,109,11 0,113,115,1	
20	11	PS	21X001	CAP CHIP 0805	100 PF 50V SMD	C2,4,6,8,29 ,50,102,106 ,114,116,11 8	
21	6	PS	263301	CAP CHIP ATC	300 PF B CASE	C9,11,103, 107,111,11 2	
22	2	PS	2631R8	CHIP CAP ATC	1.8PFBCASE	C10,12	
23	4	PS	263180	CAP CHIP ATC	18 PF B CASE	C15,16,	
24	2	PS	263200	CAP CHIP ATC	18-20 PF B CASE	C18,21 ((NO LOAD))	
26	1	PS	27022N	FT CAP 22N SM	AVX OR MURRATA PART	C30	
29	2	PS	241220	CAP RADIAL SM	220 UF 50 V HA	C39,40	
21 ALVIS	TECHNOLO COURT, #6 8 Fax 916	, ROCKLI	N, CA 95677			U250LD Page 1 of 2	



E. U600LDV2

1. U250LD — Parts List (Cont.)


Item	Qty	Туре	P/N	Title	Detail	Ref(m)
30	1	PS	750001	FERRITE BEAD SMT	0805 EMI FERRITE BEAD	FL2
31	1	PS	520129	SEMI DIODE GP	1N914 SM SOT-23	D2,102,
33	2	PS	451070	HW PWR TAP	6-32 STL KEYSTONE 8191	TB1,TB2
34	3	PS	520118	SEMI ZENER	14V MINI 3P MA3140CT	D101,103,
35	1	PS	560116	8VDC SMT REGULATOR	TK11280CMCL	U2
36	1	PS	241010	CAP RADIAL SM	10UF 16V ALUM ELEC	C53
37	6	PS	2638R2	ATC CHIP CAP	8.2 PF B CASE	C23,24,26, 27,((23,26 NO LOAD))
38	4	PS	2636R8	CAP CHIP ATC	6.8 PF B CASE	C25,28,31, 33
39	10	PS	263101	CAP CHIP ATC	100 PF B CASE	C13,14,17, 19,20,22,43 ,44,104,108
40	1	PS	830430	IND CHIP W-W	AIR COIL 43.0 NH SMT	L101
1 1	5	PS	116471	RES CHIP 1206	470 OHM 1/8 W SMT	R101, R23,24,25, 26
12	2	PS	PAC0001	MATCHING XFMR	RG316 CUT & TRIM	T1,2
43	2	PS	PAC0002	MATCHING XFMR COXIAL	UT90-25 CUT & TRIM	T7,8
14	4	PS	PAC0003	MATCHING XFMR COAXIAL	UT47-25	T3,4,5,6
45	2	PS	391600	HYBRID COUPLER		CQ1, CQ2
46	2	PS	DIRECT_LABOR	LABOR	INHOUSE LABOR/TEST	

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

U250LD Page 2 of 2

E. U600LDV2

2. 1A0025 Power Distribution Monitor

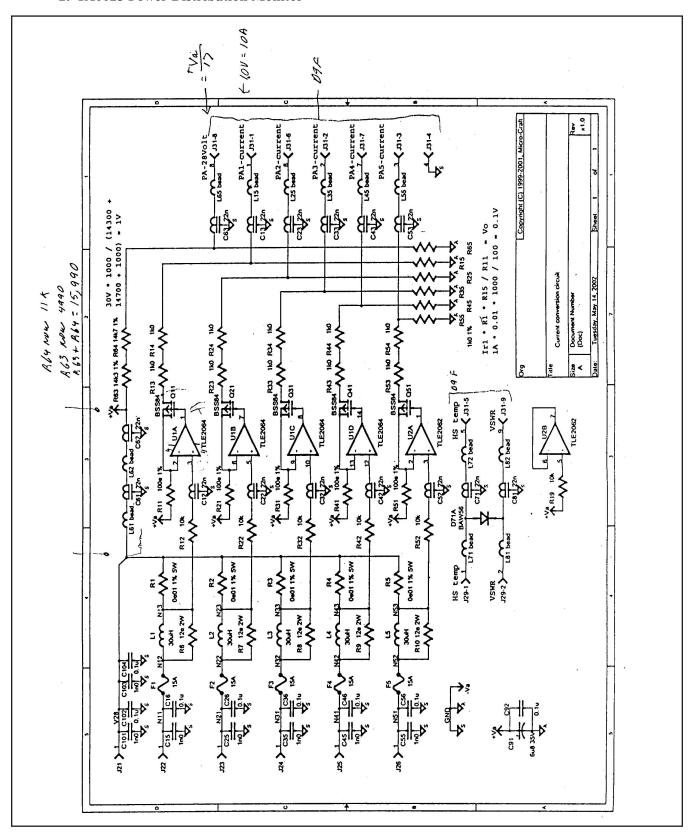

E. U600LDV2

2. 1A0025 — Parts List

40025	NITOR CI			Type PL Revision B Status U Date 11/29/2001 By RA	User1 User2 User3 User4 User5	Printed 8/16/2004	
Item Qty Type P/N		Title	Detail	Ref(m)			
Тор		PL	1A0025	DC ISO/MONITOR CKT	REPLACED CB99		
1	1	PS	PC9050C	PCB DC ISO/MONT BRD	FR4 060		
2	1	PS	560101	OP-AMP QUAD PAK	TLE2064AID TI	U1	
3	1	PS	560102	OP-AMP DUAL PAK	8-SOIC	U2	
4	21	PS	27022N	FT CAP 22N SM	AVX OR MURRATA PART	C11, 12, 13, 21, 22, 23, 31, 32, 33, 41, 42, 43, 51, 52, 53, 61, 63, 71, 73, 81, 83	
5	1	PS	240102	CAP SM TAN	6.8 UF 35 V C CASE	C91	
6	1	PS	21Y022	CAP SM 1206	47 NF 50 V	C92	
7	5	PS	472015	FUSE PICO II EPOXY	15 A 32 VDC	F1, 2, 3, 4, 5	
8	1	PS	481250	CON DB9 SUB RT ANGLE FM	METAL CASE AMP7457814	J31	
9	5	PL	1A0011	TOROID IND	10 T #14 ON N40	L1, 2, 3, 4, 5	
10	5	PS	590010	XISTOR FET BSS84	BSS84ZXCT	Q11, 21, 31, 41, 51	
11	5	PS	150R01	RES 5 WATT AXIAL	0.01 OHM 1.0 %	R1, 2, 3, 4, 5	
12	5	PS	140010	RES AXIAL 2 W	10 OHM	R6, 7, 8, 9, 10	
13	5	PS	1151000	RES CHIP 0805	100 OHM 1% 0805	R11, 21, 31, 41,51	
14	6	PS	1151002	RES CHIP 0805	10 K OHM 1% 0805 CASE	R12, 19, 22, 32, 42, 52	
15	10	PS	1151001	RES CHIP 0805	1 K OHM 1 %	R13, 14, 15, 23, 24, 25, 33, 34, 35, 43, 44, 45, 53, 54, 55, 65	
17	5	PS	451070	HW PWR TAP	6-32 STL KEYSTONE 8191	J22, 23, 24, 25, 26	
18	1	PS	480300	CON 2 PIN HEADER	AMP A23837-ND	P29	
19	1	PS	480310	CON 2 PIN PC POST	AMP 640456-2	J29	
21 ALVIS	TECHNOL COURT, #6 8 Fax 916	, ROCKL	IN, CA 95677			1A0025 Page 1 of 2	

E. U600LDV2

2. 1A0025 — Parts List (Cont.)

Assy Tree for: 1A0025	1A0025
DC ISO/MONITOR CKT	Rev B
REPLACED CB99	Printed 8/16/2004


Item	Qty	Type	P/N	Title	Detail	Ref(m)
- 20	12	PS	750001	FERRITE BEAD SMT	0805 EMI FERRITE BEAD	L15,25,35,4 5,55,61,62, 65,71,72,81 ,82
- 21	9	PS	21X005	CAP CHIP 0805	100NF 10% XTR 0805 CASE	C16,26,36, 46,56,102,1 04,106,108
- 22	9	PS	21X006	CHIP CAP 0805	1000 PF 10% 0805 CASE	C15,25,35, 45,55,101,1 03,105,107
- 23	1	PS	1154991	RES CHIP 0805	4.99K OHM 1% 0805 CASE	R63
- 24	1	PS	115113	RES CHIP 0805	11K OHM 1% 0805 CASE	R64
- 25	1	PS	520260	DIODE SWITCH	80V 100MA MINI 3P	

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

1A0025 Page 2 of 2

E. U600LDV2

3. 1A0018 Gain and Phase Matching

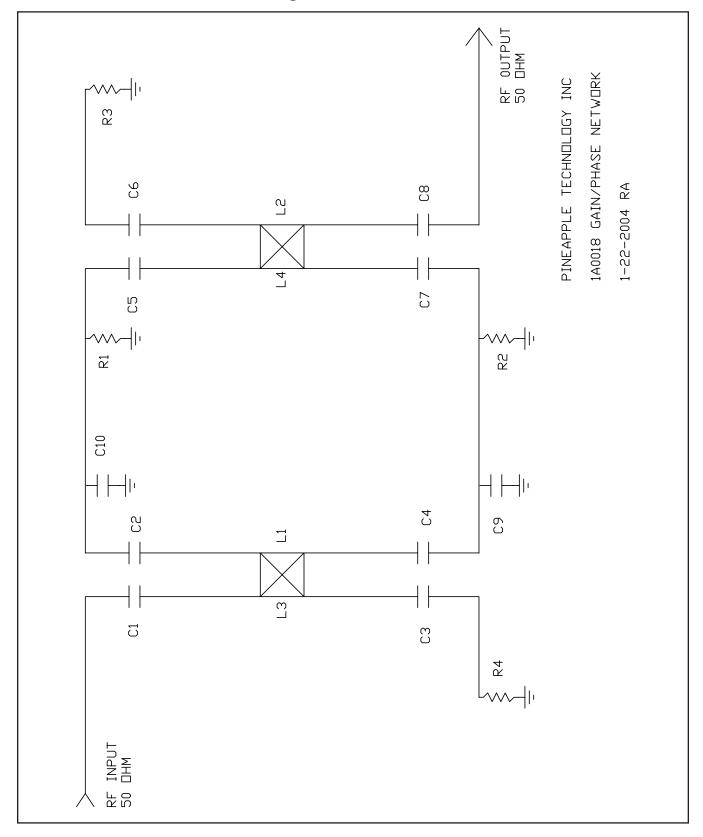



E. U600LDV2

3. 1A0018 — Parts List

Assy Tre	Assy Tree for: 1A0018									
1A0018 PHASE & 0 U500/U600	GAIN MAT		HF	Type Revision Status Date By	PL A U 1/14/2001 RA	User1 User2 User3 User4 User5				
Item	Qty	Туре	P/N	Title		Detail	Ref(m)			
Тор		PL	1A0018	PHASE & G		U500/U600LD ASS'Y				
<u> </u>	2	PS	PC9031A	PCB BB QU	AD	4 LAYER RGR 4003 008/060				
2	4	PS	822560	IND CHIP		56 NH 0805 SM	L1,2,3,4			
<u> </u>	8	PS	263390	CAP CHIP		39 PF B CASE ATC	C1,2,3,4,5, 6,7,8			
<u> </u>	2	PS	263100	CAP CHIP A	TC	10 PF B CASE	C9,10			
	.1	PS	DIRECT_LABOR	LABOR		INHOUSE LABOR/TEST				
— <u>6</u>	6 2 PS 180010-50T 7 2 PS 11Y681		RES PWR 1	0 W	50 OHM TERM	R3,4				
7			RES CHIP 1	W	680 OHM 2512 CASE SMT	R1,2				

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

1A0018 Page 1 of 1



${\sf VI-SCHEMATICS}$ AND PARTS LIST

F. SPLITTER US200 — Parts List

Assy Tree for: US200N										
JS2001	ΛI.			Туре	CAT	User1				
	=			Revision	Α	User2				
OMB/SPI 00W TYP	LT 470-860	MHZ		Status	U	User3				
JUVV I I P	Ľ-IN			Date	1/24/2000	User4				
				Ву	RA	User5				
Item	Qty	Туре	I P/N	Title	1	Detail	Ref(m)			
	Qty	туре	F/IN	Title		Detail	IXeI(III)			
Tan										
– Тор		CAT	US200N	COMB/SPLT MHz	470-860	200W TYPE-N				
- 10p - 1	1	CAT PS	US200N MF9118A			200W TYPE-N AI 1/2 IN				
- Top - 1 - 2	1			MHz	E, US200					
- 1	<u> </u>	PS	MF9118A	MHz BASE PLATE	E, US200 200	Al 1/2 IN				

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

US200N Page 1 of 1

Printed 8/16/2004



Assy Tree for: UC1KW

VI — SCHEMATICS AND PARTS LIST


G. COMBINER UC1KW — Parts List


	T 470-630 AY COMI			Revision Status L Date 7	CAT J 7/28/1999 RA	User1 User2 User3 User4 User5	
Item	Qty	Туре	P/N	Title		Detail	Ref(m)
Тор		CAT	UC1KW	COMB/SPLT 47 HMz		1.5 KW 2-WAY COMB W/DC	
2	1	PS	PCB90125	PCB MATERIA	_	RO TMM3 0.125 1/1 3.27 er	
3	1	PS	MF9108	BASE PLATE		UC1KW AI PLATE 5x8.2X0.5	
4	1	PS	MF9109	HOUSING, WRAPARND		UC1KW AI WRAP AROUND	
5	1	PS	MF9110	COVER		UC1KW AI 2 SIDES	
7	1	PS	491101	7/16 DIN FM PANEL MT		RFD-1640-2 RFI	
8	2	PS	491201	N FM PANEL M	1T	RFN-1021-1 RFI	
9	1	PS	PC9021C	PC BRD COME	•	TMM3 0.125 1/1 3.27 er	

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118


UC1KW Page 1 of 1

H. ADP1000 MONITOR

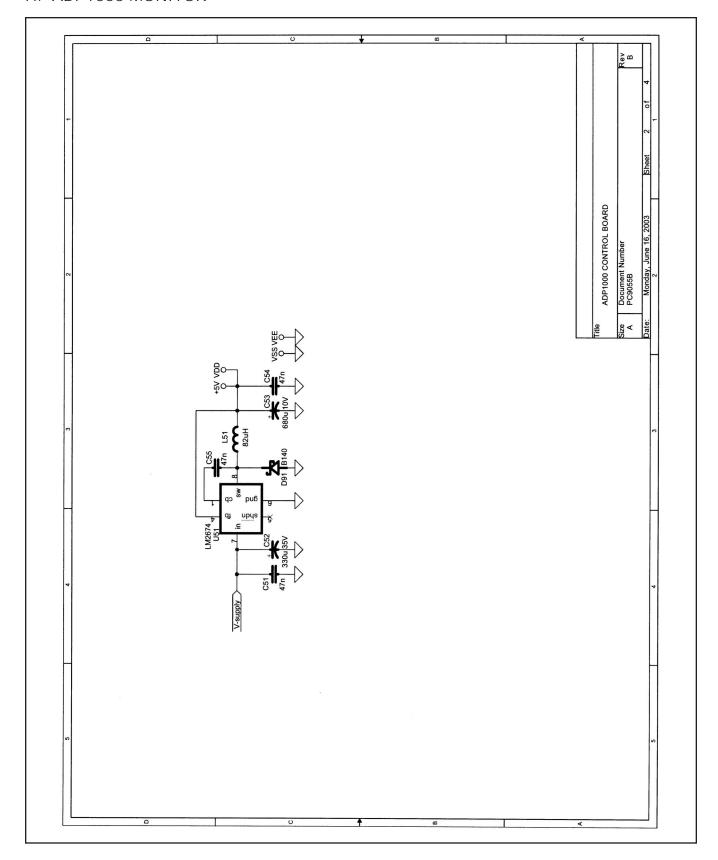


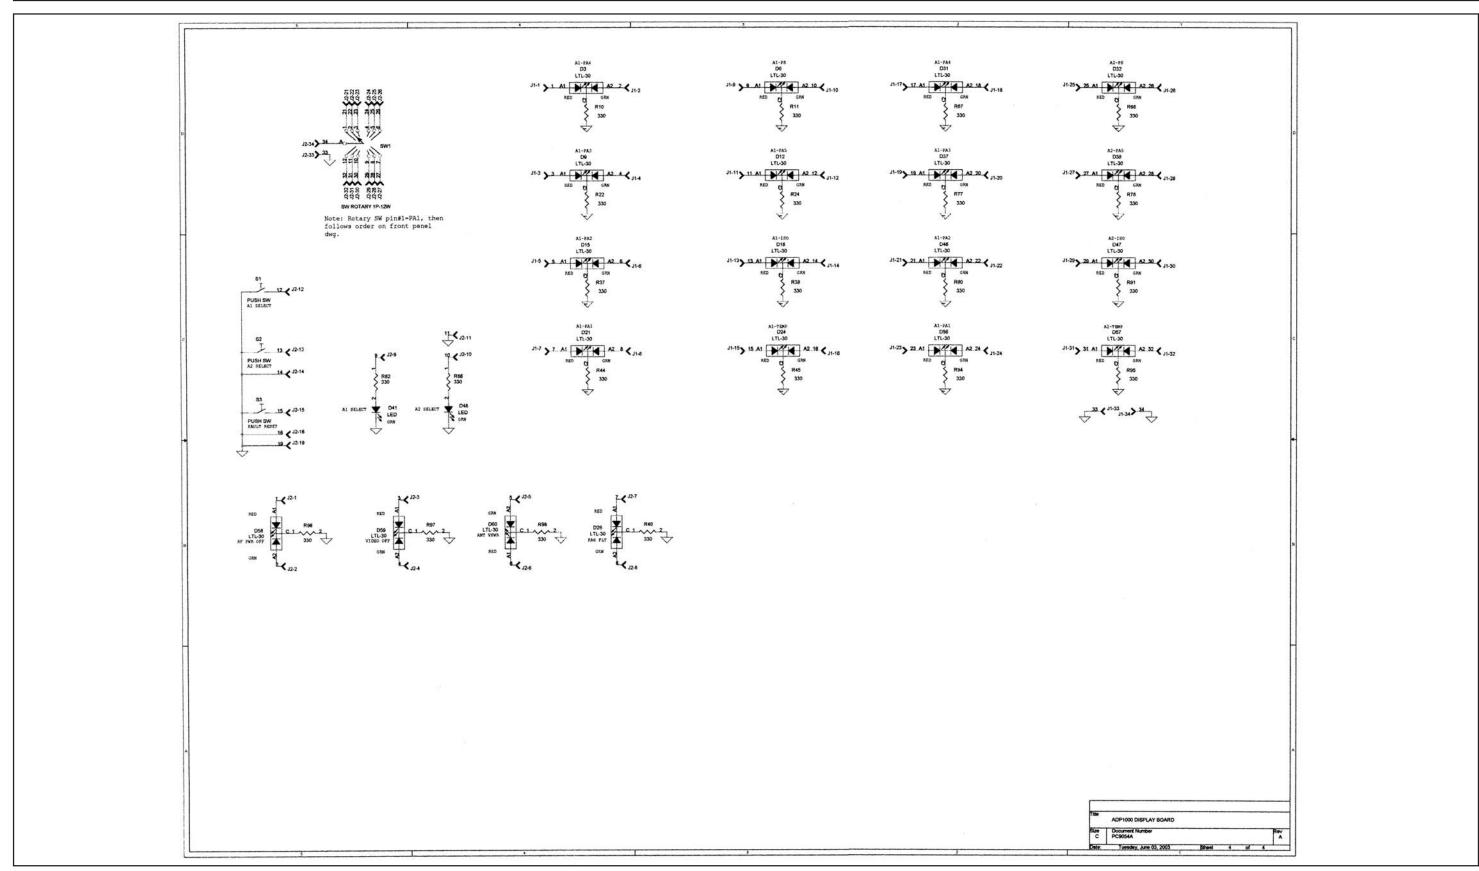

Page 40

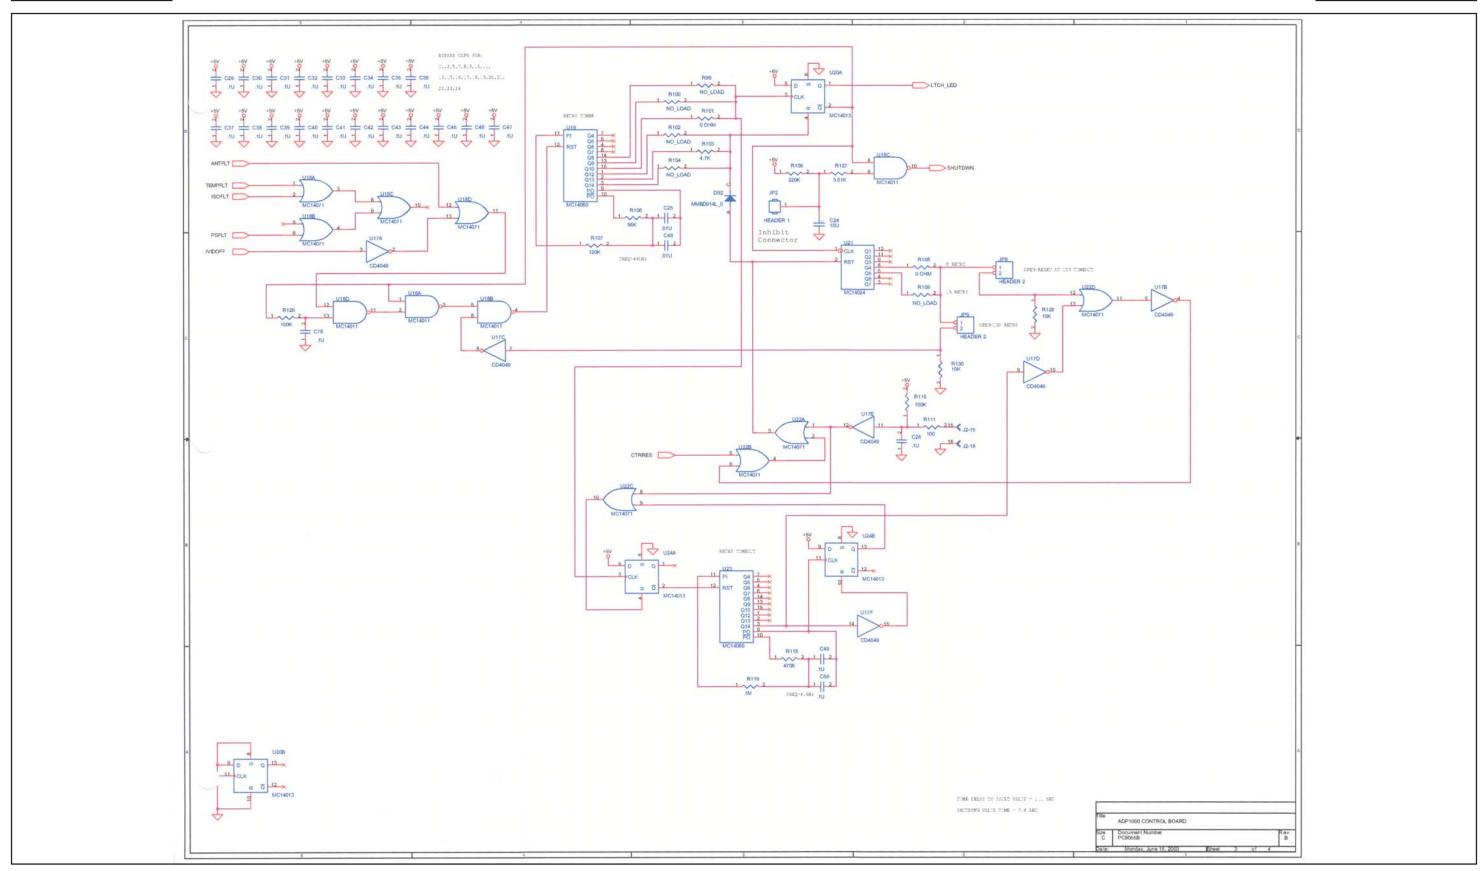

Page 41

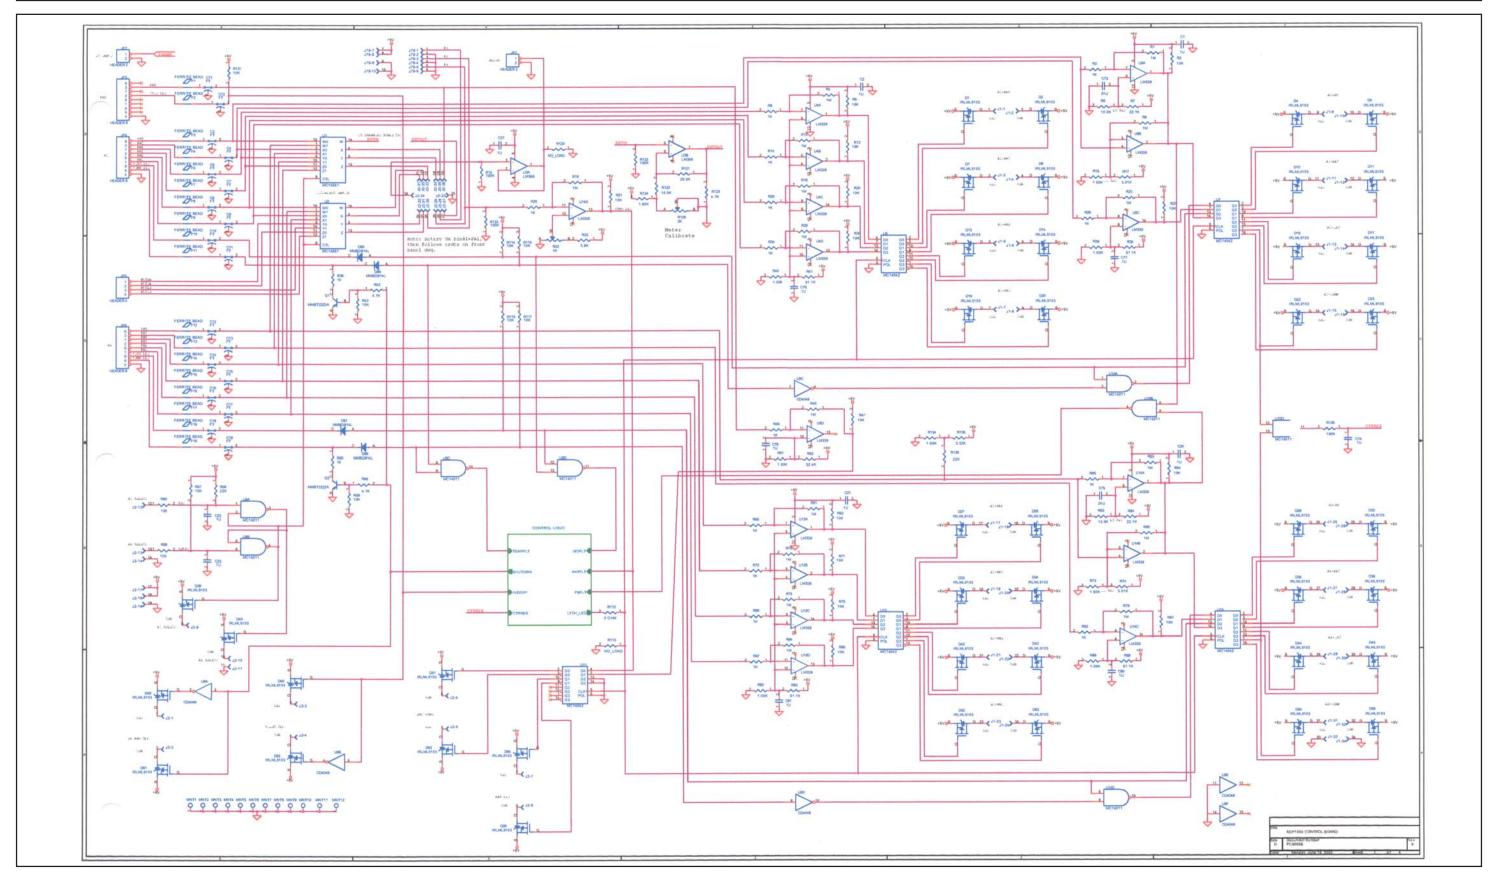

Page 42



H. ADP1000 MONITOR — Parts List

Assy	Tree	for: Al	DP1000)				Printed 8	8/16/2004
ADP1000 DISPLAY PANEL, ANALOG METER & SELECTOR SW					Type Revision Status Date By	CAT A U 12/6/2001 RA	User1 User2 User3 User4 User5		
Ite	m	Qty	Туре	P/N	Title		Detail	Ref(m)	
— <u>То</u>	р		CAT	ADP1000	DISPLAY PA ANALOG	NEL,	METER & SELECTOR SW		
_ 2		1	PS	484001	SW, ON/OFF AC	ROCKER	CW IND. NAA-211-B121-00		
- 3		1	PS	460150	FUSE HOLD MTG	ER PANEL	3AG TYPE QC CON		
- 4		1	PS	471306	FUSE 3AG		6 AMP		
- 5		1	PL	1A0030	ADP1000 FF	PCB	FP PCB AND PARTS		
- 6		1	PL	1A0029	ADP1000 LC	OGIC PCB	LOGIC BRD PARTS		
- 7		1	PS	660103	METER, 2 V	OLTS FS	SELCO 39M-0-2VDC		
- 8		1	PL	1A0027	PWR MONIT	OR CK	PC9052B CBR		
_ 9		1	PS	CA5110	CABLE ASS WIRE	EMBLY 10	10 WIRE SOC TO SOC CONNECTOR	C	
- 10	1	2	PS	CA5134	CABLE ASS	EMBLY	34 WIRE SOC/SOC CONNECTOR		
- 11		1	PS	270102HW	FD THRU CA	AP 1000PF	HW MTG W/SOLDER TERM		
- 12	!	1	PS	PS2527	POWER SUI OPEN/FRAM		110/220 VAC 27 V 25 W		

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

ADP1000 Page 1 of 1



H. ADP1000 MONITOR

1. 1A0027 — Parts List

ssy	Tree for:	1A0027		Type PL	User1	Printed 8/16/2004
/R I	027 MONITOR CI 52B CBR	<		Type PL Revision B Status U Date 12/15/2001 By RA	User2 User3	
Ite	m Qty	Туре	P/N	Title	Detail	Ref(m)
То	р	PL	1A0027	PWR MONITOR CK	PC9052B CBR	
1	1	PS	PC9052B	PWR MONITOR BRD	FR4 060 1/1 2 SIDES CBR CKTS	PC BOARD
2	3	PS	115103	RES CHIP 0805	10K OHM SMT 0805	R9, 33
3	2	PS	560108	SEMI OP-AMP	DUAL OP AMP	U1, 2
6	1	PS	115271	RES CHIP 0805	270 OHM 0805	R28
- 7 	1	PS	115272	RES CHIP 0805	2.7K OHM 0805 CASE	R23, 24, 26, 27
- 8	1	PS	115273	RES CHIP 0805	27K OHM 0805 CASE	R8
- 10		PS	115102	RES CHIP 0805	1K OHM 0805 CASE	R5, 7, 31, 45
- 11 —	5	PS	115104	RES CHIP 0805	100K OHM 0805 SMT	R4, 6, 29, 30, 44
- 12 	3	PS	115105	RES CHIP 0805	1M OHM 0805 CASE SMT	R3, 22, 43
- 13 	3	PS	115000	RES CHIP 0805	0 OHM 0805 CASE SMT	R2, 42, 21
- 14	2	PS	11Y510	RES CHIP 1W	51 OHM 5% 2512 CASE	R1, 41
- 15	1	PS	520300	SEMI GP XSTR	MMBT2222ALT1	Q1, Q2
16	3	PS	520201	SEMI DIODE SHOTKEY	70V Surf Mnt	D1, 2, 3
17	2	PS	822560-WW	IND CHIP W/W	56 NH WW HI-Q OSC CKT	L1, 2
- 19 	1	PS	485001	HEADER 10 PIN TH	AMP 0.1 CTR 103308-1	J3
- 20	2	PS	21Y001	CHIP CAP 1206	39 PF 50 V NPO	C1, 41
- 21	14	PS	21X007	CHIP CAP 0805	47NF 50WVDC X7R	C3, 21, 23, 24, 26, 27, 29, 43, 51, 52, 53, 55, 56
- 23	2	PS	21Y004	CHIP CAP 1206	2.2 NF 50V NPO	C22, 25
24	2	PS	240105	CAP SM CASE C	10 UF 10 V TAN	C54, 57
25	3	PS	17M102	RES VARI 12 TURN	1K OHMS SM	R10, 34, 47
26	1	PS	17M103	RES VARI 12 TURN	10K OHMS SM	R32
27	1	PS	115151	RES CHIP 0805	150 OHM 1% 0805 SMT	R25
- 28		PS	115931	RES CHIP 0805	930 OHM 1% 0805 SMT	R46
- 29	2	PS	240106	CAP SM CASE 1206	2.2 UF 16V TAN	C2, 42
21 A	PPLE TECHNO LVIS COURT, 5-8338 Fax 9	#6, ROCKLI	N, CA 95677			1A0027 Page 1 of 2



H. ADP1000 MONITOR

1. 1A0027 — Parts List (Cont.)

Assy Tree for: 1A0027	1A0027
PWR MONITOR CK	Rev B
PC9052B CBR	Printed 8/16/2004

	Item	Qty	Туре	P/N	Title	Detail	Ref(m)
	30	1	PS	240107	CAP SM 1206 CASE	4.7UF 16 V TAN 1206 CASE	C28
\vdash	31	1	PS	115362	RES CHIP 0805	3.6K OHM 0805 SMT	R11
	32	2	PS	996300	INDUCTOR 1T + TORROID	#22 SOLID WIRE AND TORROID	L5, 6

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

1A0027 Page 2 of 2



H. ADP1000 MONITOR

2. 1A0029 — Parts List

40029 P1000 L	e for: 1/ OGIC PCE D PARTS			Type PL Revision A Status U Date 1/5/2002 By RA	User1 User2 User3 User4 User5	Printed 8/16/2004
Item	Qty	Туре	P/N	Title	Detail	Ref(m)
Тор		PL	1A0029	ADP1000 LOGIC PCB	LOGIC BRD PARTS	
1	1	PS	PC9055	ADP1000 LOGIC BOARD	FR4 060 1/1 CBR	
2	2	PS	560320	LOGIC IC MC14013	DUAL D F/F SOT 14	U20, 24
3	3	PS	560315	LOGIC IC MC14011BD	LOG CMOS GATE NAND QUAD	U8, 10, 18
4	5	PS	560325	LOGIC IC MC14042BD 16 PIN	LOG CMOS LATCH QUAD TRAN	U5, 7, 11, 13, 15
5	2	PS	560310	LOGIC IC MC14060BD	CTR/DRIVER IC SOT 16	U19, 23
6	2	PS	539100	IC HEX INV BUFFER	CD4049UBCM	U9, 17
7	2	PS	560330	LOGIC IC MC14071BD	LOG CMOS GATE OR QUAD SO14	U16, 22
8	4	PS	539000	IC DIF AMP QUAD	LM339DR SO14	U4, 6, 12, 14
9	1	PS	560108	SEMI OP-AMP	DUAL OP AMP	U3
10	2	PS	562500	ANALOG MC14551BD	MUX/DE-MUX 2 CHANNEL	U1, U2
11	1	PS	538100	IC SWITCHER/REG LM2674M-5.0	28 V IN 5 VOLTS OUT 500MA	U51
12	1	PS	539110	LOGIC IC CD4024BM	7 STAGE COUNTER SO14	U21
13	2	PS	11622R13	RES CHIP 1206	22.1K OHM SMT	R7, 64
14	4	PS	1155112	RES 0805 CASE	51.1 K OHM 1%	R36, 41, 89, 93
15	1	PS	1153242	RES 0805 CASE	32.4 K OHM 1%	R52
16	2	PS	520300	SEMI GP XSTR	MMBT2222ALT1	Q1, Q2
17	42	PS	520272	DIODE HEX FET P	HEX FET SOT-3	D1, 2, 4, 5, 7, 8, 10, 11, 13, 14, 16, 17, 19, 20, 22, 23, 25, 27, 28, 29, 30, 33, 34, 35, 36, 39, 40, 42, 43, 44, 45, 49, 50, 51, 52, 53, 54, 55, 61, 62, 63, 64
18	1	PS	830510	IND, W/W	82 UH .58A PWR SMD	L51
19	4	PS	520129	SEMI DIODE GP	1N914 SM SOT-23	D65, 66, 67, 68, 92
21 ALVIS	TECHNOL COURT, #6 8 Fax 916	, ROCKLII	N, CA 95677			1A0029 Page 1 of 3



H. ADP1000 MONITOR

2. 1A0029 — Parts List (Cont.)

1000 LO						1A0029 Rev A Printed 8/16/2004
Item	Qty	Туре	P/N	Title	Detail	Ref(m)
21	17	PS	116105	RES CHIP 1/8 W	1 M OHM SM 1206	R1, 4, 9, 12, 18, 19, 23, 29, 46, 53, 61, 66, 70, 75, 79, 84, 119
22	27	PS	116103	RES CHIP 1/8 W	10 K OHM SM 1206	R2, 5, 6, 13, 20, 21, 27, 30, 43, 47, 54, 57, 59, 62, 63, 71, 76, 81, 85, 114, 115, 116, 117, 122, 128, 130, 131
23	14	PS	116102	RES CHIP 1/8	1 K OHM SM 1206	R3, 8, 14, 25, 26, 28, 34, 35, 40, 48, 51, 55, 65, 72, 80, 83, 87,88, 92, 125
24	36	PS	21Y042	CAP CHIP	0.1 UF 50 V 1206	C1,2,20,21,22, 23,26, 27, 29, 30, 31,31.33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 49, 50, 74, 76, 77, 78, 79, 80, 81,
25	18	PS	27022N	FT CAP 22N SM	AVX OR MURRATA PART	C3, 4, 5, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 71, 72
26	18	PS	750001	FERRITE BEAD SMT	0805 EMI FERRITE BEAD	F1, 2, 5, 4, 5, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17
27	1	PS	241310	CAP RADIAL TH	680 UF 35 WVDC AL ELECTROLYTIC	C52
28	1	PS	241320	CAP RADIAL TH	1200 UF 10 WVDC AL ELECTROLYTIC	C53
29	1	PS	240200	CAP SM 1206 CASE	10 UF 10 WVDC	C24
30	4	PS	21Y041	CAP CHIP	0.01 UF SM 1206	C25, 48, 73, 75
31	3	PS	21Y022	CAP SM 1206	47 NF 50 V	C51, 54, 55
32	1	PS	1163321	RES CHIP 1206	3.32 K OHM 1%	R135
33	1	PS	1162252	RES CHIP 1206	25.5K OHM 1206 CASE	R121
34	1	PS	116474	RES CHIP 1206	470K OHM 1/8 W	R118
5	1	PS	116124	RES CHIP 1206 CASE	120 K OHM 5%	R107
36	1	PS	116563	RES CHIP 1206 CASE	56K OHM 5%	R106
37 - ADDI E 3	1	PS	116224	CHIP RES 1206	220 K OHM 1206 CASE 5%	R105
ALVIS C	FECHNOLO COURT, #6 Fax 916-	, ROCKLI	N, CA 95677			1A0029 Page 2 of 3



H. ADP1000 MONITOR

2. 1A0029 — Parts List (Cont.)

Assy Tree for: 1A0029	1A0029
ADP1000 LOGIC PCB	Rev A
LOGIC BRD PARTS	Printed 8/16/2004

Item	Qty	Туре	P/N	Title	Detail	Ref(m)
38	3	PS	116000	RES CHIP 1206	0.0 OHMS SM	R101, 108, 112
39	7 PS 116XXX		CHIP RES 1206	+++NO LOAD+++	R99, 100, 102, 104, 109, 113, 120	
40	3	PS	116101	RES CHIP 1/8 W	100 OHM SM 1206	R60, 69, 111
41	2	PS	116223	RES CHIP 1/8 W	22 K OHM SM 1206	R58, 136
42	2	PS	116100	RES CHIP 1/8 W	10 OHM SM 1206	R39, 50
43			3.01K OHM 1206 CASE	R17, 74, 127		
44	4	PS	116472	RES CHIP 1206	4.7K OHM 1/8 W SMT	R42, 56, 103, 123
45	1	PS	116392	RES CHIP 1/8 W	3.9 K OHM SM 1206	R33
46	4	PS	116162	RES CHIP 1206	1.6K OHM 5% 1206 CASE	R16, 73, 124, 134
47	6	PS	116104	RES CHIP 1/8 W	100 K OHM SM 1206	R15, 110, 126 129, 132, 133
48	1	PS	17L102XT	RES VAR 12 TURN	1K SMT POT 12 TURN	R32
49	2	PS	480600	CON HEADER 0.1 CTRS	PROTECTED HEADER 34 PIN	J1, J2
50	1	PS	485001	HEADER 10 PIN TH	AMP 0.1 CTR 103308-1	J79
51	2	PS	480310	CON 2 PIN PC POST	AMP 640456-2	JP1, 7, 8, 9
52	1	PS	480320	CON 4 PIN PC LOCKING POST	MOLES MALE	JP5
53	1	PS	520212	SEMI DIODE SHOTKEY	40V 1A	D91
54	3	PS	481250	CON DB9 SUB RT ANGLE FM	METAL CASE AMP7457814	J3, 4, 6

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

1A0029 Page 3 of 3



H. ADP1000 MONITOR

3. 1A0030 — Parts List

Assy Tree	e for: 1A	0030					Printed 8/16/2004
	A0030 DP1000 FP PCB P PCB AND PARTS				PL A U 1/5/2002 RA	User1 User2 User3 User4 User5	
Item	Qty	Туре	P/N	Title		Detail	Ref(m)
— Тор		PL	1A0030	ADP1000 FF	PCB	FP PCB AND PARTS	
- 1	1	PS	PC9054A	ADP1000 DI BRD	SPLAY	FR4 060 1/1 CRB	
- 2	1	PS	483001	SW, 12 POS	SW, 12 POS ROTOR		SW1
- 3	3	PS	484050	SW, MOMEI	NTARY PB	OMRON B3WN-6002	S1, 2, 3
- 4	22	PS	150330	RES 1/4W A	XIAL TH	1.4 W 330 OHM TH AXIAL	R10, 11, 22, 24, 37, 38, 44, 45, 49, 67, 68, 77, 78, 82, 86, 90, 91, 94, 95, 96, 97, 98
5	22	PS	630200	IND LED DU	JAL COLOR	RED/GREEN T1-3/4 CLR	D3, 6, 9, 12, 15, 18, 21, 24, 26, 31, 32, 37, 38, 46, 47, 56, 57, 58, 59, 60, 48, 41
- 6	2	PS	480600	CON HEADI CTRS	ER 0.1	PROTECTED HEADER 34 PIN	J1, 2

PINEAPPLE TECHNOLOGY, INC. 4021 ALVIS COURT, #6, ROCKLIN, CA 95677 916-315-8338 Fax 916-315-8118

1A0030 Page 1 of 1

VII — ROUTINE MAINTENANCE

The following KEY MAINTENANCE AND PERFORMANCE CHECKS should be made monthly or more frequently in some environments:

TRANSMITTER

- Remove and clean the air filters with a light detergent and dry completely before re-installing. Dirty filters will cause PA amps to shutdown resulting in a loss of RF Power. Spare filters are available from Pineapple Technology, Inc. Request PN: 990199.
- Check and record the voltage and current meter readings on the ACDIS1 (AC AND DC DISTRIBUTION UNIT LOCATED NEAR THE POWER SUPPLIES). NOTE: current readings will vary with picture content, therefore a standard test such as SMPTE BARS should be used.
- Using the ADP1000 record the bias level settings on each PA Pallet by selecting the appropriate PA with the selector switch. To make this measurement of BIAS ONLY it is necessary to activate the PA INHIBIT switch momentarily for each reading.
- Using the ADP1000 check and record the RF Output power level to ensure that it is still reading 100% +/-10% from the previous settings.
- Using the ADP1000 check and record the VSWR (Reflected power) to ensure that it is still reading only a few percent indicating normal load operations.
- Using the ADP1000 check and record Aural power readings. This is normally set at 10% of P-sync. Expect this to vary only a few percent from reading to reading.
- Carefully inspect RF Output coax and coaxial fittings for excessive heating or discoloration.
- Check DC power connections on shunt and power supplies for over heating and tighten as needed.
- Check DC connections on PA rear panel.

FACILITIES

- Clean all air inlet filters and exhaust outlets to ensure that the transmitter is getting clean unobstructed air flow.
- Perform recommended service on air condition systems.
- Rodent traps or baits should be renewed to keep the facilities clear of these pest which can cause sever damage

to transmitters.

VIII — ADJUSTMENTS AND TUNING

The UTX1KW-A is basically an FCC Type Certified broadband transmitter with a few frequency selective sub-assemblies:

- A. MODULATOR Instructions for making adjustments to the modulator are included in the Manufactures Instruction Manual
- B. BPU1KW Band Pass filter comes adjusted to the channel as purchased. To change frequency would require a tuning adjustment to the filter. To perform this adjustment it is necessary to use a NETWORK ANALYZER and a signal generator with necessary I/O Adaptors to connect to the filter. The Technician performing this adjustment should be skilled in tuning Band Pass Filters. If the target frequency is outside of the tuning range of the filter, it becomes necessary to purchase a new filter. Replacement filters and service is available from Pineapple Technology Inc.
- C. U600LDV2 POWER AMPLIFIER MODULE The U600LDV2 has three areas where adjustments may be necessary over time or in the event of a frequency change. These areas are:
 - 1. **Bias adjustments:** The LDMOS FET devices used in these pallet amplifiers are set to 500ma/device side or a total of 1 amp/device. This adjustment can be made on the bench by first terminating the input and output with 50 ohm terminations. Apply 31 volts DC to the PA using a power supply that can provide a minimum of 15 amps. Note: a cooling fan will be necessary to cool the amplifier during this adjustment.

To adjust biases it is best to turn all the bias adjust resistors CCW or to minimum on the pallet being adjusted. Using a clamp on AMP Meter connected to the DC Feed terminal located on the DC ISOLATION AND CURRENT MONITOR BOARD measure the current levels. The first resistor is increased to 500ma indicated on the Amp meter. Repeat this adjustment for each additional resistor for reading of 1.0 A, 1.5 A, and 2.0 A. This will indicate that each device half is set to 500 ma.

This concludes the bias adjustment procedure. This adjustment should be made at any time when a device has to be replaced. Normal bias ranges from 1.5 amps to 2.3 amps per pallet as indicated on the ADP500/1000. DO NOT USE THE ADP500/1000 CURRENT READINGS FOR MAKING BIAS ADJUSTMENTS.

- 2. PA PALLET RF Circuit Tuning: These circuits are Broadband and Fixed tuned providing no adjustments. Any tuning at this level is performed by the factory.
- 3. GAIN & PHASE MATCHING: Each U600LDV2 comes with a circuit for making Gain and

Phase adjustments. This adjustment is fixed tuned for the channel of this transmitter. Adjustment to this circuits requires the following equipment:

- HP 8508A VECTOR VOLTMETER
- BIRD THROUGH LINE WATT METER
- SPLITTER
- 2 ea. DIRECTIONAL COUPLERS
- 2 ea. 500 watt terminations
- Component selection charts for resistors
- Component selection chart for capacitors

Component selection charts and setup block diagram provided as needed. Recommended tuning should be within \pm 0.15 dB and \pm

- D. PHASE MATCHED CABLES The cables used to connect the splitter to the PA Amplifier inputs and those provided to connect the PA Amplifiers to the combiner are phase matched. If a cable is damaged and needs to be replaced, additional cables are available from Pineapple Technology Inc. The customer may manufacture additional cables, however the same coax type with the same connector types should be used. The phase matching procedure listed above may be used for adjusting the lengths. Matching should be within +/- 2 degrees.
- E. ADP500/1000 WATT METER This unit comes calibrated from the factory for the rated power level of the transmitter. Adjustments are not recommended in the field.

IX — PROBLEM SOLVING/TROUBLE SHOOTING

The UTX1KW-A is a complex assembly of Digital and Analog circuits and in many cases it is advisable to contact Pineapple Technology Inc. for assistance. If it is necessary to perform field service on the transmitter, most parts are available from Pineapple Technology, Inc. for next day shipment.

The failure analysis of the transmitter starts off with the following assumptions:

- A. The transmitter is connected to an AC Source which is within the specified voltage range and has ample power to run the transmitter. This would normally be 208-240 V AC with a minimum of 30 Amps available.
- B. The antenna has been checked out and verified to have a VSWR of 1.2:1 or better.
- C. The room temperature is < 35 degrees Celsius.
- D. There are no restrictions on the air flow in or out of the building
- E. The video and aural signals to the Modulator, comply with stated specifications.

CHECKING THE WARNING LIGHTS

A. **MFA1KW:** This unit has dual performance indicator lights located above the air inlets. One set of lights for each PA Assembly located inside the unit.

HS OVER TEMP	GREEN RED	NORMAL FAULT	
+28 VDC	GREEN RED	NORMAL FAULT	
FAN SUPPLY	GREEN RED	NORMAL FAULT	

HS OVER TEMP FAULT could indicate one of the following problems:

- a. Room temperature too high and the Heat Sinks are over heating
- b. High VSWR on PA output port will cause the Dump Load sensor to Fault.
- c. Air filters are dirty and need to be cleaned
- d. Exhaust fan failure. (located in the top of the rack)

+28 VDC FAULT could indicate a power supply failure. Check the ADP1000 for PA voltage and current readings. The power supply modules will also indicate a loss of power.

FAN FAULT indications could mean that the PA blower has failed or there has been a loss of AC power to the fan. There is also a fuse located just inside of the front panel in case there is a locked rotor condition. To access the fuse, the MFA1KW must be removed from the rack and the top cover removed. This is a 5 AMP 3 AG type fuse.

B. **ADP1000:** There are a number of fault indicator lights on this unit that can be used for trouble shooting possible problems with the transmitter.

With normal operating conditions, all the LEDs located on the front panel should be green. Red lights could indicate a fault in normal operations of the transmitter. Fault indicators are listed below;

- 1. <u>ANT VSWR HIGH</u> light is RED. This indicates that the antenna reflected power exceeds the set point in the equipment which is normally set to 25%. When this LED is on, the transmitter shutdown line is pulled down to ZERO and the transmitter RF PWR OFF LED will also light RED indicating that the transmitter has been shutdown at the driver level. This condition will automatically reset when the problem is corrected. CHECK THE ANTENNA FOR POSSIBLE FAULTS.
- 2. **RF PWR OFF** light is RED. This will occur anytime the "SHUTDOWN LINE" is pulled to ZERO. This control line is pulled to ZERO with any of the following faults:
 - a. ANT VSWR HIGH
 - b. PA INHIBIT SWITCH IN THE INHIBIT MODE

NOTICE: ONLY THE PA INHIBIT SWITCH OR THE ANT VSWR HIGH WILL SHUTDOWN THE TRANSMITTER DRIVE CAUSING THE RF OUTPUT TO FALL TO NEAR ZERO.

- 3. **PA1 THROUGH PA5 LEDs RED** would indicate that the PA Pallet current level has fallen below the set point and could indicate a transistor failure. The normal current with the "inhibit" switch activated is 500 ma.
- C. **RR6000 POWER SUPPLY MODULES**: The Power Supply module has two warning lights located on the front panel. Normally these lights are GREEN indicating that the AC Line voltage and the Over Voltage circuits are within their normal range. Should either one go out of range, the lights will turn RED and the power supply module will shutdown. This will reduce the available power to the RF Stages and could result in lower RF Output Power from the transmitter. If this happens, turn off the transmitter for about 1 minute and then turn it back on. If this warning continues, the module should be removed from the rack and returned for service and a spare module should be installed to maintain normal operations.

NOTICE: Normally removing one power supply module will result in a reduction of output power if the spare module is not installed. To continue operating the transmitter the RF Drive level will have to be reduced to a level where the working supply can carry the load of two PA Assemblies. Reduce the RF drive level to a point where the power supply voltage meter is reading approximately 31 VDC. If the RF drive level is too high, this will cause the power supply to go into current limit and the voltage reading will drop. The RF Output power of the transmitter will be reduced

by 3 to 4 dB.

X — WARRANTY

The WARRANTY provided by Pineapple Technology, Inc. (PTI) on this transmitter is detailed below. It should be noted that some of the equipment sub-systems have warranty coverage by the original manufacture that differs from the standard warranty provided by PTI Warranty details on equipment falling into this category may be found in the Manufactures instruction manual provided with the transmitter. In all cases, replacement units of this equipment are normally in stock at PTI for quick turn service support to our customers during the PTI Standard Warranty period.

STANDARD WARRANTY

Seller warrants that each Product sold by it is free of defects in materials and workmanship. Seller's obligation under said warranty continues for a period of one (1) year from date of shipment. Repairs or replacement of defective parts shall be the sole and exclusive remedy under warranty, at Seller option, provided that Seller may, as an alternative, elect to refund an equitable portion of the purchase price of the product. THIS WARRANTY IS EXPRESSLY IN LIEU OF AND EXCLUDES ALL OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE, USE, OR APPLICATION, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF THE SELLER, UNLESS SUCH OTHER WARRANTIES, OBLIGATIONS OR LIABILITIES ARE EXPRESSLY AGREED TO IN WRITING BY SELLER.

WARRANTY REPLACEMENT AND REPAIRS

All claims under warranty must be made promptly after occurrence of circumstances giving rise to thereto and must be received with in the applicable warranty period by seller or its authorized representative. Such claims must be documented on a PTI *Field Failure Report with a full description of the circumstances giving rise to the claim. Before any products are returned for repair and/or adjustment, written authorization form seller or its authorized representative for the return and instructions as to how and where these products should be shipped must be obtained — This is to include a Return Authorization (RA) number provided by the seller or authorized representative, this must accompany ALL returns. Any product returned to seller for the examination shall be sent prepaid via the means of transportation indicated as acceptable by seller. Seller reserves the right to reject any warranty claim not promptly reported and any claim on any item that has been altered, i.e. circuit modifications, components removed, or has been shipped by non acceptable means of transportation. When a product has been returned for examination and inspection, or for any other reason, customer shall be responsible for all damage resulting from improper packaging or handling, and for loss in transit, notwithstanding any defect or nonconformity in the product. In all cases the seller has sole responsibility for determining the cause and nature of the failure, and the Seller's determination with regard thereto shall be final. If it is found that Seller's Product has been returned without cause and is still serviceable, customer will be notified and the Product returned at its expense, in addition, a charge for testing and examination may, in Sellers sole discretion be made on Products so returned.

*A Field Failure Report is included at the end of this manual — Additional Field Failure Reports can be obtained by calling

Pineapple Technology, Inc. at (916) 315-8338 or you may download one from our web site at www.ptibroadcast.com in the Warranty section.

XI — EXTENDED WARRANTY (OPTIONAL)

Pineapple Technology, Inc. transmitters come with the option of extending the standard warranty for up to 5 years. To exercise this option, the purchaser must buy and pay for the option at the time the transmitter is purchased. The cost of the EXTENDED WARRANTY OPTION is in accordance with the following schedule:

1st year	NO CHARGE
2nd year	10% of transmitter purchase price
3rd year	10% of transmitter purchase price
4th year	10% of transmitter purchase price
5th year	10% of transmitter purchase price

A five year EXTENDED WARRANTY would cost 40% of the original selling price of the transmitter. The purchaser may exercise all or part of the EXTENDED WARRANTY as needed.