

Using an iPod (iPod)

④ Selects a song to play

Scrolling the keys up or down displays songs, and tapping a song starts playback.


Tapping the lower key during shuffle playback skips to the next song. Tapping the upper key once skip to the start of the current song. Tapping it again will skip to the previous song. When the song with chapters played, chapter can be skipped back and forward.

⑤ Displays the genre list

⑥ Displays the top category menu

Touching the key displays the top category for song playback.

Displays the previous selected list

If you select the song from the list to play after touching , touching the key displays the previous list.

⑦ Recalls equalizer curves

➔ For details, refer to *Using the equalizer* on page 172.

⑧ Displays the “Function” menu

➔ For details, refer to *Using the “Function” menu* on page 124.

⑨ Playback and Pause

Touching  switches between playback and pause.

⑩ Displays the song list

⑪ Displays the album list

⑫ Displays the artist list

⑬ Switches the operation screen

Tapping this key displays the touch panel key (**[Video]** or **[Music]**) to switch between the screen to operate video files and the screen to operate music files.

 
➔ For details of the operation, refer to *Starting the video playback* on the next page.

❑ This touch panel key is available only when there are both audio and video file in your iPod.

❑ If iPod fifth generation is connected, the following settings are automatically changed when the operation screen is switched to the screen to operate video files.

- “Repeat” is set to “All”.
- “Shuffle” is set to “Off”.

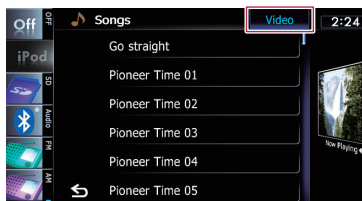

- ❑ Touching **[Video]** or **[Music]** on the list screens enables you to perform the equivalent operation.





Displays the top category menu

 



 
Touching the key displays the top category menu for song or video playback.

⑭ Skips back or forward to another video

Touching  skips to the start of the next video. Touching  once skips to the start of the current video. Touching again will skip to the previous video. When the video with chapters played, chapter can be skipped back and forward.

Fast reverse or forward

Touch and hold  or  to fast reverse or fast forward.

If you touch and hold  or  for five seconds, fast reverse/fast forward continues even if you release either of these keys. To resume playback at a desired point, touch ,  or .

- ❑ You can also perform these operations by using the **TRK** button.


 
⑮ Hides the touch panel keys and information of the current video

Touching **[Hide]** shows only the current video. To display the touch panel keys and information of the current video, touch the screen.

⑯ Displays the top category menu for video

Touching the key displays the top category for video playback.

Displays the previous selected list

 
If you select the video from the list to play after touching , touching the key displays the previous list. 

Starting the video playback

This navigation system can play video if an iPod with video capabilities is connected.


1 Touch [iPod] on the left edge of the screen to display the touch panel key to switch to a video source.

2 Tap [Music].

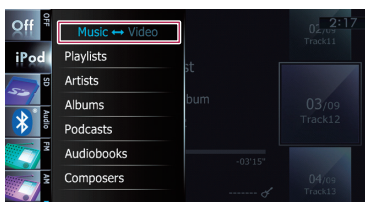

A list of videos by category appears.

 3 Tap one of the categories in that contains the video you want to play.

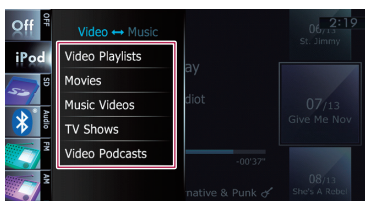

4 Tap your desired item on the list to narrow down them until the video list appears.

➔ For details, refer to *Narrowing down a song or video with the list* on this page.

5 On the video list, tap the video you want to play.

Video playback will start.

6 Touch the screen to display the touch panel keys.


➔ For details of the operation, refer to *Using the touch panel keys* on page 120. ■

 
Narrowing down a song or video with the list

Tapping an item on list allows you to search for a song or video and play it in your iPod.


1 Display a list screen.

- ➔ For details, refer to *Displays the genre list* on the previous page.
- ➔ For details, refer to *Displays the song list* on the previous page.
- ➔ For details, refer to *Displays the album list* on the previous page.
- ➔ For details, refer to *Displays the artist list* on the previous page.

■ Touch  to display the top category menu screen, and then tap the category you want.

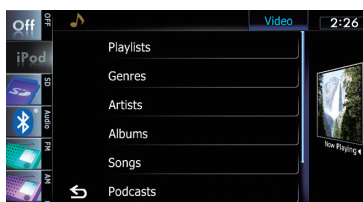

 2 Scroll by dragging tabs up or down to display the character that you want to refine.

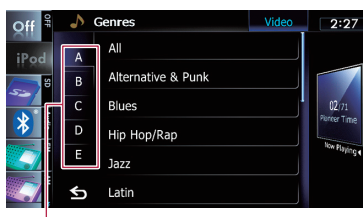

Alphabet tabs

3 Tap the tab to select the character and display the page which includes applicable options.

- An article listed below and space at the beginning of the artist name will be ignored and the next character will be taken into account for searching.
 - "A" or "a"

Using an iPod (iPod)



- "AN", "An", or "an"
- "THE", "The", or "the"

4 Scroll by dragging items up or down, and display the item you want to select.

Refine the item until the song title (episode) is displayed on the list.

- ❑ Tapping **[All]** on the list includes all options in the current list. For example, if you tap **[All]** after tapping **[Artists]**, you can proceed to the next screen with all artists in the list selected.
- ❑ After you select **Artists, Albums, or Genres**, go on to tap one of the list to start playing the first song in the selected list and display the next hierarchy.


5 On the song (episode) or video list, tap the song (episode) or video you want to play.

- ❑ After you select the song (episode) or video using this function, touching  displays the list previously selected. 

Operating the functions from your iPod

You can control the functions by using iPod itself while iPod is connected to the navigation system. Sound can be heard from the car's speakers, and operation can be conducted from your iPod.

Even if "**Change Control Mode**" is set to "**iPod**", following functions are available from this navigation system.

 
- Playback and Pause
 - Fast reverse or forward
 - Skip forward or backward
 - Adjusting the volume
- For details, refer to **Sets iPod control mode** on page 125. 

Playing MusicSphere

You can play playlists created with the PC application (**MusicSphere**) using an exciting graphic interface.


- ❑ PC application (**MusicSphere**) will be available on our website.

Reading the screen

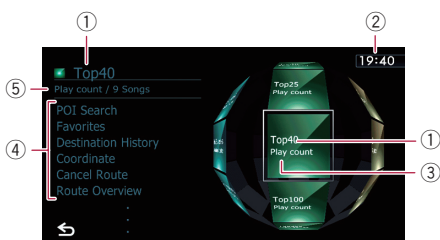

- 1 Playlist name indicator**
Shows the name of the playlist currently selected.
- 2 Current time**
- 3 Category name**
Shows the category name in the playlist.
- 4 Song title indicator**
Shows six songs including the first song played after selecting the playlist.
- 5 Category name and total number of songs**
Shows the category name and the total number of playable songs in the playlist currently selected.

 Using the touch panel keys

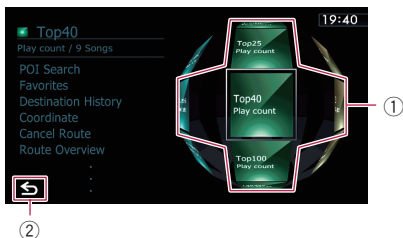

- 1 Plays the playlist**

 
Tapping a key moves the playlist to the center of the screen, and tapping the center key starts playback.

- ❑ To change the playlist to be displayed, rotate the sphere by dragging the keys up, down, left, or right.
- 2 Switches to the AV operation screen**

Using the "Function" menu

- ❑ If "Change Control Mode" is set to "iPod", only the setting of "Change Control Mode" is available.

- **Touch on the "iPod" screen.**
The "Function" menu appears.

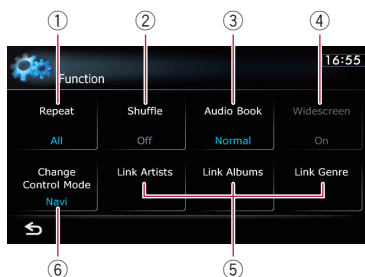

- 1 Sets repeat play**
There are two repeat play types for playback.
Each touch of [Repeat] changes the setting as follows:
 - **All:** Repeats all songs in the selected list.
 - **One:** Repeats just the current song.
- 2 Sets the shuffle play for music**
This function shuffles songs or albums and plays them in random order.
Each touch of [Shuffle] changes the setting as follows:
 - **Off:** Does not shuffle.
 - **Songs:** Plays back songs in random order within the selected list.
 - **Albums:** Selects an album randomly, and then plays back all songs in that album in order.

Using an iPod (iPod)

③ Sets the audiobook play speed

While listening to an audiobook on iPod, playback speed can be changed.

Each touch of [**Audio Book**] changes the setting as follows:

- **Normal:** Playback in normal speed
- **Faster:** Playback faster than normal speed
- **Slower:** Playback slower than normal speed

④ Plays video in wide screen mode

If the video is compatible with wide screen format, set "**Widescreen**" to "**On**" in order to view the video image in the wide screen.

Each touch of [**Widescreen**] changes the setting as follows:

- **On:** Outputs the wide-screen video from iPod.
 - **Off:** Outputs the normal-sized video from iPod.
- Display size is changed after you change "**Widescreen**" setting and select the video to play.
- This setting is available only during the video operation.

⑤ Plays songs related to the currently playing song

You can play songs related to the currently playing song, using of the following lists.

- **Link Artists:** Songs related to the currently playing artist will be played in the album order.
- **Link Albums:** Songs related to the currently playing album will be played.
- **Link Genre:** Songs related to the currently playing genre will be played in the artist order.

⑥ Sets iPod control mode

While the control mode is set to "**iPod**", you can operate iPod function from the connected iPod.

Each touch of [**Change Control Mode**] changes the setting as follows:

- **Navi:** Allows you to control the iPod functions from the navigation system.
- **iPod:** Allows you to control the iPod functions from the connected iPod.

IMPORTANT:

Requirements to access the Pandora music service using the Pioneer navigation system:

- Apple iPhone (first generation), iPhone 3G, or iPhone 3GS, with firmware version 3.0 or later.
- Latest version of the Pandora application for the iPhone, downloaded to your device. (Search Apple iTunes App Store for “Pandora”).
- Current Pandora account (Free account and paid accounts available from Pandora; create a free account online at <http://www.pandora.com/register> or through the Pandora application for the iPhone).
- iPhone Data Plan.

Note: if the Data Plan for your iPhone does not provide for unlimited data usage, *additional charges from AT&T may apply* for accessing the Pandora service via AT&T’s 3G and/or EDGE networks.
- Connection to the Internet via 3G, EDGE or WiFi network.
- Optional Pioneer adapter cable connecting your iPhone to the Pioneer navigation system.

Limitations:

- Access to the Pandora service will depend on the availability of a cellular and/or WiFi network for purposes of allowing your iPhone to connect to the Internet.
- Pandora’s service is currently only available in the U.S.
- Ability of the Pioneer navigation system to access the Pandora service is subject to change without notice and could be affected by any of the following: compatibility issues with future firmware versions of iPhones; compatibility issues with future firmware versions of the Pandora application for the iPhone; changes to the Pandora music service by Pandora; discontinuation of the Pandora music service by Pandora.
- Certain functionality of the Pandora service is not available when accessing the service through the Pioneer navigation system, including, but not limited to, creating new stations, deleting stations, emailing current

stations, buying songs from iTunes, viewing additional text information, logging in to Pandora, and adjusting Cell Network Audio Quality.

Pandora Internet radio is a music service not affiliated with Pioneer. More information is available at <http://www.pandora.com>.

Pandora is a registered trademark of Pandora Media, Inc.

You can play the Pandora by connecting your iPod which was installed the Pandora application.

Starting procedure**1 Display the AV operation screen.**

- For details of the operations, refer to *Displaying the AV operation screen* on page 77.

2 Connect your iPod.

 
The source changes and then playback will start.

- For details, refer to *Connecting your iPod* on page 19.
- ☐ If the iPod is already connected, tap **[Pandora]** on the left edge of the screen.
- For details of the operations, refer to *Displaying the AV operation screen* on page 77.
- ☐ When an iPod is connected to the navigation system while the Pandora application is running, the “Pandora” screen appears after the “iPod” screen. Music may also be played back in the “iPod” screen.

3 Start up the Pandora application installed on the iPod.**4 Tap [Pandora] on the left end of the screen to display “Pandora” screen.****5 Use the touch panel keys on the screen to control the Pandora.**

- For details, refer to *Using the touch panel keys* on page 128. ■

Reading the screen

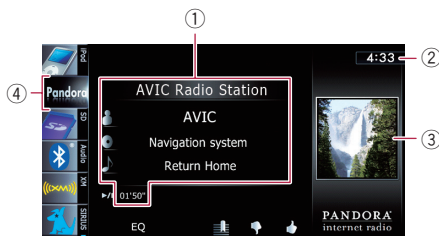

① Current song information

- **Station name indicator**
Shows the Pandora station name the tuner is currently tuned in.
- **🎤: Artist name**
Shows the artist name currently playing.
- **📀: Album title**
Shows the title of the album for the current song.
- **🎵: Song title**
Shows the title of the current song.
- **Play time indicator**
Shows the elapsed playing time within the current song.
- ☐ "-----" is displayed if there is no corresponding information.

② Current time

 
③ Album artwork

Album art of the current song is displayed if it is available.

④ Source icon


Shows which source has been selected. ☐

Using the touch panel keys

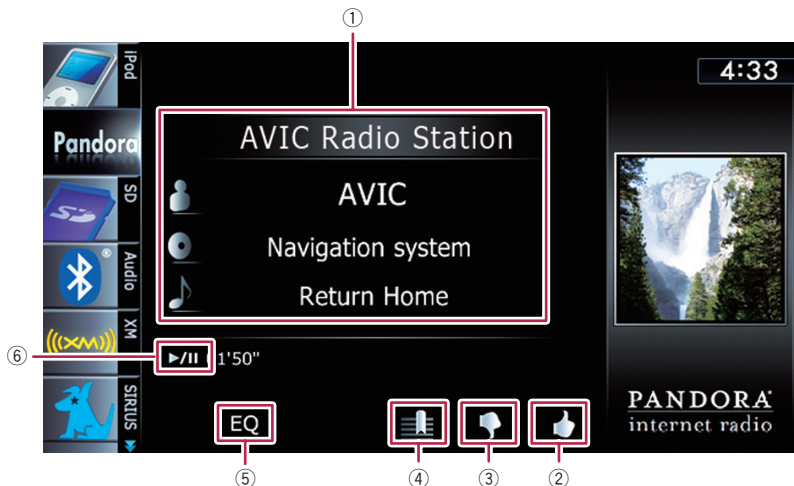

① Selects a Pandora station from the list

 Touching the key displays the list of your Pandora stations to select one of them to play.

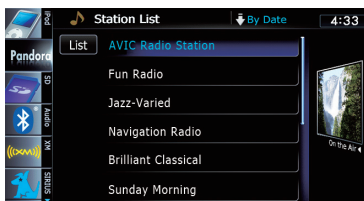

➔ For details, refer to *Operating list screens* (e.g. *iPod list screen*) on page 77.

Scroll by dragging items up or down, and display the item you want to select.

☐ Touching [QuickMix] plays only one song at a time from shuffled several stations.

☐ Each time you touch [List] changes the sort order.

Current order is indicated on the upper right of the screen.

- **By A-Z**:

You can sort the items in the list alphabetically.

- **By Date**:

You can sort the items in the list in order of dates the items were created.

② Thumbs Up

Touching the key gives "Thumbs Up" to the song currently playing.

③ Thumbs Down

Touching the key gives "Thumbs Down" to the song currently playing and skip to the next song.

④ Bookmark

Touching the key displays the screen which lets you select the artist or song to add bookmarks.

⑤ Recalls equalizer curves

➔ For details, refer to *Using the equalizer* on page 172.

⑥ Playback and Pause

Touching [▶/⏸] switches between playback and pause. ■

Using the Bluetooth audio player

You can control the Bluetooth audio player featuring Bluetooth wireless technology.

- ❑ Before using the Bluetooth audio player, you need to register and connect the device to this navigation system.
 - ➔ For details, refer to *Registering your Bluetooth devices* on page 63.
- ❑ Depending on the Bluetooth audio player connected to this navigation system, the available operations with this navigation system are limited to the following two levels:
 - A2DP profile (Advanced Audio Distribution Profile): Only playing back songs on your audio player is possible.
 - A2DP profile and AVRCP profile (Audio/Video Remote Control Profile): Playing back, pausing, selecting songs, etc., are possible.
- ❑ Since there are a number of Bluetooth audio players available on the market, operations with your Bluetooth audio player using this navigation system vary greatly in range. Please refer to the instruction manual that came with your Bluetooth audio player as well as this manual while operating your player on this navigation system.
- ❑ While you are listening to songs on your Bluetooth audio player, please refrain from operating your cellular phone as much as possible. If you try operating on your cellular phone, the signal from your cellular phone may cause a noise on the song playback.
- ❑ Even if you switch to another source while listening to a song on your Bluetooth audio player, the playback of song continues to elapse.
- ❑ Depending on the Bluetooth audio player you connected to this navigation system, operations on this navigation system to control the player may differ from those explained in this manual.
- ❑ When you are talking on a cellular phone connected to this unit via Bluetooth wireless technology, song playback from your

Bluetooth audio player connected to this unit is paused.

Starting procedure

1 Display the AV operation screen.

 
- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 77.

2 Tap [Audio] on the left edge of the screen to display the "Audio" screen.

3 Use the touch panel keys on the screen to control the Bluetooth audio player.

- ➔ For details, refer to *Using the touch panel keys* on page 131. 

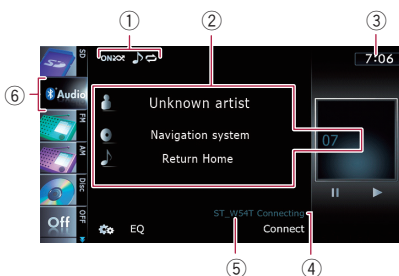

Reading the screen






① Playback condition indicator

Indicates the current playback condition if the connected Bluetooth audio player features AVRCP 1.3.

- Playing files in random order




Indicator:	Meaning
	Does not play files in random order.
	Plays all audio files in the current repeat play range in random order.

- Setting a repeat play range

Indicator:	Meaning
	Does not repeat.
	Repeats just the current file.
	Repeats all audio files in the Bluetooth audio player.

② Current file information

If the connected Bluetooth audio player features AVRCP 1.3, the following file information will be displayed.

-  **Artist name**
Shows the artist name currently playing (when available).
 -  **Album title**
Shows the title of the album for the current file (when available).
 -  **Track title**
Shows the title of the track currently playing (when available).
 - **Play time indicator**
Shows the elapsed playing time within the current file.
 - **File number indicator**
Shows the file number currently playing (when available).
- In the following cases, file information will only be displayed after a file starts or resumes playing:
- You connect the Bluetooth audio player compatible with AVRCP1.3, and operate the player to start playing.
 - You select another file when playback is paused.

③ Current time

④ Connection status indicator

Shows whether the device featuring Bluetooth technology is connected or not.

 
⑤ Device name indicator

⑥ Source icon

Shows which source has been selected.

Using the Bluetooth audio player

Using the touch panel keys

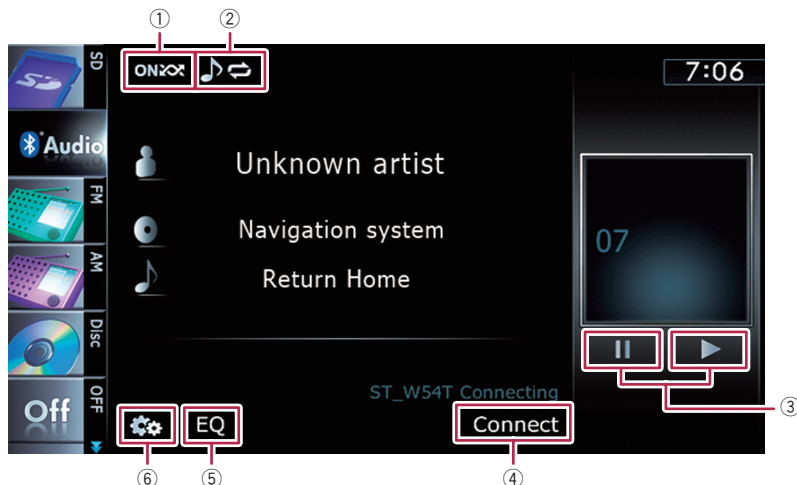

- ① **Plays files in random order**
All of the files within the repeat play range can be played at random by touching only one key.
 - ❑ This function is available only when the connected Bluetooth audio player features AVRCP 1.3.
 - ➡ For details, refer to **Plays files in random order** on the next page.
- ② **Sets a repeat play range**
The repeat play range can be changed by touching only one key.
 - ❑ This function is available only when the connected Bluetooth audio player features AVRCP 1.3.
 - ➡ For details, refer to **Changes the repeat range** on this page.
- ③ **Playback and Pause**
Touching [▶] or [⏸] switches between playback and pause.
- ④ **Connects the Bluetooth audio player**
Touching [Connect] displays the connection standby screen and the navigation system waits for the Bluetooth wireless connection request.
- ⑤ **Recalls equalizer curves**

 
➡ For details, refer to *Using the equalizer* on page 172.

- ⑥ **Displays the “Function” menu**
 - ➡ For details, refer to *Using the “Function” menu* on this page. ❑

Using the “Function” menu

- ❑ This menu is available only when the connected Bluetooth audio player features AVRCP 1.3.

- Touch  on the “Audio” screen. The “Function” menu appears.

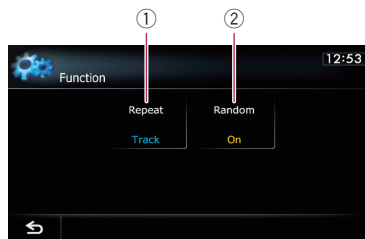

- ① **Changes the repeat range**

Each touch of [**Repeat**] changes the setting as follows:

- **All Repeat:** Repeats all audio files in the Bluetooth audio player.
 - **Track Repeat:** Repeats just the current file.
 - **Off:** Does not repeat.
- If you skip the file forward or backward when the repeat play range in "**Track Repeat**", the repeat play range changes to "**All Repeat**".

② **Plays files in random order**

Random play lets you playback files in random order within the current repeat range.

Each touch of [**Random**] turns it on or off.

Using the XM tuner

You can use the navigation system to control an XM satellite digital tuner, which is sold separately.

For details concerning operation, refer to the XM tuner's operation manuals. This section provides information on XM operations with the navigation system which differs from that described in the XM tuner's operation manual.

The following XM satellite digital tuner units cannot be connected:
GEX-P900XM, GEX-P910XM

Starting procedure

1 Display the AV operation screen.

- ➡ For details of the operations, refer to *Displaying the AV operation screen* on page 77.

 
2 Tap [XM] on the left edge of the screen to display the "XM" screen.

3 Use the touch panel keys on the screen to control the XM tuner.


- ➡ For details, refer to *Using the touch panel keys* on page 135. ■

Reading the screen

All CH Mode

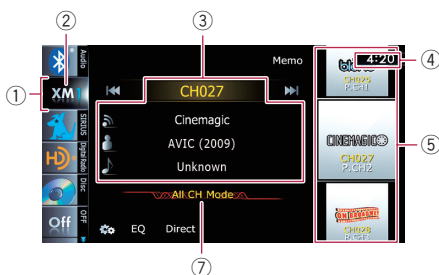

Category Mode

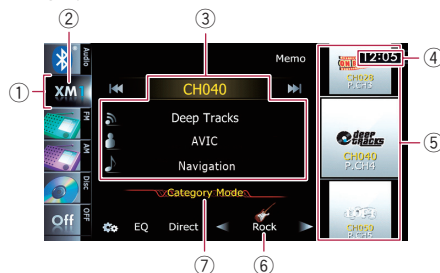 

About the logo for channel name

Only the logo data that is contained in the navigation system can be displayed for each channel. The logo of a newly established channel that is not contained cannot be displayed. When a logo is not available, the following substitute icon is displayed.

Substitute icon



- ❑ The icon of each broadcast station is contained in the NAND flash memory based on the data provided by XM Satellite Radio as of September 2009.
- ❑ Any changes made by XM Satellite Radio in the lineup or icon of the broadcast station in the future may not be supported by the navigation system, and may cause the unit to display incorrect icons.

① Source icon

Shows which source has been selected.

② XM band indicator

Shows the XM band that has been selected.

③ Current XM station information

Shows the detailed information of the broadcast channel currently being received.

- **XM channel number**


Shows the XM channel number the tuner is currently tuned to.

- **XM station name**

Shows the XM broadcast station name the tuner is currently tuned in.

- **Artist (performer) name**

Shows the artist (performer) name currently playing (when available).

-  **Song title (program name)**

Shows the title of the current song (program).

- "-----" is displayed if there is no corresponding information.

④ **Current time**

⑤ **XM station information**

- **XM station name logo**
- **XM channel number**
- **Preset number**

Shows what preset item has been selected.

⑥ **XM channel category**

Shows the category of broadcast channel.

⑦ **XM channel select mode indicator**

 
Shows what channel select mode has been selected. You can select a channel from all channels in **All CH Mode**, and select a channel from selected category in

Category Mode. 


Using the XM tuner

Using the touch panel keys

All CH Mode

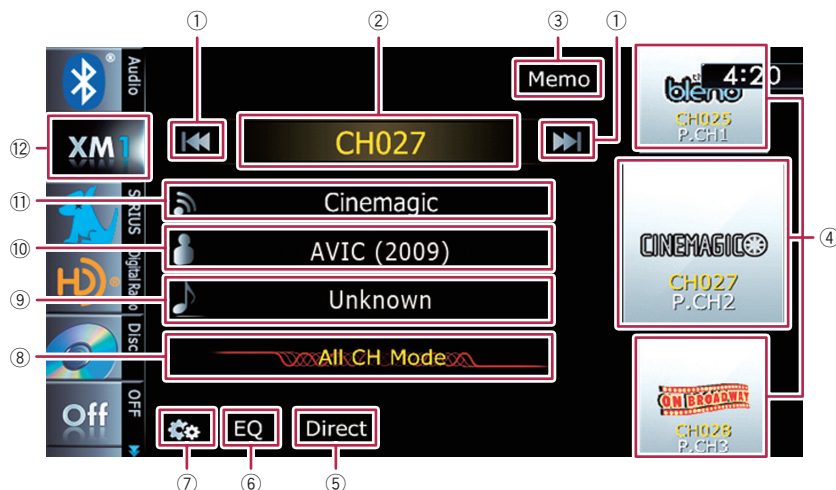

Category Mode

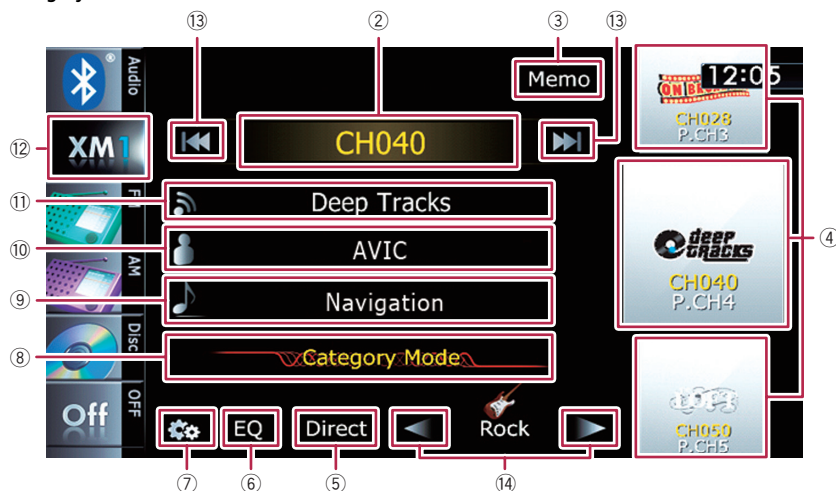 

- ① **Performs manual tuning**
The channels move up or down one at a time.
□ If you keep touching [◀◀] or [▶▶] you can skip the broadcasting channels.
- ② **Switches between the AV operation screen and the preset list display**

You can switch the screen display according to your preference.

➡ For details of the operation, refer to **Switching between the AV operation screen and the list screen** on page 77.

- ③ **Memorizes the current song**

Using the XM tuner

- For details, refer to *Memorizing the song* on the next page.
- ④ **Recalls channels from the preset**
Once you have stored broadcast channels, you can easily recall preset channels from memory with a tap of a key.
 - For details, refer to *Storing and recalling broadcast stations* on this page.
- ⑤ **Selects an XM channel directly**
➤ For details, refer to *Selecting an XM channel directly* on this page.
- ⑥ **Recalls equalizer curves**
➤ For details, refer to *Using the equalizer* on page 172.
- ⑦ **Displays the “Function” menu**
➤ For details, refer to *Using the “Function” menu* on page 138.
- ⑧ **Switches the XM channel select mode**
You can switch the mode between the two methods for selecting and listing the channel.
All CH Mode:
You can select a channel from all channels when you operate this function.
Category Mode:
You can select a channel within a selected category that you operate this function.
- ⑨ **Switches to the list display of song titles**
➤ For details, refer to *Selecting a channel from the list* on the next page.
- ⑩ **Switches to the list display of artist names**
➤ For details, refer to *Selecting a channel from the list* on the next page.
- ⑪ **Switches to the list display of XM station names**
➤ For details, refer to *Selecting a channel from the list* on the next page.
- ⑫ **Selects an XM band**
Tapping the key repeatedly switches between the following XM bands: **XM 1**, **XM 2**, or **XM 3**.
 This function is convenient for preparing different preset lists for each band.
- ⑬ **Performs manual tuning**
The channels move up or down one at a time within a selected category.

If you keep touching [**◀◀**] or [**▶▶**] you can skip the broadcasting channels.

⑭ Switches the channel category

Touch [**◀**] or [**▶**] to select the desired category.

Selecting an XM channel directly

You can select an XM channel directly by entering the desired channel number.

1 Touch [Direct].

2 Touch [0] to [9] to input the desired channel number.

To cancel the input numbers one by one, touch **⏪**. Touching and holding **⏪** allows you to delete all input numbers.

3 While the input number is displayed, touch [Enter].

The XM channel that was entered is selected.

4 Touch **⏪**.

You return to the previous display.

Displaying the Radio ID

If you select CH: 000, the Radio ID is displayed.

1 Touch [Direct].

2 Input [000] and then touch [Enter].

If you select another channel, display of the Radio ID is canceled.

3 Touch **⏪**.

You return to the previous display.

4 Wait until the Radio ID is displayed.

Storing and recalling broadcast stations

With a tap of any of the preset tuning keys (“P1” to “P6”), you can easily store up to six broadcast channels for later recall (also with the tap of a key).

Using the XM tuner

1 Select the channel that you want to store in memory.

2 Display the preset channel list.

- For details, refer to **Switches between the AV operation screen and the preset list display** on page 135.

3 Keep touching a preset tuning key [P1] to [P6].

The selected station has been stored in memory.

The next time you tap the same preset tuning key "P1" to "P6", the station is recalled from memory.

- Up to 18 stations, six for each of three XM bands can be stored in memory.

Selecting a channel from the list

The list content can be switched so you can search for the song you want to listen to not only by the channel name but also by the artist name or song title.

- The channel list shows all channels during **All CH Mode**, and the channels included in the selected category during **Category Mode**.

1 Display a list screen.

- For details, refer to **Switches to the list display of song titles** on the previous page.
- For details, refer to **Switches to the list display of artist names** on the previous page.
- For details, refer to **Switches to the list display of XM station names** on the previous page.

2 Touch [List].

XM channel list appears in the display. Each touch of [List] changes the screen as follows:

CH Name List (Channel name) —

Song Title List (Song title) —

Artist Name List (Artist name)

3 Tap the desired channel that you want to listen to.



- For details, refer to *Operating list screens (e.g. iPod list screen)* on page 77.
- During **Category Mode**, touch [◀] or [▶] to switch to another category.

Using "My Mix" function

"My Mix" function memorizes the song title and artist name of the song currently being received. When the song that matches the memorized song title and artist name is being broadcast on a station other than the one you are listening to, you will be alerted, and you can switch the station to listen to that song.

- A track itself is NOT downloaded. ONLY the song title and the artist name are memorized.

Memorizing the song

The song title and artist name of the song you are listening to can be memorized to "My Mix".

● Touch and hold [Memo].

The song title and artist name of current song you are listening to are memorized, and a confirmation message appears.

- The song title and artist name of up to 12 songs can be memorized. Trying to save more than 12 songs will result in older ones being overwritten.
- You cannot memorize the song title or the artist name when "-----" is displayed on the title information.
- This function is invalid for the channel "000".

Using the XM tuner


- ❑ The memorized title may not be displayed correctly depending on the conditions.
- ❑ You can customize the setting for the memorized songs later.
 - ➔ For more details concerning the operation, refer to *Setting the memorized songs* on this page.

When the memorized song is broadcast

 
A beep sounds, and a message is displayed. Touch **[Yes]** to switch to that station and listen to that track.

- ❑ If the memorized song is not checked or when **[Off]** is selected on **[Alert]** on **"Memo Edit"** screen, no alert will be provided.
 - ➔ Refer to *Setting the memorized songs* on this page.
- ❑ Notification may not be provided depending on the status of the navigation system.
- ❑ If there is even a slight difference between the memorized title and the title of the song being broadcast, no notification will be provided even though they are the same song. ❑

Using the "Function" menu

- Touch  on the "XM" screen.

The "Function" menu appears.

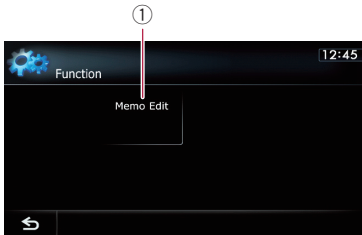

- ① Sets the memorized songs

Setting the memorized songs

Selecting the songs to alert

The list of song titles memorized for the MyMix Function (MyMix list) is displayed. You can change the notification setting when the song is broadcast again. You can enable or disable notification for each song.

- 1 Touch **[Memo Edit]**.

- 2 Touch the song title that you want to disable notification for.

The check mark is removed, and the notification setting of the song is deactivated.

Changing the alert setting

You can enable or disable alerts for all items at the same time. This function is useful when you want to turn alerts off temporarily without changing each memorized song.

- 1 Touch **[Memo Edit]**.

- 2 Touch **[Alert]**.

Each touch of **[Alert]** turns it on or off.

Deleting the memorized songs

You can delete each one of the memorized songs from the song title list.

- 1 Touch **[Memo Edit]**.

- 2 Touch and hold the song you want to delete.

- ❑ To delete all songs that are memorized, touch **[Delete All]**.

- 3 Touch **[Yes]**. ❑

Using the SIRIUS tuner

You can use the navigation system to control a Pioneer Sirius Satellite Radio tuner, which is sold separately.

For details concerning operation, refer to the SIRIUS tuner's operation manuals. This section provides information on SIRIUS operations with navigation system which differs from that described in the SIRIUS tuner's operation manual.

- When you use the SiriusConnect universal tuner (sold separately) with this navigation system, Pioneer SIRIUS BUS INTERFACE is required. For details concerning operation, refer to the owner's manual of Pioneer SIRIUS BUS INTERFACE and SiriusConnect universal tuner.

Starting procedure

1 Display the AV operation screen.

- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 77.

 
2 Tap [SIRIUS] on the left edge of the screen to display the "SIRIUS" screen.

3 Use the touch panel keys on the screen to control the SIRIUS tuner.


- ➔ For details, refer to *Using the touch panel keys* on the next page. □

Reading the screen

All CH Mode

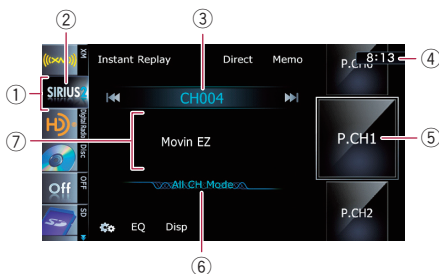

Category Mode

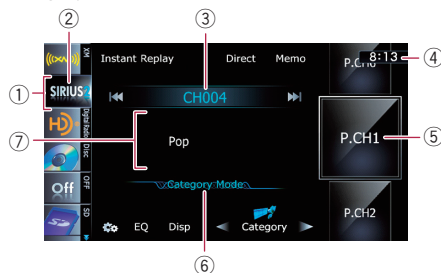 

1 Source icon

Shows which source has been selected.

2 SIRIUS band indicator

Shows the SIRIUS band that has been selected.

3 SIRIUS channel number indicator

Shows the SIRIUS channel number that the tuner is tuned to.

4 Current time

5 Preset number indicator

Shows what preset item has been selected.

6 SIRIUS channel select mode indicator

Shows what channel select mode has been selected. You can select a channel from all channels in **All CH Mode**, and select a channel from the selected category in **Category Mode**.

- ➔ For details concerning operations, refer to **Switches the SIRIUS channel select mode** on page 141.

 
7 Variable information area

Shows various information about the broadcast channel currently being received.


- ➔ For more details about the displayed information, refer to **Switches the SIRIUS display** on page 141. □

Using the touch panel keys

All CH Mode

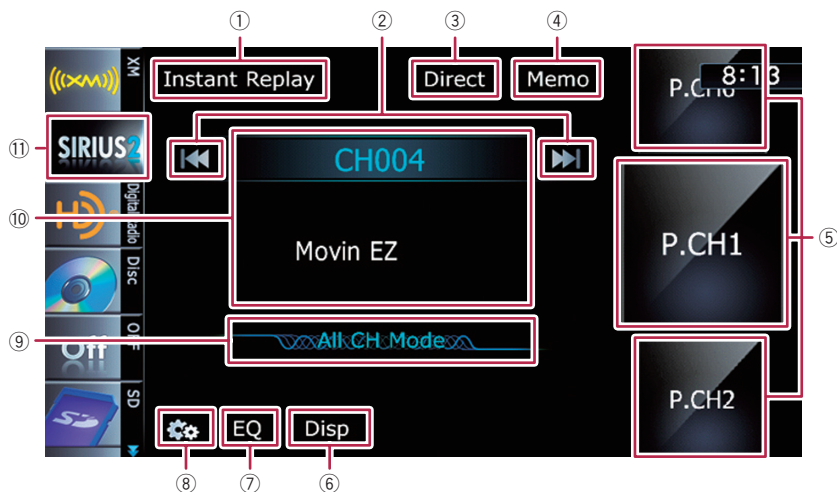

Category Mode

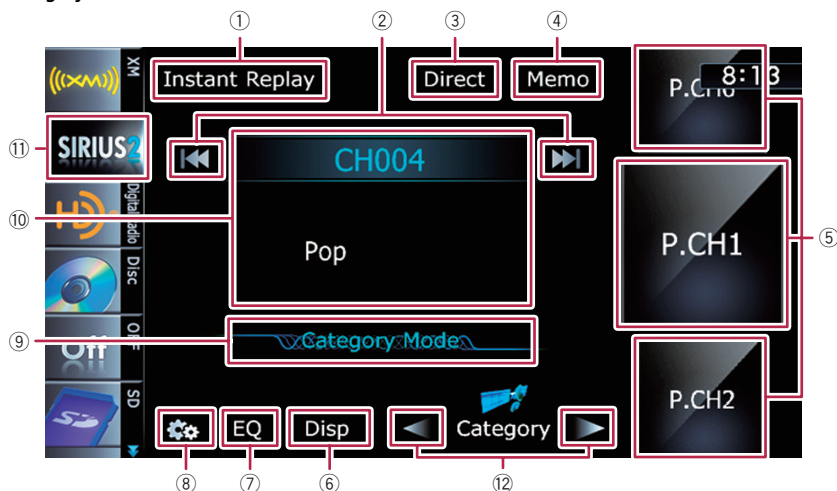 

- ① **Switches the SIRIUS Instant replay mode**
 ➔ For details, refer to *Using the "Instant Replay" function* on page 142.
- ② **Performs manual tuning**
 The channels move up or down one at a time.

- ☐ If you keep touching [◀◀] or [▶▶] you can skip the broadcasting channels.
- ③ **Selects a SIRIUS channel directly**
 ➔ For details, refer to *Selecting a SIRIUS channel directly* on the next page.
- ④ **Memorizes the current song**