

## After the location is decided

### Setting a route to your destination

 
#### 1 Searching for a location.

- For details, refer to Chapter 6.

After searching for the destination, the Location confirmation screen appears.

#### 2 Touch [OK].

##### Location confirmation screen

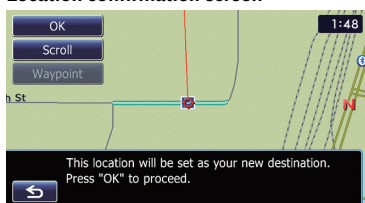

The destination is set, and then route calculation starts.

When the route calculation is completed, Route confirmation screen appears.

- If you press the **MODE** button during route calculation, the calculation is canceled and the map screen appears.

#### ▪ Touch [Scroll].

The map display changes to the scroll mode. You can fine-tune the location in the scroll mode, and then you can set the location as your destination or do various operations.

 
#### ▪ Touch [Waypoint].

The location is added to the **"Waypoints List"** screen.

- If a destination is not set, [Waypoint] is not available.

#### 3 Touch [OK].

##### Route confirmation screen

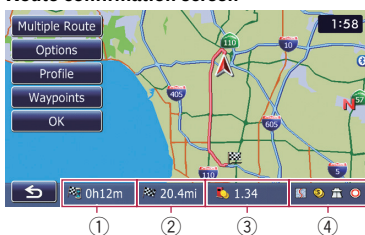

Sets the displayed route as your route, and starts the route guidance.

- ① Travel time to your destination
- ② Distance to the destination
- ③ Estimated fuel cost to your destination
  - For details, refer to *Inputting the fuel consumption information for calculating the fuel cost* on page 150.
- ④ Route calculation condition
  - Touch

The message confirming whether to cancel the calculated route appears.

Touch [Yes] to cancel the calculated route, and then the map screen appears.



#### ① Multiple Route

- For details, refer to *Display multiple routes* on this page.

#### ② Options

- For details, refer to *Modifying the route calculation conditions* on the next page.

#### ③ Profile

- For details, refer to *Checking the current itinerary* on page 43.

#### ④ Waypoints

- For details, refer to *Editing waypoints* on page 44.

### Display multiple routes

You can select a desired route from multiple route options. Calculated routes are shown in different colors.

- If you set waypoints, you cannot display multiple routes.

#### 1 Touch [Multiple Route] on the Route confirmation screen.

Multiple route options appear.

#### 2 Touch 1 to 6.

 
 
Another route is displayed.

#### 3 Touch [OK].

Route confirmation screen appears.

## Displaying the “Route Overview” screen

- 1 Press the HOME button to display the “Top Menu” screen.
- 2 Touch [Destination].  
The “Destination Menu” screen appears.
- 3 Touch [Route Overview].

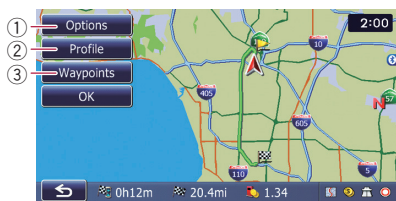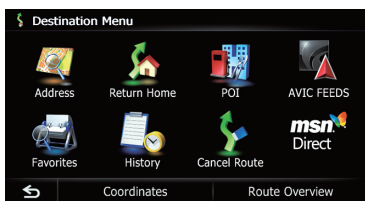

- ① **Options**  
➔ For details, refer to *Modifying the route calculation conditions* on this page.
  - ② **Profile**  
➔ For details, refer to *Checking the current itinerary* on the next page.
  - ③ **Waypoints**  
➔ For details, refer to *Editing waypoints* on page 44.
- [Route Overview] is active only when the route is set.
- 4 Touch [OK].

## Modifying the route calculation conditions

You can modify the conditions for route calculation and recalculate the current route.

- 1 Display the “Route Overview” screen.  
➔ For details, refer to *Displaying the “Route Overview” screen* on this page.
- 2 Touch [Options].
- 3 Touch the desired items to change the route calculation conditions and then touch [OK].



The route is recalculated, and the Route confirmation screen appears.

## Items that users can operate

Settings marked with an asterisk (\*) show that these are default or factory settings.

### Route Condition

This setting controls how the route should be calculated by taking into account the time, distance or main road.

Determines which condition takes priority for route calculation.

#### **Fast\***:

Calculates a route with the shortest travel time to your destination as a priority.

#### **Short:**

Calculates a route with the shortest distance to your destination as a priority.

#### **Main Road:**

Calculate a route that passes major arterial road as a priority.

## Checking and modifying the current route

### Avoid Toll Road

This setting controls whether toll roads (including toll areas) should be taken into account.

#### Off\*:

Calculates a route that may include toll roads (including toll areas).

#### On:

Calculates a route that avoids toll roads (including toll areas).

- The system may calculate a route that includes toll roads even if “On” is selected.

### Avoid Ferry

This setting controls whether ferry crossings should be taken into account.

#### Off\*:

Calculates a route that may include ferries.

#### On:

Calculates a route that avoids ferries.

- The system may calculate a route that includes ferries even if “On” is selected.

### Avoid Freeway

This setting controls whether freeways may be included in the route calculation.

#### Off\*:

Calculates a route that may include freeways.

#### On:

Calculates a route that avoids freeways.

- The system may calculate a route that includes freeways even if “On” is selected.

### Time restrictions

This setting controls whether streets or bridges that have traffic restrictions during a certain time should be taken into account.

- If you want to set your route to avoid raised draw bridges, select “On”.

#### On\*:

Calculates a route while avoiding streets or bridges with traffic restrictions during a certain time.

#### Off:

Calculates a route while ignoring traffic restrictions.

- The system may calculate a route that includes streets or bridges that are subject to traffic restrictions during a certain time even if “On” is selected.

### CAUTION

If the time difference is not set correctly, the navigation system cannot consider traffic regulations correctly. Set the time difference correctly (➔). Refer to *Setting the time difference* on page 162.

### Learning Route

The system learns the travel history of your vehicle for each road.

This setting controls whether or not the travel history should be taken into account.

#### On\*:

Calculates a route with the travel history taken into account.

#### Off:

Calculates a route without the travel history taken into account.

#### Clear:

Clears the current travel history.

## Checking the current itinerary

 
You can check the route details.

### 1 Display the “Route Overview” screen.

- ➔ For details, refer to *Displaying the “Route Overview” screen* on the previous page.

### 2 Touch [Profile].

The “Route Profile” screen appears.

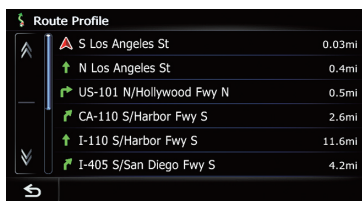

## Editing waypoints

You can edit waypoints (locations you want to visit on the way to your destination) and recalculate the route so that it passes through these locations.

### Adding a waypoint

Up to 5 waypoints can be set, and waypoints and final destination can be sorted automatically or manually.

 
#### 1 Display the “Route Overview” screen.

- ➔ For details, refer to *Displaying the “Route Overview”* screen on page 42.

#### 2 Touch [Waypoints].


The “Waypoints List” screen appears.

#### 3 Touch [Add].

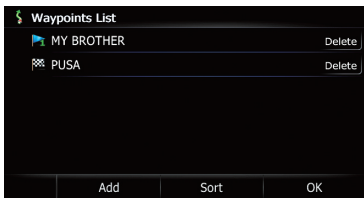

The “Select Search method” screen appears.

#### 4 Search for a location.

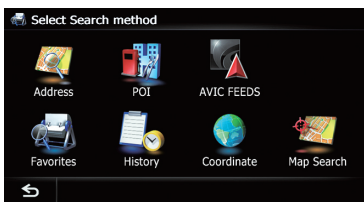 

- ➔ For details, refer to Chapter 6.

#### 5 Touch [OK].



#### 6 Touch [OK] on the “Waypoints List” screen.



The route is recalculated, and the Route confirmation screen appears.

- If you set waypoints, you cannot display multiple routes.

## Deleting a waypoint

You can delete waypoints from the route and then recalculate the route. (You can delete successive waypoints.)

#### 1 Display the “Route Overview” screen.

- ➔ For details, refer to *Displaying the “Route Overview”* screen on page 42.

#### 2 Touch [Waypoints].

The “Waypoints List” screen appears.

#### 3 Touch [Delete] next to the waypoint that you want to delete.

The touched waypoint will be deleted from the list.

#### 4 Touch [OK] on the “Waypoints List” screen.

The route is recalculated, and the Route confirmation screen appears.

#### 5 Touch [OK].

The map of the current position appears.

## Checking and modifying the current route

### Sorting waypoints

You can sort waypoints and recalculate the route.

- ❑ You cannot sort waypoints that you have already passed.

#### 1 Display the “Route Overview” screen.

- For details, refer to *Displaying the “Route Overview” screen* on page 42.

 
#### 2 Touch [Waypoints].

The “Waypoints List” screen appears.

#### 3 Touch [Sort].

The “Sort Waypoints” screen appears.

#### 4 Touch the waypoint or destination.

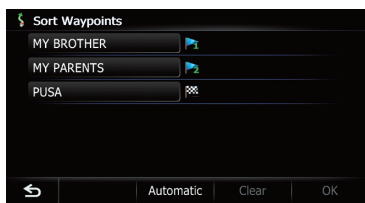

Put them in the desired order.

- Touch [Automatic].

You can sort the destination and waypoints automatically. The system will show the nearest waypoint (distance in a straight line) from the current location as waypoint 1, and sort the other points (including your destination) in order of distance from the waypoint 1.

- Touch [Clear].

Waypoint sort is canceled.

#### 5 Touch [OK].

The “Waypoints List” screen appears.

#### 6 Touch [OK] on the “Waypoints List” screen.

The route is recalculated, and the Route confirmation screen appears.

#### 7 Touch [OK].

The map of the current position appears. ◻

### Canceling the route guidance

If you no longer need to travel to your destination, follow the steps below to cancel the route guidance.

 
#### 1 Display the “Destination Menu” screen.

- For details of the operations, refer to *Screen switching overview* on page 22.

#### 2 Touch [Cancel Route].

A message confirming the cancellation of the current route appears.

#### 3 Touch [Yes].

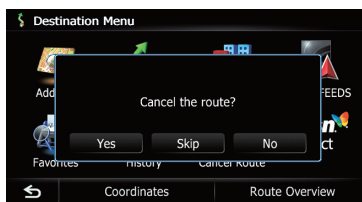

The current route is deleted, and a map of your surroundings reappears.

- Touch [Skip].

The next waypoint along the route is skipped. A new route to your destination through all remaining waypoints, except for the skipped waypoint, is calculated.

When the route calculation is completed, Route confirmation screen appears.

- ❑ [Skip] is available only when a waypoint is set.

- Touch [No].

The previous screen returns without deleting the route. ◻

## Storing a location in “Favorites”

Storing your favorite locations as “Favorites” provides you with the opportunity to save the time and effort of re-entering this information. Stored items can be made available on “Favorites” later.

## Registering a location by “Favorites”

**Favorites** can store up to 400 registered locations. These can include your home location, favorite places, and destinations you have already registered.

- “Favorites” can store up to 400 locations.
- Home location is counted as one of the items in “Favorites”.

### 1 Display the “Destination Menu” screen.

- For details of the operations, refer to *Screen switching overview* on page 22.

### 2 Touch [Favorites].

The “Favorites” screen appears.

### 3 Touch [Add].

The “Select Search method” screen appears.

### 4 Search for a location.

- For details about the search methods, refer to Chapter 6.

### 5 When the map of the location you want to register is displayed, touch [OK].

The location is registered, and then the “Edit Favorite” screen appears.

 
- For details, refer to *Editing the entry in the “Favorites” list* on this page.

### 6 Touch [OK].

The registration is completed.

## Registering a location by scroll mode

1 Touch and drag the screen to scroll the map to the position that you want to register.

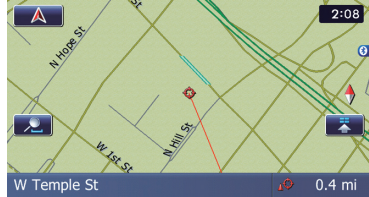

2 Touch  to display the Quick Access menu.

3 Touch .

The location is registered, and then the “Edit Favorite” screen appears.

- For details, refer to *Editing the entry in the “Favorites” list* on this page.

4 Touch [OK].

The registration is completed. 

## Editing registered locations


### Editing the entry in the “Favorites” list

1 Display the “Destination Menu” screen.

- For details of the operations, refer to *Screen switching overview* on page 22.

2 Touch [Favorites].

 
The “Favorites” screen appears.

3 Touch  next to the location that you want to edit.

The “Edit Favorite” screen appears.

## Registering and editing locations

### 4 Touch the item that you want to change the setting.

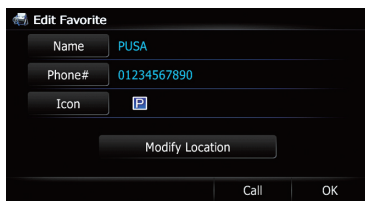

- Up to 17 characters can be input for the name.

- Touch **[Name]**.

You can enter the desired name.

- Touch **[Phone#]**.

You can edit the registered phone number. To dial the number, touch **[Call]**.

The maximum digits you can enter for the phone number is 15.

- Touch **[Icon]**.

You can change the symbol displayed on the map and **"Favorites"**.

- Touch **[Modify Location]**.

You can change the registered location by scrolling the map.

### 5 Touch **[OK]**.

The registration is completed.

## Editing your home

When you have already registered your home, you can edit the information of your home.

### 1 Display the **"Destination Menu"** screen.

- For details of the operations, refer to *Screen switching overview* on page 22.

### 2 Touch **[Favorites]**.

 
- Home location is displayed on the top of the list.

### 3 Touch next to the home location.



The **"Edit Favorite"** screen appears.

### 4 Touch the item that you want to change the setting.

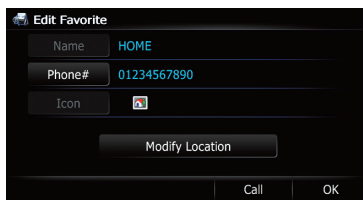

- Touch **[Phone#]**.

To dial the number, touch **[Call]**.

- Touch **[Modify Location]**.

You can change the registered location by scrolling the map.

- For home information, **[Name]** and **[Icon]** are not editable.

### 5 Touch **[OK]**.

The registration is completed.

## Sorting the entry in the **"Favorites"** list

### 1 Display the **"Destination Menu"** screen.

- For details of the operations, refer to *Screen switching overview* on page 22.

### 2 Touch **[Favorites]**.

The **"Favorites"** screen appears.

### 3 Touch **[Sort]**.

Each time you touch **[Sort]** changes the sort order.

- Current order is indicated on the upper right of the screen.

-  :

Sorts the items in the list in order by distance from the vehicle position.

- **ABC**: Sorts the items in the list alphabetically.
- **Recent**: Sorts the items in the list in order of the recently used items.

## Deleting the entry from the “Favorites” list

### 1 Display the “Destination Menu” screen.

- For details of the operations, refer to *Screen switching overview* on page 22.

### 2 Touch [Favorites].

The “Favorites” screen appears.

### 3 Touch [Delete].

### 4 Select the location you want to delete.



A check mark appears next to the selected location.

- Touch **[All]** or **[None]**.

 
Selects or deselects all entries.

### 5 Touch [Delete].



A message will appear asking you to confirm the deletion.

### 6 Touch [Yes].

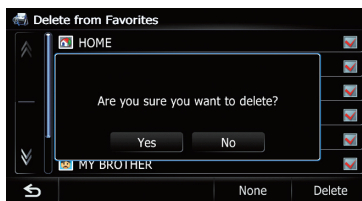

The data you selected is deleted.

- Touch **[No]**.

Cancels the deletion.

## Exporting and importing “Favorites” items

### Exporting “Favorites” items

Exporting the “Favorites” data to an SD memory card for editing is possible by using the utility program AVIC FEEDS which is available separately, on your PC.

- If there is previous data in the SD memory card, the data is overwritten with new data when current data is exported.

### 1 Insert an SD memory card into the SD card slot.

- For details of the operation, refer to *Inserting and ejecting an SD memory card* on page 15.

### 2 Display the “Destination Menu” screen.

- For details of the operations, refer to *Screen switching overview* on page 22.

### 3 Touch [Favorites].

The “Favorites” screen appears.

 
### 4 Touch .

Data export starts.

After the data is exported, the completion message appears.



## Registering and editing locations

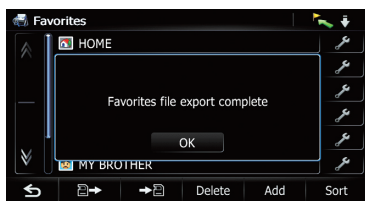

### 5 Touch [OK].

The "Favorites" screen appears.

## Importing the "Favorites" items

You can import the locations that you have edited on the utility program AVIC FEEDS which is available separately to "Favorites".

- When a location that is already registered in "Favorites" is imported, the location is overwritten.

### 1 Store the item into the SD memory card by using the AVIC FEEDS.

### 2 Insert an SD memory card into the SD card slot.

- ➔ For details of the operation, refer to *Inserting and ejecting an SD memory card* on page 15.

### 3 Display the "Destination Menu" screen.

 
- ➔ For details of the operations, refer to *Screen switching overview* on page 22.

### 4 Touch [Favorites].

The "Favorites" screen appears.

### 5 Touch [Import].

The message confirming whether to replace the stored items appears.

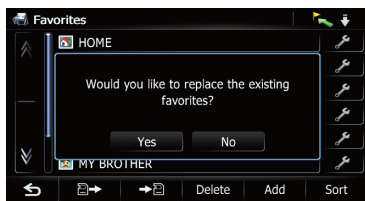

### 6 Touch [Yes].

Data import starts.

After importing the data is finished, the "Favorites" screen appears. □

## Deleting the entry from the "History" list

Items in "History" can be deleted. All entries in "History" can be deleted at once.

### 1 Display the "Destination Menu" screen.

- ➔ For details of the operations, refer to *Screen switching overview* on page 22.

### 2 Touch [History].

The "Destination History List" screen appears.

### 3 Touch [Delete].

The "Delete from History" screen appears.

 
### 4 Select the location you want to delete.



A check mark appears next to the selected location.

- Touch [All] or [None].  
Selects or deselects all entries.

### 5 Touch [Delete].

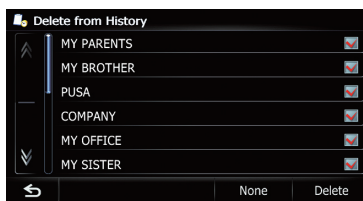

A message will appear asking you to confirm the deletion.

### 6 Touch [Yes].

The data you selected is deleted.

- Touch [No].  
Cancels the deletion. □