



## Playing a DVD-Video

1 Touch [▲], [▼], [◀] or [▶] to select the desired menu item.

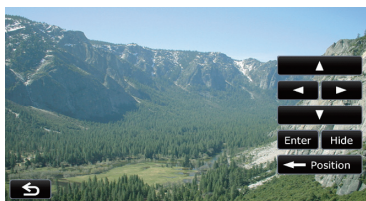

- If the touch panel keys for DVD menu selection disappear, touching anywhere on the screen, then touching  displays them again.

2 Touch [Enter].


Playback starts from the selected menu item. The way to display the menu differs depending on the disc.

- Touch [Position].

Each touch of [Position] changes the display position of touch panel keys.

- Touch [Hide].

The touch panel keys are hidden.

And  is displayed, so you can select a menu item by touching the screen.

### Frame-by-frame playback

This lets you move ahead one frame at a time during pause.

● Touch [⏮] during pause.

Each time you touch [⏮], you move ahead one frame.

- To return to normal playback, touch [▶/⏮].
- With some discs, images may be unclear during frame-by-frame playback.

### Slow motion playback

This lets you slow down playback speed.

1 Touch and hold [⏮] until  is displayed during playback.


The icon  is displayed, and forward slow motion playback begins.

- To return to normal playback, touch [▶/⏮].

2 Touch [◀⏮] or [⏮▶] to adjust playback speed during slow motion playback.

Each time you touch [◀⏮] or [⏮▶] it changes the speed in four steps in the following order:


1/16 ↔ 1/8 ↔ 1/4 ↔ 1/2

- There is no sound during slow motion playback.
- With some discs, images may be unclear during slow motion playback.
- Reversed slow motion playback is not possible. 

### Using the "Function" menu

● Touch  on the "DVD-V" screen.

The "Function" menu appears.

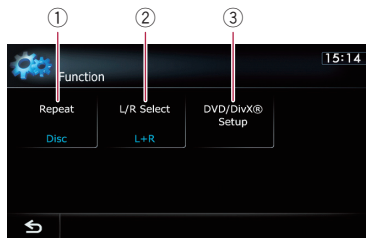

① Changes the repeat range

Each touch of [Repeat] changes the setting as follows:

- **Disc:** Plays throughout the current disc.
- **Chapter:** Repeats just the current chapter.
- **Title:** Repeats just the current title.

- If you perform chapter (title) search, fast forward, fast reverse or slow motion playback, the repeat play range changes to "Disc".

- This function is not available when disc playback has been stopped.

② Selects audio output

When playing DVDs recorded with LPCM audio, you can switch the audio output.

Touch [L/R Select] repeatedly until the desired audio output appears on the display.

Each touch of [**L/R Select**] changes the settings as follows:

- **L+R**: Left and right
  - **L**: Left
  - **R**: Right
  - **Mix**: Mixing left and right
- This function is not available when disc playback has been stopped.
- ③ **DVD setup adjustments**
- ➔ For details, refer to *Displaying DVD/DivX® Setup menu* on page 107.

## Playing a DivX video

You can play a DivX disc using the built-in drive of the navigation system. This section describes those operations.

### Starting procedure

#### 1 Display the AV operation screen.

- For details of the operations, refer to *Displaying the AV operation screen* on page 77.

#### 2 Insert the disc you want to play into disc-loading slot.

The source changes and then playback will start.

- For details of the operation, refer to *Inserting and ejecting a disc* on page 14.
- If the disc is already set, tap **[Disc]** on the left edge of the screen.
- For details, refer to **Selecting a source** on page 77.

#### 3 Use the touch panel keys on the screen to control the disc.

- For details, refer to *Using the touch panel keys* on the next page. ■

#### ④ Audio channel indicator

Shows the current audio channel type, such as “Mch” (Multi-channel).

#### ⑤ Subtitle number indicator

Shows the subtitle number currently selected.

#### ⑥ Repeat range indicator

Shows which repeat range has been selected.

- For details, refer to **Changes the repeat range** on page 106.

#### ⑦ Current time

#### ⑧ Digital sound format indicator

Shows the digital sound format (surround sound format) currently selected.


#### ⑨ Play time indicator

Shows the elapsed playing time within the current file.

#### ⑩ Source icon

Shows which source has been selected. ■

### Reading the screen

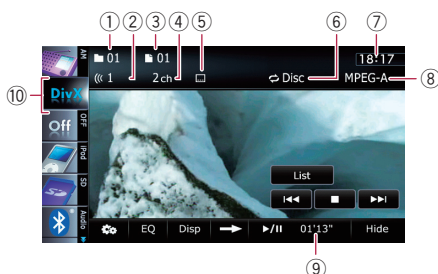

#### ① Folder number indicator

Shows the folder number currently playing.

#### ② Audio track indicator


Shows the audio track number currently selected.

#### ③ File number indicator


Shows the file number currently playing.


## Using the touch panel keys

Playback screen (page 1)

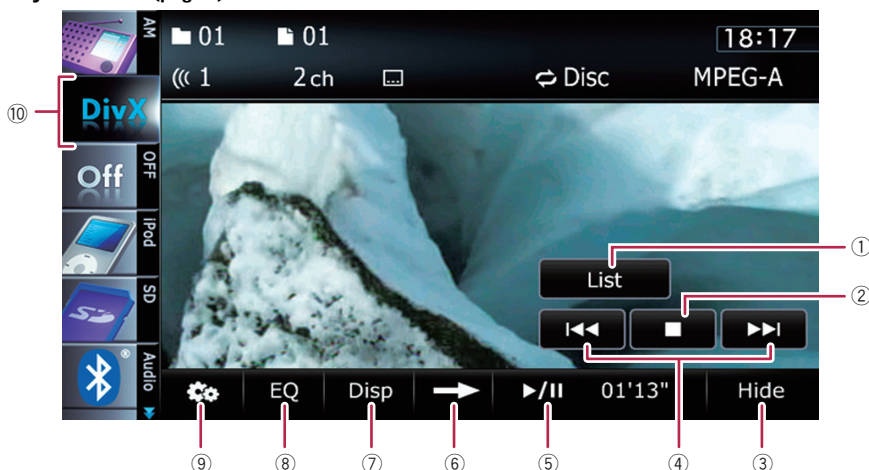

Playback screen (page 2)

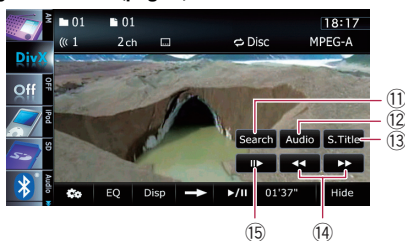

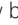
- ❑ With some discs, the icon  may be displayed, meaning that the operation is invalid.

### ① Selects a file from the list

Touching the key displays the list which lets you see the list of file names or folder names on a disc.

- ❑ A dash (–) is displayed if there is no corresponding information.

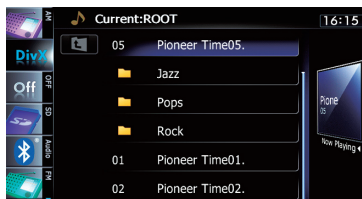

Tapping a folder on the list shows its content. You can play a file on the list by tapping it.



➔ For details, refer to *Operating list screens* (e.g. *iPod list screen*) on page 77.

The contents of the folder in which the currently playing file is located are displayed.

## Playing a DivX video

Touching  displays the content of the upper folder (parent folder). If the uppermost folder is listed,  cannot be used.

② **Stops playback**

③ **Hides the touch panel keys and information of the current video**

Touching [**Hide**] shows only the current video. To display the touch panel keys and information of the current video, touch the screen.

④ **Skips forward or backward**

Touching [**▶▶**] skips to the start of the next file. Touching [**◀◀**] once skips to the start of the current file. Touching it twice quickly will skip to the previous file.

You can also perform these operations by using the **TRK** button.

⑤ **Playback and Pause**

Touching [**▶/||**] switches between playback and pause.

⑥ **Switches to the next page of touch panel keys**

⑦ **Switches the information**

Touching [**Disp**] changes the content of the information panel as follows:

Disc information display — Current folder name display — Current file name display

⑧ **Recalls equalizer curves**

➤ For details, refer to *Using the equalizer* on page 172.

⑨ **Displays the “Function” menu**

➤ For details, refer to *Using the “Function” menu* on the next page.

⑩ **Switches the media file type played**

When playing a disc containing a mixture of various media file types, you can switch between media file types to play.

Tap the key repeatedly to switch between the following media file types:

**CD** (audio data (CD-DA)) — **ROM** (compressed audio file) — **DivX** (DivX video files)

⑪ **Searches for a desired scene and starts playback from a specified time**

➤ For details, refer to *Starting playback from a specified time* on the next page.

⑫ **Changes audio tracks (Multi-audio)**

Each touch of [**Audio**] switches between audio tracks.

⑬ **Changes the subtitle (Multi-subtitle)**

Each touch of [**S.Title**] switches between the subtitle languages recorded on the disc.

⑭ **Fast reverse or forward**

Touch [**◀◀**] or [**▶▶**] to perform fast reverse or forward.

If you touch and hold [**◀◀**] or [**▶▶**] for five seconds, fast reverse/fast forward continues even if you release either of these keys. To resume playback at a desired point, touch [**▶/||**], [**◀◀**] or [**▶▶**] opposite to key pushed for five seconds.

⑮ **Frame-by-frame playback (or slow-motion playback)**

➤ For details, refer to *Frame-by-frame playback* on this page.

➤ For details, refer to *Slow motion playback* on this page.

### Frame-by-frame playback

This lets you move ahead one frame at a time during pause.

● **Touch [**||▶**] during pause.**

Each time you touch [**||▶**], you move ahead one frame.

- To return to normal playback, touch [**▶/||**].
- With some discs, images may be unclear during frame-by-frame playback.

### Slow motion playback

This lets you slow down playback speed.

● **Touch and hold [**||▶**] until **||▶** is displayed during playback.**

The icon **||▶** is displayed, and forward slow motion playback begins.

- To return to normal playback, touch [**▶▶**] or [**◀◀**], etc.
- There is no sound during slow motion playback.
- With some discs, images may be unclear during slow motion playback.
- Reversed slow motion playback is not possible.


## Starting playback from a specified time

You can search for a desired scene by specifying the time.

- Time search are not possible when disc playback has been stopped.

### 1 Touch [Search].

### 2 Touch the keys to input the target number or time and then touch [Enter].

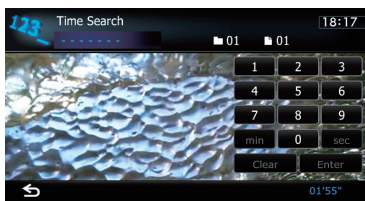


- To select 5 minutes 3 seconds, touch [5], [min], [3], [sec] and [Enter] in order.
- To select 71 minutes 00 seconds, touch [7], [1], [min] and [Enter] in order.
- To select 100 minutes 05 seconds, touch [1], [0], [0], [5], [sec] and [Enter] in order.
- To cancel an input number, touch [Clear]. To cancel the input numbers, touch and hold [Clear].

- **Disc:** Plays throughout the current disc.
- **File:** Repeats just the current file.
- **Folder:** Repeats just the current folder.
- If you select another folder during repeat play, the repeat play range changes to "Disc".
- If you perform fast reverse or fast forward during "File", the repeat play range changes to "Folder".
- When "Folder" is selected, it is not possible to playback a subfolder of that folder.
- When playing discs with compressed audio files and audio data (CD-DA), repeat play is performed within DivX videos even if "Disc" is selected.


## ② DVD setup adjustments

- ➔ For details, refer to *Displaying DVD/DivX® Setup menu* on the next page.

## Using the "Function" menu

- Touch  on the "DivX" screen.

The "Function" menu appears.

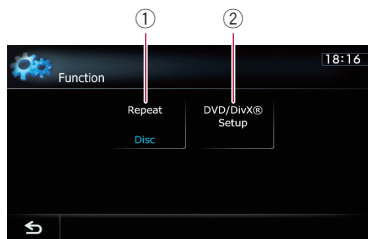

### ① Changes the repeat range

Each touch of [Repeat] changes the setting as follows:

## DVD-Video or DivX setup

This chapter describes how to configure the DVD-Video/DivX player.

### Displaying DVD/DivX® Setup menu

#### 1 Play the disc that contains DVD-Video or DivX.

#### 2 Display the AV operation screen.

- For details of the operations, refer to *Displaying the AV operation screen* on page 77.


#### 3 Touch .

The “Function” menu appears.

#### 4 Touch [DVD/DivX® Setup].

The “DVD/DivX® Setup” screen appears.

#### 5 Touch the desired function.

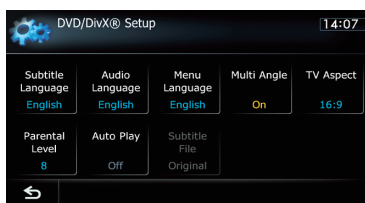

### Setting the top-priority languages

You can assign the top-priority language to the top-priority subtitle, audio and menu in initial playback. If the selected language is recorded on the disc, subtitles, audio and menu are displayed or output in that language.

#### 1 Display the “DVD/DivX® Setup” screen.


- For details, refer to *Displaying DVD/DivX® Setup menu* on this page.

#### 2 Touch [Subtitle Language], [Audio Language] or [Menu Language].


Each language menu is displayed and the currently set language is selected.

#### 3 Touch the desired language.

When you select “Others”, a language code input display is shown. Input the four-digit code of the desired language then touch [Enter].

- For details, refer to *Language code chart for DVDs* on page 110.
- ❑ If the selected language is not recorded on the disc, the default language specified on the disc is output and displayed.
- ❑ You can also switch the subtitle and audio language by touching [S.Title] or [Audio] during playback.
- ❑ Even if you use “S.Title” or “Audio” to switch the subtitle or audio language, this does not affect the settings here. 

### Setting the angle icon display

You can set the angle icon  to display in scenes where the angle can be switched.

#### 1 Display the “DVD/DivX® Setup” screen.

- For details, refer to *Displaying DVD/DivX® Setup menu* on this page.

#### 2 Touch [Multi Angle].

Touching [Multi Angle] switches between “On” and “Off”. 

### Setting the aspect ratio

There are two kinds of displays. A wide screen display has a width-to-height ratio (TV aspect) of 16:9, while a regular display has a TV aspect of 4:3. If you use a regular rear display with a TV aspect of 4:3, you can set the aspect ratio suitable for your rear display. (We recommend use of this function only when you want to fit it to the rear display.)

## DVD-Video or DivX setup



- ❑ When using a regular display, select either “**Letter Box**” or “**Panscan**”. Selecting “**16:9**” may result in an unnatural picture.

### 1 Display the “DVD/DivX® Setup” screen.

- ➔ For details, refer to *Displaying DVD/DivX® Setup menu* on the previous page.

### 2 Touch [TV Aspect].

Each touch of [TV Aspect] changes the setting as follows:

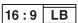- **16:9**: Wide screen picture (16:9) is displayed as it is (initial setting).
- **Letter Box**: The picture is in the shape of a letter box with black bands at the top and bottom of the screen.
- **Panscan**: The picture is cut short at the right and left of the screen.
- ❑ When playing discs that do not have a panscan system, the disc is played back with “**Letter Box**” even if you select “**Panscan**” setting. Confirm whether the disc package bears the  mark.
- ❑ Some discs do not enable changing of the TV aspect. For details, refer to the disc’s instructions. 

## Setting the parental lock

Some DVD-Video discs let you use parental lock to set restrictions so that children cannot watch violent or adult-oriented scenes. You can set the parental lock level in steps as desired.

- ❑ When you set a parental lock level and then play a disc featuring parental lock, code number input indications may be displayed. In this case, playback will begin when the correct code number is input.

## Setting the code number and level

When you first use this function, register your code number. If you do not register a code number, parental lock will not operate.

### 1 Display the “DVD/DivX® Setup” screen.

- ➔ For details, refer to *Displaying DVD/DivX® Setup menu* on the previous page.

### 2 Touch [Parental Level].



### 3 Touch [0] to [9] to input a four-digit code number.

### 4 While the input number is displayed, touch [Enter].

The code number is registered, and you can now set the level.

### 5 Touch any of [1] to [8] to select the desired level.

The parental lock level is set.

- **Level 8**: Playback of the entire disc is possible (initial setting).
- **Level 7 to Level 2**: Playback of discs for children and non-adult oriented discs is possible.
- **Level 1**: Only playback of discs for children is possible.
- ❑ If you want to change the parental level already set, enter the registered code number and then select the parental level.
- ❑ We recommend that you keep a record of your code number in case you forget it.
- ❑ The parental lock level is recorded on the disc. You can confirm it by looking at the disc package, the included literature or the disc itself. You cannot use parental lock with discs that do not feature a recorded parental lock level.
- ❑ With some discs, parental lock operates to skip certain scenes only, after which normal playback resumes. For details, refer to the disc’s instructions.
- ❑ If you forget the registered code number, touch  10 times on the number input screen. The registered code number is canceled, letting you register a new one. 



## DVD-Video or DivX setup

### Setting the auto play

When a DVD disc with DVD menu is inserted, this unit will cancel the DVD menu automatically and start playback from the first chapter of the first title.

- This function is available for DVD-Video.
- Some DVDs may not operate properly. If this function is not fully operable, turn this function off and start playback.

#### 1 Display the "DVD/DivX® Setup" screen.

- ➔ For details, refer to *Displaying DVD/DivX® Setup menu* on page 107.

#### 2 Touch [Auto Play].

Touching [Auto Play] switches this setting between "On" and "Off".

- When "Auto Play" is set to "On", the repeat range is automatically set to "Disc".

### Setting the subtitle file for DivX

You can select whether to display DivX external subtitles or not.

- If no DivX external subtitle files exist, the original DivX subtitles are displayed even when "Custom" is selected.

#### 1 Display the "DVD/DivX® Setup" screen.

- ➔ For details, refer to *Displaying DVD/DivX® Setup menu* on page 107.

#### 2 Touch [Subtitle File].

Touching [Subtitle File] switches this setting between "Original" and "Custom".

- Up to 42 characters can be displayed on one line. If more than 42 characters are set, the line breaks and the characters are displayed on the next line.
- Up to 126 characters can be displayed on one screen. If more than 126 characters are set, the excess characters will not be displayed.

- The DivX subtitles will be displayed even when the subtitle file setting is on if no corresponding subtitle files exist.
- Up to three lines can be displayed at once.

## Language code chart for DVDs

Two-letter code, input code	Language	Two-letter code, input code	Language	Two-letter code, input code	Language
aa, 0101	Afar	ia, 0901	Interlingua	rn, 1814	Rundi
ab, 0102	Abkhazian	ie, 0905	Interlingue	ro, 1815	Romanian
af, 0106	Afrikaans	ik, 0911	Inupiaq	ru, 1821	Russian
am, 0113	Amharic	in, 0914	Indonesian	rw, 1823	Kinyarwanda
ar, 0118	Arabic	is, 0919	Icelandic	sa, 1901	Sanskrit
as, 0119	Assamese	it, 0920	Italian	sd, 1904	Sindhi
ay, 0125	Aymara	ja, 1001	Japanese	sg, 1907	Sango
az, 0126	Azerbaijani	ji, 1009	Yiddish	sh, 1908	Serbo-Croatian
ba, 0201	Bashkir	jw, 1023	Javanese	si, 1909	Sinhala
be, 0205	Belarusian	ka, 1101	Georgian	sk, 1911	Slovak
bg, 0207	Bulgarian	kk, 1111	Kazakh	sl, 1912	Slovenian
bh, 0208	Bihari	kl, 1112	Kalaallisut	sm, 1913	Samoan
bi, 0209	Bislama	km, 1113	Central Khmer	sn, 1914	Shona
bn, 0214	Bengali	kn, 1114	Kannada	so, 1915	Somali
bo, 0215	Tibetan	ko, 1115	Korean	sq, 1917	Albanian
br, 0218	Breton	ks, 1119	Kashmiri	sr, 1918	Serbian
ca, 0301	Catalan	ku, 1121	Kurdish	ss, 1919	Swati
co, 0315	Corsican	ky, 1125	Kirghiz; Kyrgyz	st, 1920	Sotho, Southern
cs, 0319	Czech	la, 1201	Latin	su, 1921	Sundanese
cy, 0325	Welsh	ln, 1214	Lingala	sv, 1922	Swedish
da, 0401	Danish	lo, 1215	Lao	sw, 1923	Swahili
de, 0405	German	lt, 1220	Lithuanian	ta, 2001	Tamil
dz, 0426	Dzongkha	lv, 1222	Latvian	te, 2005	Telugu
ee, 0505	Ewe	mg, 1307	Malagasy	tg, 2007	Tajik
el, 0512	Greek	mi, 1309	Maori	th, 2008	Thai
en, 0514	English	mk, 1311	Macedonian	ti, 2009	Tigrinya
eo, 0515	Esperanto	ml, 1312	Malayalam	tk, 2011	Turkmen
es, 0519	Spanish	mn, 1314	Mongolian	tl, 2012	Tagalog
et, 0520	Estonian	mo, 1315	Moldavian	tn, 2014	Tswana
eu, 0521	Basque	mr, 1318	Marathi	to, 2015	Tonga
fa, 0601	Persian	ms, 1319	Malay	tr, 2018	Turkish
fi, 0609	Finnish	mt, 1320	Maltese	ts, 2019	Tsonga
fj, 0610	Fijian	my, 1325	Burmese	tt, 2020	Tatar
fo, 0615	Faroese	na, 1401	Nauru	tw, 2023	Twi
fr, 0618	French	ne, 1405	Nepali	uk, 2111	Ukrainian
fy, 0625	Western Frisian	nl, 1412	Dutch; Flemish	ur, 2118	Urdu
ga, 0701	Irish	no, 1415	Norwegian	uz, 2126	Uzbek
gd, 0704	Gaelic	oc, 1503	Occitan	vi, 2209	Vietnamese
gl, 0712	Galician	om, 1513	Oromo	vo, 2215	Volapuk
gn, 0714	Guarani	or, 1518	Oriya	wo, 2315	Wolof
gu, 0721	Gujarati	pa, 1601	Panjabi; Punjabi	xh, 2408	Xhosa
ha, 0801	Hausa	pl, 1612	Polish	yo, 2515	Yoruba
hi, 0809	Hindi	ps, 1619	Pushto; Pashto	zh, 2608	Chinese
hr, 0818	Croatian	pt, 1620	Portuguese	zu, 2621	Zulu
hu, 0821	Hungarian	qu, 1721	Quechua		
hy, 0825	Armenian	rm, 1813	Romansh		



## Playing music files (from USB or SD)

You can play the compressed audio files stored in the external storage device (USB, SD).

- In the following description, the SD memory card and USB memory device are collectively referred to as the “external storage device (USB, SD)”. If it indicates the USB memory device only, it is referred to as the “USB storage device”.

### Starting procedure

#### 1 Display the AV operation screen.

- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 77.


#### 2 Insert the SD memory card into the SD card slot or plug the USB storage device into the USB connector.

- ➔ For details, refer to *Plugging in a USB storage device* on page 18.
- ➔ For details, refer to *Inserting and ejecting an SD memory card* on page 15.


- Playback is performed in order of folder numbers. Folders are skipped if they contain no playable files. If there are no playable files in folder 01 (root folder), playback starts from folder 02.

#### 3 Tap [USB] or [SD] on the left edge of the screen to display the “USB” or “SD” screen.

#### 4 Use the touch panel keys on the screen to control the external storage device (USB, SD).

- ➔ For details, refer to *Using the touch panel keys (Music)* on page 113. 

### Reading the screen

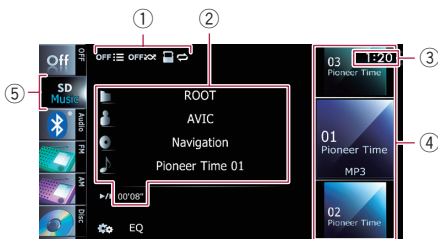
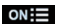
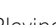


- This unit may not achieve optimum performance with some external storage devices.
- You can playback the files on a USB storage device compliant with Mass Storage Class. For details about the USB Class, refer to the manual supplied with the USB storage device.



#### ① Playback condition indicator

Indicates the current playback condition.




- Scanning folders and files

Indicator:	Meaning
	Cancels the scan play.
	Plays the first audio files of each folder for about 10 seconds when the repeat range is set to “Media”.
	Plays the beginning of each audio file in the current folder for about 10 seconds when the repeat range is set to “Folder”.





- Playing files in random order

Indicator:	Meaning
	Does not play files in random order.
	Plays all audio files in the current repeat play range in random order.

- Setting a repeat play range

Indicator:	Meaning
	Repeats all compressed audio files in the selected external storage device (USB, SD).
	Repeats just the current file.
	Repeats the current folder.

## ② Current file information


-  **Folder name**  
Shows the folder name currently playing.
-  **Artist name**  
Shows the artist name currently playing (when available).
-  **Album title**  
Shows the title of the album for the current file (when available).
-  **Track title**  
Shows the title of the track currently playing (when available).  
 If the title of a track is not available, the file name appears.
- **Play time**  
Shows the elapsed playing time within the current file.  
 "-----" is displayed if there is no corresponding information.

## ③ Current time

### ④ File information


- **File number indicator**
- **File name indicator**
- **File type indicator**  
Shows the type of audio file.

### ⑤ Source icon

Shows which source has been selected. 

## Playing music files (from USB or SD)


### Using the touch panel keys (Music)

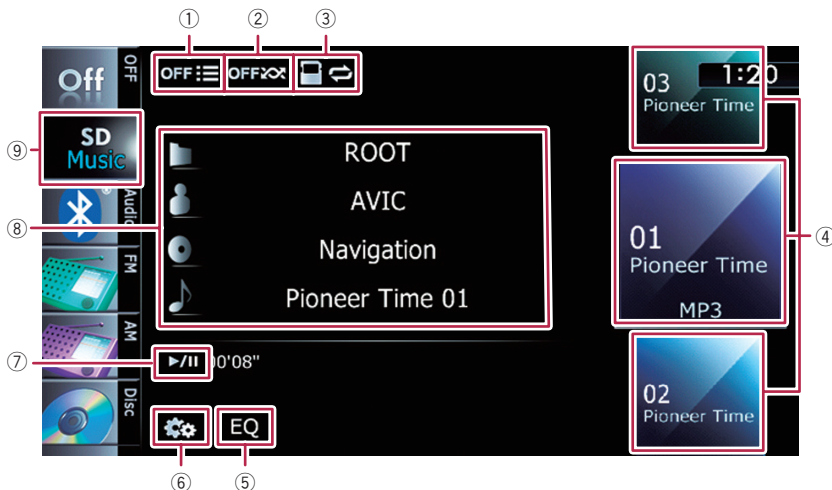

- ① **Scans folders and files**  
Scan play is performed by touching only one key.  
➔ For details of the operation, refer to **Scans folders and files** on the next page.
- ② **Plays files in random order**  
The files in the current repeat play range can be played at random by touching only one key.  
➔ For details of the operation, refer to **Plays files in random order** on the next page.
- ③ **Sets a repeat play range**  
The repeat play range can be changed by touching only one key.  
➔ For details, refer to **Changes the repeat range** on the next page.
- ④ **Selects a file to play**  
Scrolling the keys up or down displays files, and tapping a file starts playback. Tapping the lower key during random playback skips to the next file. Tapping the upper key jumps to the start of the current file.
- ⑤ **Recalls equalizer curves**  
➔ For details, refer to *Using the equalizer* on page 172.
- ⑥ **Displays the "Function" menu**

➔ For details, refer to *Using the "Function" menu* on the next page.


- ⑦ **Playback and Pause**  
Touching [▶/||] switches between playback and pause.
- ⑧ **Selects a file from the list**  
Touching the key displays the list which lets you see the list of track titles or folder names on an external storage device (USB, SD). Tapping a folder on the list shows its content. You can play a file on the list by tapping it.

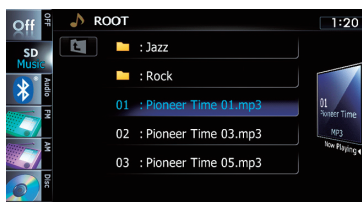

➔ For details, refer to *Operating list screens (e.g. iPod list screen)* on page 77.

Touching [📁] displays the content of the upper folder (parent folder). If the uppermost folder is listed, [📁] cannot be used.


- ⑨ **Switches the operation screen**

Tapping this key switches between the screen to operate music files and the screen to operate video files. This touch panel key is available only when there are both audio and video files in the external storage device (USB, SD). 

## Using the “Function” menu

- Touch  on the “USB” or “SD” screen.

The “Function” menu appears.

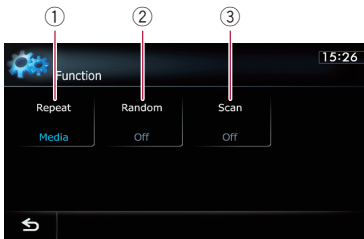

### ① Changes the repeat range

Each touch of **[Repeat]** changes the setting as follows:

- **Media:** Repeats all compressed audio files in the selected external storage device (USB, SD).
  - **Track:** Repeats just the current file.
  - **Folder:** Repeats the current folder.
- If you skip the file forward or backward when the repeat play range in “Track”, the repeat play range changes to “Folder”.

### ② Plays files in random order

Random play lets you playback files in random order within the current repeat range. Each touch of **[Random]** turns it on or off.


- If you turn the random play on when the repeat play range is set to “Track”, the repeat play range changes to “Folder” automatically.

### ③ Scans folders and files

Scan play lets you hear the first 10 seconds of each file. Scan play is performed in the current repeat play range.

Each touch of **[Scan]** turns it on or off.

When you find the track you want, touch **[Scan]** to turn the scan play off.

- After all files or folders scanning are finished, normal playback will begin again.
- If you turn the scan play on when the repeat play range is set to “Track”, the repeat play range changes to “Folder” automatically. 

## Playing video files (from USB or SD)

You can play the video files stored in the external storage device (USB, SD).

- In the following description, the SD memory card and USB memory device are collectively referred to as the “external storage device (USB, SD)”. If it indicates the USB memory device only, it is referred to as the “USB storage device”.

### Starting procedure

#### 1 Display the AV operation screen.

- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 77.

#### 2 Insert the SD memory card into the SD card slot or plug the USB storage device into the USB connector.

- ➔ For details, refer to *Plugging in a USB storage device* on page 18.
- ➔ For details, refer to *Inserting and ejecting an SD memory card* on page 15.
- Playback is performed in order of folder numbers. Folders are skipped if they contain no playable files. If there are no playable files in folder 01 (root folder), playback starts from folder 02.

#### 3 Tap [USB] or [SD] on the left edge of the screen to display the “USB” or “SD” screen.

#### 4 Touch the screen to display the touch panel keys.

#### 5 Use the touch panel keys on the screen to control the external storage device (USB, SD).

- ➔ For details, refer to *Using the touch panel keys (Video)* on the next page.

### Reading the screen



- This unit may not achieve optimum performance with some external storage devices.
- You can playback the files on a USB storage device compliant with Mass Storage Class. For details about the USB Class, refer to the manual supplied with the USB storage device.

#### ① Folder number indicator

#### ② File number indicator

#### ③ Current folder name indicator

Shows the folder name currently playing.

#### ④ File name indicator

Shows the file name currently playing.

#### ⑤ Current time

#### ⑥ File type indicator

Shows the type of audio file currently playing.


#### ⑦ Play time indicator

Shows the elapsed playing time within the current file.

#### ⑧ Source icon

Shows which source has been selected.


## Using the touch panel keys (Video)

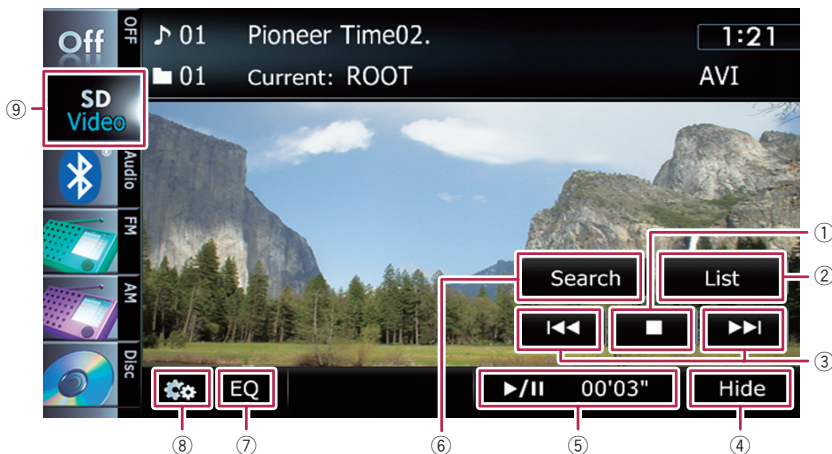

## ① Stops playback

## ② Selects a file from the list

You can select and play the title you want from the list.

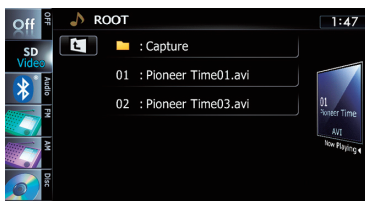

➔ For details, refer to *Operating list screens* (e.g. iPod list screen) on page 77.

The contents of the folder in which the currently playing file is located are displayed. Touching [ ] displays the content of the upper folder (parent folder). If the uppermost folder is listed, [ ] cannot be used.

## ③ Skips forward or backward

Touching [▶▶] skips to the start of the next file. Touching [◀◀] once skips to the start of the current file. Touching it twice quickly will skip to the previous file.

**Fast reverse or forward**

Touch and hold [◀◀] or [▶▶] to fast reverse or fast forward.

□ There is no sound on fast reverse or forward.

□ You can also perform these operations by using the **TRK** button.

## ④ Hides the touch panel keys and information of the current video

Touching [Hide] shows only the current video. To display the touch panel keys and information of the current video, touch the screen.

## ⑤ Playback and Pause

Touching [▶/||] switches between playback and pause.

## ⑥ Searches for a desired scene and starts playback from a specified time

➔ For details, refer to *Searching for a specific scene and starting playback from a specified time* on the next page.

## ⑦ Recalls equalizer curves

➔ For details, refer to *Using the equalizer* on page 172.

## ⑧ Displays the “Function” menu

➔ For details, refer to *Using the “Function” menu* on the next page.

## ⑨ Switches the operation screen



## Playing video files (from USB or SD)


Tapping this key switches between the screen to operate music files and the screen to operate video files. This touch panel key is available only when there are both audio and video files in the external storage device (USB, SD).

### Searching for a specific scene and starting playback from a specified time

You can search for a desired scene by specifying the time.

#### 1 Touch [Search].

#### 2 Touch the keys to input the target number or time and then touch [Enter].

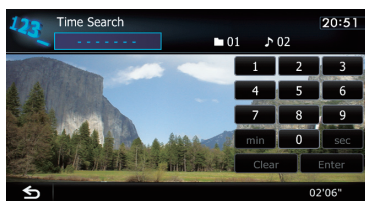

- To select 5 minutes 3 seconds, touch [5], [min], [3], [sec] and [Enter] in order.
- To select 71 minutes 00 seconds, touch [7], [1], [min] and [Enter] in order.
- To select 100 minutes 05 seconds, touch [1], [0], [0], [5], [sec] and [Enter] in order.
- To cancel an input number, touch [Clear].
- To cancel the input numbers, touch and hold [Clear].

### Using the “Function” menu

#### 1 Tap [USB] or [SD] on the left edge of the screen to display the “USB” or “SD” screen.


- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 77.

#### 2 Touch the screen to display the touch panel keys.

#### 3 Touch .

The “Function” menu appears.

- If the touch panel keys are not shown, touch anywhere on the screen to display them.

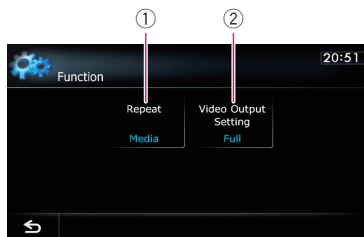

#### ① Changes the repeat range

Each touch of [Repeat] changes the setting as follows:

- **Media:** Repeats all video files in the selected external storage device (USB, SD).
- **File:** Repeats just the current file.
- **Folder:** Repeats the current folder.
- If you skip the file forward or backward when the repeat play range in “File”, the repeat play range changes to “Folder”.

#### ② Changes the screen size of video

If a video file is played, you can select the display mode between normal and full screen.

Each touch of [Video Output Setting] changes the setting as follows:

- **Normal:** Enlarges the display size while maintaining the aspect ratio.
- **Full:** Displays the image full-screen although the aspect ratio may be affected.

Using the USB interface cable for iPod enables you to connect your iPod to the navigation system.

- ❑ A USB interface cable for iPod (CD-IU50V) (sold separately) is required for connection.

## Starting procedure

### 1 Display the AV operation screen.


- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 77.

### 2 Connect your iPod.

The source changes and then playback will start.


- ➔ For details, refer to *Connecting your iPod* on page 19.
- ❑ If the iPod is already connected, tap **[iPod]** on the left edge of the screen.
- ➔ For details, refer to **Selecting a source** on page 77.
- ❑ No video is output if iPod is selected as AV source, check the setting in **"AV1 Input"** on the **"AV System Settings"** menu.
- ➔ For details, refer to *Setting video input 1 (AV1)* on page 168.

### 3 Use the touch panel keys on the screen to control your iPod.

- ➔ For details of the operation, refer to *Using the touch panel keys* on page 120. 

## Reading the screen

### Music

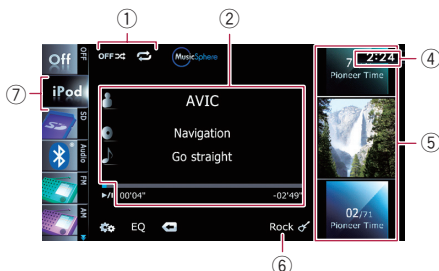




### Video





### ① Playback condition indicator

Indicates the current playback condition.





- Setting the shuffle play for music

Indicator:	Meaning
	Cancels the shuffle play.
	Plays back songs in random order within the selected list.
	Selects an album randomly, and then plays back all songs in that album in order.

- Setting a repeat play range

Indicator:	Meaning
	Repeats all songs in the selected list.
	Repeats just the current song.

### ② Current song (episode) information

- : **Artist name (podcast title)**  
Shows the artist name currently playing. When a podcast is played, the podcast title is displayed.
- : **Album title (release date)**  
Shows the title of the album for the song. When a podcast is played, the release date is displayed.
- : **Song title (episode)**  
Shows the title of the current song. When a podcast is played, the episode is displayed.
- : **Chapter number**

## Using an iPod (iPod)

Shows the current chapter number and total number of chapters when the file with chapters played.

- **Play time**

Shows the elapsed playing time within the current song (episode).

- "-----" is displayed if there is no corresponding information.

### ③ Current video information

-  **Chapter number**

Shows the current chapter number when the video with chapters played.

-  **Artist name (podcast title)**

Shows the artist name currently playing. When a podcast is played, the podcast title is displayed.

-  **File number indicator**

Shows the number of the file currently playing.

- **File name indicator**

Shows the file name currently playing.

- **Play time indicator**

Shows the elapsed playing time within the current file.

### ④ Current time

### ⑤ Song (episode) information

- **Song number indicator**

Shows the number of the song and the total number of songs in the selected list.

- **Song title (episode) indicator**

- **Album artwork**

Album art of the current song is displayed if it is available.

### ⑥ Genre indicator

Shows the genre of the current song.


### ⑦ Source icon

Shows which source has been selected.


- If characters recorded on the iPod are not compatible with this navigation system, they may turn into garbled characters. □

## Using the touch panel keys

### Music

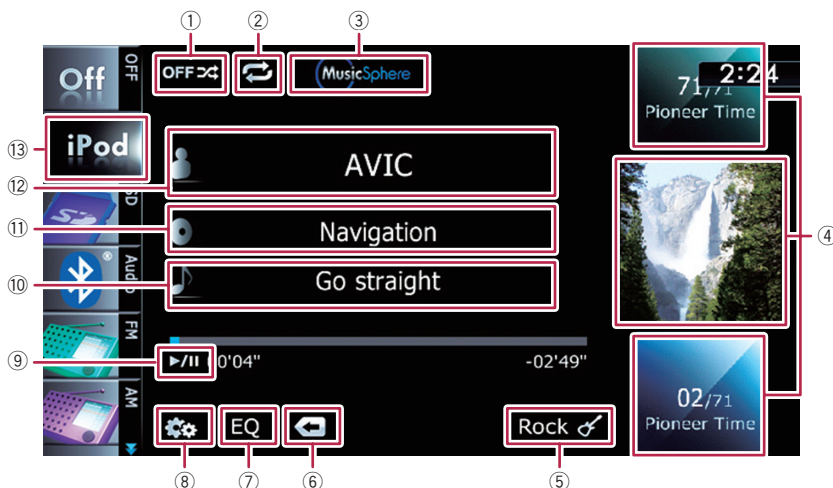

### Video

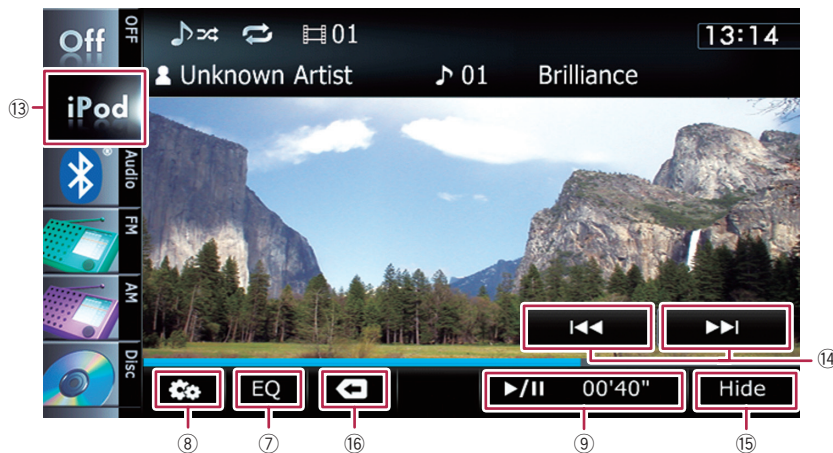

① **Sets the shuffle play for music**

The shuffle play setting can be changed by touching only one key.

➔ For details, refer to **Sets the shuffle play for music** on page 124.

② **Sets a repeat play range**

The repeat play range can be changed by touching only one key.

➔ For details, refer to **Sets repeat play** on page 124.

③ **Plays a playlist using MusicSphere**

Touching the key displays the **MusicSphere** screen, and a playlist created with the PC application (**MusicSphere**) can be played.

➔ For details, refer to **Playing MusicSphere** on page 124.