 
 


**Operation Manual  
for  
NXH-9718/NXH-9918/DVZ-0118**

# APPEARANCE

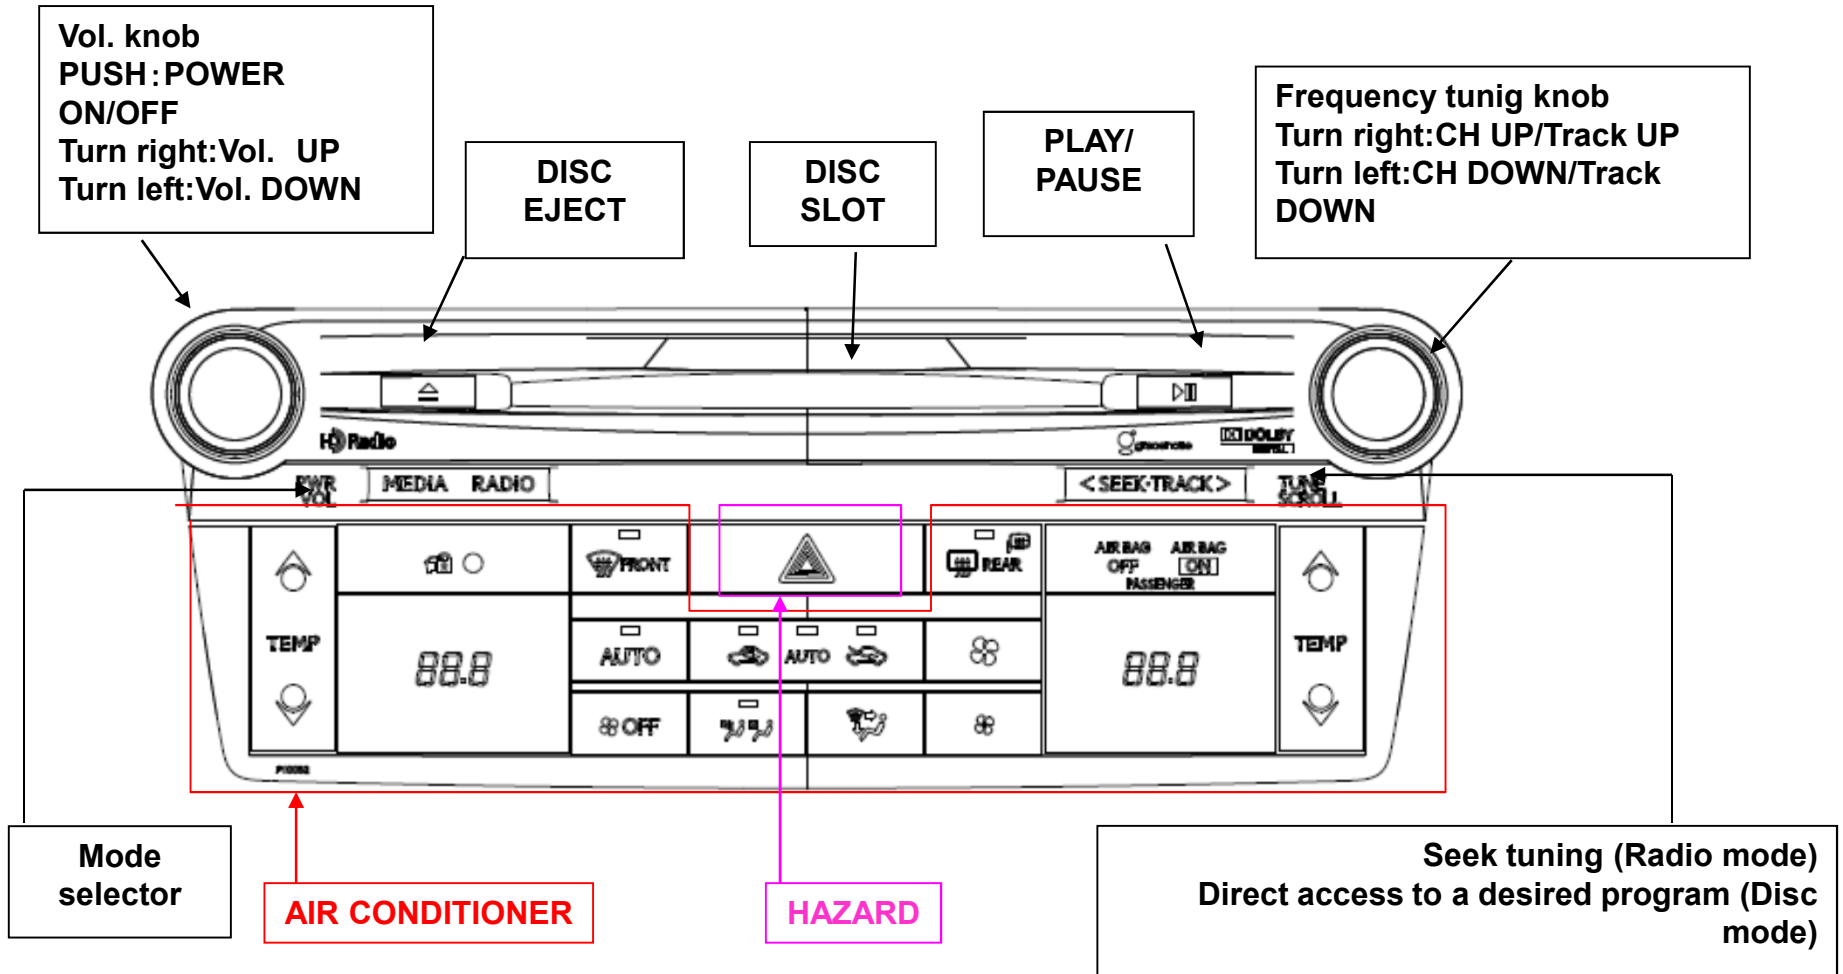

## Remote control device

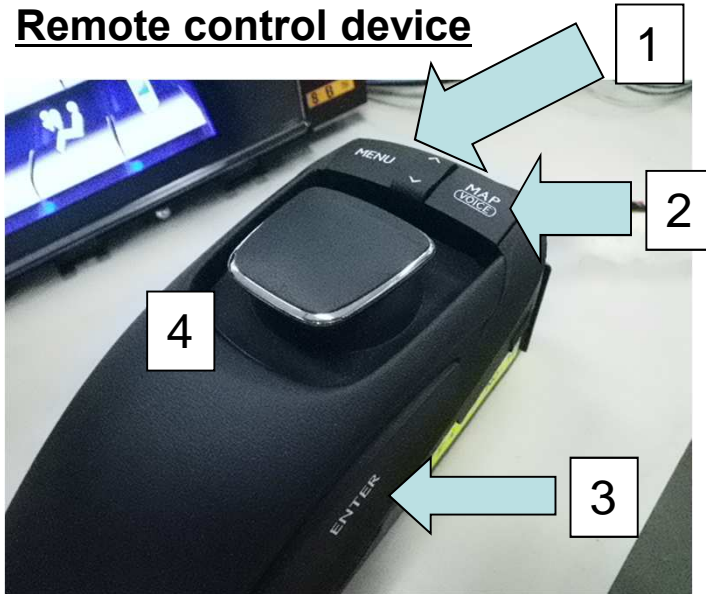

1 Menu button

3 Enter button

2 Map button  
The map is shown.

4 Control stick  
Cursor on the screen  
can be moved.

## Display




Portable audio player (ex. iPod)

Stereo cable


Minijack box



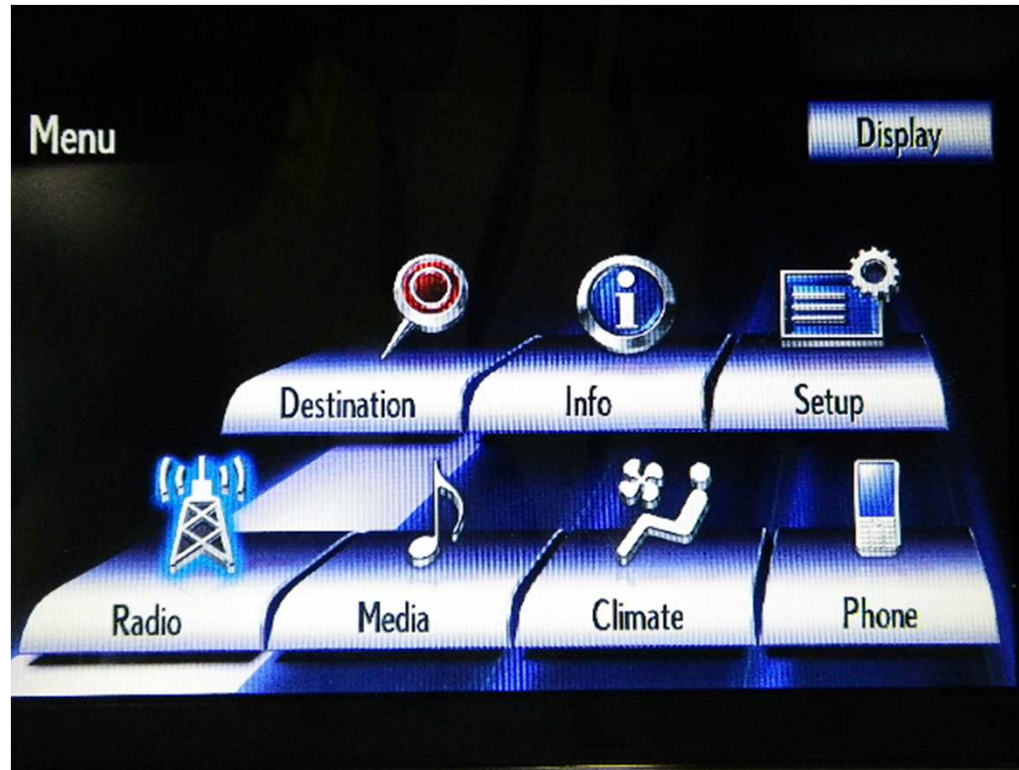

**To enter the Radio screen:**

- 1) Push “Menu” button of the remote control device.**
- 2) Move the cursor on the “Radio” figure.**
- 3) Push “Enter” button of the remote control device.**

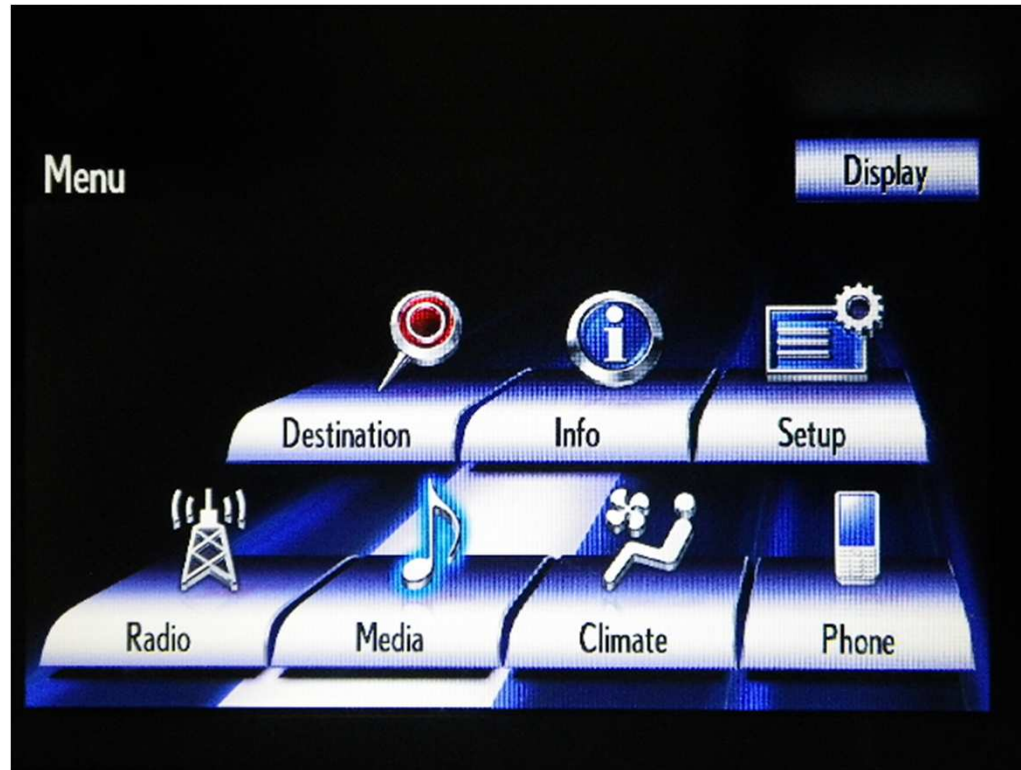

**To enter the Audio screen:**

- 1) Push “Menu” button of the remote control device.**
- 2) Move the cursor on the “Media” figure.**
- 3) Push “Enter” button of the remote control device.**

# Basic Operation

## AUDIO

---

### Using your audio system: some basics

This section describes some of the basic features of the Lexus audio system. Some information may not pertain to your system.

Your audio system works when the engine switch is in "ACC" or "IG-ON" mode.

#### **NOTICE**

*To prevent the battery from being discharged, do not leave the audio system on longer than necessary when the engine is not running.*

(a) Turning the system on, volume control and mode selection



**POWER-VOL:** Push this knob to turn the audio system on and off. Turn this knob to adjust the volume. The system turns on in the last mode used.

# Basic Operation



- Push the “RADIO”  
AM ⇒ FM ⇒ SAT ⇒ AM ...
- Push the “MEDIA”  
DISC ⇒ USB ⇒ BT Audio ⇒ AUX ⇒ DISC ...
- Push these buttons if you want to switch from one mode to Another.
- If a disc is not set, DVD or CD player does not turn on.
- If an audio cable is not connected into the audio input jack, AUX mode does not turn on.
- If Bluetooth is not connected BT mode does not turn on.



# Basic Operation

## ○Tone and balance

How good an audio program sounds to you is largely determined by the mix of the treble, mid-range, and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid-range, and bass.

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.


Keep in mind that if you are listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of one group of sounds while decreasing the volume of another.



**Touching the “SOUND” switch on the screen displays the sound adjust screen.**



# Basic Operation

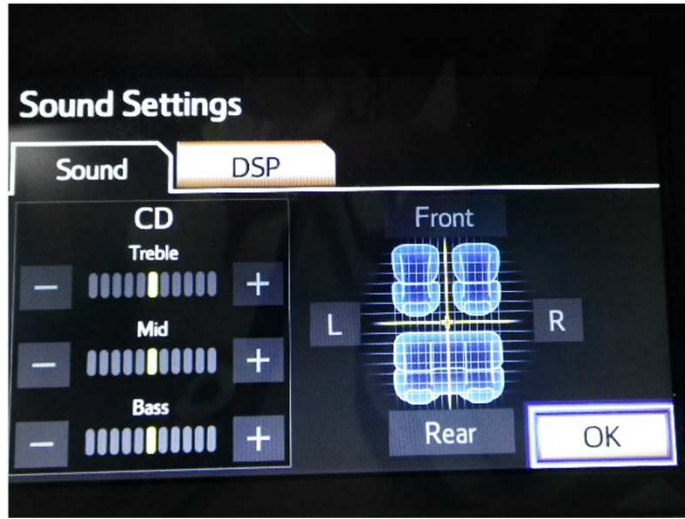

**BASS “+” or “-”:** Adjusts low-pitched tones.

**MID “+” or “-”:** Adjusts mid-pitched tones.


**TREB “+” or “-”:** Adjusts high-pitched tones.

**“FRONT” or “REAR”:** Adjusts sound balance between the front and rear speakers.

**“L” or “R”:** Adjusts sound balance between the left and right speakers.

**“OK”:** The previous screen returns.

# Radio operation

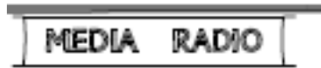

○ Push "RADIO" button to choose an AM or FM band.  
The "AM" or "FM" screen appear on the display .

TUNE-FILE



**Turn this knob to step up or down the frequency.**

Your radio automatically changes to stereo reception when a stereo broadcast is received. "ST" appears on the display. If the signal becomes weak, the radio reduces the amount of channel separation to prevent the weak signal from creating noise. If the signal becomes extremely weak, the radio switches from stereo to mono reception. In this case, "ST" disappears from the display.



# Radio operation

## ○Presetting a station



1. Tune in the desired station.
2. Move cursor onto the station selector switches and keep pushing "Enter" button of the remote control device until a beep is heard.

## ○Selecting a station

Tune in the desired station using one of the following methods.



**Manual tuning:** Turn the "TUNE" knob briefly. When you turn the knob, the radio will step up or down to another frequency.

**Seek tuning:** Push the "SEEK TRACK ▲" or "▼" button. The radio will begin seeking up or down for a station of the nearest frequency and will stop on reception. Each time you push the button, the stations will be searched out one after another.

# CD/DVD player operation

## ○Inserting or ejecting discs

The engine switch must be in “ACC” or “IG-ON” mode.

- CD/DVD MODE by pressing MEDIA key or inserting DISC.
- EJECT by “▲” (eject) button .

## ○Playing a disc

- PLAY/PAUSE by ▶|| key

## ○Selecting a desired track



**“SEEK TRACK” button:** Use for direct access to a desired track.


## ○Fast forward:

Push the “SEEK TRACK up” and hold it to fast forward the disc. When you release the button, the player will resume playing from that position.

## ○Reverse:


Push the “SEEK TRACK down” and hold it to fast forward the disc. When you release the button, the player will resume playing from that position.

# USB/ipod mode operation

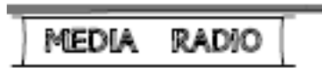


OPush “MEDIA” button to choose the USB or ipod mode.


The “USB” or “ipod” appears on the display.

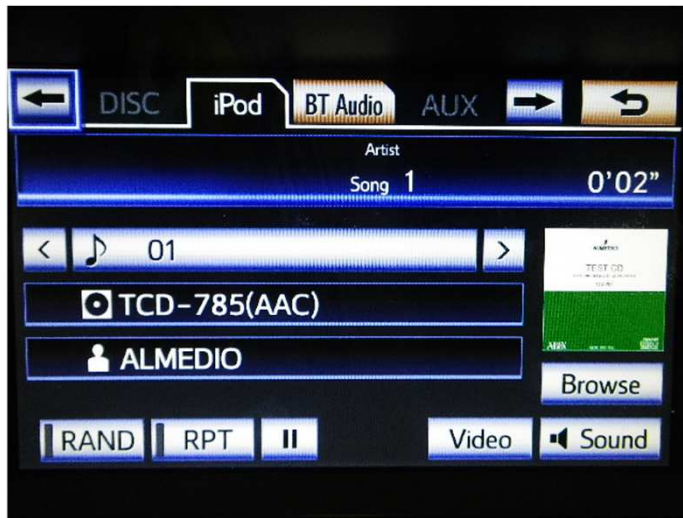


## BT Audio mode operation

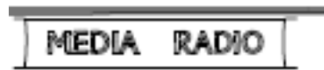

○ Push "MEDIA" button to choose the BT Audio mode.

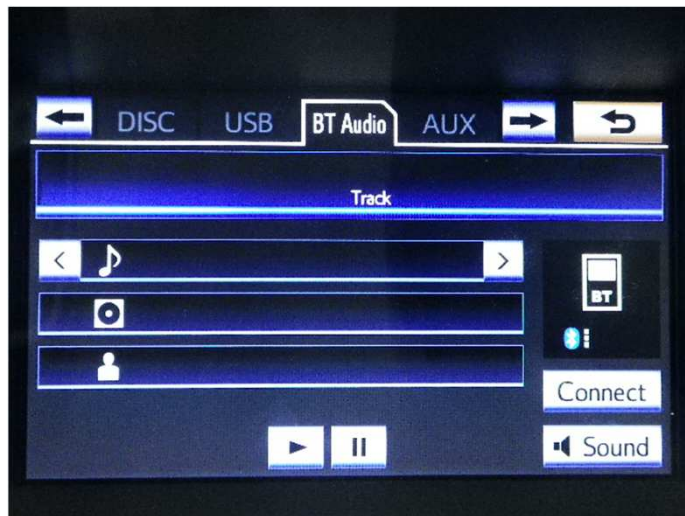

# AUX mode operation

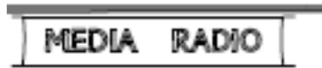

○ Push “MEDIA” button to choose the AUX mode.

The “AUX” appears on the display.



To listen a music of your portable audio player, operate your portable audio directly.