


# Operation Manual

# 1. BASIC OPERATION

## ■ Appearance

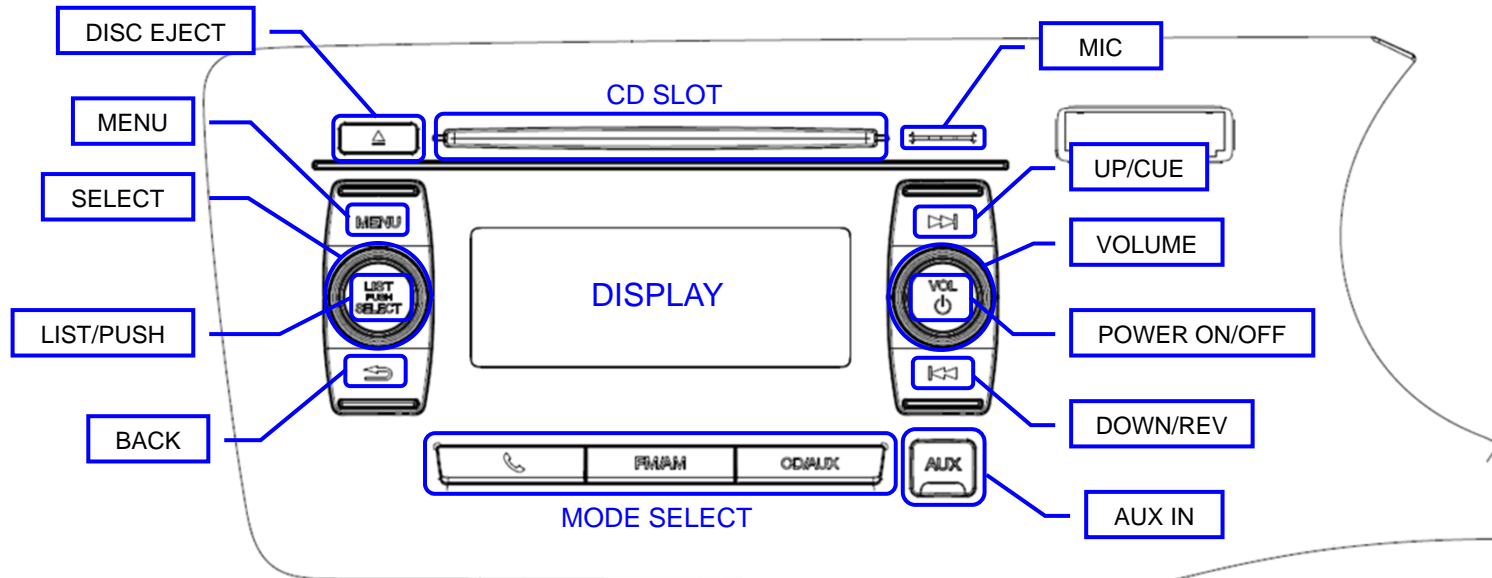

## ■ Power On

Turn on DC power (13.2V) for +B and ACC.

“Honda Logo” appears.



Push the “VOL/⏻” button to turn on the audio system.

## ■ Volume Up/Down

Turn the “ Volume “ knob right : Up

Turn the “ Volume “ knob left : Down

# 1. BASIC OPERATION

## ■ Mode Select

a. Each push of the “ FM/AM “ button switches the mode in the following sequence.

FM1 > FM2 > AM > FM1 ...




b. Each push of the “ CD/AUX “ button switches the mode in the following sequence.

CD > USB/iPod > BT audio > AUX > CD ...




c. Push the “ ☎ “ button, PHONE mode starts.

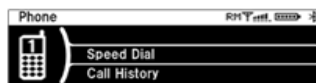


## ■ Sound Settings

After pushing “ MENU “ button, choose the “ Sound Settings “ by pushing the “ LIST/PUSH “ button, You can adjust the equalizer settings to create more fine sound. Bass, Treble, Fader, Balance can be adjusted in this mode.

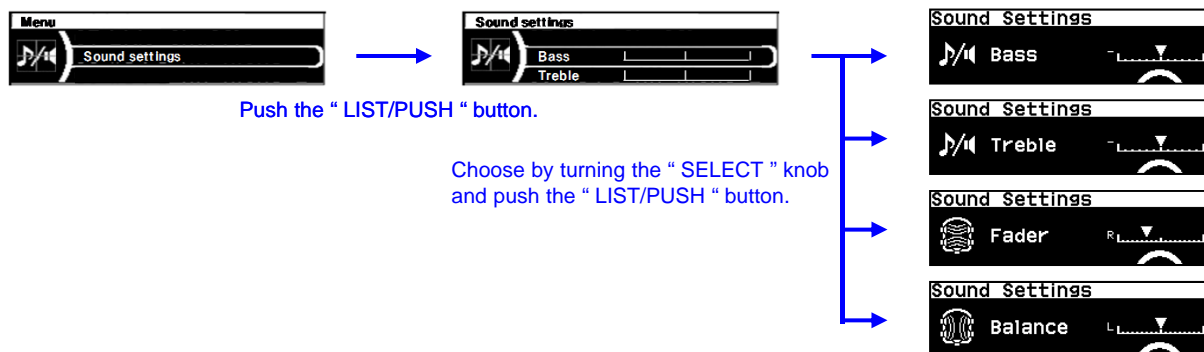

## 2. Operating Radio mode

### ■ Tune Up/Down

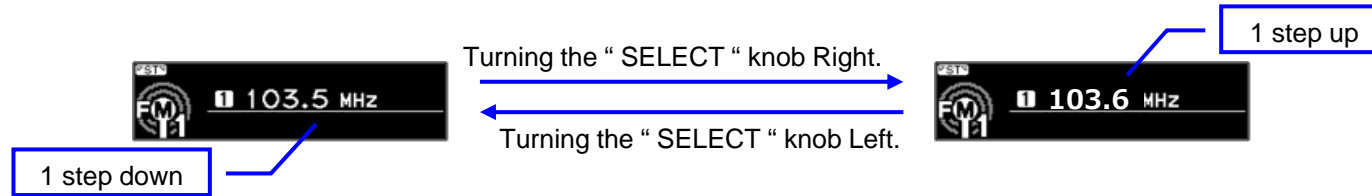

### ■ Seek Up/Down


By pushing the "⏮" , you can seek up.

By pushing the "⏭" , you can seek down.

### ■ Select the preset channel



↓ Push the "LIST/PUSH" button.

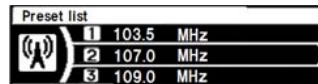

Preset List appears. By turning the "SELECT" Knob, you can select preset channel.

↓ Push the "LIST/PUSH" button.



Channel changes to the selected channel.


## 2. Operating Radio mode

### ■ Preset frequency




Tune frequency by “ Tune Up/Down ” or “ Seek Up/Down ” .

↓ Push the “ MENU ” button.

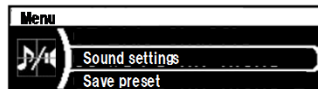


MENU mode appears.

↓ Turn the “ SELECT ” knob.

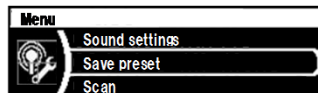


Select “ Save preset ”.

↓ Push the “ LIST/PSH ” button.

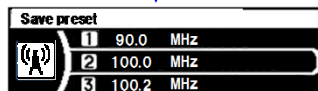

Select the channel you want to preset.

↓ Push the “ LIST/PSH ” button.

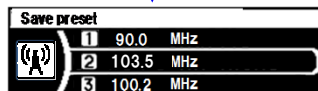


Tuned frequency was set to the channel.



# 3. Operating CD mode

## Track Up/Down

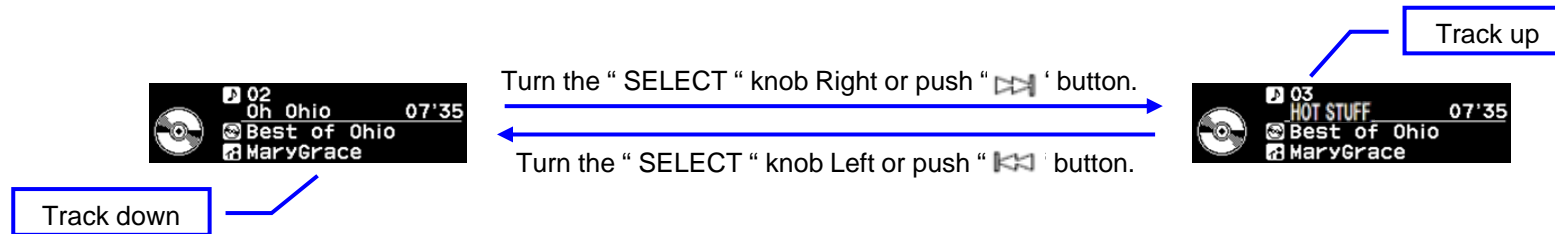


## Cue/Rev


By keep pushing the "▶▶" , you can put "time" forward : Cue .

By keep pushing the "◀◀" , you can put "time" back : Rev .

## Track List

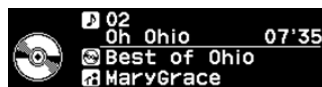


↓ Push the "LIST/PUSH" button.

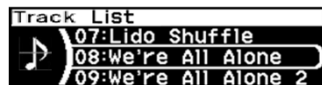

Track List appears. By turning the "SELECT" Knob, you can select other track.


↓ Push the "LIST/PUSH" button.

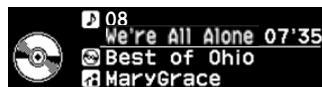


Track changes to the selected track.

# 3. Operating CD mode

## ■ Play Mode

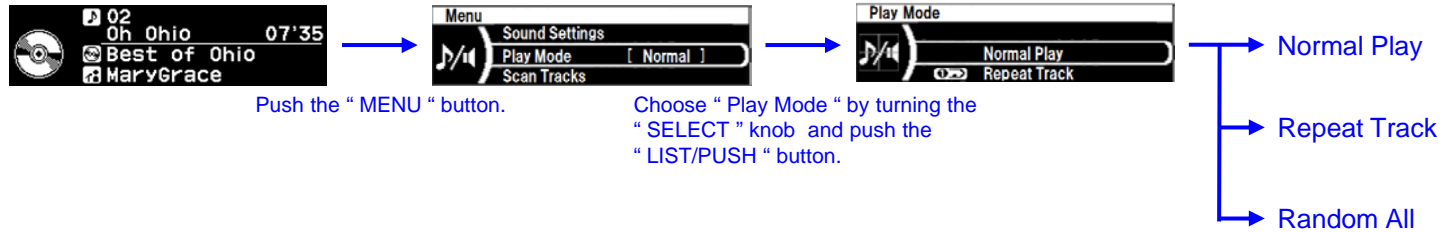


## ■ Scan

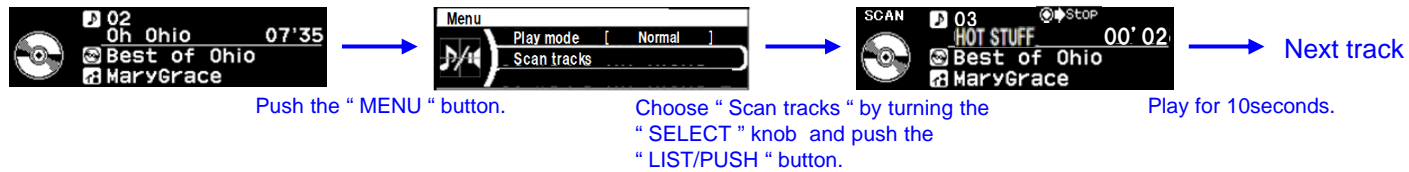


# 4. Operating USB mode

## Track Up/Down

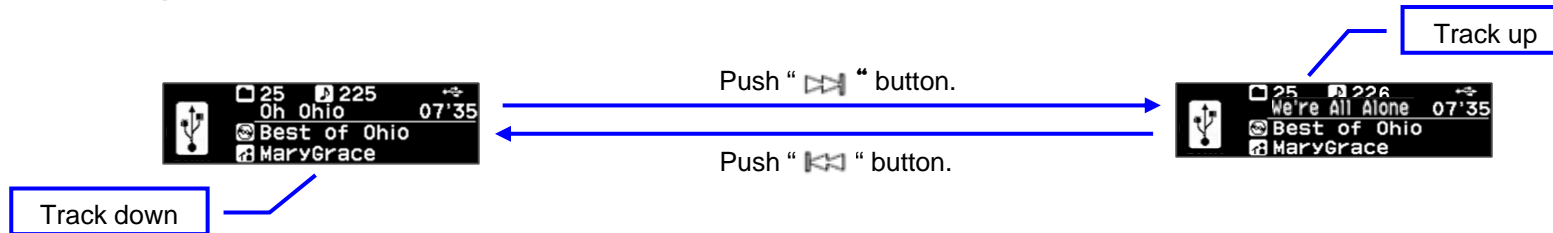

## Folder Up/Down

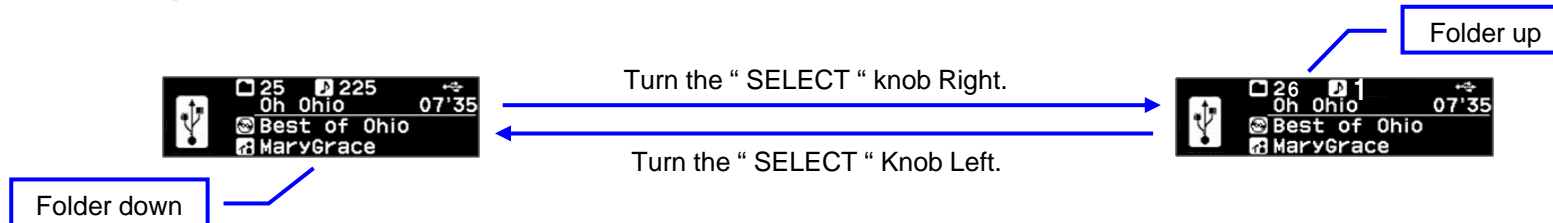


## Cue/Rev

By keep pushing the " [Track Up/Down] ", you can put " time " forward : Cue .

By keep pushing the " [Track Down/Up] ", you can put " time " back : Rev .


## Folder List / Track List

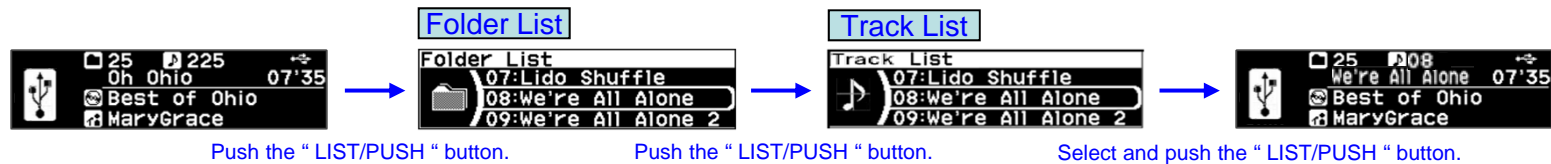




# 4. Operating USB mode

## ■ Audio Menu

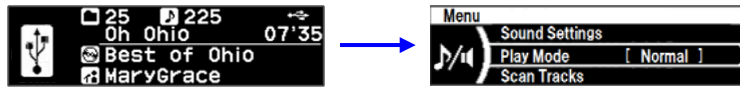


Push the "MENU" button.

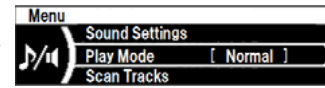


- Sound Setting
- Play Mode
- Scan Tracks ... Scan in current folder.
- Scan Folders ... Scan first tracks in each folders in current Media.

## ■ Play Mode

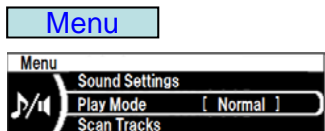


Select "Play Mode."

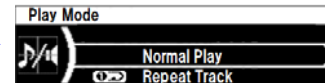

- Normal Play
- Repeat Track
- Repeat Folder
- Random All
- Random In Folder

# 5. Operating iPod mode

## Track Up/Down

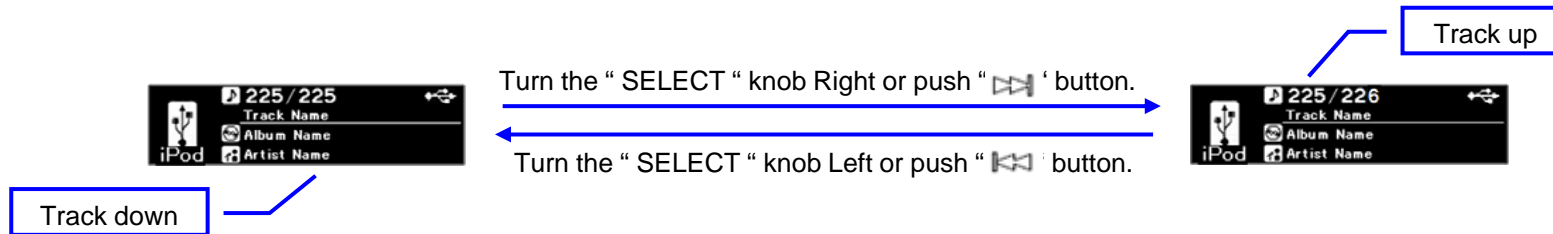


## Cue/Rev

By keep pushing the " [next track] ", you can put " time " forward : Cue .


By keep pushing the " [previous track] ", you can put " time " back : Rev .

## iPod List

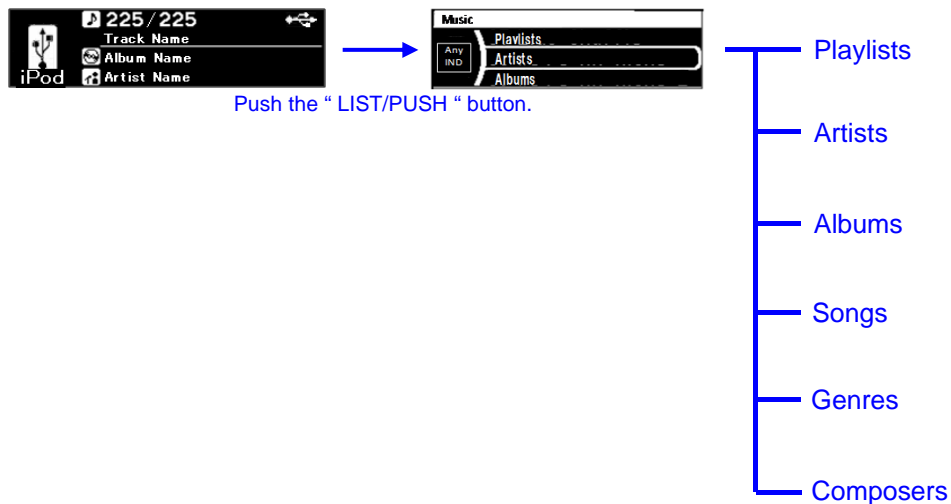


# 5. Operating iPod mode

## ■ Audio Menu

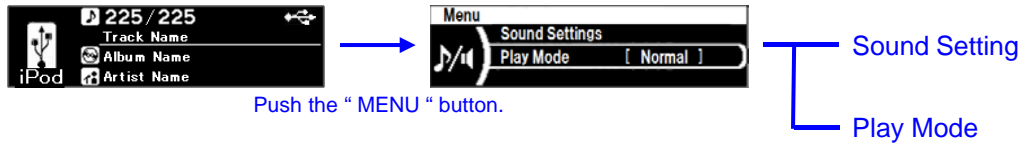


## ■ Play Mode

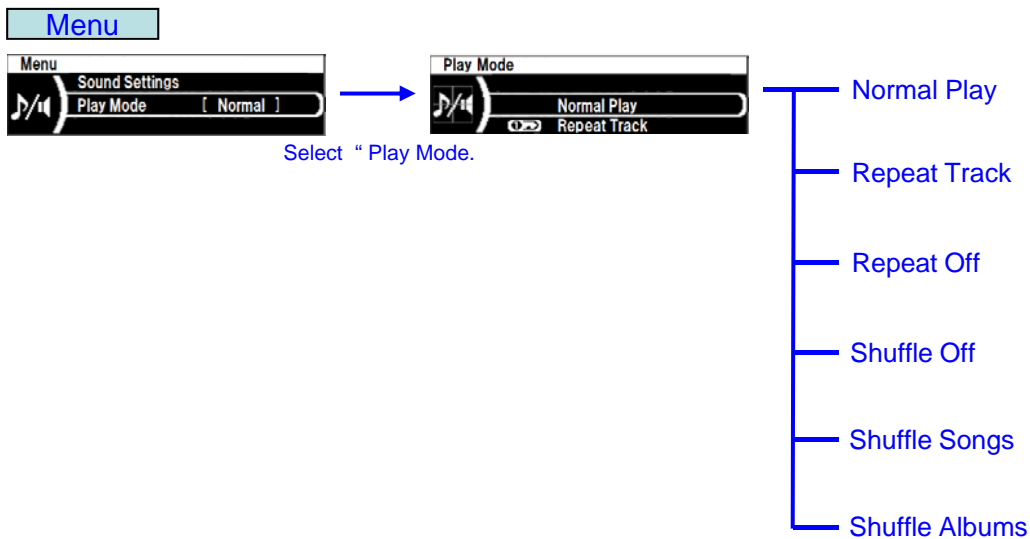


# 6. Operating Bluetooth Audio mode

## Track Up/Down

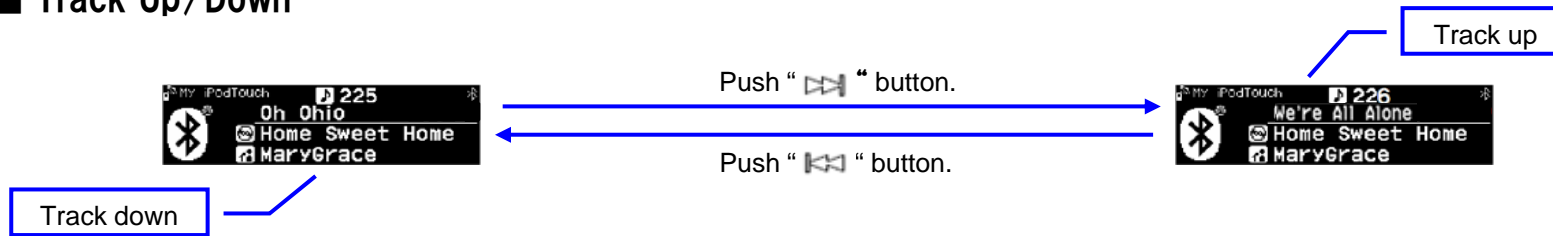

## Group Up/Down

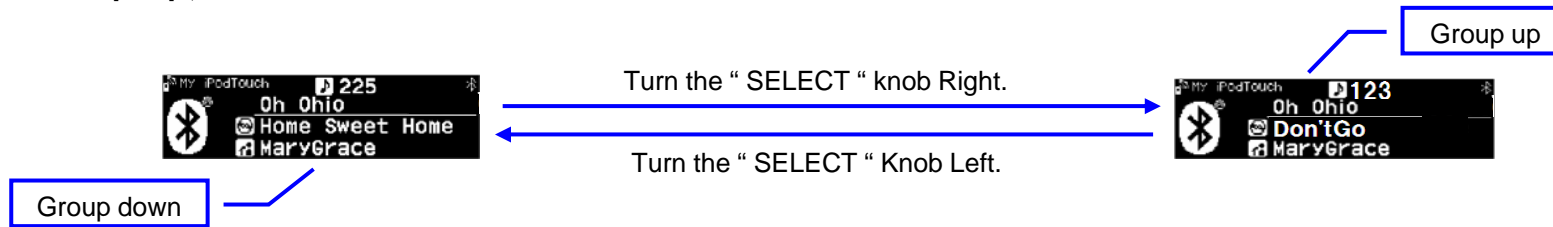


## Cue/Rev

By keep pushing the "Track Up" button, you can put "time" forward : Cue .


By keep pushing the "Track Down" button, you can put "time" back : Rev .

## BT-A Menu

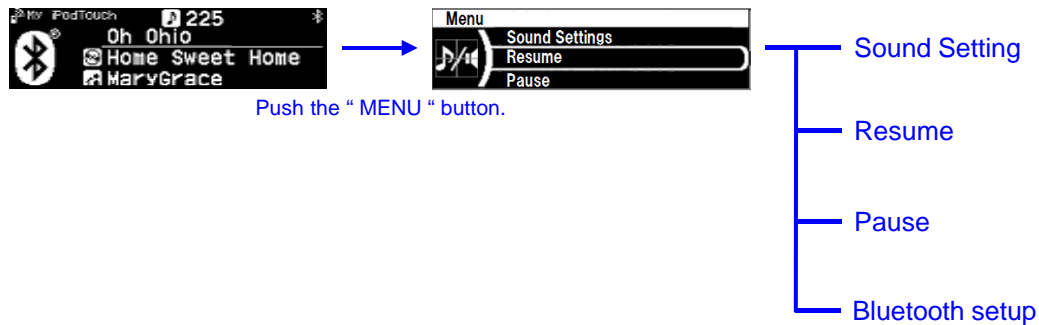

# 7. Operating AUX mode


## ■ AUX Menu

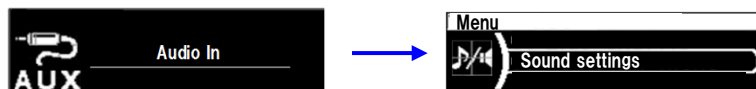


Push the "MENU" button.

# 8. Operating Phone mode

## ■ Phone Menu

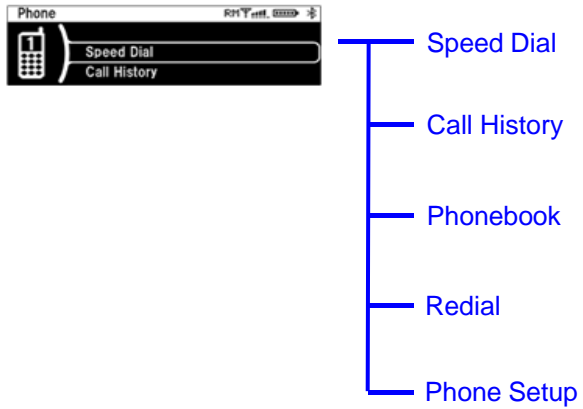


## □ Speed Dial

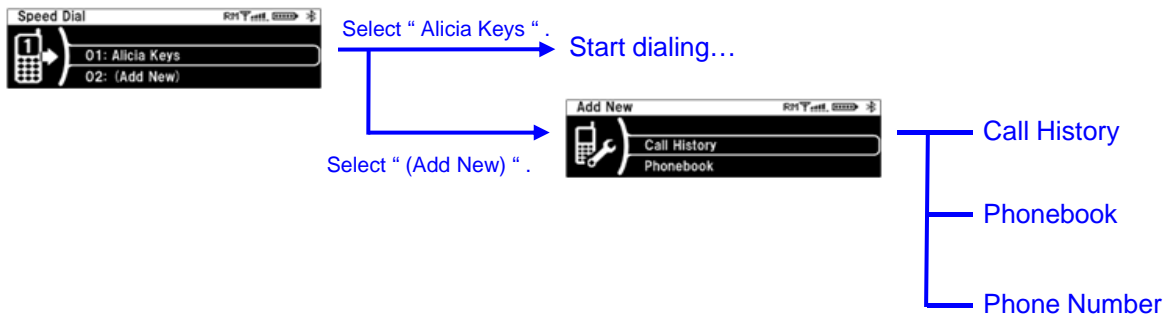


# 8. Operating Phone mode

## ◇ Add Speed Dial (Call History)

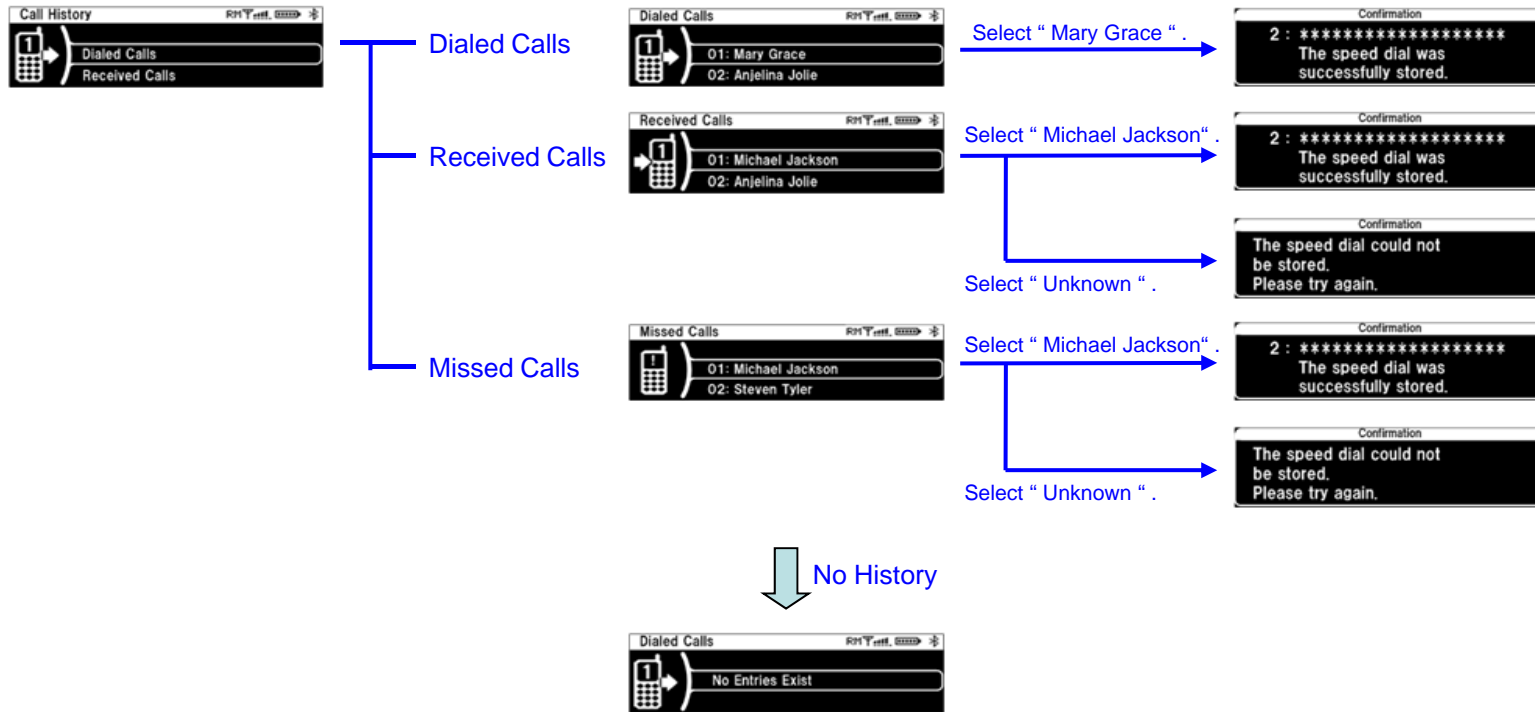


# 8. Operating Phone mode

## ◇ Add Speed Dial (Phonebook)

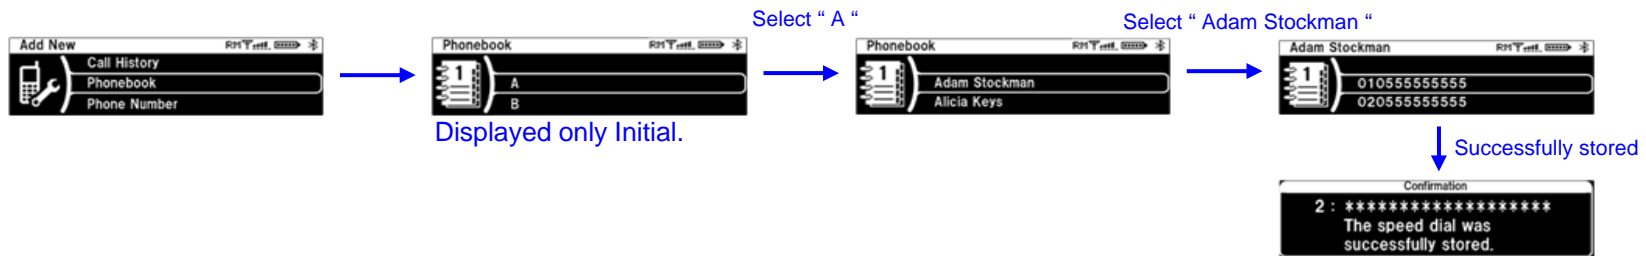


## ◇ Add Speed Dial (Manual Input)

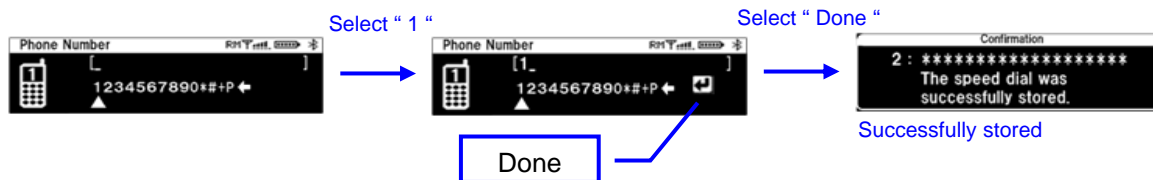




# 8. Operating Phone mode

## □ Call History

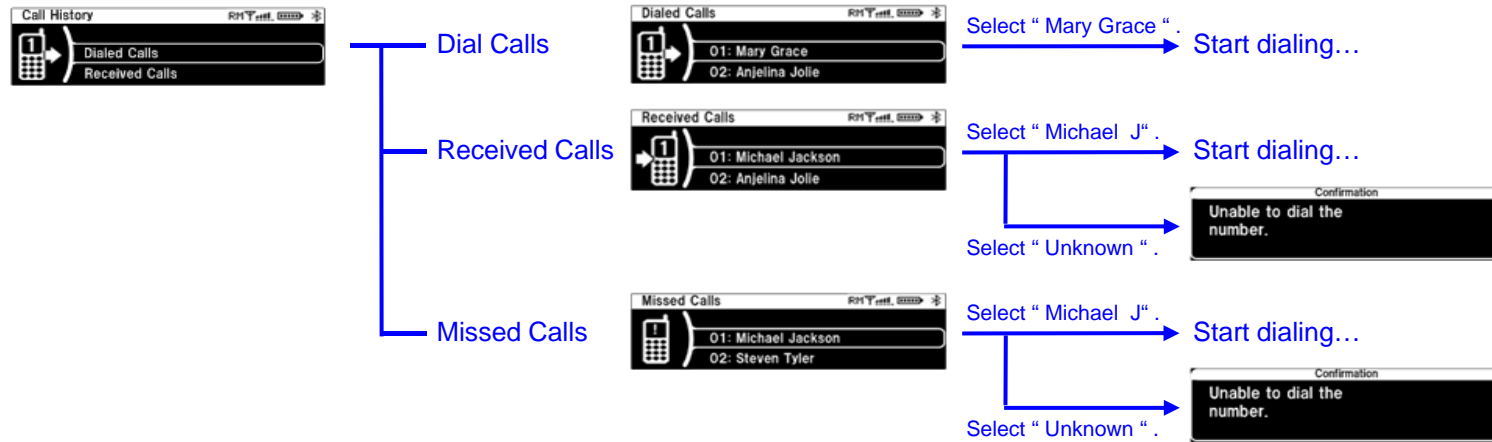

## □ Phonebook

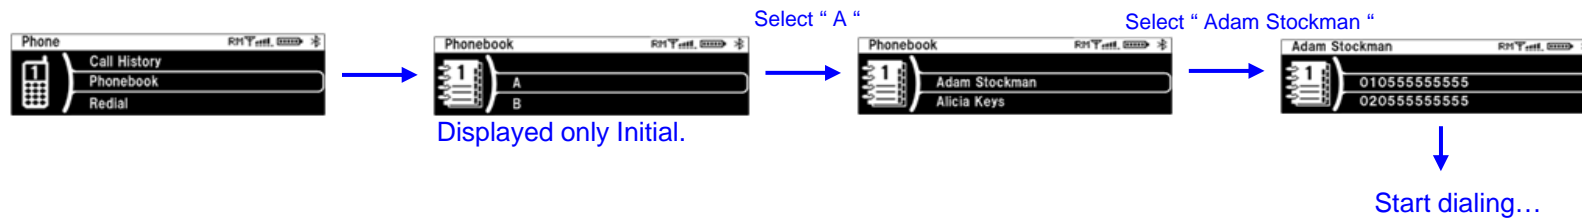

User's Manual Requirement of FCC rules

FCC User's manual requirements that are required by FCC rules are described on user's manual of the vehicle as followings;

『" DEH-3548ZH/DEH-4648ZH" is installed in motor vehicle.  
Therefore, we will not supply the user's manual.  
So, following FCC user's manual statement will be stated in user's manual of the motor vehicle.』

<b>FCC</b>	■ FCC ID	FCC ID: AJDK076	
	■ SAR caution	This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).	
	■ Co-Location caution	This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.	
	■ Statement	This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired	
	■ FCC WARNING	FCC WARNING Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.	