

START UP

1. Carefully lift off the plastic blister and unscrew and remove the **TANK**.
2. Unscrew and remove the battery covers on both the controller and the charging unit. Insert 4 "AA" batteries (not included) into the charger unit and 3 "AAA" batteries (not included) into controller unit. Then replace the batteries cover and tighten the screws. **CHARGING THE TANK**.

1. Place the **TANK** on top of the charging unit in the direction of the **TANK** outline as shown. Gently but firmly push the **TANK** into position on the unit.

2. Press the charging button.

The charging light indicator will turn on indicating the **TANK** is charging. The light indicator will turn off when the **TANK** is fully charged – approx. 45 seconds

3. To remove **TANK** from unit, gently but firmly push down on the front and lift off

*** ONLY REMOVE THE TANK FROM THE CHARGING UNIT GENTLY. REMOVING OTHERWISE MAY CAUSE DAMAGE TO THE CHARGING UNIT!**

PLEASE NOTE:

- a). If the batteries inside the charger are low, the charging light will become dim or not light up at all, and you will not be able to charge the vehicle. Please replace the batteries.
- b). Make sure the batteries have been inserted correctly (+ or -) then prepare to charge the vehicle.
- c). Rechargeable batteries may get hot and dangerous if being continuously recharged.
- d). If charger light dims or if vehicle does not respond properly, please replace charger and/or controller batteries.

OPERATING THE VEHICLE

1. Fully extend the controller antenna
2. STEERING FORWARD - FOR STRAIGHT FORWARD MOTION, PRESS THE LEFT HAND SIDE FORWARD (F) BUTTONS .

TO MAKE THE TANK TURN FORWARD RIGHT, PRESS THE LEFT HAND SIDE FORWARD (F) BUTTON AND THE RIGHT HAND SIDE (R) BUTTON.

TO MAKE THE TANK TURN FORWARD LEFT PRESS THE RIGHT HAND SIDE FORWARD (F) BUTTON AND THE MIDDLE LEFT (L) BUTTON.

3. STEERING REVERSE - FOR STRAIGHT REVERSE MOTION, PRESS LEFT HAND SIDE REVERSE (R) BUTTONS.

TO MAKE THE TANK TURN REVERSE RIGHT PRESSING THE LEFT HAND SIDE REVERSE BUTTON AND RIGHT HAND SIDE (R) BUTTON.

TO MAKE THE TANK TURN REVERSE LEFT PRESSING THE RIGHT HAND SIDE REVERSE (R) BUTTON AND THE MIDDLE LEFT (L) BUTTON.

PLEASE NOTE, the **TANK** will turn only when it is moving forwards or backwards.

ITEM NO. 3116 - TANKS

- a). When operating the controller, please do not touch the antenna.
As control distance and the speed will both be affected.
- b). If you notice a reduction in speed and control, please begin re-charging per the instructions above, or if necessary replace batteries.

PLEASE NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed
- Consult the dealer or an experienced radio/TV technician for help

NOTE:

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation of the device.

**NOTE: THE MANUFACTURER IS NOT RESPONSIBLE
FOR ANY RADIO OR TV INTERFERENCE CAUSED BY
UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.
SUCH MODIFICATIONS COULD VOID THE USER'S**

AUTHORITY TO OPERATE THE EQUIPMENT.*IMPORTANT - IF CHARGER
LIGHT DIMS OR IF VEHICLE
DOES NOT RESPOND PROPERLY, PLEASE REPLACE
CHARGER BATTERIES (4x AA).

CONSUMER SERVICE:

Please do not return to store!

For parts information, or questions please call:

1-877-FUN-TOYS

Manufactured and distributed by

Planet Toys, Sarasota, FL 34242

Made in China

Colors and contents may vary

Keep content details for future reference INSTRUCTION MANUAL