

## **#3215 MINI RC HARLEY DAVIDSON MOTORCYCLE ASSORTMENT**

### **START UP**

1. **CAREFULLY LIFT OFF** the **PLASTIC** blister and unscrew and remove the motorcycle from the plastic blister.
2. Unscrew and **REMOVE** the battery **COVERS** on both the controller and **THE** charging unit. **INSERT** 3 "AA" batteries (not included) into charger unit and 3 "AAA" batteries (not included) into controller of the battery compartments. Then **REPLACE** the battery **COVERS** and tighten the screws.

### **CHARGING THE MOTORCYCLE**

1. Place the motorcycle on **TOP OF** the charging unit **HOLDER**, **GENTLY BUT FIRMLY PUSH THE MOTORCYCLE INTO POSITION ON THE HOLDER**.
2. Press the charging button and the charging LED indicator will turn on **INDICATING THE MOTORCYCLE IS CHARGING**. The LED indicator will automatically go off when the vehicle is fully charged (approx. 45 seconds).

**PLEASE NOTE:** a). If the batteries inside the controller are low, the LED light will become dim or **NOT LIGHT UP AT ALL, AND YOU WILL NOT BE ABLE TO CHARGE THE MOTORCYCLE. PLEASE REPLACE THE BATTERIES.**

b). Make sure the **BATTERIES HAVE BEEN INSERTED CORRECTLY (+ OR - )** then preparing **TO CHARGE THE MOTORCYCLE.**

c). Rechargeable batteries may get hot and dangerous if being continuously recharged.

### **OPERATING THE MOTORCYCLE:**

- 1). Fully extend the **CONTROLLER ANTENNA**.
- 2). Press the forward and reverse buttons to make the vehicle move **FORWARDS AND BACKWARDS. FOR LEFT AND RIGHT TURNING**, pull the steering handle bar respectively. **PLEASE NOTE**, the motorcycle will turn only when it is moving forwards or backwards.

**PLEASE NOTE:** a) When operating the controller, please do not touch the antenna. As the control distance and the speed will both be **AFFECTED**.

b). **IF YOU NOTICE A REDUCTION IN SPEED AND CONTROL, PLEASE BEGIN RE-CHARGING PER THE INSTRUCTIONS ABOVE.**

**WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.**

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device