

## **PLEASE NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed
- Consult the dealer or an experienced radio/TV technician for help

## **NOTE:**

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.

## **CAUTION:**

- Do Not operate the boat where there are plants or debris in the water, as they may cause damage to the hull or propeller.
- Do Not use in salt water (ocean), as this will damage parts.
- Never play outdoors during extreme weather, such as thunderstorms.
- Avoid hard crashes.
- Do Not operate the boat when there is a strong wind or current.
- Never touch the propeller while it is turning.
- Always get the boat out of the water before the battery power is gone.
- Never give the boat, controller, or charger to a child under 3, as they all contain small parts.
- Do not allow the antenna to get wet, as this will affect the control distance.
- Never use chemicals including benzene, alcohol or thinner to clean the boat.

# INSTRUCTION MANUAL



"WHERE NO KID HAS GONE BEFORE"

Manufactured and distributed by  
Planet Toys, Sarasota, FL 34242  
Made in China

**malibu**  
A STEP BEYOND

**MasterCraft**  
HELD TO A HIGHER STANDARD

**ASST. # 3260  
ITEM # 3261  
ITEM # 3262**

**\*IMPORTANT - IF CHARGER LIGHT DIMS OR IF BOAT DOES NOT RESPOND PROPERLY, PLEASE REPLACE CHARGER BATTERIES (4x AA).**

**\*\*NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

## **WARNING:**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation of the device.

## **CONSUMER SERVICE**

**Please do not return to store!**

 
 
 
**For parts information, or questions please call:**

**1-877-FUN-TOYS**

For a universe of fun visit  
[www.planettoysltd.com](http://www.planettoysltd.com)


## START UP

1. Carefully remove the charger, boat and controller from the packaging.
2. Unscrew and remove the battery covers on both the controller and the charging unit. Insert 4 "AA" alkaline batteries (not included) into the charger unit and 3 "AAA" alkaline batteries (not included) into the controller of the battery compartments. Then replace the battery covers and tighten the screws. (see diagrams #1 and # 2)

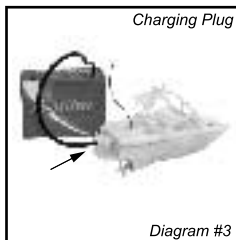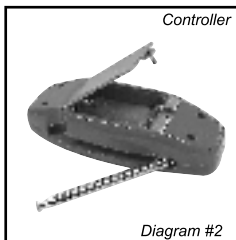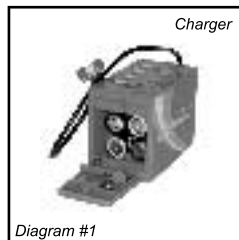

## CHARGING THE BOAT

 1. Insert the charging plug into the charging receptacle located on the rear of boat . (see diagram #3)
2. Press the charging button. The charging LED indicator will turn on indicating the boat is charging. The LED indicator will turn off when the boat is fully charged approx. 60 seconds. (See diagram #4)
3. Remove charging plug from charging receptacle.

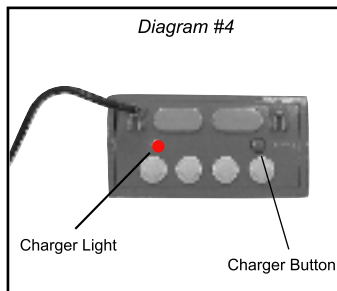


### PLEASE NOTE:

- a). If the alkaline batteries inside the charger are low, the LED light will become dim or not light up at all, and you will not be able to charge the boat. Please replace the alkaline batteries.
- b). Make sure the alkaline batteries have been inserted correctly (+ or -) then prepare to charge the boat.
- c). Rechargeable batteries may get hot and dangerous if being continuously recharged.
- d). If boat is not responding properly, please replace charger and/or controller batteries.
- e). only use alkaline batteries.

## OPERATING THE BOAT

 - 1.) Fully extend the controller antenna.
- 2.) Press the forward and reverse buttons (F or R) to make the boat move forwards and backwards. For left and right turning, press the left and right buttons (L or R) respectively. Please note, the boat will turn only when it is moving forwards or backwards. (See diagram #5)
- 3.) Hold controller and antenna high for best reception and control.

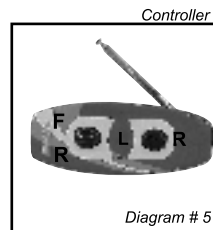

### PLEASE NOTE:

- a) When operating the controller, please do not touch the antenna. As control distance and the speed will both be affected.
  - b) If you notice a reduction in speed and control, please begin recharging per the instructions above.
- Do not allow the antenna to get wet, as this will affect the control distance.
- Never use chemicals including benzene, alcohol or thinner to clean the boat.

## TROUBLE SHOOTING

| Problem          | Reasons                                                                         | Solution                                                                                                                                                                                                                                                                                         |
|------------------|---------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sailing problems | The alkaline battery inside the radio control or charger unit too weak.         | Replace with new alkaline batteries.                                                                                                                                                                                                                                                             |
|                  | There is a weak or low reception for the radio control.                         | Check the wire on the boat and fully extend the controller antenna.                                                                                                                                                                                                                              |
| Other            | The boat does not respond to the radio control.                                 | Try playing at another location.                                                                                                                                                                                                                                                                 |
|                  | The radio control's frequency is disrupted by something around the environment. | Some other equipment using the same radio wave could disrupt the radio control. Either play in another location or turn off other equipment. If you are planning to race your vehicles with another friend, purchase vehicles with 2 different frequencies(49MHz and 27MHz) to avoid disruption. |

Model No. : FCC ID: QG33260T49

## Planet Toys Worldwide Ltd.

1107 Chinachem Golden Plaza,  
77 Mody Road,  
Tsimshatsui East  
Kowloon, Hong Kong



Phone: (852) 2311 8697

Fax: (852) 2311 7711

### POWER OF ATTORNEY

DATE: 10 th February, 2004.

Federal Communications Commission  
Authorization and Evaluation Division  
7435 Oakland Mills Road  
Columbia, MD 21046

To Whom It May Concern:

We, the undersigned, hereby authorize TIMCO ENGINEERING, INC. on our behalf, to apply to the Federal Communications Commission on our equipment. Any and all acts carried out by TIMCO ENGINEERING, INC. on our behalf shall have the same effect as acts of our own. This authorization expires on 10th, May, 2004.

This is to advise that we are in full compliance with the Anti-Drug Abuse Act. We, Planet Toys Worldwide Ltd., are not subject to a denial of federal benefits pursuant to Section 5301 of the Anti-Drug Act of 1988, 21 USC853a, and no party to the application is subject to a denial of federal benefits pursuant to that section.

Sincerely,

Planet Toys Worldwide Ltd.

T.K. Wong / Planet Toys Worldwide Ltd.  
Merchandise Manager

MANUFACTURER: Root Land Plastic & Electronic Products Co. Ltd.  
Bai Yun Keng Industrial Area, Tu-Hu,  
Danshui Town of Hui Yang City, China.

RECEIVED  
11 FEB 2004

BY:.....