

## PLEASE NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed
- Consult the dealer or an experienced radio/TV technician for help

## NOTE:

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.

# INSTRUCTION MANUAL

ITEM NO.



"WHERE NO KID HAS GONE BEFORE"

Manufactured and distributed by  
Planet Toys, Sarasota, FL 34242

Made in China

Colors and contents may vary  
Keep content details for future reference

TM & © Hanna-Barbera

(s03)

**\*IMPORTANT - IF CHARGER LIGHT DIMS OR IF VEHICLE DOES NOT RESPOND PROPERLY, PLEASE REPLACE CHARGER BATTERIES (4x AA).**

**\*\*NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

## **WARNING:**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation of the device.

## **CONSUMER SERVICE**

Please do not return to store!

For parts information, or questions please call:

**1-877-FUN-TOYS**

8/22/03

## **START UP**

1. Carefully lift off the plastic blister and unscrew and remove the vehicle.
2. Unscrew and remove the battery covers on both the controller and the charging unit. Insert 3 "AA" batteries (not included) into the charger unit and 3 "AAA" batteries (not included) into controller unit. Then replace the batteries cover and tighten the screws

## **CHARGING THE VEHICLE**

1. Place the vehicle on top of the charging unit in the direction of the vehicle outline as shown. Gently but firmly push the vehicle into position on the unit.
2. Press the charging button, the charging light indicator will turn on indicating that the vehicle is charging. The light indicator will turn off when the vehicle is fully charged approx. 45 seconds
3. To remove vehicle from unit, gently but firmly push down on the front and lift off.

**\* ONLY REMOVE THE VEHICLE FROM THE CHARGING UNIT GENTLY. REMOVING OTHERWISE MAY CAUSE DAMAGE TO THE CHARGING UNIT.**

### **PLEASE NOTE:**

- a). If the batteries inside the charger are low, the LED light will become dim or not light up at all, and you will not be able to charge the vehicle. Please replace the batteries.
- b). Make sure the batteries have been inserted correctly (+ or -) then prepare to charge the vehicle.
- c). Rechargeable batteries may get hot and dangerous if being continuously recharged.
- d). If the vehicle does not respond properly, please replace charger and/or controller batteries.

## **OPERATING THE VEHICLE**

1. Fully extend the controller antenna.
2. Press the forward and reverse buttons (F or R) to make the vehicle move forwards and backwards. For left and right turning, press the left and right buttons (L or R) respectively. Please note, the vehicle will turn only when it is moving forwards or backwards
3. Hold controller and antenna high for best reception and control.
4. **Adjust the fine tune steering lever located under the vehicle to keep it moving straight**

### **PLEASE NOTE:**

- a). When operating the controller, please do not touch the antenna. As control distance and the speed will both be affected.
- b). If you notice a reduction in speed and control, please begin recharging per the instructions above.

## Planet Toys Worldwide Ltd.

1107 Chinachem Golden Plaza,  
77 Mody Road,  
Tsimshatsui East  
Kowloon, Hong Kong



Phone: (852) 2311 8697  
Fax: (852) 2311 7711

### POWER OF ATTORNEY

DATE: 9 th Dec., 2003.

Federal Communications Commission  
Authorization and Evaluation Division  
7435 Oakland Mills Road  
Columbia, MD 21046

To Whom It May Concern:

We, the undersigned, hereby authorize TIMCO ENGINEERING, INC. on our behalf, to apply to the Federal Communications Commission on our equipment. Any and all acts carried out by TIMCO ENGINEERING, INC. on our behalf shall have the same effect as acts of our own. This authorization expires on 9th, March, 2004.

This is to advise that we are in full compliance with the Anti-Drug Abuse Act. We, Planet Toys Worldwide Ltd., are not subject to a denial of federal benefits pursuant to Section 5301 of the Anti-Drug Act of 1988, 21 USC853a, and no party to the application is subject to a denial of federal benefits pursuant to that section.

Sincerely,

Planet Toys Worldwide Ltd.



T.K. Wong / Planet Toys Worldwide Ltd.  
Merchandise Manager

MANUFACTURER: Root Land Plastic & Electronic Products Co. Ltd.  
Bai Yun Keng Industrial Area, Tu-Hu,  
Danshui Town of Hui Yang City, China.