

 
BackBeat FIT 3200 Series

User Guide

Contents

Controls overview	3
Power, pair and charge	4
Power on the case	4
Pair first time	4
Pair mode	4
Charge	4
Install the app	6
The Basics	7
Power on/off your earbuds	7
Adjust the volume	7
Play or pause audio	7
Track selection	7
Make/Take/End Calls	7
Use Siri, Google Now	8
DeepSleep mode	8
Switch controls for better audio	8
Support	9

Controls overview

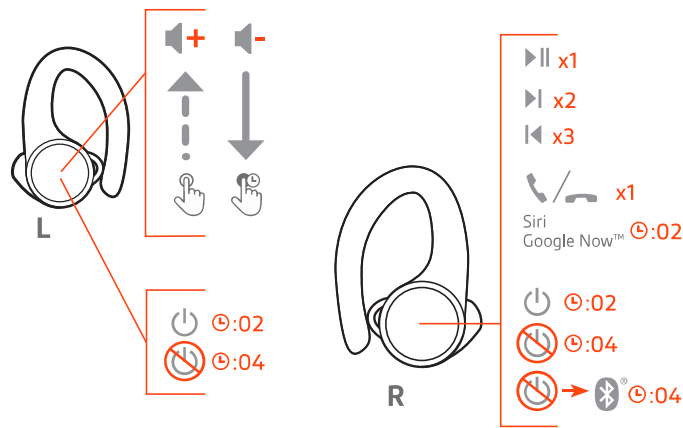

Right	Primary earbud (pairs to phone)
▶	Play/pause * Click 1 time
▶▶	Next track * Click 2 times
◀◀	Previous track * Click 3 times
☎	Call answer/end Click 1 time
Siri/ Google Now	Click and hold 2 seconds
⏻	Power on Click and hold 2 seconds
⏻	Power off Click and hold 4 seconds
📶	Pair With the earbud powered off, click and hold 4 seconds
	Reconnect to left earbud Tap each earbud 3 times
Left	Secondary earbud (connects to right earbud)
🔊+	Volume up Tap to increase levels (touch sensor)
🔊-	Volume down Touch and hold
⏻	Power on Click and hold 2 seconds
⏻	Power off Click and hold 4 seconds
	Reconnect to right earbud Tap each earbud 3 times

 
NOTE *Functionality varies by application. May not function with web-based apps.

Power, pair and charge

Power on the case

Your charge case is shipped from the factory in a Deepsleep mode to conserve battery. Power on your charge case to power your earbuds for first use.


Click and hold the charge case button for two seconds to power it on. The charge case LEDs light up.

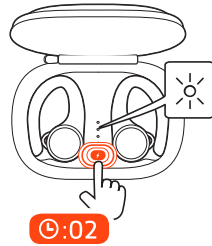

Pair first time

The first time you take your earbuds out of the charge case, the pairing process begins.

 - 1 Take the earbuds out of the case. The LED, located on the right earbud, flashes red and white to indicate pairing mode.

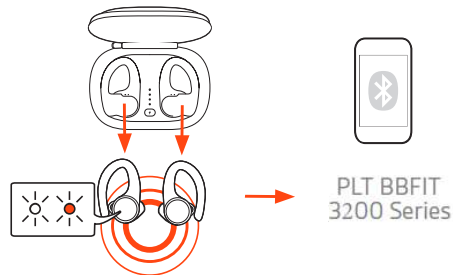


- 2 Activate Bluetooth® on your phone and set it to search for new devices.
 - iPhone Settings > Bluetooth > On*
 - Android™ Settings > Bluetooth: On > Scan for devices*

NOTE * Menus may vary by device.

- 3 Select "PLT BBFIT3200 Series."
Once successfully paired, you hear "pairing successful" and the earbud LED stops flashing.


Pair mode

 With the headset powered off, click and hold the right earbud until you hear "pairing."

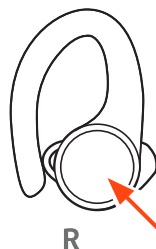

Charge

 To charge your earbuds, place them in the charge case. Charge the case by plugging it into a computer or USB charging device. For fastest charging, plug them into a wall charger.

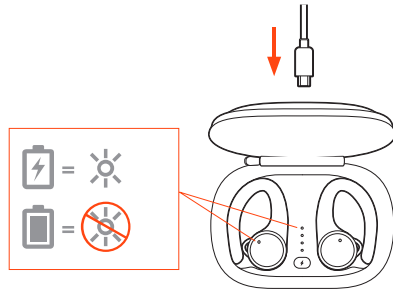

NOTE *If the charge case has no charge, first charge the case separately, then charge the earbuds.*

LEDs on earbuds/case

Earbuds charging On

Case charging Flashing

Earbuds fully charged Off

Case fully charged Off

Install the app

 
Get the most from your earbuds by downloading our free app, BackBeat for iOS/Android.

With this app, you can:

- Stream a **playlist**, use a stopwatch, customize volume settings and more on your earbuds (My Tap)
- Change earbud **language**
- Turn settings on/off
- Switch earbud controls from the right earbud to the left earbud
- Find MyHeadset
- View the user guide




The Basics

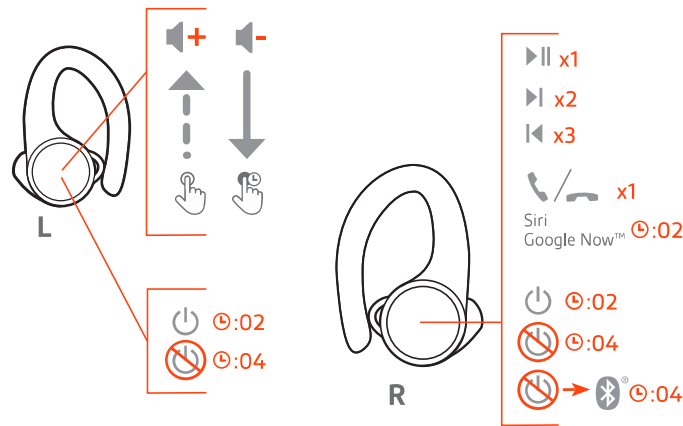

Power on/off your earbuds

You can automatically or manually power on/off the earbuds.

 - **Automatic** Taking the earbuds out of the case, automatically powers your earbuds on. Conversely, putting them back in the case automatically powers them off and starts charging them.

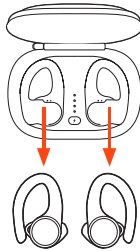

- **Manual** Click and hold the earbud button for 2 seconds to manually power it on. To manually power them off, click and hold for four seconds.
NOTE Turning off the right earbud, turns off the left earbud. To power on, power the earbuds on individually.

Power transfer

If your right earbud loses power, all functions and audio transfers to the left earbud.

Adjust the volume

The left earbud has a touch sensor button. Only a light touch is required.

- 1 To **increase volume**, tap the left earbud.
- 2 To **decrease volume**, touch and hold the left earbud.

Play or pause audio

Click the right earbud.

NOTE Functionality varies by application.

Track selection

Double-click the right earbud to skip to the next track or triple-click the right earbud to play the previous track.

NOTE Functionality varies by application. May not function with web-based apps.

Make/Take/End Calls

Answer or end a call

Click the right earbud.

Answer a second call

First, click the right earbud to end current call, then click the right earbud again to answer new call.

Use Siri, Google Now

Your earbuds support Virtual Personal Assistants (VPA) such as Siri and Google Now.

Click and hold the right earbud for two seconds to use your device's VPA.

DeepSleep mode

If you leave your earbuds powered on but out of range of your paired device, they conserve power by entering DeepSleep mode after 120 minutes and power off mode after 7 days.

To exit DeepSleep mode, choose:

- **After 120 minutes**, power on each earbud.
- **After 7 days**, reset by powering off and on.

Switch controls for better audio

For best Bluetooth performance, keep your phone/audio device on the same side of your body as the primary earbud.

Your right earbud is the primary earbud by default. It pairs to your phone/audio device and the left earbud automatically connects to the right.

If you prefer having your phone/audio device on the left side of your body, use the Switch Primary Earbud feature in the BackBeat app to make the left earbud the primary earbud. This moves the Bluetooth connection as well as primary controls to the left earbud and move the volume and My Tap controls to the right earbud.

Support

NEED MORE HELP?

plantronics.com/support

Plantronics, Inc.

345 Encinal Street
Santa Cruz, CA 95060
United States

Plantronics B.V.

Scorpius 171
2132 LR Hoofddorp
Netherlands

© 2019 Plantronics, Inc. BackBeat and Plantronics are trademarks of Plantronics, Inc. registered in the US and other countries, and Plantronics Hub is a trademark of Plantronics, Inc. Bluetooth is a registered trademark of Bluetooth SIG, Inc. and any use by Plantronics, Inc. is under license. All other trademarks are the property of their respective owners.

Patents pending.

XXXXXX-XX 06.19

Stereo Bluetooth Headset
Model ID: BF3200S

sk Symbol prečiarknutého odpadového kontajnera na kolieskach označuje, že odpadové elektrické a elektronické zariadenia a batérie sa nesmú likvidovať spolu s iným netriedeným komunálnym odpadom, ale musia sa zhromažďovať samostatne. Podrobnejšie informácie nájdete na webovej stránke plantronics.com.

sl Simbol prečrtanega smetnjaka pomeni, da odpadne električne in elektronske opreme ter baterij ni dovoljeno odlagati kot nerazvrščene komunalne odpadke, ampak jih je treba zbirati ločeno. Za podrobnejše informacije obiščite spletno stran plantronics.com.

sv Den överkorsade soptunnan innebär att elektriskt och elektroniskt avfall och batterier inte får kasseras med osorterat hushållsavfall, utan ska samlas in separat enligt lokala lagar och förordningar. Mer detaljerad information finns på plantronics.com.

tr Üzerine çarpi işareti çizilmiş bir çöp konteyneri simgesi, elektrikli ve elektronik ekipman atıklarının ve pillerin ev çöpleriyle birlikte atılmaması ve ayrı olarak toplan-ması gerektiğini belirtir. Daha ayrıntılı bilgi için plantronics.com adresini ziyaret edin.

Korea



R-C-IEK-BF3200S

해당 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다

Mexico



FCC Requirements Part 15 and IFT

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Requisitos de la FCC (sección 15) y por el IFT

Su uso está sujeto a las dos condiciones siguientes:

1. Este dispositivo no puede causar interferencias nocivas.

2. Este dispositivo debe aceptar todas las interferencias recibidas, incluidas aquellas que puedan causar un funcionamiento no deseado.

Philippines

Russia



Singapore

Complies with
IMDA Standards
DA101760

Taiwan

根據NCC低功率管理辦法規定：

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Thailand

“เครื่องโทรคมนาคมและอุปกรณ์นี้ มีความสอดคล้องตามข้อกำหนดของ กทท.”

Japan

The MIC logo and ID number are located on the charging case.

plantronics®

Regulatory Compliance Information

United States



Declaration of Conformity

We Plantronics, 345 Encinal Street Santa Cruz, California, 95060 USA (800) 544-4660 declare under our sole responsibility that the BackBeat FIT 3100 Series, BF3100S, BF3200S complies with Part 15 of the FCC Rules.

FCC Regulatory Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Australia/New Zealand



Canada

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. Cet équipement est conforme aux limites d'exposition de radiation IC énoncés pour un environnement non contrôlé.

China
型号核准代码显示在产品本体上

Europe



en A crossed-out wheellie bin symbol denotes that waste electrical and electronic equipment and batteries must not be disposed of as unsorted municipal waste, but collected separately. For more detailed information, please go to plantronics.com.

bg Задрасканият контейнер на колела означава, че непотребното електрическо и електронно оборудване и батерии не трябва да се изхвърля с останалата част от неразделените битови отпадъци,

a трябва да се събира отделно. За повече информация посетете plantronics.com.

cs Symbol přeškrtnutého kontejneru na odpady připomíná, že odpad z elektrických a elektronických zařízení a baterie se nesmí vyhazovat spolu s netříděným odpadem z domácnosti, ale je nutné je likvidovat samostatně. Podrobnější informace získáte na našich webových stránkách plantronics.com.

de Das durchgestrichene Mülltonnen-Symbol bedeutet, dass elektrische und elektronische Geräte sowie Batterien nicht im Hausmüll entsorgt werden dürfen. Sie müssen speziellen Sammelstellen zugeführt werden. Weitere Informationen erhalten Sie auf plantronics.com.

el Το σύμβολο του τροχήλατου κάδου απορριμμάτων με ένα μεγάλο X μπροστά υποδηλώνει ότι ο χρησιμοποιούμενος ηλεκ-τρικός και ηλεκτρονικός εξοπλισμός και οι μπαταρίες δεν πρέπει να απορρίπτονται ως μικτά δημοτικά απόβλητα, αλλά αντίθετα θα πρέπει να συλλέγονται χωριστά. Για περισσότερες λεπτομέρειες, επισκεφθείτε τη διεύθυνση plantronics.com.

es El contenedor de basura tachado indica que los residuos de aparatos eléctricos y electrónicos no se deben desechar con los desechos municipales sin clasificar, sino que deben recogerse por separado. Para obtener más información, visite plantronics.com.

fi Roska-astian päällä oleva rasti tarkoittaa, että sähkö- ja elektroniikkaromua tai akkuja ei saa hävittää kotalousjätteen mukana, vaan ne on toimitettava erilliseen keräyspisteeseen. Lisätietoja on osoitteessa plantronics.com.

fr Le symbole représentant une poubelle à roulettes barrée signifie que les déchets d'équipements électriques et électroniques et les batteries ne peuvent pas être mis au rebut avec le reste des déchets ménagers, mais doivent être collectés séparément. Pour de plus amples informations, consultez notre site Web à l'adresse : plantronics.com.

hr Prekrižena kanta za smeće znači da se otpadna električna i elektronička oprema i baterije ne smiju odlagati kao komunalni otpad, nego se trebaju odložiti zasebno. Detaljnije informacije potražite na stranici plantronics.com.

hu Az áthúzott szemetes jelzi, hogy az elektromos és elektronikus berendezések és az akkumulátorok nem kezelhetők válogatás nélkül, normál lakossági hulladékként, hanem külön gyűjtendőék. További információért keresse fel weboldalunkat: plantronics.com.

it L'etichetta con il simbolo di divieto su un bidone dell'immondizia, indica che le apparecchiature elettriche ed elettroniche e le batterie non devono essere smaltite con i normali rifiuti, ma raccolti separatamente. Per ulteriori informazioni, visitate il sito all'indirizzo plantronics.com.

lt Perbraukto atliekų konteinerio su ratukais simbolis reiškia, kad elektros ar elektroninės įrangos bei maitinimo elementų negalima išmesti su nerūšiuotomis buitinėmis atliekomis, jas reikia surinkti atskirai. Išsamesnės informacijos ieškokite interneto svetainėje plantronics.com.

lv Pārsvitrotas atkritumu tvertnes simbols nozīmē, ka lietotas elektriskās un elektroniskās iekārtas, kā arī to akumulatorus nedrīkst utilizēt kopā ar nešķirotiem sadzīves atkritumiem; iekārtas un akumulatori ir jāsavāc atsevišķi. Papildinformāciju skatiet tīmekļa vietnē: plantronics.com.

pl Przekreślony pojemnik na odpady oznacza, że zużytego sprzętu elektrycznego i elektronicznego oraz baterii nie należy wyrzucać wraz z normalnymi, nieposegregowanymi odpadami gospodarstwa domowego, ale oddzielnie. Więcej informacji można znaleźć na stronie internetowej plantronics.com.

pt O símbolo do caixote do lixo com uma cruz sobreposta indica que o equipamento eléctrico e electrónico e baterias não deverão ser eliminados como resíduos municipais indiferenciados mas sim em separado. Para obter mais informações, visite plantronics.com.

ro Simbolul pubelă dublu barată denotă faptul că echipamentele electrice și electronice și bateriile nu trebuie aruncate ca gunoi menajer nesortat, ci trebuie colectate separat. Pentru informații mai detaliate, vizitați plantronics.com.

ru Значок зачеркнутого мусорного бака указывает на то, что использованное электрическое и электронное оборудование, а также элементы питания не должны утилизироваться вместе с неосортированными бытовыми отходами; утилизация данного вида отходов должна производиться отдельно от других отходов. Для получения дополнительной информации посетите веб-сайт plantronics.com.

© 2019 Plantronics, Inc. All trademarks are the property of their respective owners.



Recyclable where facilities exist

211685-01 Rev B 05.19