
# INSTRUCTION MANUAL

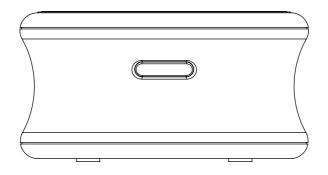

PF405 Odock@RF

· Solid: Power up and Paired with the RF Remote handset

· Plug in the Power Adaptor to the Docking

• Flashing (Leisurely): Power up, but Not Paired with RF Remote handset

· Insert 2 x AAA Battery into the RF Remote handset


· Flashing (Imperatively): Power up, and in Pairing mode

· Insert iPod / iPhone on the Docking

· Press and Hold "Play/Pause" button to turn off the Display

LCD ProDock (WIP043) User Manual

#### **Wireless Connection Procedure:**

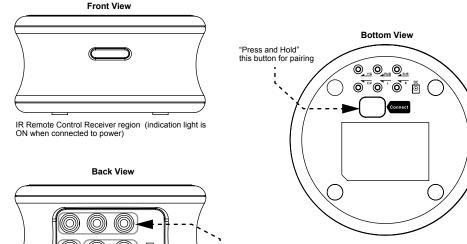



"Component Video" Sockets (Y, Pb, Pr)

DC power socets

 (to power adapter)





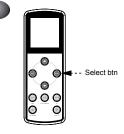


Showing this screen on Remote (Lost Signal Condition)

Power up the Base

 Hold press the Select button










Pairing Condition

For Wirless Paring Long Press the Connect btn

 LED on the unit will be Flashing imperatively











Auto Scan and Pair to the Base

Pairing Successed


#### Major Buttons used from Remote control

"L/R Sound output"

Sockets

"Composite Video"

Socket

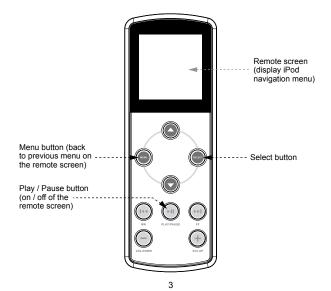


#### **Cable connection Procedures:**

#### 1. Cable Connections:

- i. Insert Audio Cables between "Audio Output" RCA sockets (labeled "L" and "R")of the unit to the Television.
- ii. Insert Video Cables between "Component" (labeled "Y, Pb, Pr") or "Composite" (labeled "C/V") RCA sockets of the unit to the Television.
- iii. Insert power supply to the DC socket.
- iv. Plug the iPod / iPhone onto the unit's dock. The iPod / iPhone display will show: "Accessory Attached". (If iPod Touch or iPhone is used, please keep it ON when plug-in)
- v. Press "PLAY / PAUSE" button for a second, and the Remote Screen will on, and display the navigation menu.

According to your Video Cable connection, please go to the "Settings" in main menu → Video Setting → Video out: C/V for Composite Video out or Y/Pr/Pb for Component video out.


#### **WIP043 Video Format Setting**

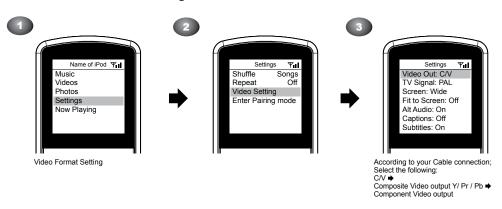


#### 2. Playing Music and Video:

- Highlight and select [Music] or [Video], to activate sub-menu. And further highlight and select different directories, and songs to play.
- ii. The song's information will be shown on the remote display during playing. Use "RW, FF, PLAY/PAUSE" buttons for normal control of playing. "VOL UP / DOWN" for volume level control.
- iii. Press "MENU" to go back previous menus. Please note that the Play / Pause condition will be shown by icon on the remote screen's top left corner. Highlight and select any other songs to play.


#### WIP043 Remote Control Menu

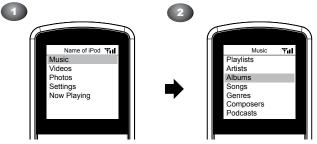


Remote Control Menu - Music

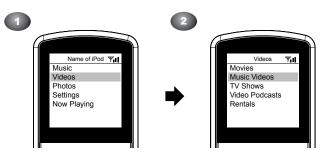

Remote Control Menu - Videos

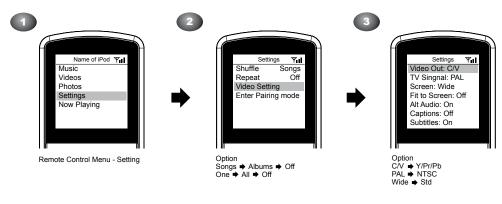

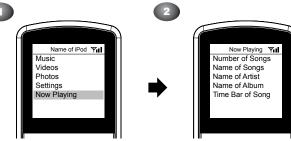

Remote Control Menu - Now Playing

#### 3. Playing Photo:

- i. Highlight and select [Photo] in the Main Menu.
- ii. The LED will be Flashing on the Docking base.
- iii. Follow the instruction on the Screen.
- iv. Select the Photo mode on your iPod/iPhone
- v. Select the Photo on your iPod/iPhone, and press "Play" on your iPod/iPhone
- vi. To exit the Photo Mode, Press and Hold the "Menu" on the Remote
- 4. Press and Hold "PLAY / PAUSE" button, the remote screen will turn off.
- 5. Press and Hold "Menu" button, it will jump back to the Main Munal

5

#### **Safety Precautions**

- · Please read the operating instructions and safety precautions carefully before use.
- · Explain the content and the hazards associated with using the device/accessories to your children.
- Remember to comply with legal requirements and local restrictions when using the device, For example: in airplanes, gas stations, hospitals or while driving.
- The functioning of medical devices such as hearing aids or pacemakers can be impaired. Keep at least 9 inches/20cm between the device and the pacemaker. For more information consult your doctor.
- · Do not throw the device into an open fire.
- Do not exceed the voltage specified on the power supply unit (5V). Exceeding the voltage may destroy the device.
- Plug the power adapter into an easily accessible AC power socket. The only way to turn off is to unplug it.
- The device may only be opened by authorized service partners. All other changes to this device are strictly prohibited and will void the EMC compliance and negate your authority to operate the product.

#### **FCC Statement**

Important Information Required By the FCC The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful 6 interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

#### WARNING

Follow all operating and usage instructions

Do not submerge or use the i-Station in or near water

Do not disassemble any part of the i-Station

Do not place heavy objects on top of the i-Station

Do not allow small children to play with the i-Station unsupervised

Keep i-Station away from extreme temperatures and store away from dust and humidity

Unplug this product from the power source before cleaning

Do not use liquid or aerosol cleaner, use only a damp cloth for cleaning

## Logic3

Rhodes Way, Watford WD24 4YW UK Tel: +44 (0)1923 471 000

Email: support@logic3.com

### www.logic3.com



Logic3 International Ltd. of Watford, UK is the owner of the Logic3 and i-Station registered trademark as well as registered and unregistered design rights and copyright subsisting in various products within its range. "Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. "Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPod is a trademark of Apple Inc., registered in the U.S. and other countries. All other trademarks, copyrights and trade names are registered properties of their respective owners. Logic3 are continually updating their products in the interest of improving the quality and design. As a result, some features and the appearance of the product may vary from those shown on this packaging. Copyright in this manual is owned by Logic3 International Ltd.

(09-00620-01