

## JJ-RC-C1 User Guide

- Frequency: 433.92MHz
- Indicator light: Blue LED
- Buttons: 1st—1000  
2nd—0001  
3rd—0010  
4th—0100
- Working Voltage: 12V(NEW LEADER 27A 12V)  
**Noted: Please take battery out when no use.**
- Working current:  $7\text{ma}\pm 0.5\text{ma}$
- Picture



This remote control is used to work with receiver. Remote control is to transmit signal and receiver is to receive signal. No other usage.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the two conditions: (1) This device may not cause harmful interference, and (2) this received, including interference that may cause undesired operation.