

Use manual

Please verify that the status light on the bottom-side is on.

USB hub or the USB devices can be connected or disconnected while the computer is on. If a storage device (Memory Card Reader, Music Player, USB drive, etc.) is connected, we recommend that you follow the instructions to “eject” it before unplugging to prevent data loss.

In rare cases, a device may require more power than supplied by the USB hub. Your computer will inform you if this happens; connect the device to your computer directly.

Connect Everything

Digital Camera

Digital Music Player (MP3)

Memory Card Reader

PDA

Printer

Bluetooth Adapter

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.